



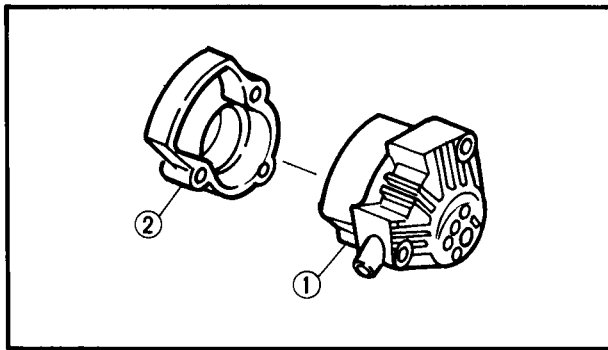

INSPECTION


1. Inspect:

- Caliper body ①
 - Cover ② (Caliper)
- Cracks/Damage → Replace.

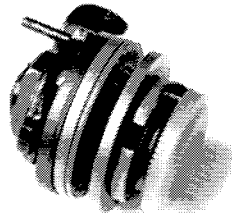


2. Inspect:

- Adjuster unit
- Damage → Replace.

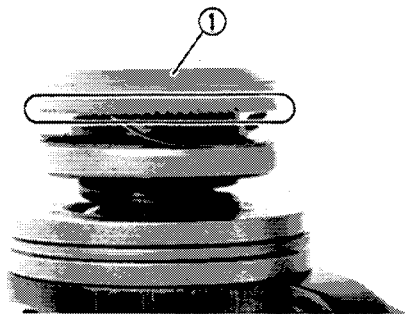


3. Inspect:

- Cam (Ratchet ①)
- Cracks/Wear/Damage → Replace.

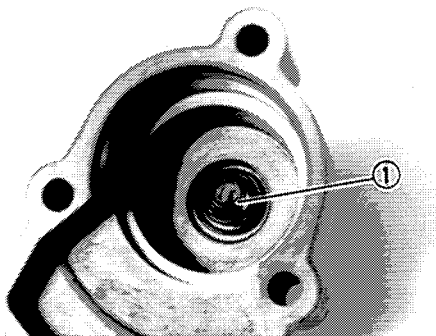

4. Inspect:

- Ratchet spring ①
- Wear/Damage → Replace.

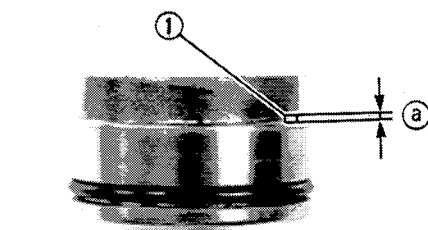

5. Inspect:

- Brake pad
- Over wear limit (a) → Replace as a set.



Wear Limit:
1.0 mm (0.0394 in)

① Wear indicator