


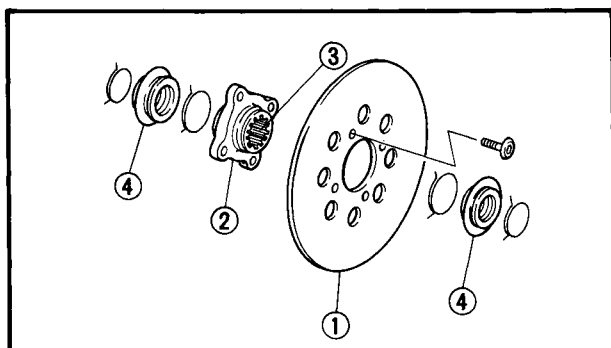

6. Inspect:

- Brake disc ①
Bend/Cracks/Damage → Replace.
- Brake disc hub ②
Cracks/Damage → Replace.
- Splines ③ (Brake disc hub)
Wear/Damage → Replace.
- Covers ④ (Disc hub)
Wear/Damage → Replace.

ASSEMBLY AND INSTALLATION

Reverse the "REMOVAL" procedures.
Note the following points.

NOTE:

In brake caliper reassembly, be sure to use following new parts.




- O-ring
- Gasket

1. Adjust:

- Adjuster unit

Adjustment steps:

- Pull the ratchet ① toward yourself about 5 mm, making sure that the ratchet is not in contact with the stopper spring ②.
- Tighten the adjust bolt ③ by turning the ratchet ① counterclockwise until it stops.
- Push the ratchet back in place and make sure that it is in contact with the stopper spring.

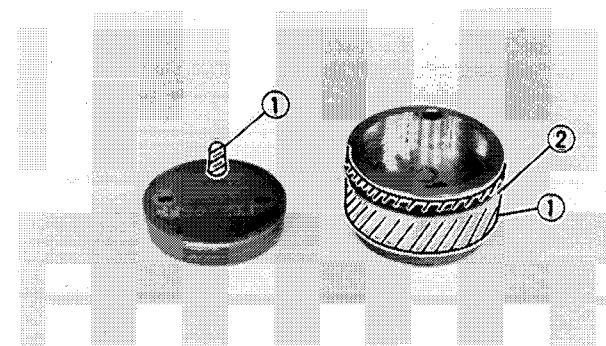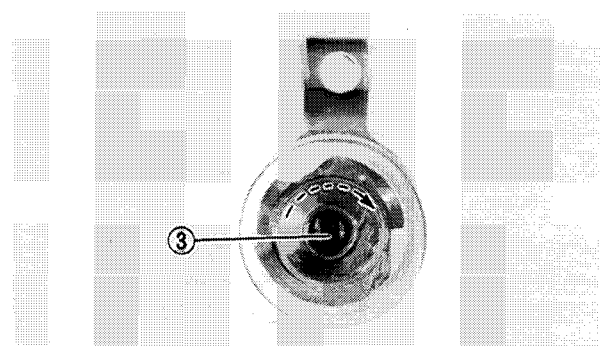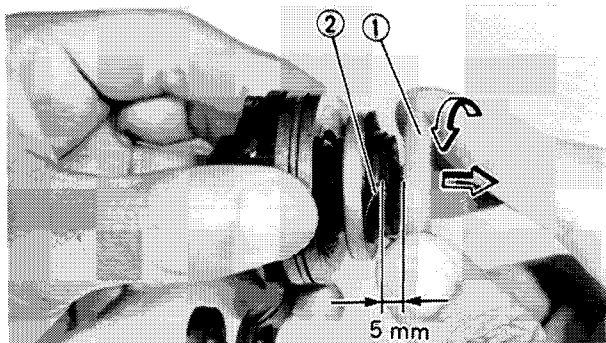

2. Install:

- Brake pads

Installation steps:

- Apply supplied (In the brake pad repair kit) silicon grease to the shaded section ① and the O-ring ② of the brake pads.