

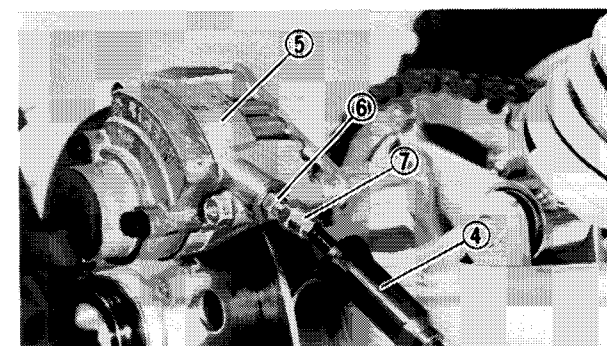
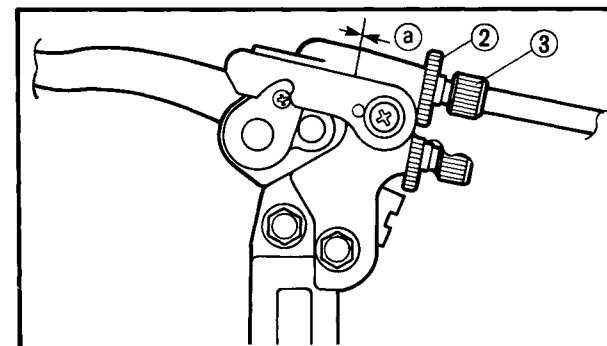
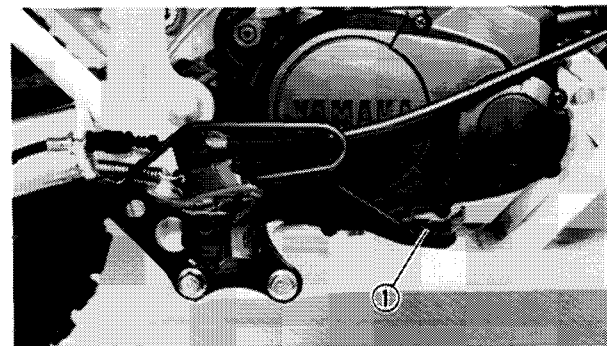


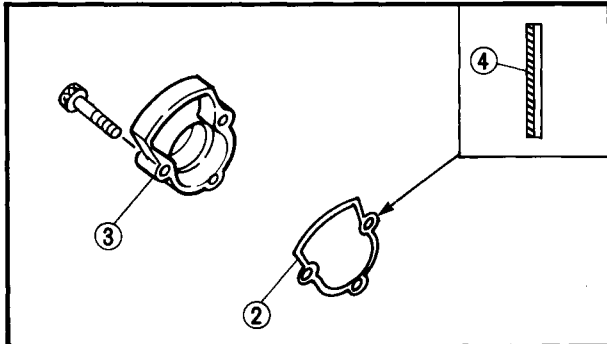

6. Install:

- Caliper body ①
- Gasket ② (Caliper cover)
- Caliper cover ③

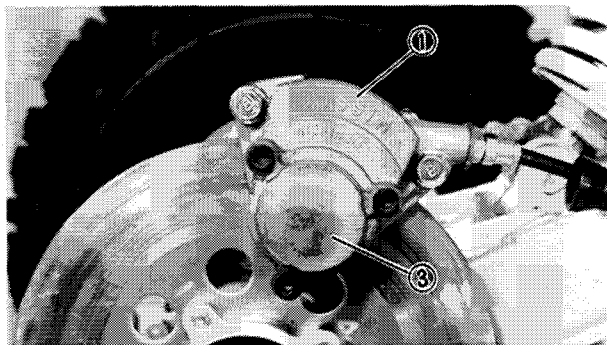

Bolt (Caliper Body):
23 Nm (2.3 m·kg, 17 ft·lb)
Bolt (Caliper Cover):
13 Nm (1.3 m·kg, 9.4 ft·lb)

NOTE:

Install the gasket with its adhesive side ④ facing the caliper cover.

⚠ WARNING:

Always use a new gasket.

7. Install:

- Wheel hub (Rear wheel – Right)
 - Rear wheel (Right)
- Refer to the "REAR WHEEL AND REAR AXLE – INSTALLATION" section.

8. Adjust:

- Parking brake

Adjustment steps:

- Apply the rear brake repeatedly by pressing on the rear brake pedal ① until the pedal strokes become constant. (The adjust bolt of the adjuster unit is in contact with the pad).
- Pull back the adjuster cover from the left lever holder.
- Loosen the locknut ② and turn in the parking brake cable adjuster ③ on the left lever holder.
- Pull back the adjuster cover ④ on the rear brake caliper body ⑤.
- Loosen the locknut ⑥ and turn in the cable adjuster ⑦.
- Turn the adjuster ⑦ counterclockwise until the parking cable free play ⑧ becomes 0, or as close to 0 as possible.
- Turn the adjuster ⑥ counterclockwise once, and tighten the locknut ⑦.



Locknut:
13 Nm (1.3 m·kg, 9.4 ft·lb)