



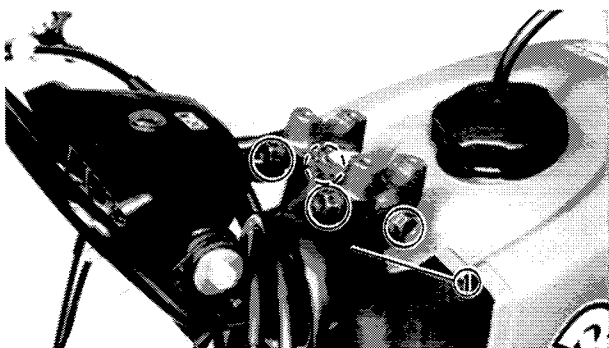


11. Remove:
- Headlight stay ①

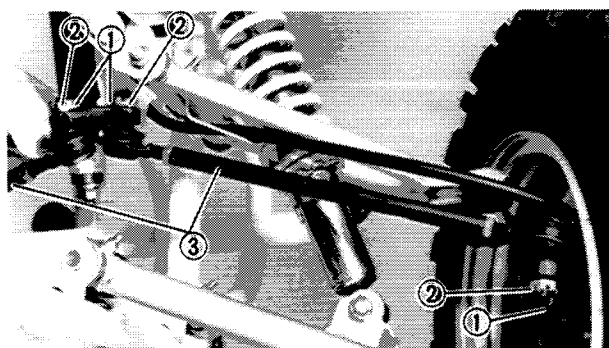


12. Remove:
- Cotter pins ①
 - Nuts ②
 - Tie-rods ③


NOTE: _____
Remove the rod-end of the tie-rod from the steering column and knuckle arm, using the General Bearing Puller.

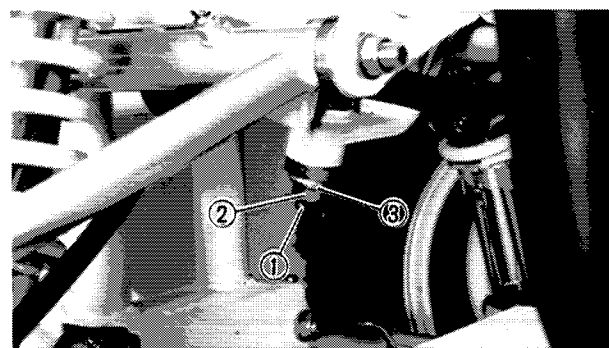

13. Remove:
- Cotter pin ①
 - Nut ② (Steering column)
 - Washer ③

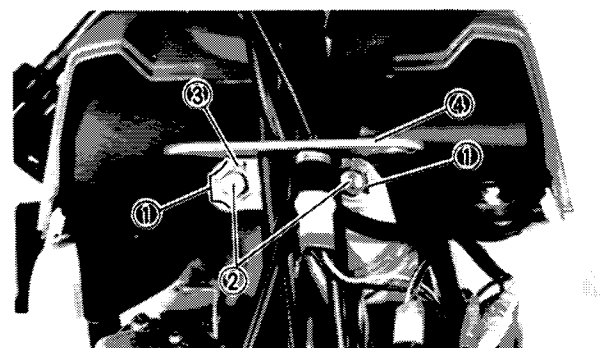

14. Straighten:
- Lock washer tabs ①
15. Remove:
- Bolts ② (Steering column holder)
 - Lock washer ③
 - Cable holder ④

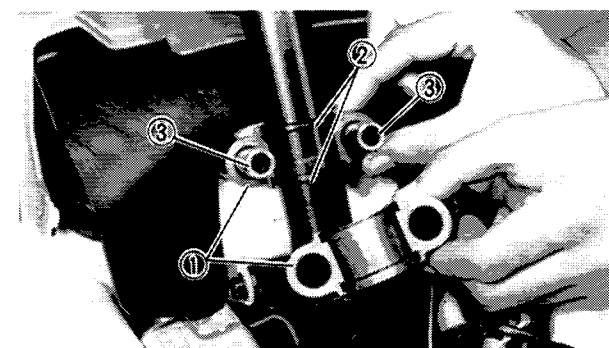

16. Remove:
- Bearings ① (Steering column)
 - Oil seals ②
 - Collars ③