



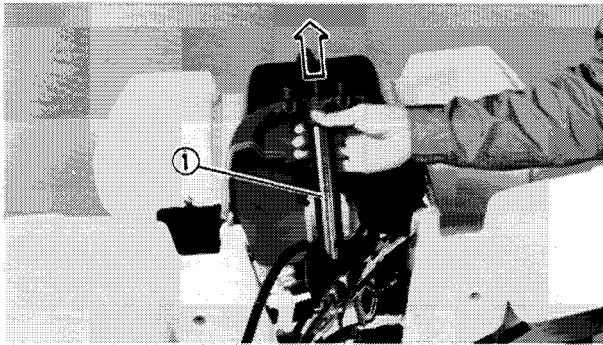

17. Remove:


- Steering column ①
(from upside)

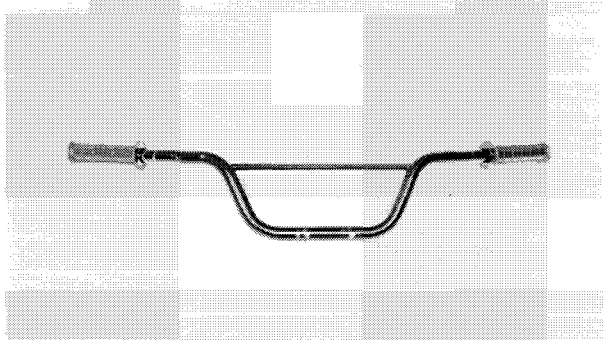

INSPECTION

1. Inspect:

- Handlebar
Cracks/Bends/Damage → Replace.

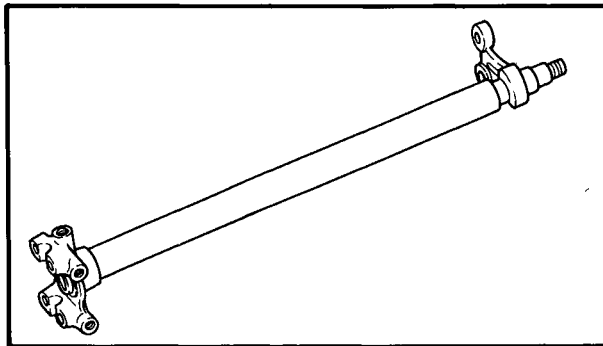


2. Inspect:

- Steering column
Bends/Damage → Replace.


⚠ WARNING:

Do not attempt to straighten a bent shaft; this may dangerously weaken the shaft.

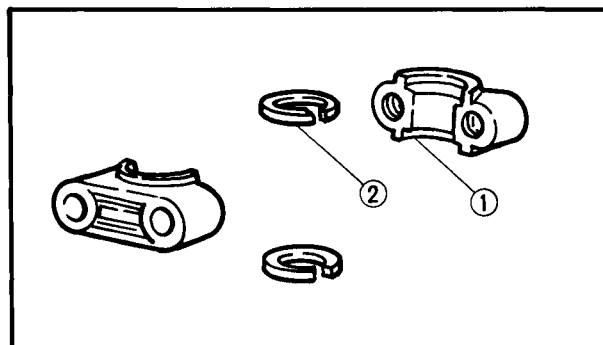

3. Inspect:

- Bearing ① (Steering column)
- Oil seal ②
Wear/Damage → Replace.

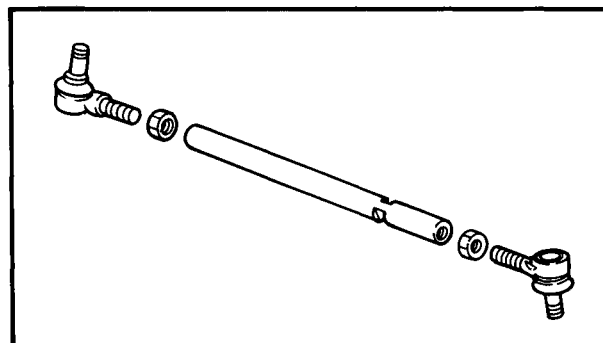

4. Inspect:

- Tie-rod
Bend/Damage → Replace.