


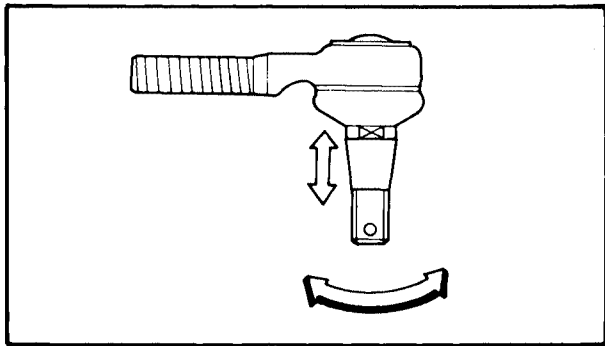

5. Check:

- Tie-rod end movement
Tie-rod end exists free play → Replace.
Tie-rod end turns roughly → Replace.
- Tapered surface (Tie-rod end)
Pitting/Wear/Damage → Replace.


6. Adjust:

- Tie-rod length and rod-end angle

Adjustment steps:

(The following procedures are done on both tie-rods, right and left:)

- Loosen the locknuts ①.
- Adjust the tie-rod length ② by turning both tie-rod ends.

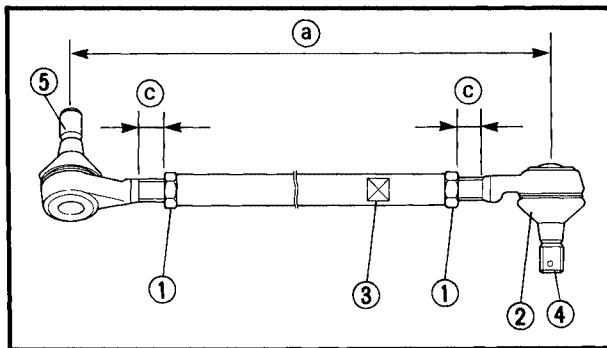**Tie Rod Length:**

321 mm (12.6 in)

- Set the rod-end ② (Knuckle arm side) in an angle where the indentation surface ③ of the tie-rod is parallel to the rod-end shaft ④, and then tighten the locknut.

Locknut (Rod-End):

30 Nm (3.0 m · kg, 22 ft · lb)

- Set the other rod-end ⑤ (Steering column side) in an angle as shown in figures A and B, and then tighten the locknut.

Rod-End (Tie Rod) Angle ⑥ :

164° ~ 166°

Locknut (Rod-End):

30 Nm (3,0 m · kg, 22 ft · lb)

NOTE:

The threads ⑦ on both rod-ends must be of the same length.

- After making adjustment on both tie rods, be sure to mark them R and L for identification.

A Right-hand tie-rod

B Left-hand tie-rod

C To knuckle arm D To steering column