



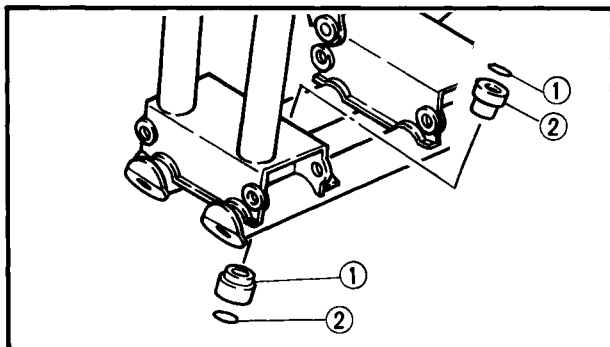

7. Inspect:

- Bushing ①
- O-ring ②
- Wear/Damage → Replace.

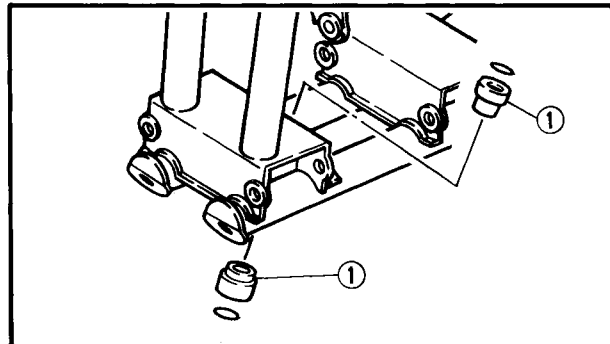

INSTALLATION



Reverse the "REMOVAL" procedures. Note the following points.

1. Lubricate:

- Bushings ① (Steering column)
- Bearings ② (Steering column)
- Oil seal ③ (Lip)



**Lightweight Lithium-Soap:
Base Grease**

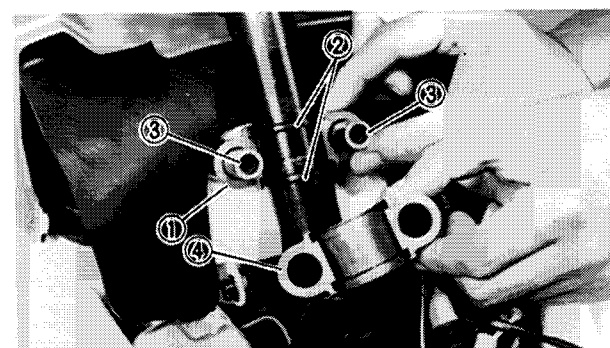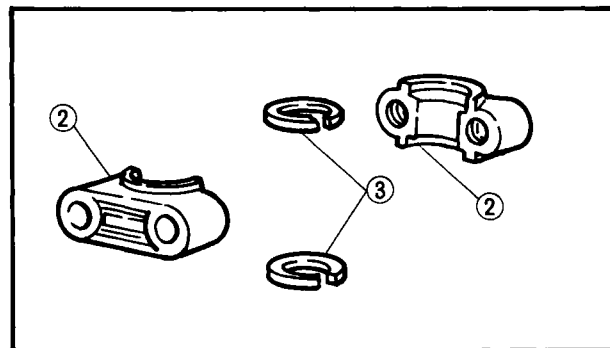


2. Install:

- Bearing ① (Lower)
- Oil seals ②
- Collars ③
- Bearing ④ (Upper)

NOTE:

Be careful not to damage the oil seals during installation.

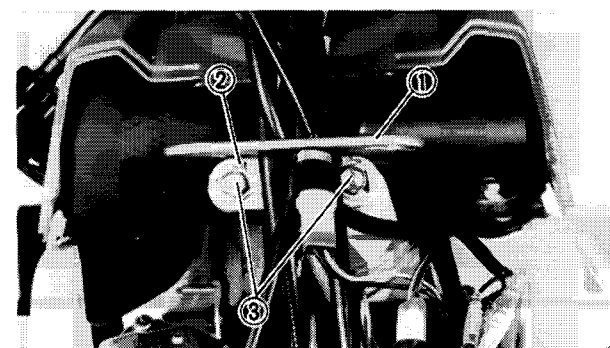

3. Install:

- Cable holder ①
- Lock washer ② (New)
- Bolts ③ (Steering Column Holder)



**Bolt (Steering Column Holder):
23 Nm (2.3 m·kg, 17 ft·lb)**