



⚠ WARNING:

Always use a new lock washer.

4. Bend the lock washer tab along the bolt flats.

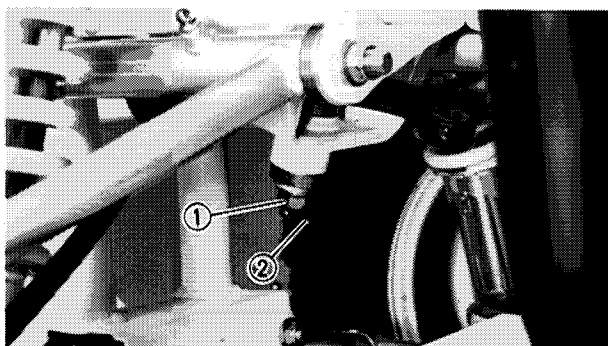

5. Tighten:

- Nut ① (Steering column)



Nut (Steering Column):
30 Nm (3.0 m · kg, 22 ft · lb)

6. Install:

- Cotter pin ② (New)

⚠ WARNING:



Always use a new cotter pin.

7. Install:

- Tie-rods (Left and right)

NOTE:

Be sure that the rod-end ① on the indentation ② side is connected to the knuckle arm.

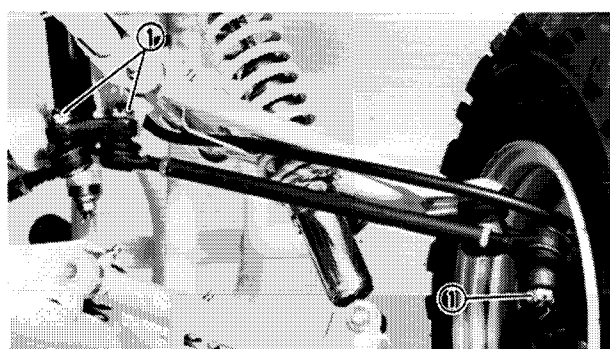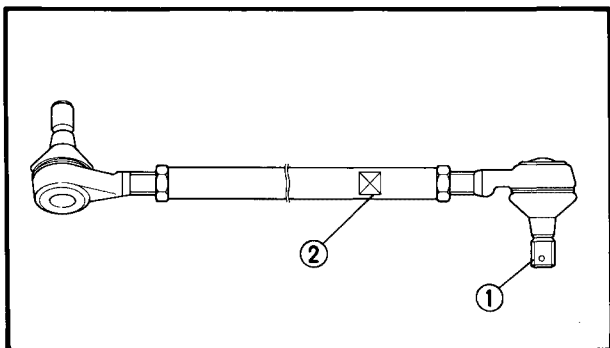

8. Tighten:

- Nuts ① (Tie-rod)



Nut (Tie-Rod):
25 Nm (2.5 m · kg, 18 ft · lb)

9. Install:

- Cotter pin (New)

⚠ WARNING:

Always use a new cotter pin.

10. Tighten:

- Bolts (Headlight stay ①)



Bolt (Headlight Stay):
15 Nm (1.5 m · kg, 11 ft · lb)

