




2. Measure:

• Wheel runout


Over specified limit → Replace wheel or check bearing play ③.

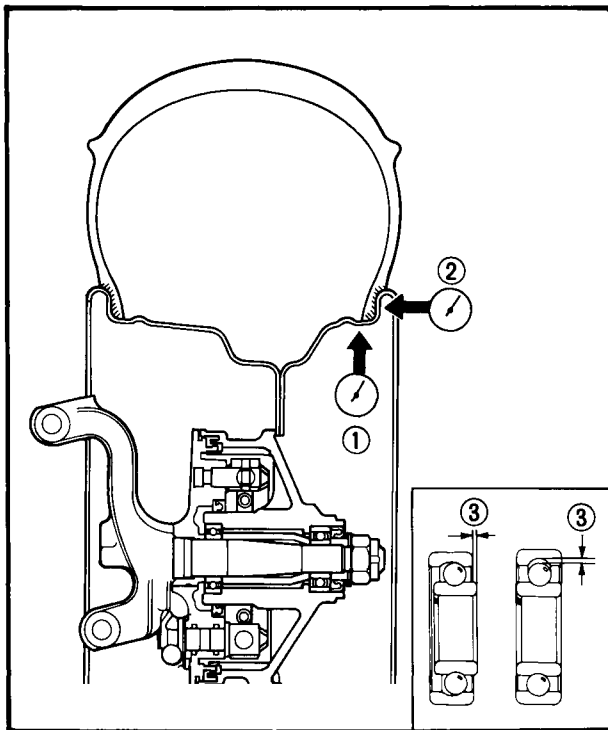

Rim Runout Limits:


Radial ① : 2.0 mm (0.08 in)

Lateral ② : 2.0 mm (0.08 in)

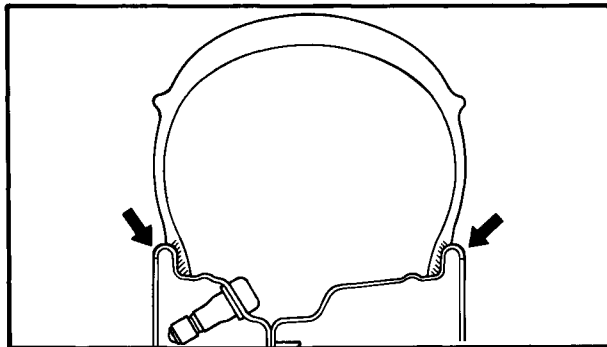

⚠ WARNING:


After replacing the tire, ride conservatively to allow the tire to be properly seated in the rim. Failure to do so may cause an accident resulting in machine damage and possible operator injury.

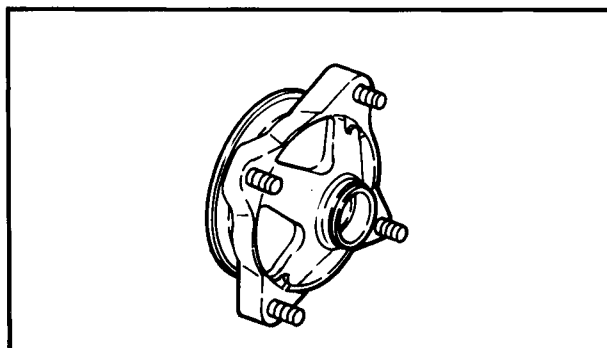

3. Inspect:

• Front wheel hub

Cracks/Damage → Replace.

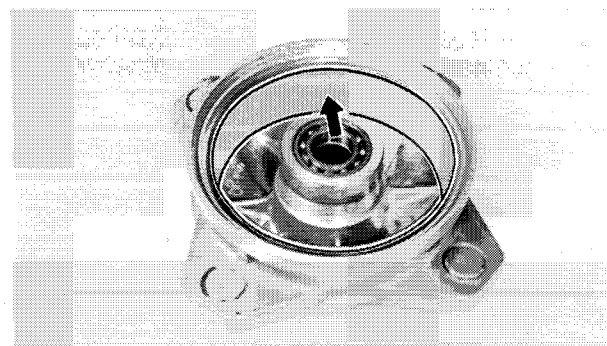

4. Inspect:

• Brake drum (Inner surface)

Oil → Wipe off brake drum with rag soaked in lacquer thinner or solvent.

Scratches → Polish brake drum lightly and evenly with emery cloth.