



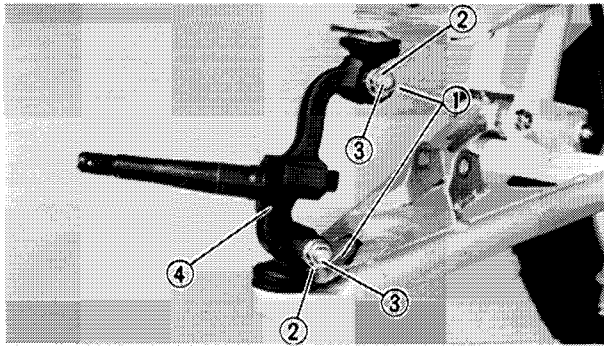

6. Remove:

- Cotter pins ①
- Nuts ②
- Bolts ③
- Steering knuckle ④

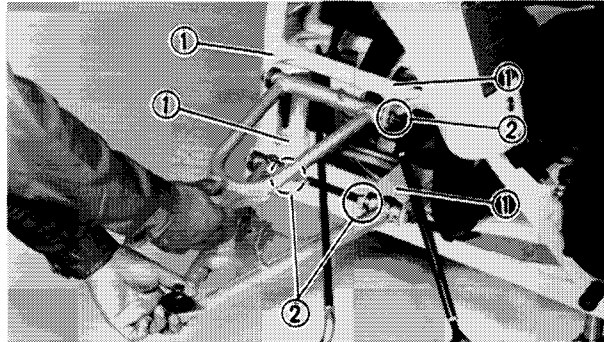

7. Check:

- Front arms free play




Front arms free play inspection steps:

- Check the front arm brackets ① of the frame.
If bent, cracked or damaged, repair or replace the frame.
- Check the tightening torque of the front arms (Upper and Lower) securing nuts ②.



Nut (Front Arm – Upper and Lower):
30 Nm (3.0 m·kg, 22 ft·lb)

- Check the front arms (Upper and Lower) side play **A** by moving it from side to side.
If side play noticeable, replace the inner collar, bushings and thrust covers as a set.
- Check the front arms (Upper and Lower) vertical movement **B** by moving it up and down.
If vertical movement is tight, binding or rough, replace the inner collar, bushings and thrust covers as a set.

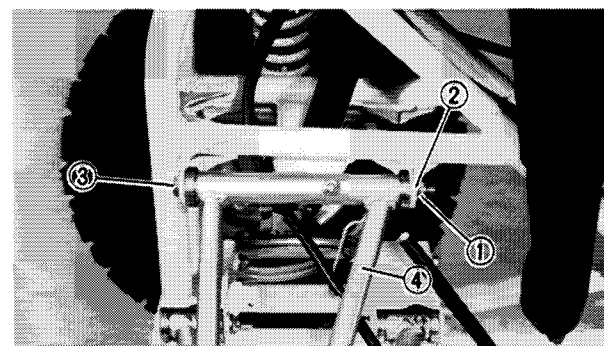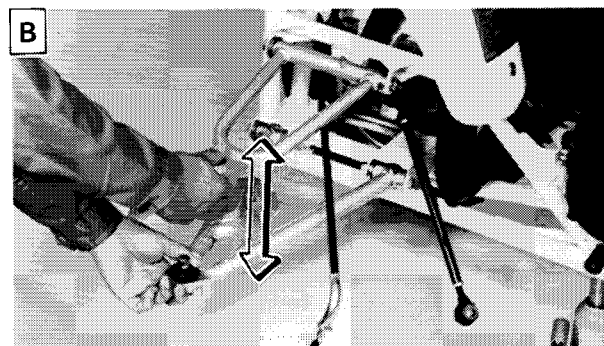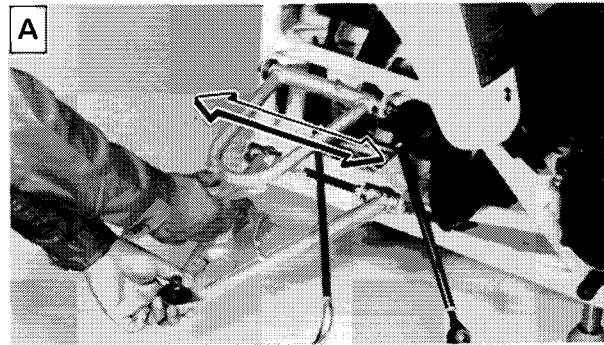

8. Remove:

- Nut ①
- Washer ②
- Bolt ③
- Front arm ④ (Upper)