


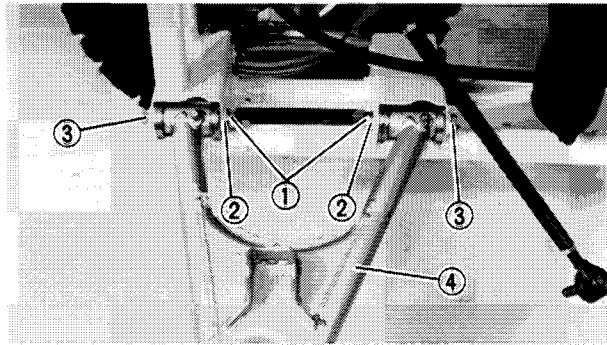


9. Remove:

- Nuts ①
- Washers ②
- Bolts ③
- Front arm ④ (Lower)

INSPECTION


1. Inspect:

- Shock absorber rod
Bends/Damage → Replace the shock absorber assembly.
- Shock absorber
Oil leaks → Replace the shock absorber assembly.
- Spring
Fatigue → Replace the shock absorber assembly.
Move the spring up and down.

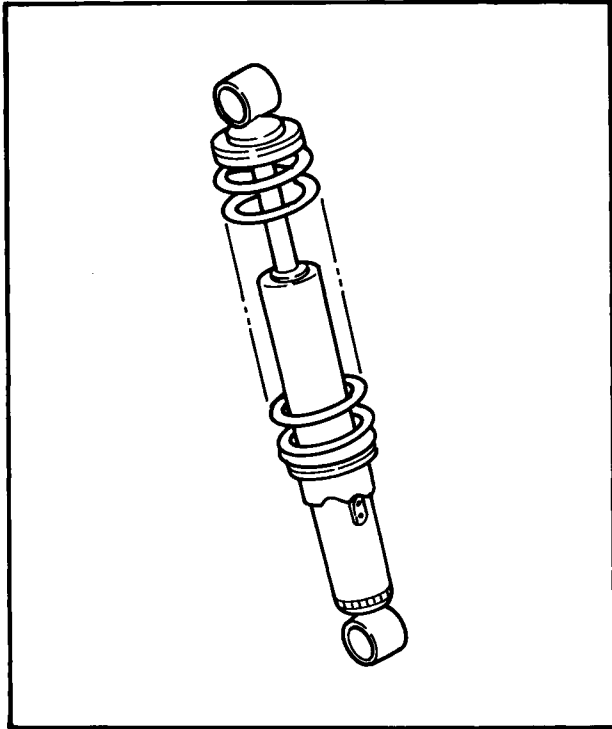


2. Inspect:

- Steering knuckle
Cracks/Pitting/Damage → Replace.

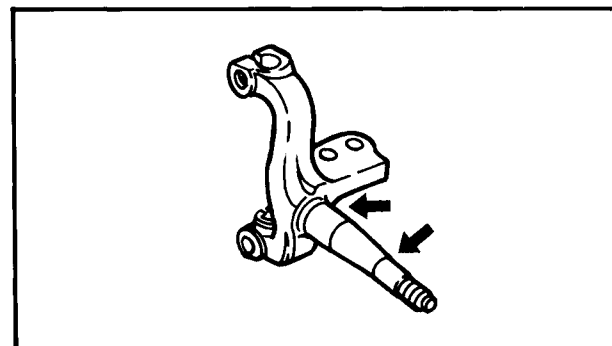

3. Inspect:

- Front arms (Upper ① and Lower ②)
Cracks/Bends/Damage → Replace.

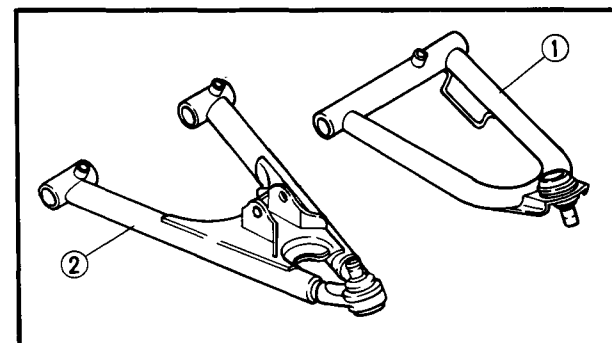

⚠ WARNING:

Do not attempt to straighten a bent arm; this may dangerously weaken the arm.