


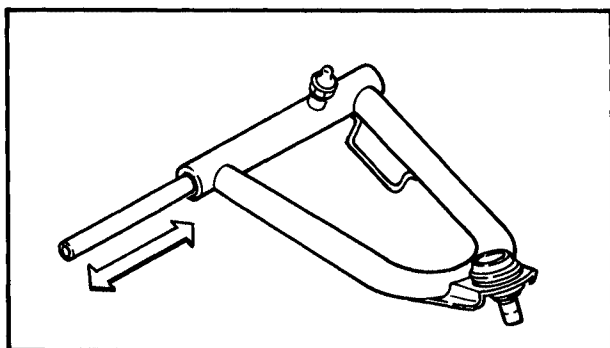


4. Check:

Inner collar free play

Inner collar is loose → Replace inner collar and bushings as a set.

Insert the inner collar into the front arm, and check for free play.

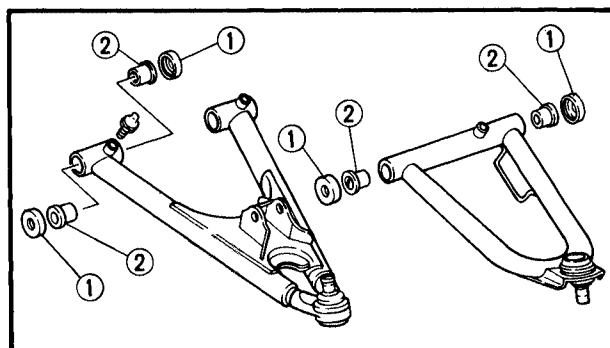


5. Inspect:

• Thrust covers ①

• Bushings ②

Wear/Damage → Replace as a set.

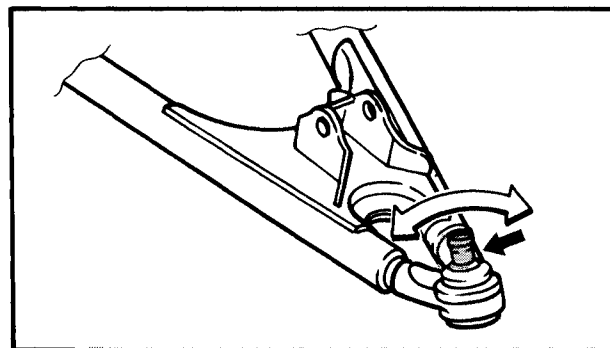

6. Check:

• Ball joint movement


Exists free play → Replace the front arm assembly.

Turns roughly → Replace the front arm assembly.

• Ball joint shaft surface

Pitting/Wear/Damage → Replace the front arm assembly.

6

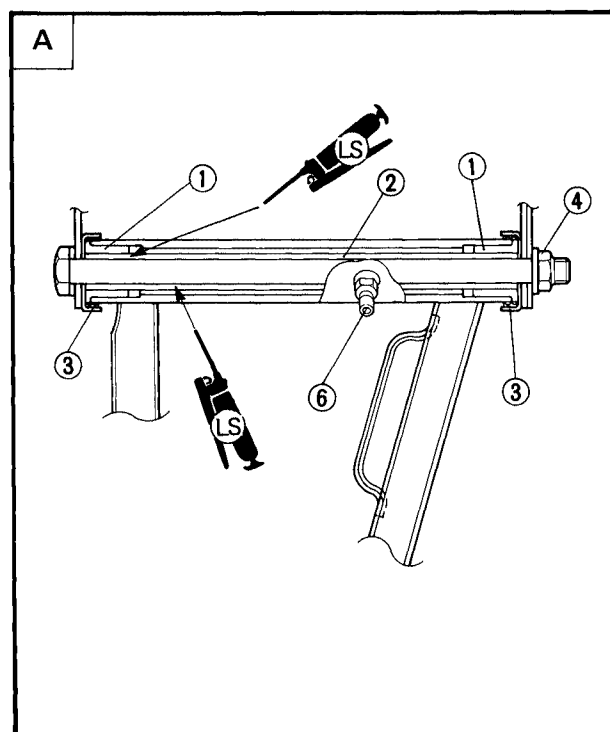

INSTALLATION

Reverse the "REMOVAL" procedures.

Note the following points.

1. Lubricate:

• Bushings ① (Inner surface)

• Inner collars ② (Inner surface)

• Thrust covers ③ (Inner surface and lips)



**Lightweight Lithium-soap
Base Grease**

2. Tighten:

• Nut ④ (Front arm – Upper)

• Nut ⑤ (Front arm – Lower)



**Nut (Front Arm – Upper and Lower):
30 Nm (3.0 m·kg, 22 ft·lb)**