


3. Inject grease from the nipples ⑥ using a grease gun until slight overflow is observed from the thrust covers.

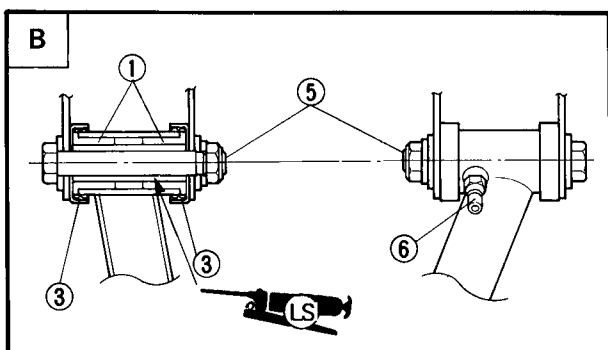

**Lightweight Lithium-Soap:
Base Grease**

- A Front arm – upper section
- B Front arm – lower section

4. Tighten:

- Nuts ① (Steering knuckle)
- Bolts ② (Knuckle arm)



Nut (Steering Knuckle):
48 Nm (4.8 m · kg, 35 ft · lb)
Bolt (Knuckle Arm):
38 Nm (3.8 m · kg, 27 ft · lb)




⚠ WARNING:

Always use a new cotter pin ③ .

5. Connect:

- Tie-rod
(to knuckle arm)

Refer to the "STEERING SYSTEM –
INSTALLATION" section.

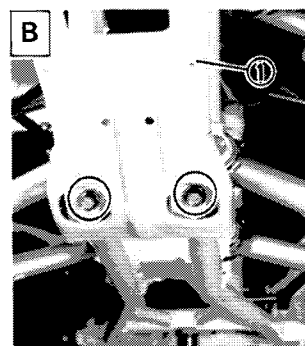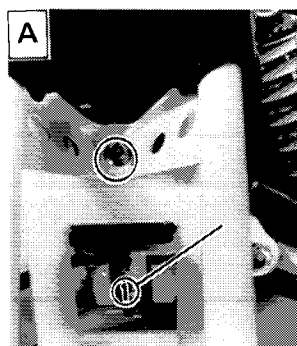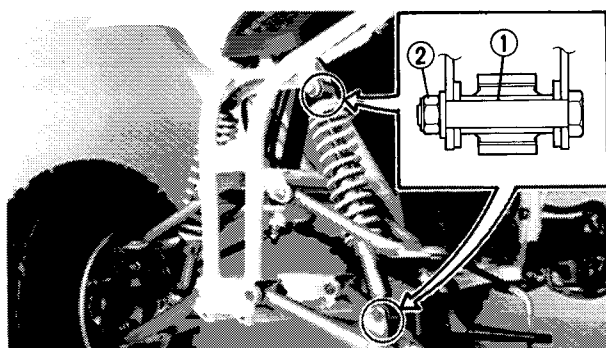

6. Lubricate:

- Bushings ① (Front shock absorber)



**Lightweight Lithium-Soap:
Base Grease**

7. Tighten:

- Nuts (Front shock absorber ②)



Nut (Front Shock Absorber):
45 Nm (4.5 m · kg, 33 ft · lb)

8. Tighten:

- Bolts (Front bumper ①)



Bolt (Front Bumper):
26 Nm (2.6 m · kg, 19 ft · lb)

- A Upper
- B Lower