


REMOVAL

1. Place the machine on a level place.
2. Elevate the rear wheels by placing the suitable stand under the rear of frame.

⚠ WARNING:

Securely support the machine so that it won't fall over.

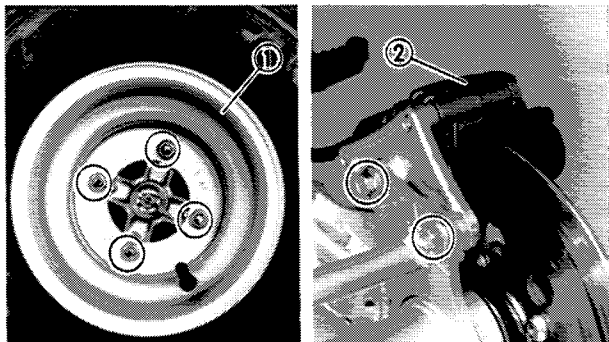


3. Remove:

- Rear wheels ①
- Brake caliper assembly ② (Rear)


NOTE:

Do not depress the parking brake lever and brake pedal when the brake caliper is off the disc otherwise the brake pads will be forced shut.

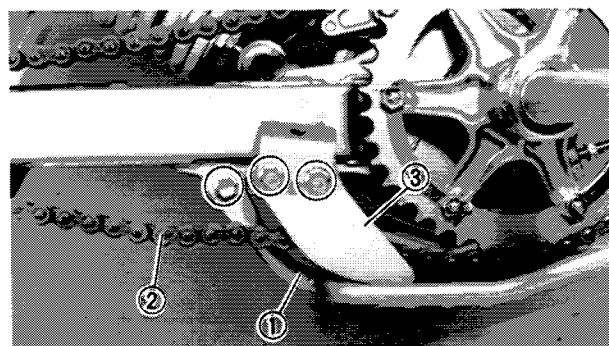


4. Remove:

- Under guard ①
- Chain assembly ②
- Chain guide ③

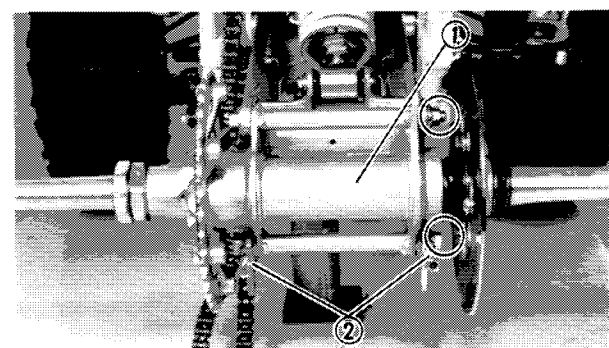

5. Remove:

- Rear axle hub ① (with rear axle)
- Chain tensioner ②

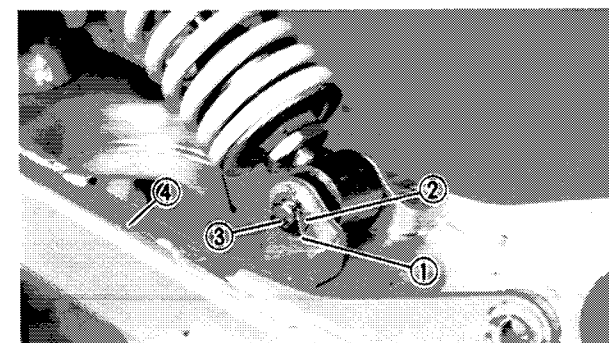

6. Remove:

- Cotter pin ①
- Washer ②
- Shaft ③

NOTE:

When removing the lower shaft ③, hold the swingarm ④ so that it does not drop downwards when the shaft is removed.