



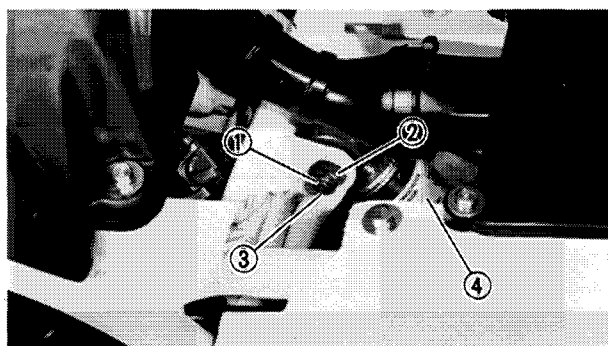

7. Remove:

- Seat
- Nut ① (Shock absorber — Upper)
- Washer ②
- Bolt ③ (Shock absorber — Upper)
- Shock absorber ④ (Rear)

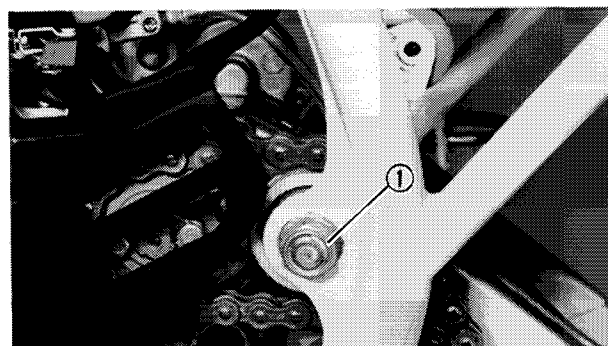

8. Check:

- Swingarm free play

Swingarm free play inspection steps:

- Check the tightening torque of the pivot shaft (swing arm) securing nut ①.






Nut (Swingarm-Pivot Shaft):
85 Nm (8.5 m·kg, 61 ft·lb)

- Check the swingarm side play **A** by moving it from side to side.

If side play noticeable, check the inner collar, bearing, bushing and thrust cover, or adjust the shim.

- Check the swingarm vertical movement **B** by moving it up and down.

If vertical movement is tight, binding or rough, check the inner collar, bearing, bushing and thrust cover, or adjust the shim.

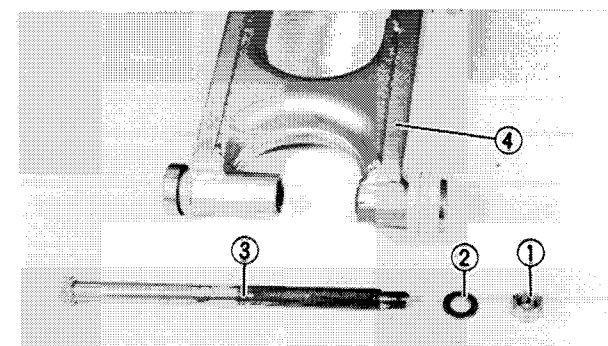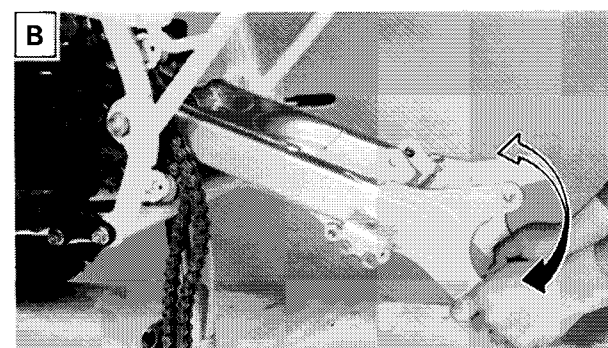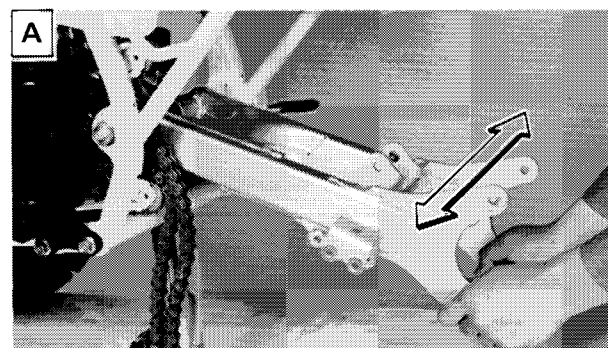

9. Remove:

- Nut ① (Swingarm — Pivot shaft)
- Washer ②
- Pivot shaft ③ (Swingarm)
- Swingarm ④