



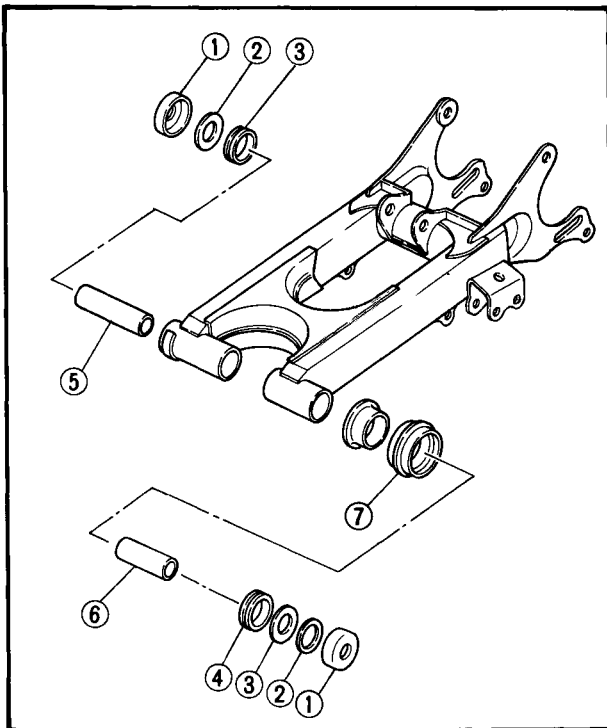

10. Remove:

- Thrust covers ①
- Shim ② (Left side only)
- Washers ③
- Dust covers ④
- Inner collars (Right ⑤ and Left ⑥)
- Protector ⑦ (Thrust cover – Left)

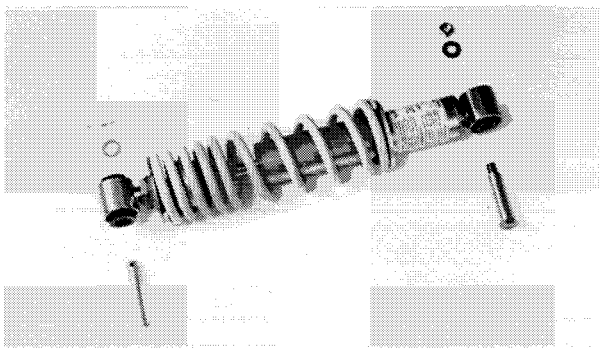

INSPECTION


1. Inspect:

- Shock absorber rod
Bends/Damage → Replace the shock absorber assembly.

2. Inspect:

- Shock absorber
Oil leaks/Gas leaks → Replace the shock absorber assembly.
- Spring
Fatigue → Replace the shock absorber assembly.
Move the spring up and down.

6

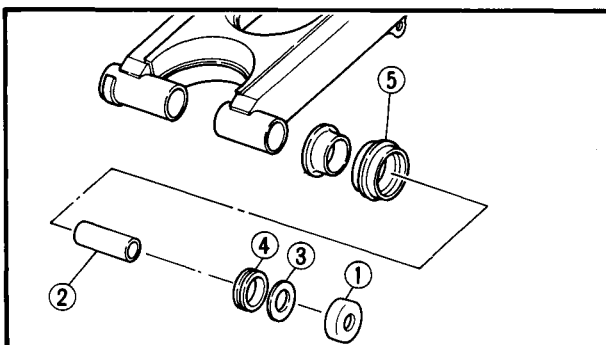

3. Inspect:

- Thrust cover ①
- Inner collar ②
- Washer ③
Damage → Replace.
- Dust cover ④
- Protector ⑤ (Thrust cover)
Wear/Damage → Replace.