





5. Measure:

- Brake drum inside diameter (a)
Out of specification → Replace.

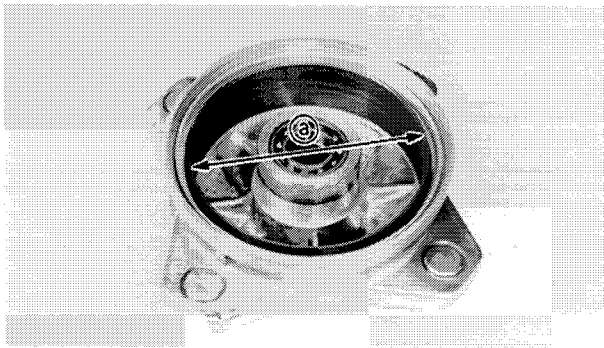


Brake Drum Inside Diameter:
110 mm (4.33 in)
< Wear Limit >:
111 mm (4.37 in)

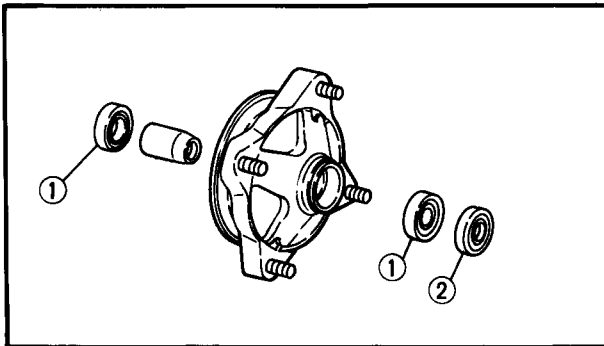

6. Inspect:

- Bearings (1) (Front wheel hub)
Bearings allow play in the wheel hub or the wheel turns roughly → Replace.
- Oil seal (2)
Wear/Damage → Replace.

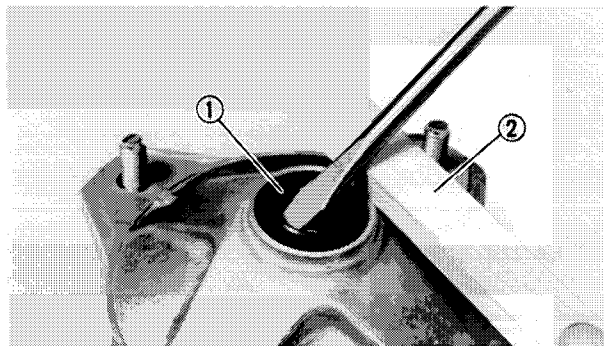


Wheel bearing and oil seal replacement steps:

- Clean the outside of the wheel hub.
- Remove the oil seal (1) use a flat-head screw driver.

NOTE:

Place a wood block (2) against the outer edge to protect this edge.

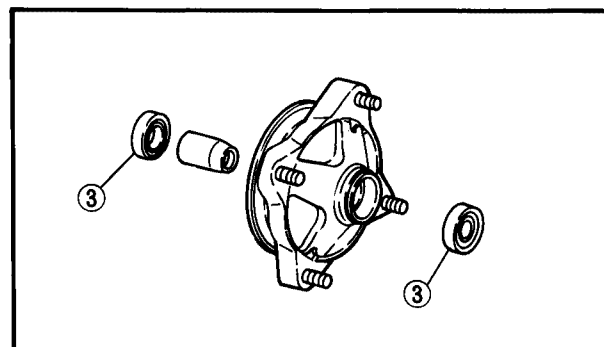

- Remove the bearing (3) using a general bearing puller.
- Install the new bearing and oil seal by reversing the previous steps.

NOTE:

Use a socket (4) that matches the outside diameter of the race of the bearing and oil seal.

CAUTION:

Do not strike the center race (5) or balls (6) of the bearing. Contact should be made only with the outer race (7).

