


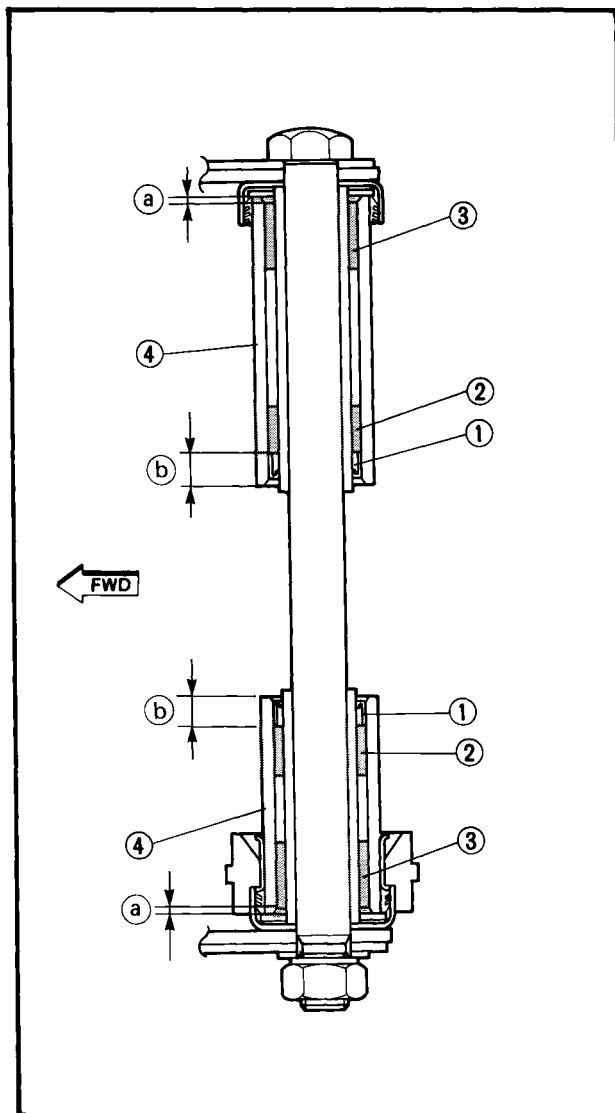

4. Inspect:

- Oil seals ①
Damage → Replace.
- Bushings ②
Scratches/Damage → Replace.
- Bearings ③
Turns roughly → Replace.


NOTE:

When fitting the bearings ③ and bushings ② into the swingarm ④, be sure to do so at the position as specified in the figure.

- ① 2.0 mm (0.079 in)
- ② 10.0 mm (0.394 in)


5. Inspect:

- Swingarm
Crack/Bend/Damage → Replace.

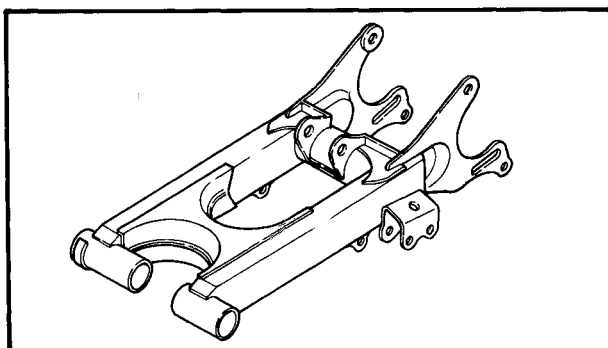

6. Inspect:

- Pivot shaft ①
Roll the axle on a flat surface.
Bends → Replace.

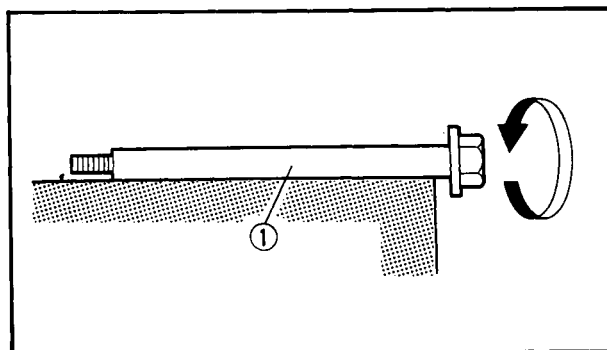

⚠ WARNING:

Do not attempt to straighten a bent axle.