


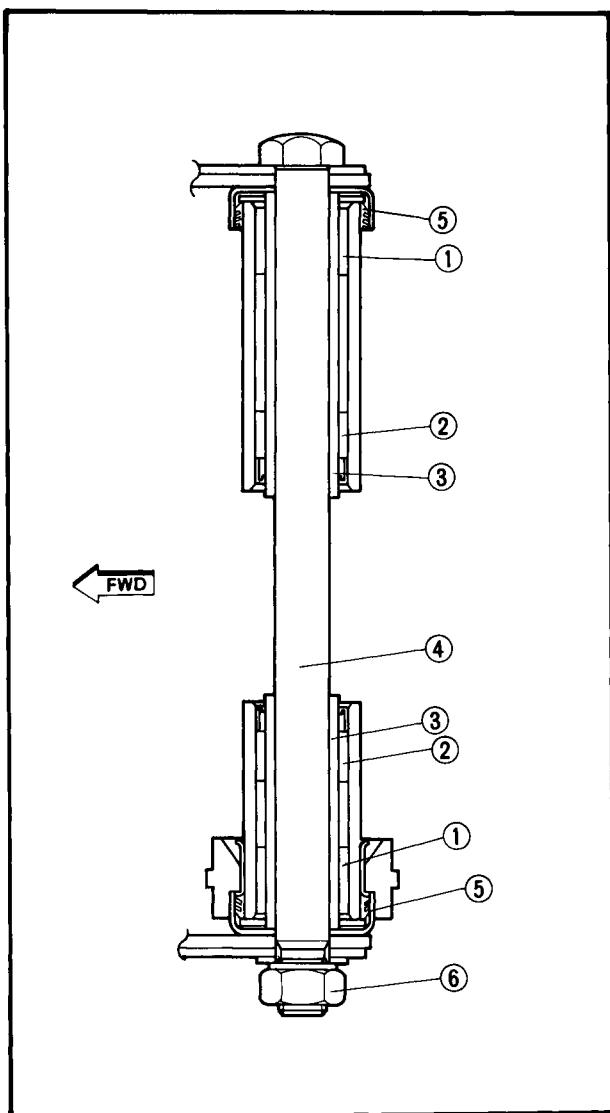

INSTALLATION

Reverse the "REMOVAL" procedure.
Note the following points.

1. Lubricate:
 - Bearings ①
 - Bushings ② (Inner surface)
 - Inner collars ③
 - Pivot shaft ④ (Outer surface)
 - Dust cover ⑤ (Lips)





**Lightweight Lithium-Soap
Base Grease**

2. Tighten:
 - Nut ⑥ (Swingarm – Pivot shaft)



**Nut (Swingarm – Pivot Shaft):
85 Nm (8.5 m · kg, 61 ft · lb)**

3. Check:
 - Swingarm (Side play)
 - Swingarm (Vertical movement)

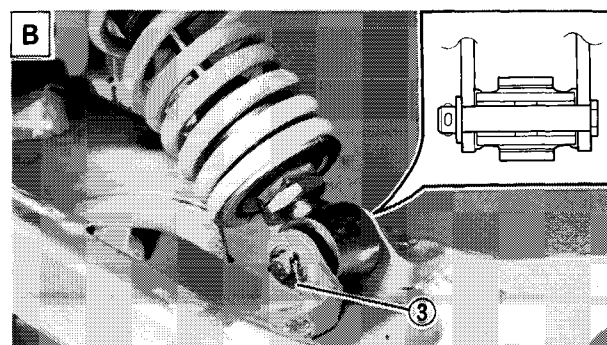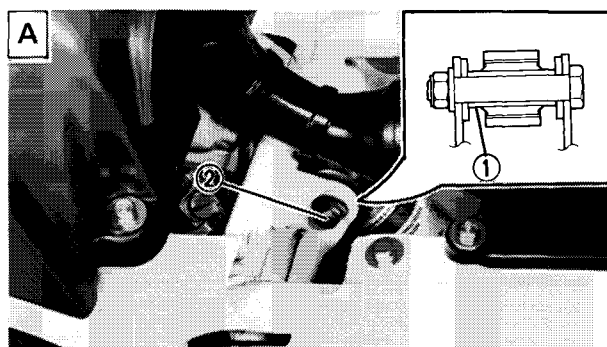

4. Lubricate:
 - Bushings ① (Shock absorber)



**Lightweight Lithium – Soap
Base Grease**

5. Install:
 - Shock absorber



**Nut ② (Shock Absorber – Upper):
25 Nm (2.5 m · kg, 17 ft · lb)**

6. Install:
 - Cotter pin ③

⚠ WARNING:

Always use a new cotter pin.

- A** Upper side
B Lower side