





4. Lubricate:
- Drive chain



Drive Chain Lubricant:
SAE 30 ~ 50 Motor oil

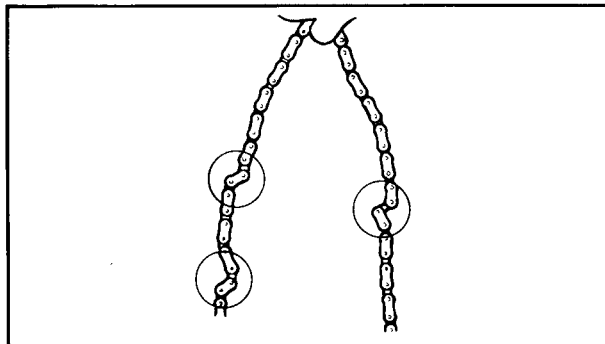


5. Inspect:
- Drive chain stiffness
- Stiff → Clean and lubricate or replace.

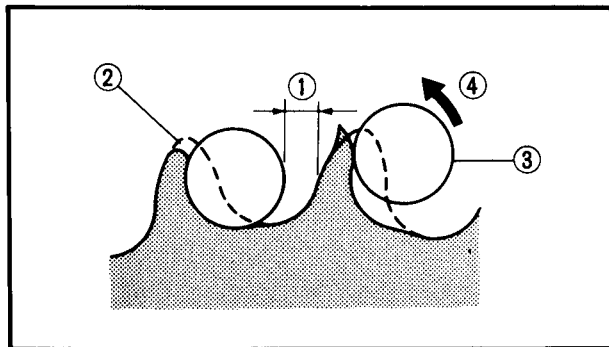

6. Inspect:
- Drive sprocket
 - Driven sprocket
- More than 1/4 teeth ① wear → Replace sprocket.
Bent teeth → Replace sprocket.

6

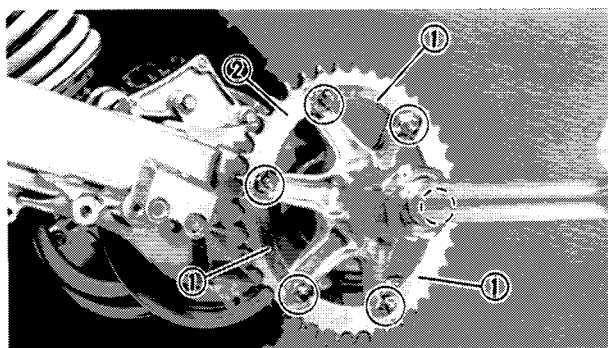

Driven sprocket replacement steps:

- Straighten the lock washer ① tabs and remove the driven sprocket ②.
- Install a new driven sprocket and lock washers.

⚠ WARNING:

Always use a new lock washers.



Nuts (Driven Sprocket):
24 Nm (2.4 m · kg, 17 ft · lb)

- Bend the lock washer tabs along the nut flats.