
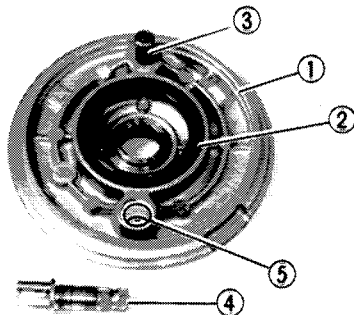
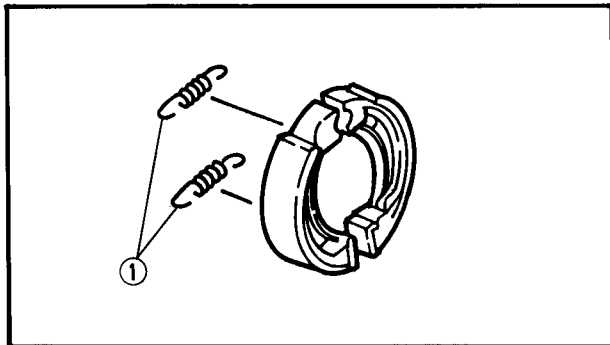


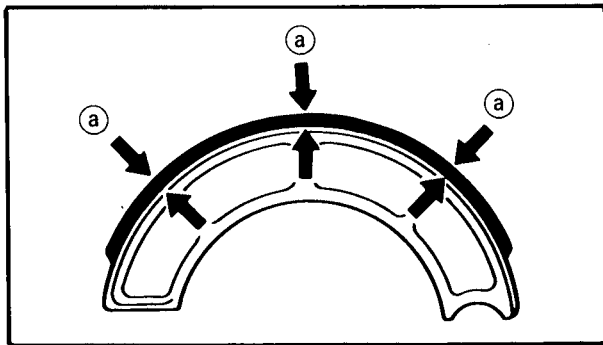

7. Inspect:

- Brake shoes

Glazed parts → Sand with coarse sand-paper.

8. Measure:

- Brake shoe thickness (a)

Out of specification → Replace.



Brake Shoe Thickness:

4.0 mm (0.16 in)

< Wear Limit >:

2.0 mm (0.08 in)

9. Inspect:

- Shoe springs (1)

Wear/Damage → Replace.

10. Inspect:

- Brake shoe plate (1)

Cracks/Damage → Replace.

- Oil seal (2)

- Brake shoe pivot pin (3)

Wear/Damage → Replace.

- Camshaft (4)

- Camshaft hole (5)

Scratches/Excessive wear → Replace.

INSTALLATION

Reverse the "REMOVAL" procedures.

Note the following points.

1. Lubricate:

- Brake camshaft (1)

- Brake shoe pivot pin (2)

- Oil seal (3) (Brake shoe plate)



Lightweight Lithium-soap
Base Grease

