





2. Lubricate:


- Oil seal lips ① (Front wheel hub)
- Bearings ② (Front wheel hub)

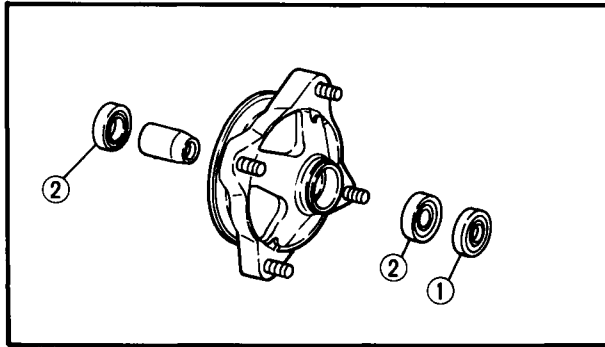

**Lightweight Lithium-soap
Base Grease (Lightly)**

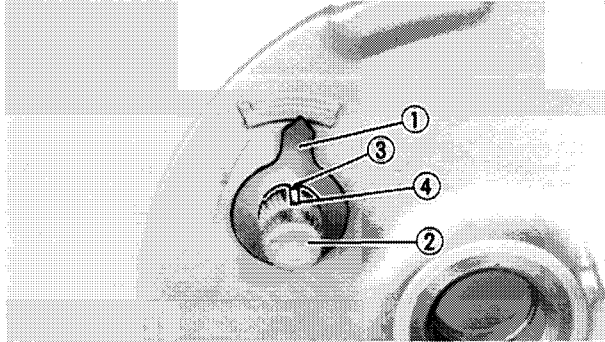

3. When installing the wear indicator plate ① to the camshaft ② align the projection ③ on the wear indicator plate with the slot ④ on the camshaft.

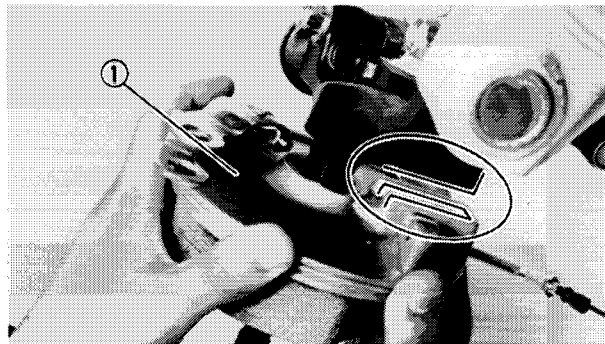


4. Install:

- Brake shoe plate ①

NOTE:

Be sure the boss on the knuckle correctly engages with the locating slot on the brake shoe plate.

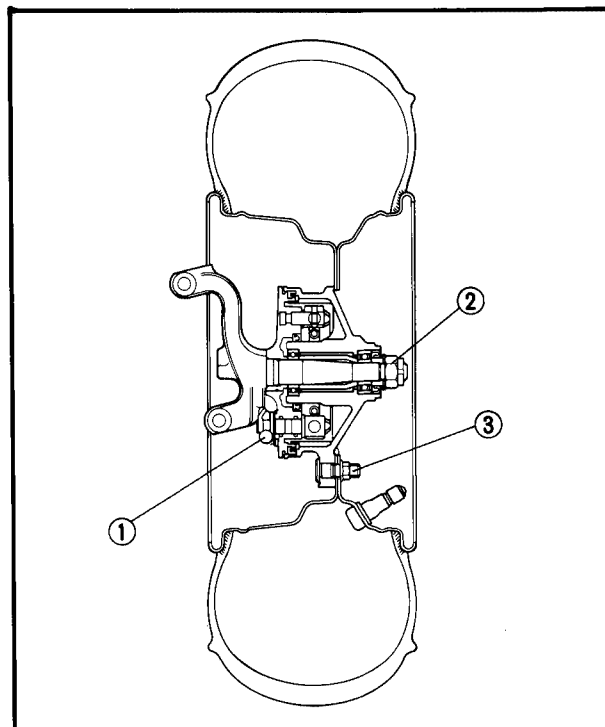

5. Tighten:

- Bolt ① (Brake cam lever)
- Nut ② (Front wheel hub)
- Nuts ③ (Front wheel)



Bolt (Brake Cam Lever):
9 Nm (0.9 m·kg, 6.5 ft·lb)

Nut (Front Wheel Hub):
70 Nm (7.0 m·kg, 51 ft·lb)

Nut (Front Wheel):
45 Nm (4.5 m·kg, 33 ft·lb)

NOTE:

Thoroughly wipe off the excess grease.