


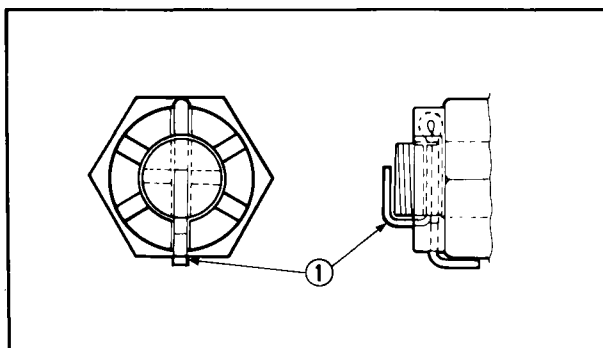

6. Install:


- Cotter pin ① (New)

NOTE:

Do not loosen the wheel hub nut after torque tightening. If the wheel hub nut groove is not aligned with the cotter pin hole, align groove with the hole by tightening up on the wheel hub nut.

⚠ WARNING:

Always use a new cotter pin.

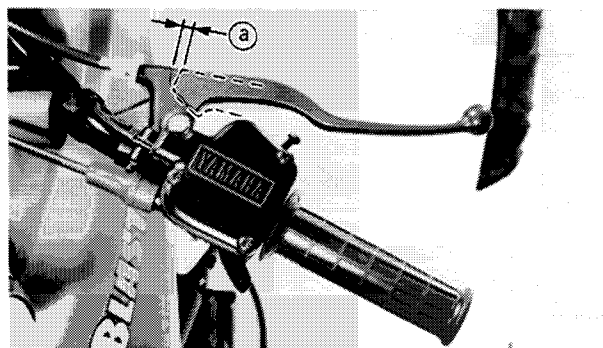

7. Adjust:

- Front brake cable free play ②
Refer to the "FRONT BRAKE ADJUSTMENT" section in the CHAPTER 3.



Brake Cable Free Play:
5 ~ 8 mm (0.20 ~ 0.31 in)