

Maestro Software Licence (manual)

Rev. 00: 12/03/2015

1. INTRODUCTION

The “Maestro SW License Manager” software, which allows Maestro users to activate a new type of authorisation, is available to customers who request it. The authorisation is a time-limited licence to use the Maestro software that frees users from the need of physical authentication devices (dongles) connected locally or in LAN.


The correct operation of the “Maestro SW License Manager” is restricted to its use with a version of Maestro v1.00.011.1000 or later.

2. INSTALLATION

The software, supplied as an .exe file, does not require an actual installation.

In order to use the “Maestro SW License Manager” software correctly, users must already have Maestro installed. The .exe file must be copied in the Maestro installation directory.

If the file is not copied in the correct directory, when the “Maestro SW License Manager” software is launched, the error message below will be displayed:

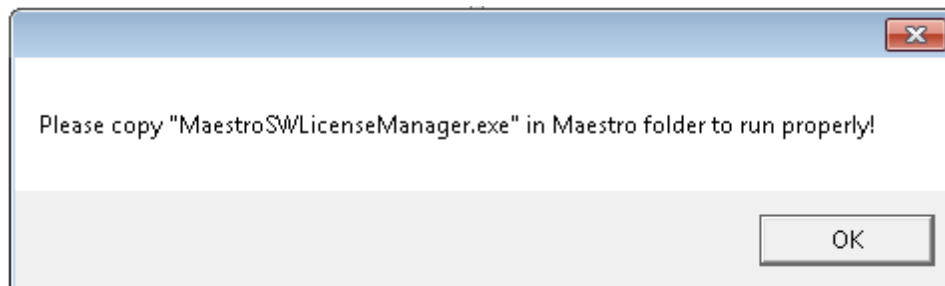

3. FUNCTIONS FOR THE SOFTWARE LICENCE DETACH MANAGER

Proceed as follows for a correct execution of the functions described below:


- Maestro application already installed;
- Maestro SW License Manager software in the Maestro installation directory;
- Operating system as free as possible of any other applications active at the same time.

If the above indications are not followed there may be issues in executing the commands.

3.1.ENABLE THE DETACH SOFTWARE LICENCE

The command described below is executed correctly only if the detach software licences manager pc detects the presence of aN HASP HL NET dongle connected locally to the pc or in LAN.

The procedure required to activate a pc to issue software licences correctly is illustrated with the exchange of files in the figure below:

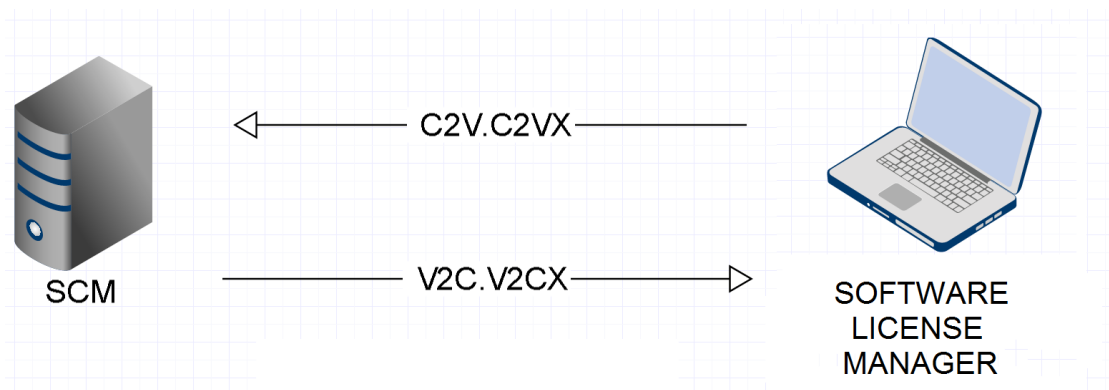

The procedure consists of the following simple steps:

1) Creation of the “C2V.C2VX” file on the detach software licences manager pc, with the “Maestro SW License Manager”. The file is sent to SCM;

This step requires the use of the following key:




2) The “V2C.V2CX” file is created at SCM from the “C2V.C2VX file”. The file is sent to the detach software licences manager;

3) The “V2C.V2CX” file is written on the pc of the detach software licences manager with the “Maestro SW License Manager” software.

This step requires the use of the following key:



If the activation is correct the following message is displayed:

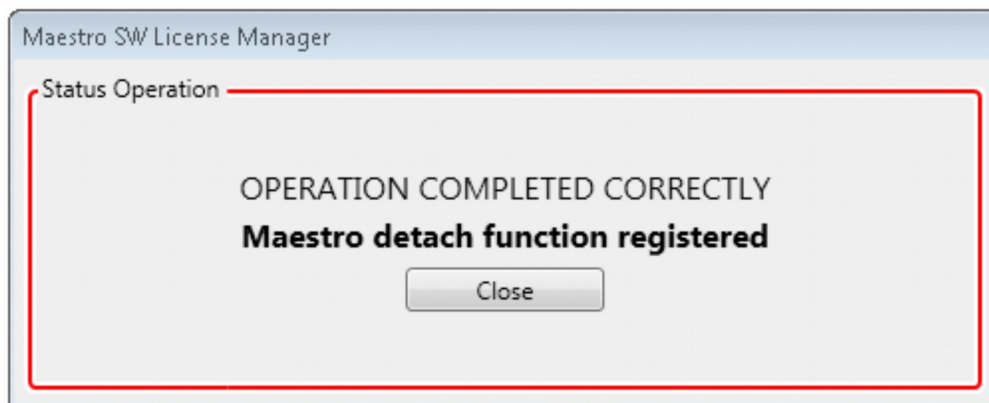

3.2. DETACH SOFTWARE LICENCE

This command does not require the local or LAN presence of an HASP HL NET dongle. This allows users to carry out this operation not just in the school where the dongle is located.

The phase consists of the following steps:

- 1) The detach software licences manager that issues the licences, with the “Maestro SW License Manager” software, produces an “H2R_[xxx].H2RX” file starting from a “R2H_[xxx].R2HX” file received from the student;
- 2) The detach software licences manager that issues the licences sends the “H2R_[xxx].H2RX” file to the student;

This step requires the use of the following key:



Only the teacher’s pc, previously enabled to release licences, can carry out this operation.

3.3. DETACHMENTS AVAILABLE AND DURATION


This command does not require the local or LAN presence of an HASP HL NET dongle. This allows users to carry out this operation not just in the school where the dongle is located.

After having enabled the detach enable and having completed a few operations the user can check how many operations are still available.


Click on the key below to check the number of detachments available and the duration of each one:



The following message is displayed:

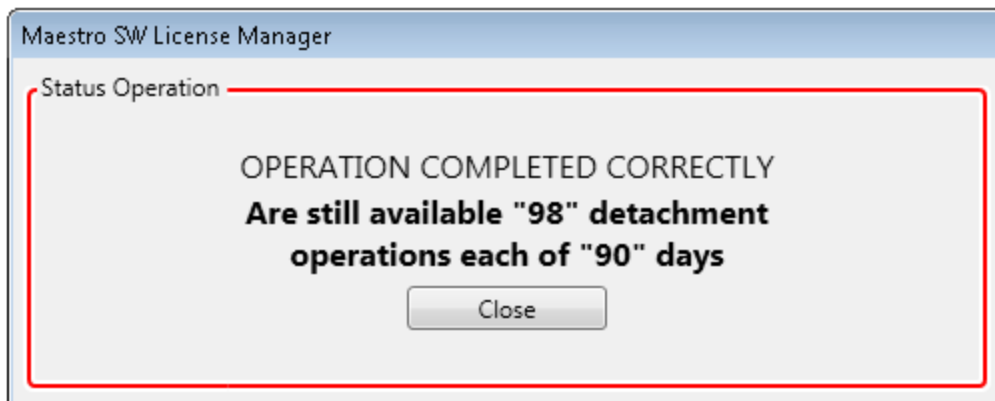

If the detach has not been enabled correctly the following message will be displayed:

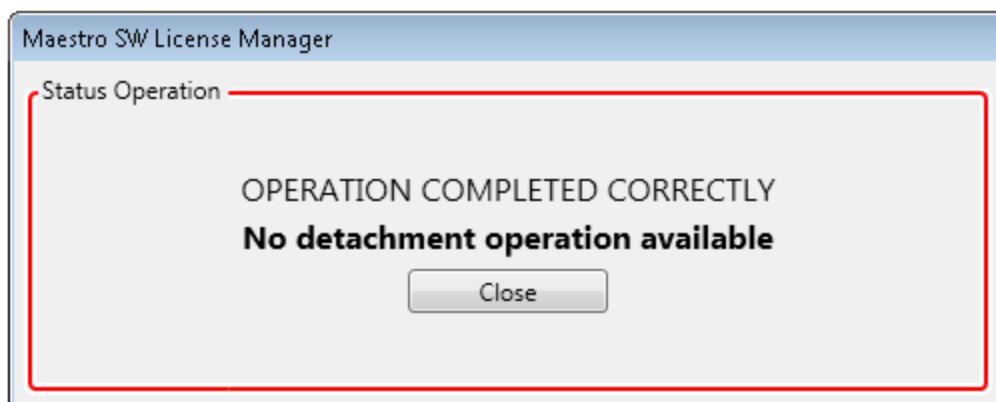

4. STUDENT FUNCTIONS


Proceed as follows for a correct execution of the functions described below:

- Maestro application already installed;
- Maestro SW License Manager software in the Maestro installation directory;
- Operating system as free as possible of any other applications active at the same time;

If the above indications are not followed there may be issues in executing the commands.

4.1.1. REQUEST AND WRITING A SW MAESTRO LICENCE

The procedure required to install a Maestro software licence correctly on a pc is illustrated with the exchange of files in the figure below:

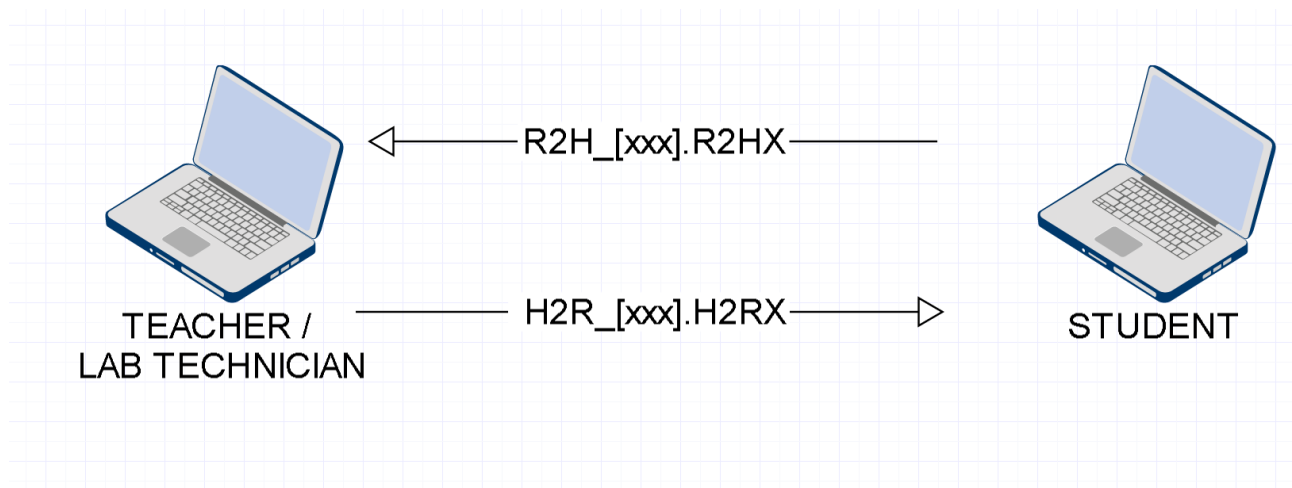

In the image the part of the file names shown with "[XXX]" represents the identification code of the student pc that requests the licence.

The Maestro software licence request and writing operations consist of the following steps:

1) The student produces the “R2H_[xxx].R2HX” file on his/her pc, with the “Maestro SW License Manager” software and sends it to the detach software licences manager that issues the licences.

This step requires the use of the following key:




2) The student uses the “Maestro SW License Manager” software to write the “H2R_[xxx].H2RX” file received from the teacher, on his/her pc.

This step requires the use of the following key:





If the Maestro licence has been detached correctly the following message is displayed:

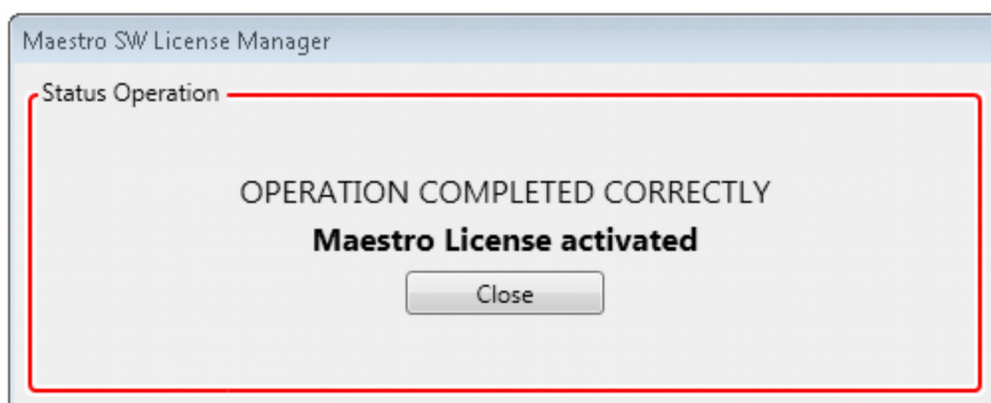

4.2.CHECK THE LICENCE INSTALLED

Users can check the expiry date of the software licence installed with the Maestro information window. The window is shown below on the right and is accessed from the menu shown on the left by clicking on “About”:

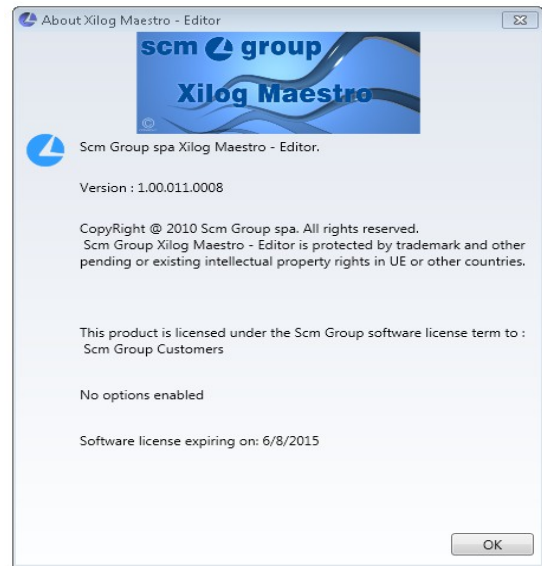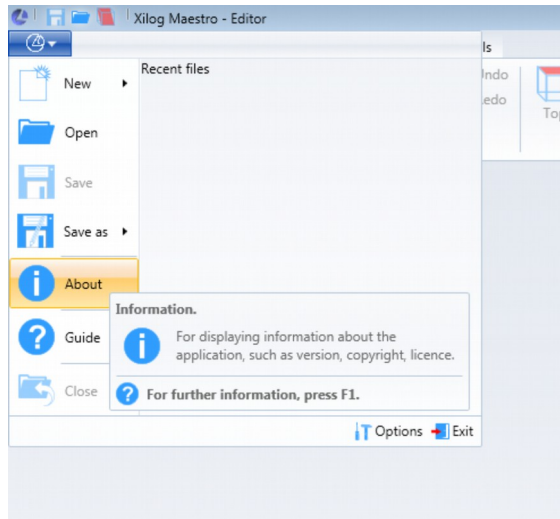

Please note that the Maestro software licences do not enable any options. They simply activate the basic Maestro functions.