ETC Installation Guide

ColorSource® Linear Accessories

Overview

The ColorSource Linear 1 (0.5 m) fixture has the following optional mounting accessories:

- Yoke with C-clamp (7414K1017)
- Double yoke with C-clamp for mounting two fixtures (7414K1018)

All ColorSource Linear fixtures have the following optional accessories:

- Louver (7414K1019)
- Barn doors (7414K1020)
- Secondary lenses (horizontal, vertical, and round)

For the ColorSource Linear 2 (1 m) and ColorSource Linear 4 (2 m) fixtures, order one accessory for each 0.5 meter segment (cell) of the fixture. For example, for a Linear 2 fixture, order two barn door accessory kits to fit the full length of the fixture. Contact your local dealer for more information.


Spacer




Spacers for secondary lenses are included with the fixture. Use these spacers to hold the accessories in position when multiple lenses are used in the Linear 2 and Linear 4 fixtures. The spacers are positioned between the 0.5 meter lenses. To order additional spacers, contact your local dealer and request part number 7414A4061.

To install secondary lenses, see the *ColorSource Linear Installation Guide*. All ETC documentation is available for free download at etcconnect.com.

ColorSource Linear 1 fixture with barn doors and louver

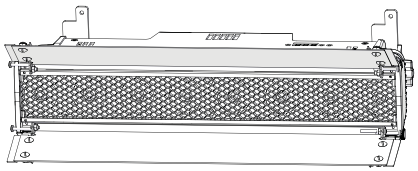

ColorSource Linear 1 fixtures with double yoke

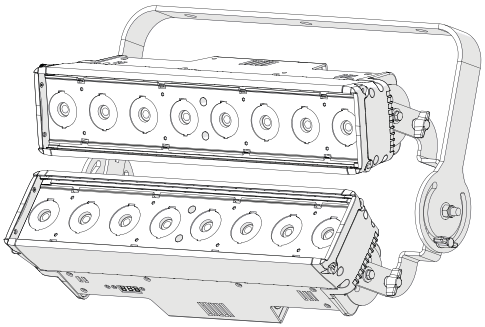

Corporate Headquarters ■ Middleton, Wisconsin, USA ■ Tel +608 831 4116
Service (Americas) ■ service@etcconnect.com
London, UK ■ Tel +44 (0)20 8896 1000 ■ Service: (UK) service@etceurope.com
Rome, IT ■ Tel +39 (06) 32 111 683 ■ Service: (UK) service@etceurope.com
Holzkirchen, DE ■ Tel +49 (80 24) 47 00-0 ■ Service: (DE) techserv-hoki@etcconnect.com
Hong Kong ■ Tel +852 2799 1220 ■ Service: (Asia) service@etcasia.com
Web: etcconnect.com ■ © 2017 Electronic Theatre Controls, Inc. ■ Product information and specifications subject to change. ■ ETC intends this document to be provided in its entirety.
7414M2110 ■ Rev C ■ Released 2017-01

ETC Installation Guide
ColorSource Linear Accessories


WARNING: **Disconnect fixtures from power and DMX and allow to cool before performing any modifications such as accessory installation.**


Note: *Illustrations in this document show the Linear 1 fixture unless otherwise noted.*

Install the yoke or double yoke (Linear 1 only)

You will need a 10 mm wrench to install the yoke or double yoke. If barn doors are installed on the fixture, remove them before installing the yoke or double yoke.


1: Place the fixture on a flat surface with the LEDs facedown.
2: Remove the locking knob and bolt from each trunnion. Retain the locking knobs and bolts.
3: Use the 10 mm wrench to remove the hex head bolts that attach the trunnions to the fixture. Retain the bolts and washers.
4: After the trunnions are free, remove the trunnions from the fixture.
5: If you are installing the double yoke, repeat steps 1–4 for the second fixture.
6: Align the yoke to the fixture (or fixtures). The figure below shows a single yoke.
7: Install the locking knobs and bolts.
8: Install the hex head bolts and washers.
9: Tilt the fixture (or fixtures) to the desired angle and then tighten the locking knobs.

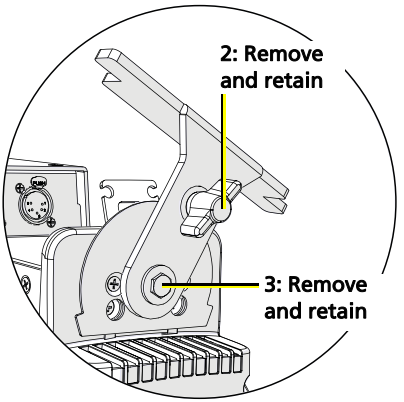

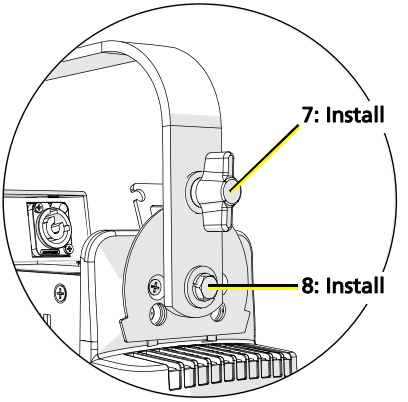

ETC Installation Guide
ColorSource Linear Accessories

Install the louver




A spacer (shown at left) is included with the louver. Use the spacer to hold louvers in position when multiple louvers are used in the Linear 2 and Linear 4 fixtures.


1: Loosen the thumbscrew on the access panel on either end of the fixture.

2: Pivot the access panel until you can access the slots above the LEDs.

3: Slide the louver into either of the slots above the LEDs.


4: For Linear 2 and Linear 4 fixtures, position spacers between the louvers (see image below).

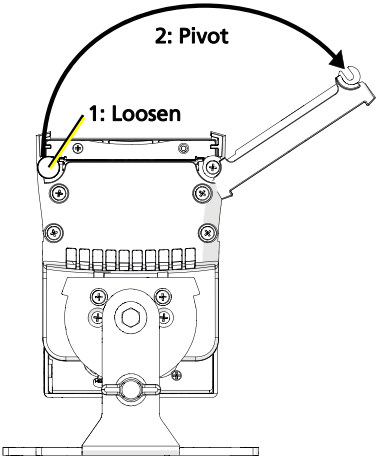

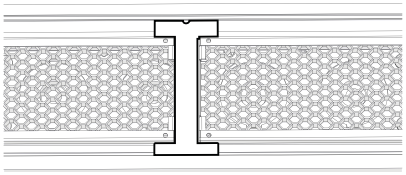

5: Pivot the access panel back into place and tighten the thumbscrew. Make sure that the thumbscrew and pivot-point screw on the access panel are secure.

Install the barn doors

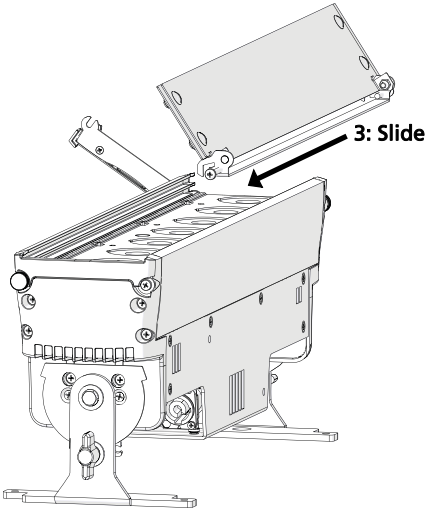


Install the barn doors in the top slot (farthest away from the LEDs). You can use the lower slot for a secondary lens or louver, if desired.

1: Loosen the thumbscrew on the access panel on either end of the fixture.

2: Pivot the access panel until you can access the slots above the LEDs.

3: Slide a barn door leaf into the top slot above the LEDs.

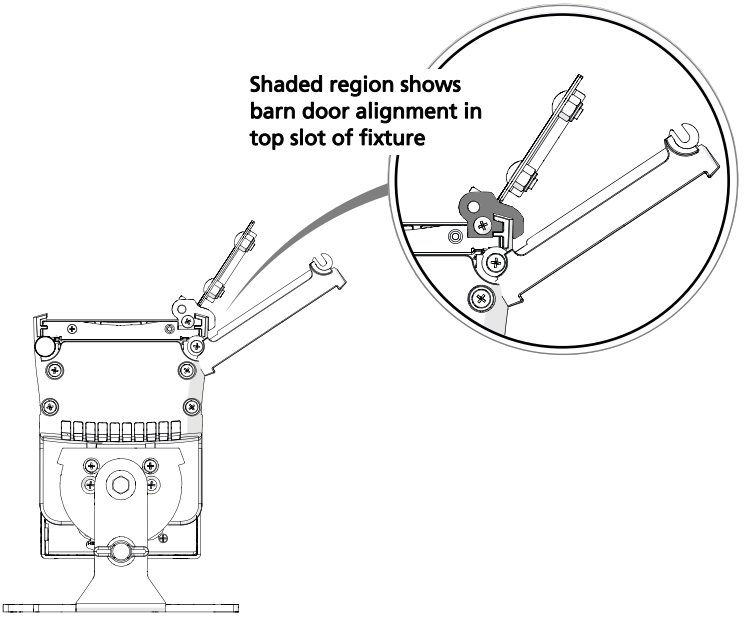


4: Repeat step 3 for the other barn door leaf.

5: For Linear 2 and Linear 4 fixtures, repeat steps 3 and 4 as needed to slide additional barn door leaves into the fixture.

6: Pivot the access panel back into place and tighten the thumbscrew. Make sure that the thumbscrew and pivot-point screw on the access panel are secure.

7: Adjust the leaf angles as needed. If necessary, extend the leaves (as shown below).

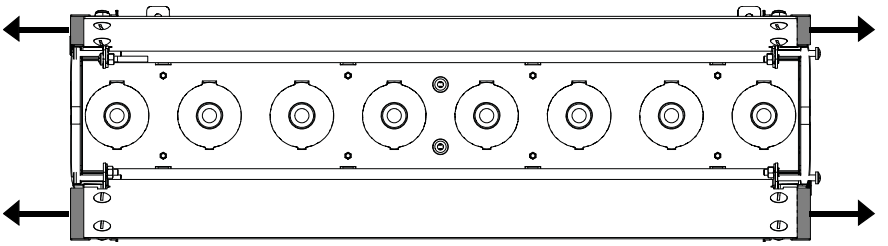

Shaded regions show leaf extenders