


全自动无线断布机

FULLY AUTOMATIC

WIRELESS FABRIC CUTTING MACHINE

使用说明书 INSTRUCTIONS

QZD-109/166

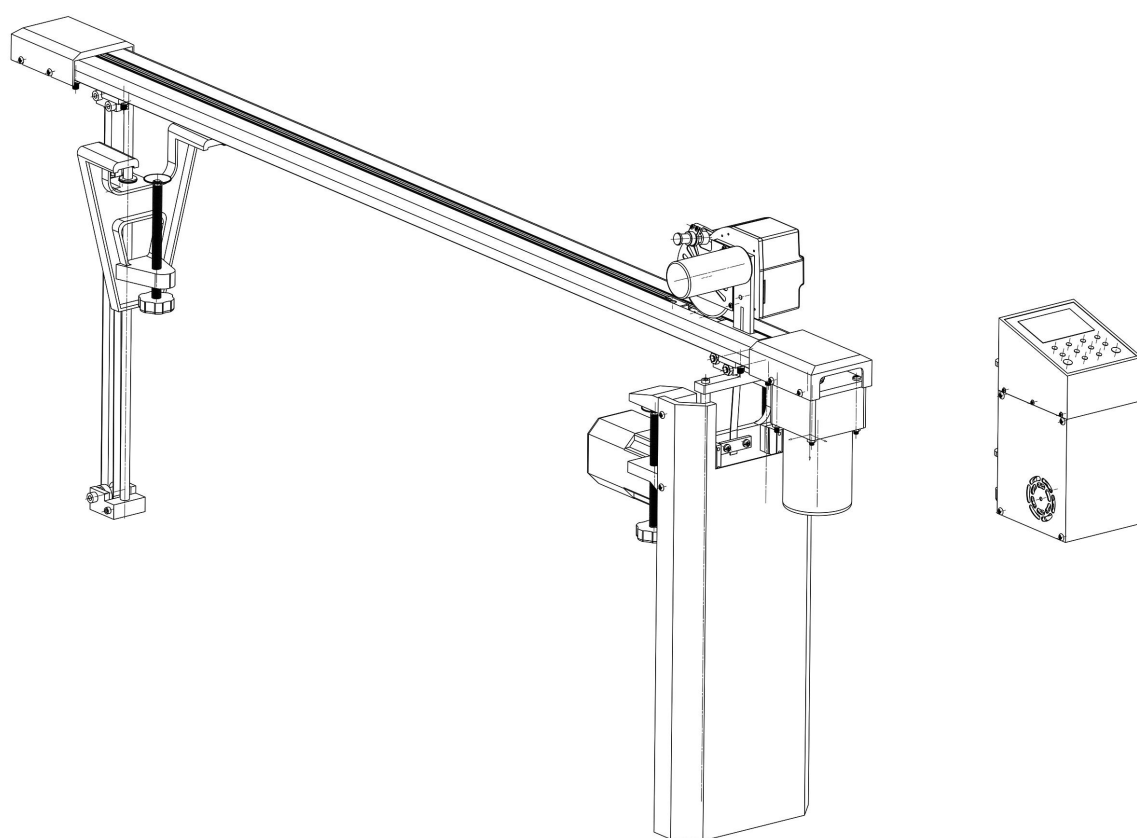

断布机产品介绍

Product introduction of fabric cutting machine

本机是服装、针织行业生产裁断必备工具。适用于批量生产时，规格尺寸之裁断。

- 一、具备快速刃磨装置，能保刀口锋利。
- 二、能平整压布,可齐整不错位裁断。
- 三、能显示自动计数。

THIS MACHINE IS AN ESSENTIAL TOOL FOR CUTTING IN THE CLOTHING AND KNITTING INDUSTRY. SUITABLE FOR CUTTING SPECIFICATIONS AND SIZES DURING MASS PRODUCTION.

- 1、EQUIPPED WITH A FAST SHARPENING DEVICE, IT CAN ENSURE A SHARP CUTTING EDGE.
- 2、IT CAN FLATTEN AND PRESS THE FABRIC, AND CAN BE CUT NEATLY WITHOUT DISPLACEMENT.
- 3、CAN DISPLAY AUTOMATIC COUNTING.

设备操作说明

Equipment operation instructions

- 一、设备启停：按一下设备启动键，设备开始全自动流程工作，工作中按设备暂停键，设备暂停工作，按一下设备启动键，设备继续往下流程工作，直到工作流程完毕。
- 二、遥控器操作：按2下遥控器A键，设备启动工作，按一下遥控器B键，设备暂停工作，再次按2下遥控器A键，设备继续往下流程工作。
- 三、磨刀功能：在设备停止状态下按一下磨刀功能键刀头电机工作，手按磨刀器磨刀，需在3秒内完成，3秒后刀头电机自动停止工作。
- 四、行程测试：在设备停止状态下按一下行程测试键，推进电机工作，刀头往前推进，此时刀头电机不会工作，当刀头到达设定好的裁剪长度位置，推进电机反转，刀头往回走，到达回位原点停止。如中途按设备暂停键，设备停止，再次按下行程测试键，设备往下流程工作。
- 五、升降测试：在设备停止状态下按一下升降测试键，升降电机工作，轨道上升，到达升降高度设定值后升降电机停止工作，轨道停留在上方，再次按下升降测试键，升降电机反转，轨道下降，到位停止。如中途按设备暂停键，设备停止，再次按下行程测试键，设备往下流程工作。
- 六、层数清零：长按设备清零键2秒，嗡鸣器发出嘀嘀声后，当前层数数值清零。
- 七、参数设置：在设备停止状态下按一下设置确认键，屏幕显示设置中字体闪烁，按位移键选择需要修改的参数框，通过数字加键或数字减键更改数值，例如需要更改裁剪长度，先按一下设置确认键，再按位移键，直到裁剪长度后面的数字闪烁，通过数字加键或数字减键更改，通过数字位移键可以把数字从个位往左移位，直接加减百位或千位。设置好后，按一下设置确认键退出设置。
- 八、裁剪长度或升降高度学习功能：例如轨道长度2800毫米，在设备停止状态下按一下设置确认键，屏幕显示设置中字体闪烁。把裁剪长度值设定为2800，先按下设备启动键不放，再按下行程测试键，推进电机工作后，同时松开2个按键。等远端感应器检测到刀头信号时，嗡鸣器发出嘀嘀响声，表示学习成功，推进电机反转，直到回位原点停止，系统识别存储为此轨道长度2800毫米，按一下设置确认键退出。升降高度学习同上。

注意事项：初次使用先学习一下。轨道近端和远端都有限位传感器，通过调节限位传感器的位置，改变两端的限位最远距离，正常使用中两端需要保留20毫米以上的安全距离，由于刀头在轨道里跑顺滑后惯性会增加，刀头冲过头容易把同步带拉断。

全自动无线断布机

FULLY AUTOMATIC WIRELESS FABRIC CUTTING MACHINE

产品优势 ADVANTAGES


- 1** 无线作业更便捷
Wireless operation
- 2** 低压供电更安全
Low voltage is safer
- 3** 直驱噪音小
Low direct drive noise
- 4** 无刷电机节能省电
Brushless Motor energy saving

产品展示 PRODUCT DISPLAY


产品名称 product name	QZD-109	QZD166
额定电压 rated voltage	DC 24V	
刀头规格 Cutter head	单刀/双刀 Single-tool/double-pole	
裁剪方向 cutting direction	竖立裁剪/ 横向裁剪 erect /Horizontal cropping	
空载速度 no-load speed	12000rpm	
操作方式 operating mode	按键启动 /遥控启动 Key start/remote start	
裁剪厚度 Cutting thickness	≤20mm	≤50mm
刀片尺寸 Blade size	109mm	166mm
适用范围 refer to	服装、皮革制品（牛皮）、纺织品、雪纺类、麻布、渔网、地毯棉花、工艺品、家具、制伞业、制帽业、防弹衣、沙发等... Clothing, leather products (cowhide), textiles, chiffons, linen, fishing nets, carpets, cotton, handicrafts, furniture, umbrella industry, hat industry, bulletproof vests, sofas, etc	




竖切A【双刀头】
VERTICAL CUTTING A

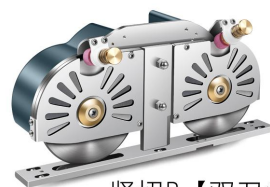

竖切B【双刀头】
VERTICAL CUTTING B

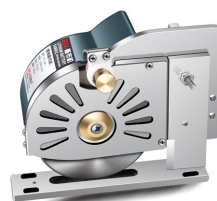

竖切【单刀头】
VERTICAL CUTTING

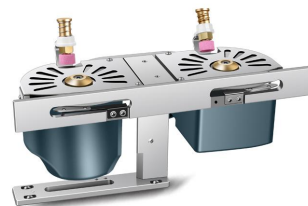

横切【双刀头】
CHISEL POINT



横切【单刀头】
CHISEL POINT


故障代码 FAULT CODE DESCRIPTION

E_01	刀头电机未启动 Knife head motor not started	刀片卡死堵住，清理或更换刀片，更换刀头电机或电机驱动板，更换轨道连接线，更换控制板 The blade is stuck and blocked. Clean or replace the blade, replace the blade head motor or motor drive board, replace the track connection wire, and replace the control board
E_02	近端限位传感器 Near end limit sensor	更换传感器，更换近端传感器连接线，更换刀头内传感器磁铁，更换控制板 Replace the sensor, replace the proximal sensor connection wire, replace the sensor magnet inside the blade, and replace the control board
E_03	远端限位传感器 Remote limit sensor	更换传感器，更换远端传感器连接线，更换刀头内传感器磁铁，更换控制板 Replace the sensor, replace the remote sensor connection wire, replace the sensor magnet inside the blade, and replace the control board
E_04	升降限位传感器 Lift limit sensor	更换传感器，更换升降传感器连接线，更换刀头内传感器磁铁，更换控制板 Replace the sensor, replace the remote sensor connection wire, replace the sensor magnet inside the blade, and replace the control board

P02

刀头安装示意图一

Schematic diagram of blade installation I

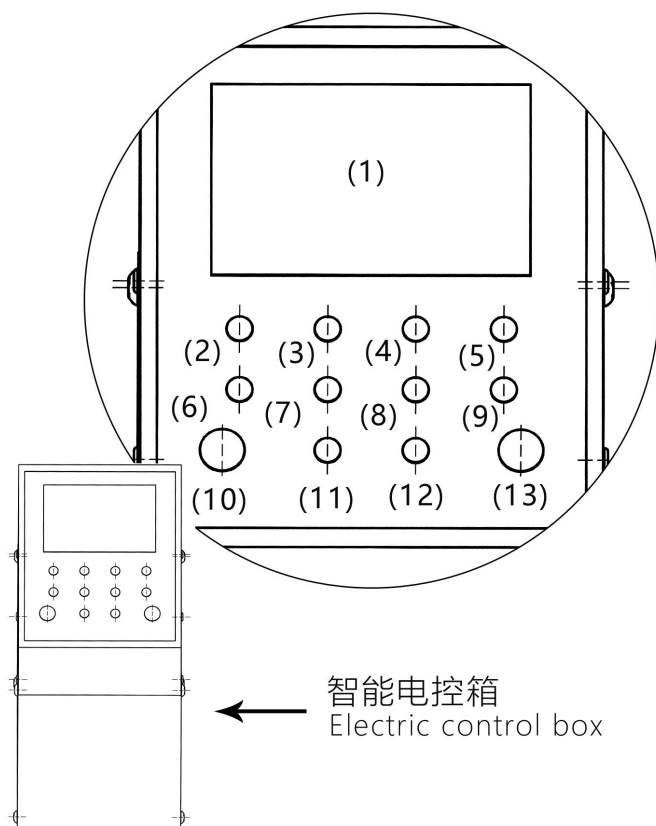


电控箱功能介绍

Electric control box function

- (01) 液晶屏 LCD screen
- (02) 磨刀功能 Grinding function
- (03) 行程测试 stroke test
- (04) 升降测试 LCD screen
- (05) 层数清零 Zero layer count
- (06) 数字向上 Number Up
- (07) 数字向下 Number Down
- (08) 移动向上 Move Up
- (09) 移动向下 Move Down
- (10) 设备暂停 Device pause
- (11) 数位移动 Digital movement
- (12) 设置确认 setup acknowledgement
- (13) 设备启动 Device startup

安装示意图二

Installation Diagram II

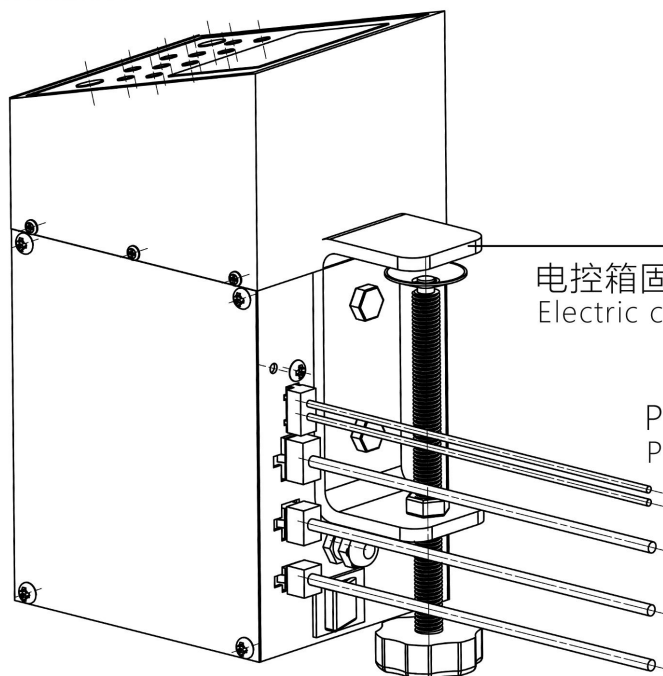

电控箱固定夹具
Electric control box fixing fixture

PLC 信号启动线
PLC signal start line


轨道通电24V电源线
24V power line for rail electrification

升降功能电源线
Power cord for lifting function

轨道来回运动电机电源线
Track motor power line


刀头安装示意图一

Knife head installation diagram one

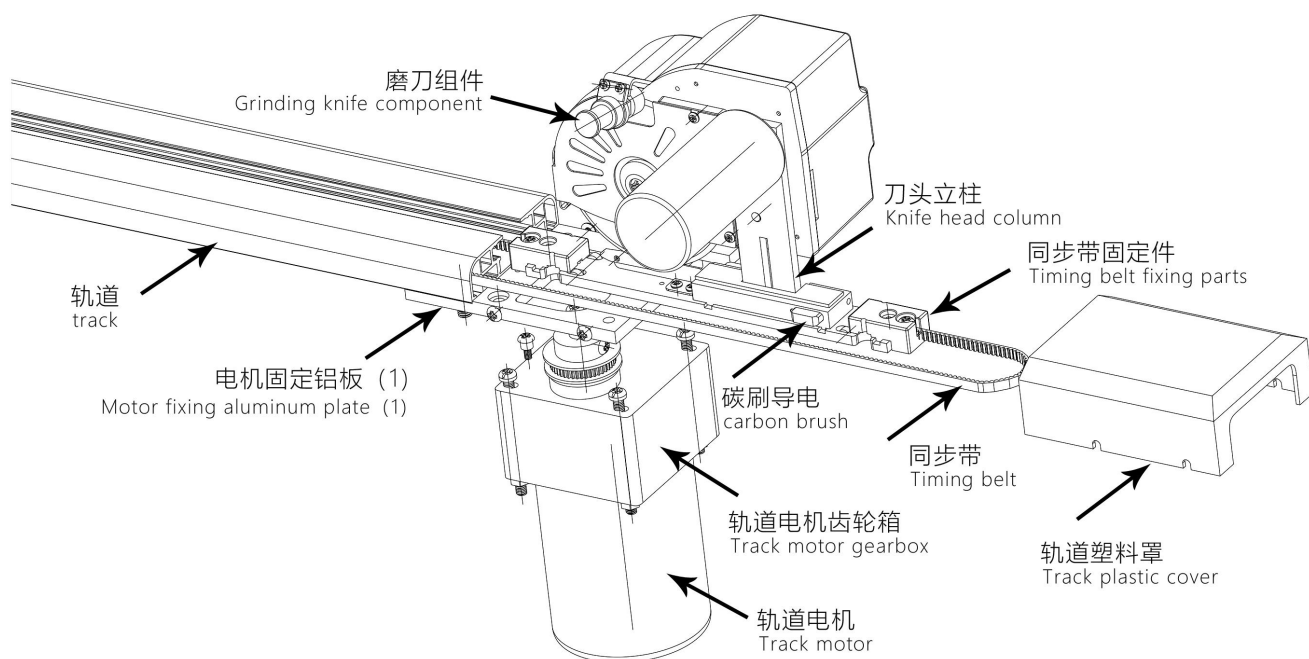


安装示意图二

Installation Diagram II

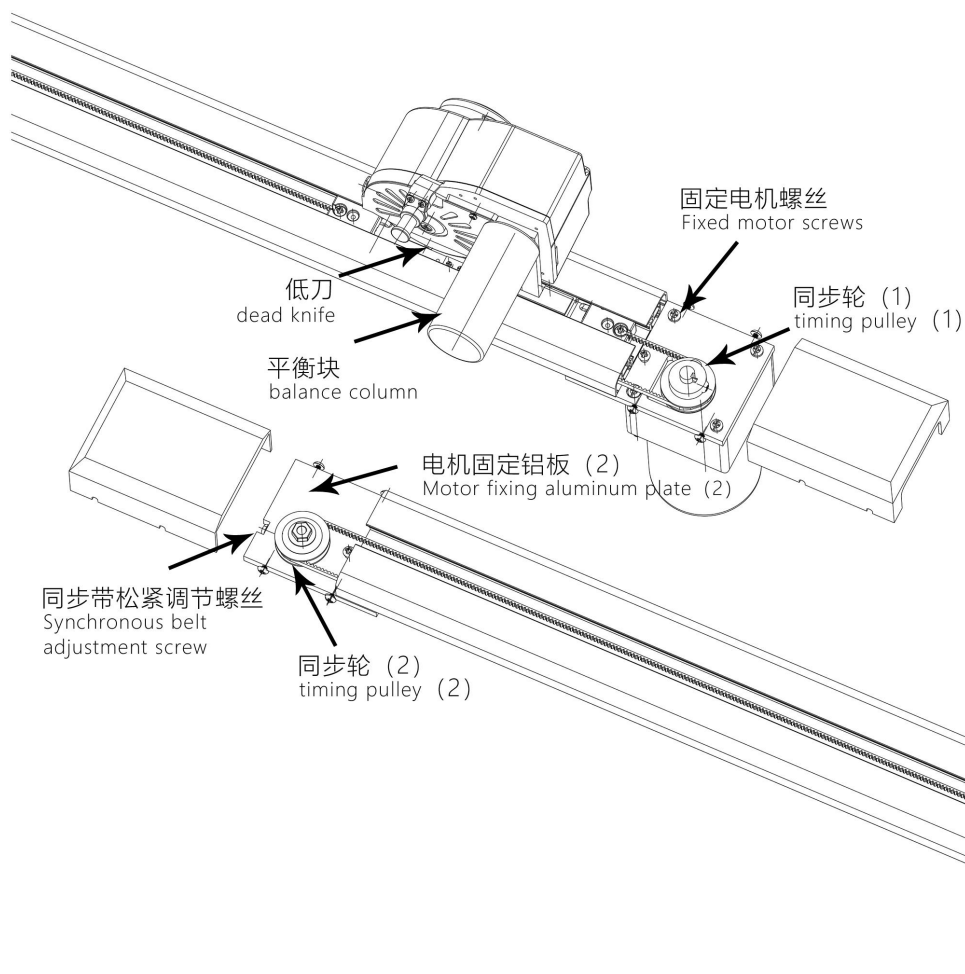


升降功能安装示意图1

Installation diagram of lifting function I

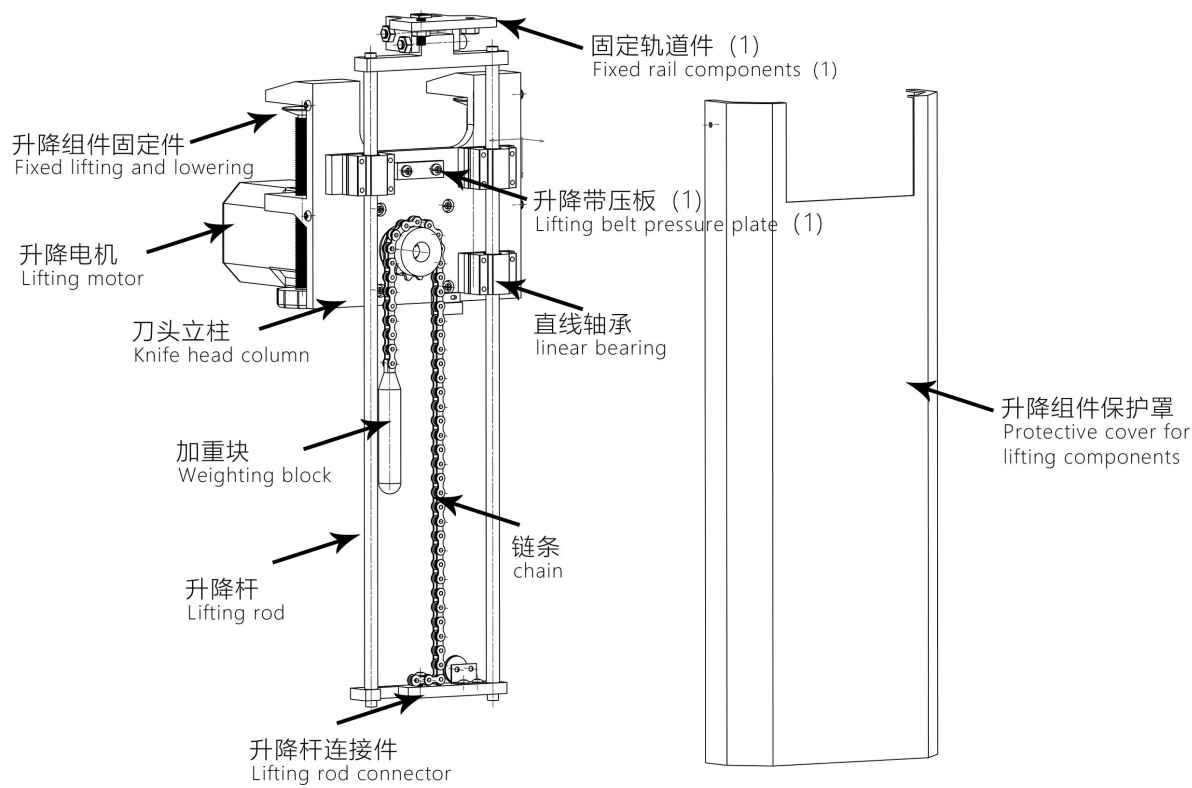

安装示意图二

Installation Diagram II

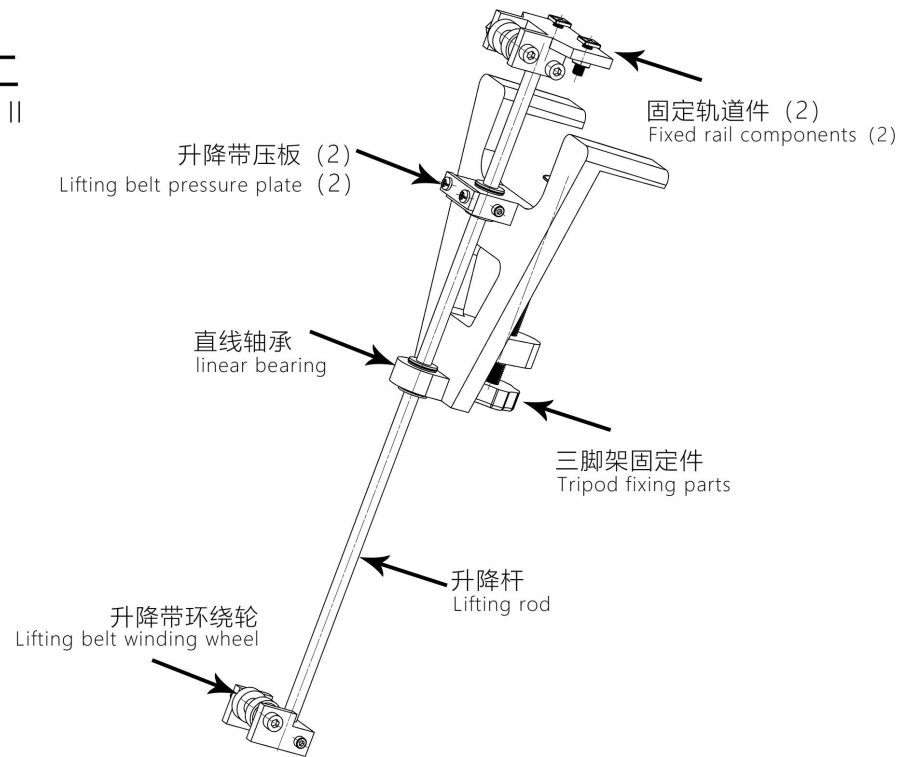

Equipment operation instructions

- 1、 Equipment start stop: Press the equipment start button once to start the fully automatic process of the equipment. During work, press the equipment pause button to pause the equipment. Press the equipment start button once to continue working in the next process until the workflow is completed.
- 2、 Remote control operation: Press the A button on the remote control twice to start the device. Press the B button on the remote control once to pause the device. Press the A button on the remote control twice again to continue the device's workflow.
- 3、 Grinding function: Press the grinding function key once while the equipment is in a stopped state to operate the cutting head motor. Press the grinding tool by hand to grind the knife, which needs to be completed within 3 seconds. After 3 seconds, the cutting head motor will automatically stop working.
- 4、 Travel test: Press the travel test button once while the equipment is in a stopped state to push the motor to work and the blade to move forward. At this time, the blade motor will not work. When the blade reaches the set cutting length position, the push motor will reverse and the blade will move back to stop at the return origin. If the pause button is pressed midway, the device will stop, and if the travel test button is pressed again, the device will proceed to the next process.
- 5、 Lifting test: Press the lifting test button once while the equipment is in a stopped state, the lifting motor will work, the track will rise, and when the lifting height setting value is reached, the lifting motor will stop working, and the track will remain above. Press the lifting test button again, the lifting motor will reverse, the track will descend, and stop when it reaches the position. If the pause button is pressed midway, the device will stop, and if the travel test button is pressed again, the device will proceed to the next process.
- 6、 Layer reset: Press and hold the device reset button for 2 seconds, the buzzer will beep, and the current layer value will be reset to zero.
- 7、 Parameter settings: When the device is stopped, press the settings confirmation button once, and the font in the settings will flash on the screen. Press the displacement button to select the parameter box that needs to be modified, and use the number plus or minus keys to change the value. For example, if you need to change the cropping length, press the settings confirmation button once, and then press the displacement button until the number after the cropping length flashes. Use the number plus or minus keys to change it, The number shift key can shift a number from one digit to the left, directly adding or subtracting hundreds or thousands of digits. After setting up, press the settings confirmation button to exit the settings.
- 8、 Cutting length or height learning function: For example, if the track length is 2800 millimeters, press the setting confirmation button once while the device is stopped, and the font in the setting will flash on the screen. Set the cutting length value to 2800, first press the device start button without releasing it, then press the stroke test button, push the motor to work, and release both buttons at the same time. When the remote sensor detects the signal from the cutting head, the buzzer emits a beeping sound, indicating successful learning. The motor is pushed in reverse until it stops returning to the original position. The system recognizes and stores this track length of 2800 millimeters. Press the set confirmation button to exit. The learning of lifting height is the same as above.

Attention: Learn it before using it for the first time. Both the near and far ends of the track have limited position sensors. By adjusting the position of the limit sensors, the maximum distance of the limit positions at both ends can be changed. In normal use, a safety distance of more than 20 millimeters needs to be kept at both ends. Due to the increased inertia of the cutting head running smoothly in the track, it is easy for the cutting head to break the synchronous belt if it exceeds the limit position.

使用前，请详细阅读使用说明书
Before use, please read the user manual carefully