



naviGATR FIELD COORDINATES

Top-down audience view | fixed field frame | dimensions from the current field XML

Inside bottom-left is the field origin.

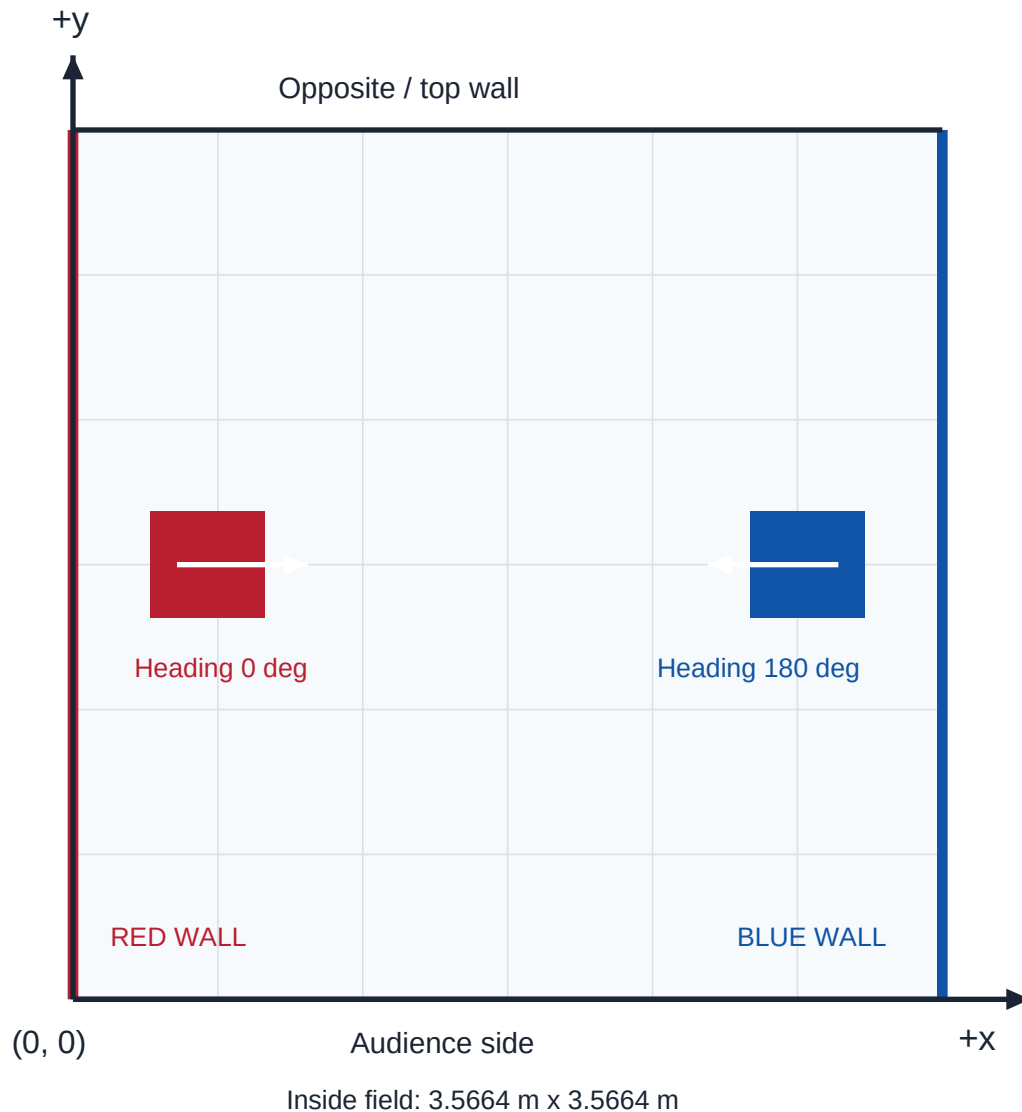

HEADING

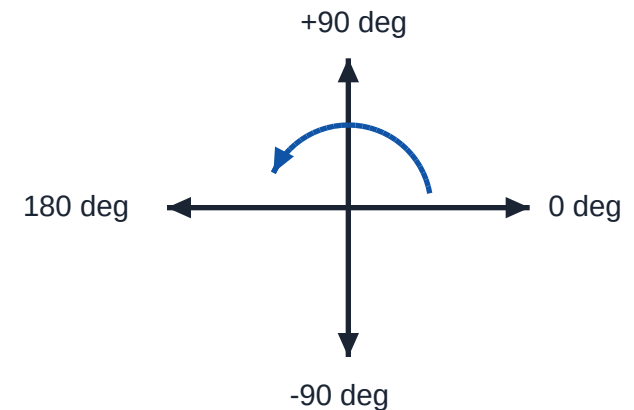

Positive heading = counterclockwise.

0 deg points along field +x.

STARTING ON THE OTHER SIDE

The field axes stay fixed.

Change the starting x, y and heading.

Facing inward from opposite walls can mean 0 deg on one side, 180 deg on the other.

Pose refers to the ROBOT origin near its turning center, not the camera.

Robot axes: +x forward, +y left, +z up. Camera mounting is measured from that robot origin.

Diagram follows config/override/field.xml and docs/coordinates.md. Robot drawings are illustrative.