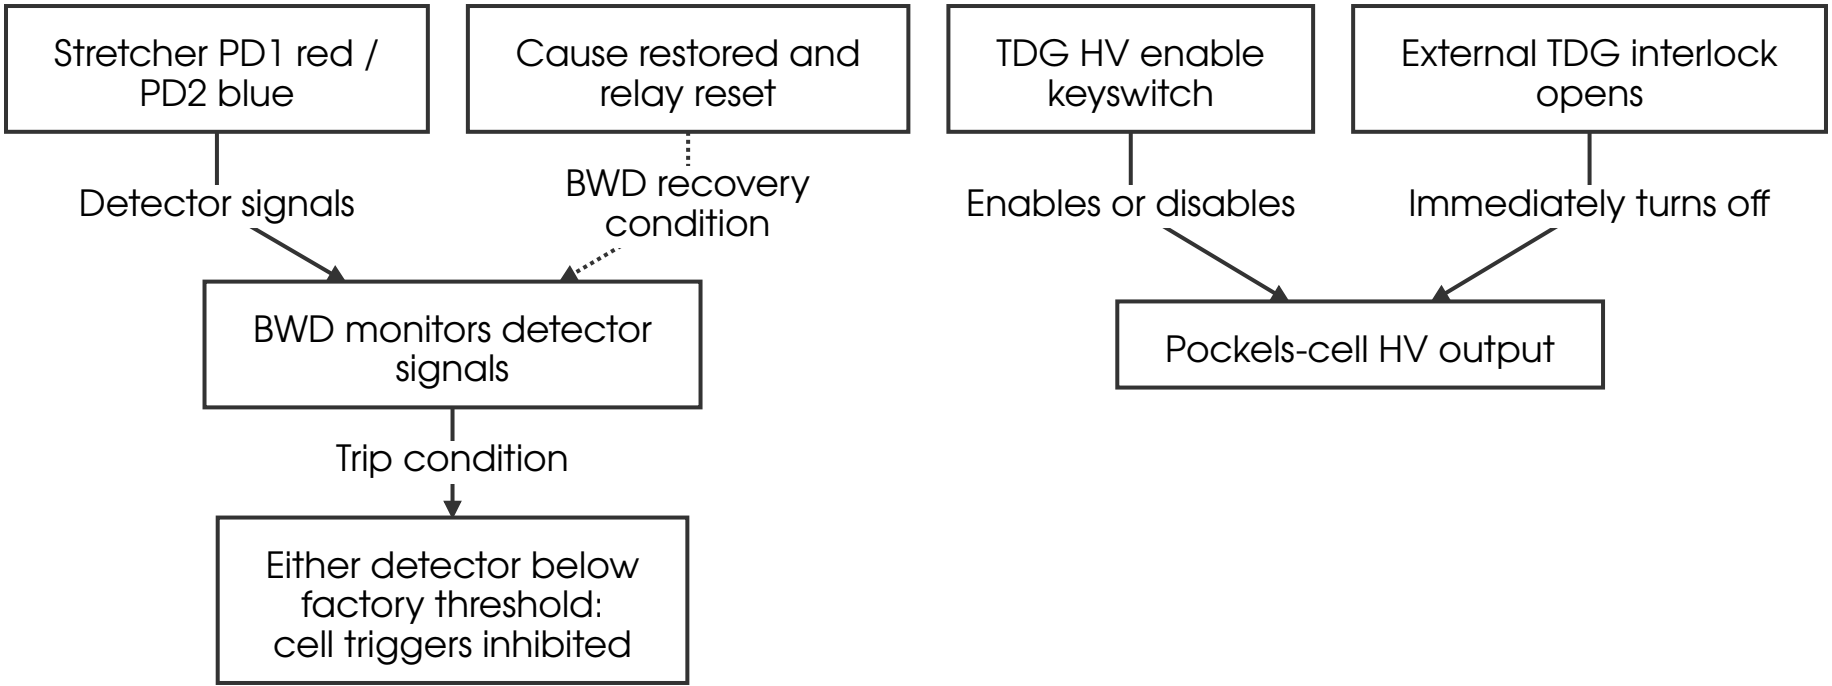
Stretcher PD1 red / PD2 blue
Cause restored and relay reset
TDG HV enable keyswitch
External TDG interlock opens
Detector signals
BWD recovery condition
Enables or disables
Immediately turns off
BWD monitors detector signals
Pockels-cell HV output
Trip condition
Either detector below factory threshold: cell triggers inhibited