



CRITT M2A


Tutorial: Starting a Simulation in OpenWAM 2.0.2

Executable file	Data file	Starting time	End time	Observations
C:\Documents and Settings\ache\Bureau\OpenWAM_v2.0.2\Win32_x86\Open...	C:\Documents and Settings\ache\Bureau\4FT\4FT_Model_3.4.1750RPM.wAM	15:58:04 19/02/2014	In 00:05:41 (88%)	Calculating main loop...
C:\Documents and Settings\ache\Bureau\OpenWAM_v2.0.2\Win32_x86\Open...	C:\Documents and Settings\ache\Bureau\4FT\4FT_Model_3.4.2000RPM.wAM			
C:\Documents and Settings\ache\Bureau\OpenWAM_v2.0.2\Win32_x86\Open...	C:\Documents and Settings\ache\Bureau\4FT\4FT_Model_3.4.2250RPM.wAM			
C:\Documents and Settings\ache\Bureau\OpenWAM_v2.0.2\Win32_x86\Open...	C:\Documents and Settings\ache\Bureau\4FT\4FT_Model_3.4.2500RPM.wAM			
C:\Documents and Settings\ache\Bureau\OpenWAM_v2.0.2\Win32_x86\Open...	C:\Documents and Settings\ache\Bureau\4FT\4FT_Model_3.4.2750RPM.wAM			
C:\Documents and Settings\ache\Bureau\OpenWAM_v2.0.2\Win32_x86\Open...	C:\Documents and Settings\ache\Bureau\4FT\4FT_Model_3.4.3000RPM.wAM			
C:\Documents and Settings\ache\Bureau\OpenWAM_v2.0.2\Win32_x86\Open...	C:\Documents and Settings\ache\Bureau\4FT\4FT_Model_3.4.3250RPM.wAM			


CHEVALEY Andrey
16/04/2014

Starting a calculation in OpenWAM:


- First, click the floppy disk icon (in blue). This will save your file as .pcs and .wam. The .pcs file corresponds to the workspace layout model, and the .wam file corresponds to the file to be compiled.
- Click the icon with the blue arrow (in black):

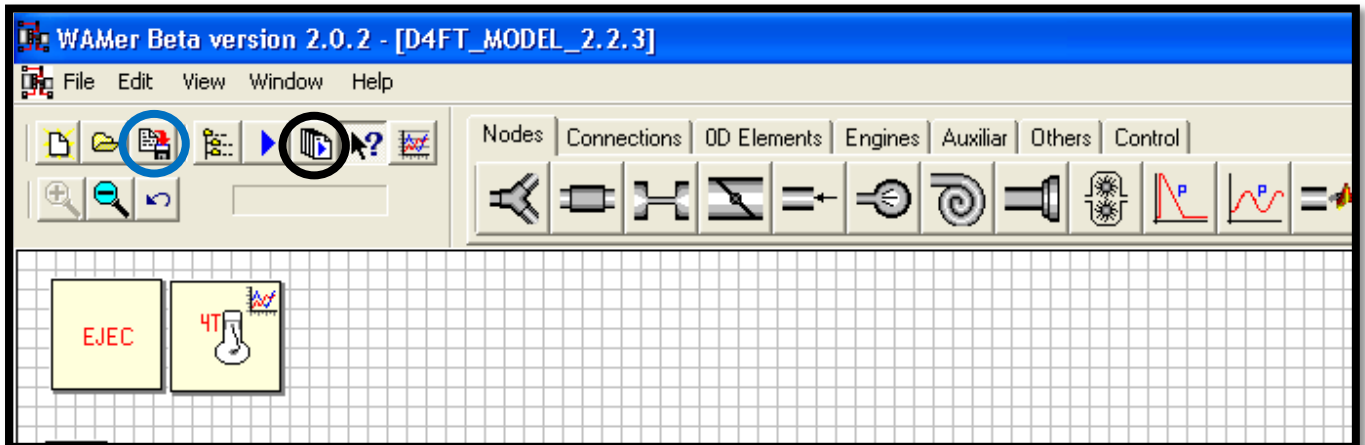

- You will arrive at a new window:
- Then click the black cross:

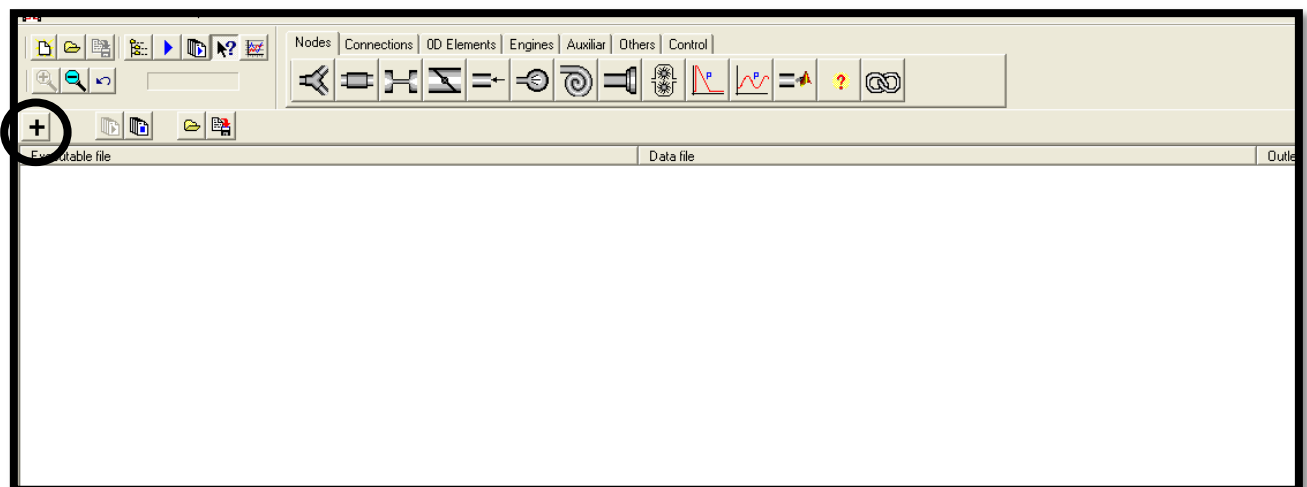

- At this point a dialog box opens:

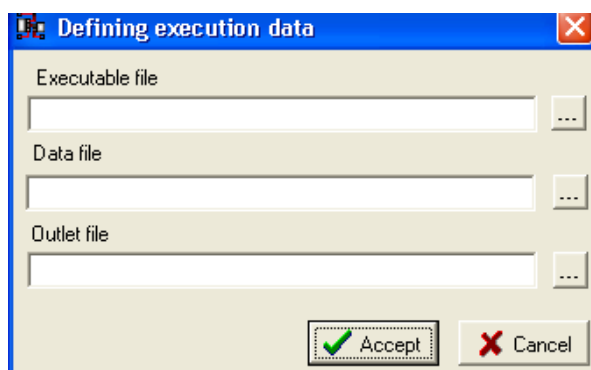

- In Executable file, browse to find the executable: OpenWAM.exe

- In Data file, browse to find your model. This must be a .wam file, not a .pcs file.

- Finally, Outlet file lets you choose your output file. If you don't select one, the output file will automatically be placed in the folder of your model file.
votre fichier modèle.
- You can track the progress of your simulation and see the remaining time in the simulation window.

In some cases, after starting a simulation the model returns an error. If so, check the incorrect element.

For compressor/turbine map reading errors, refer to the turbocharger tutorial.

For supersonic speed warnings in a pipe, adjust the diameter.

The compiler accounts for 2 crankshaft revolutions, i.e. 720° , for an engine model. For a model without an engine, the number of cycles entered will be treated as a calculation time in seconds.

To set the calculation step between each cycle, go to the EJEC block, right-click “mean and instantaneous results”. In “sampling interval for results calculation”, enter the calculation step. For an engine model, this step will be in degrees; for a model without an engine, it will be in seconds.

At the end of your simulation, OpenWAM creates 2 files: one corresponds to the average values measured over each calculation cycle, “AVG”. The other corresponds to the instantaneous values measured over the last calculation cycle, “INS”.

The two resulting files are .DAT files that you can process with Excel.