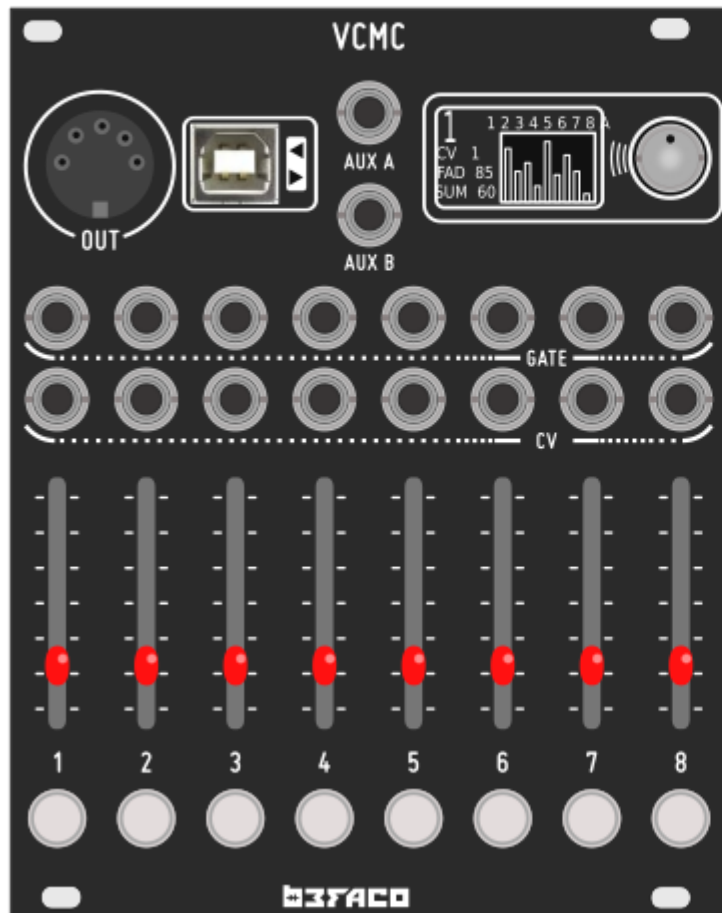# BEFACO  VCMC Bitwig Controller

## VCMC

### Aux INs A-B
AuxA CC 32 - AuxB CC 33 - Freely Mapable

### Gate INs 1-8
Same function as Buttons

### CV INs 1-8
CC:14-21  -  Freely Mapable

### Faders 1-8
CC:23-30  -  Remote Controls

### Buttons 1-8
C Major Scale starting in  C3 (Note 60)

This Script was created for Befaco VCMC v1.1 factory default settings. Make sure you update your VCMC module to version 1.1 and use default settings for it to work.
For any issue related to VCMC configuration, please refer to user manual or drop a mail to support@befaco.org