Drum Pad Mode

Pads are used as Note Input for currently armed Tracks.
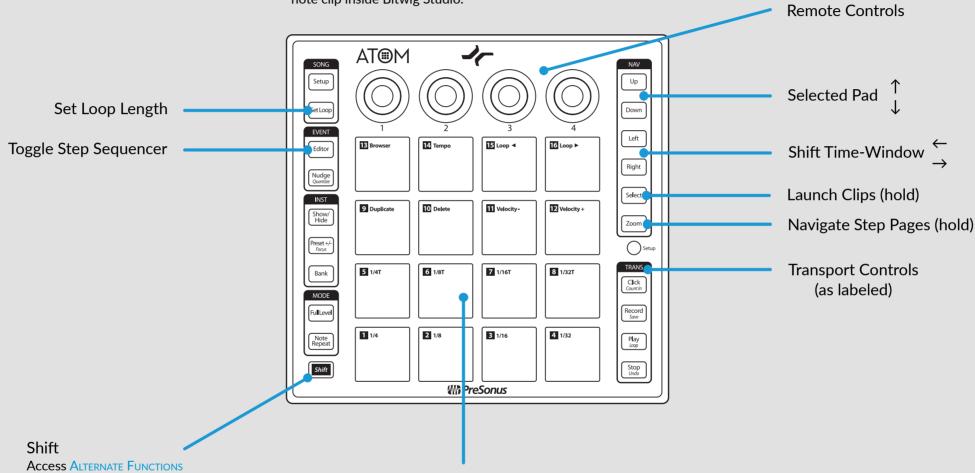
Remote Controls

Track ↑ ↓

Device ← →

Launch Clips (hold)

Transport Controls
(as labeled)

Toggle Step Sequencer

Fixed Velocity

Toggle Note Repeat

Shift
Access ALTERNATE FUNCTIONS

Pads are used as Note Input

PADS 1-8: SET NOTE REPEAT RATE (IF ENABLED)

ATOM

SONG
Setup
Set Loop

EVENT
Editor
Nudge *Quantize*

INST
Show/Hide
Preset +/- *Focus*
Bank

MODE
Full Level
Note Repeat
Shift

NAV
Up
Down
Left
Right
Select
Zoom
○ Setup

TRANS
Click *Count In*
Record *Save*
Play *Loop*
Stop *Undo*

13 Browser	14 Tempo	15 Loop ◄	16 Loop ►
9 Duplicate	10 Delete	11 Velocity −	12 Velocity +
5 1/4T	6 1/8T	7 1/16T	8 1/32T
1 1/4	2 1/8	3 1/16	4 1/32

1 2 3 4

PreSonus

Step Sequencer

The Step Sequencer lets you edit 16 steps of note data at a time for a single selected drum pad. It will edit the currently selected note clip inside Bitwig Studio.

Remote Controls

Selected Pad ↑ ↓

Set Loop Length

Shift Time-Window ← →

Toggle Step Sequencer

Launch Clips (hold)

Navigate Step Pages (hold)

Transport Controls (as labeled)

Shift
Access ALTERNATE FUNCTIONS

Pads represents the 16 steps of the current time window

SET SELECTED PAD