

Wire colours

Bl	Blue	Pu	Purple
Br	Brown	Ro	Red
Ge	Yellow	Sw	Black
Gr	Gray	Vi	Violet
Gn	Green	Ws	White
Or	Orange		

Key to items

1	Battery	34	Glow plug control unit
2	Ignition switch	35	Glow plug
3	Engine fuse box	36	Filter heater
6	Main fuse box	37	Exhaust gas recirculation solenoid valve
30	Diesel control unit	38	Boost pressure regulation solenoid valve
31	Engine control unit relay		
32	Filter pre-heating relay		


Astra 1998 to 2001 - Diagram 5

39	Air mass meter	56	Spill valve relay
40	Injection pump control unit	57	Injection start sensor
43	Coolant temperature sensor	58	Injection pump position sensor
44	Crankshaft sensor	59	Fuel temperature sensor
45	Throttle potentiometer		
54	Solenoid spill valve		
55	Diesel pump		

Note: prefix 1/ = X73 multi plug
prefix 2/ = X74 multi plug
MTS H32211

30 Diesel Engine ECM/ECU

Engine management system Y17DT engine

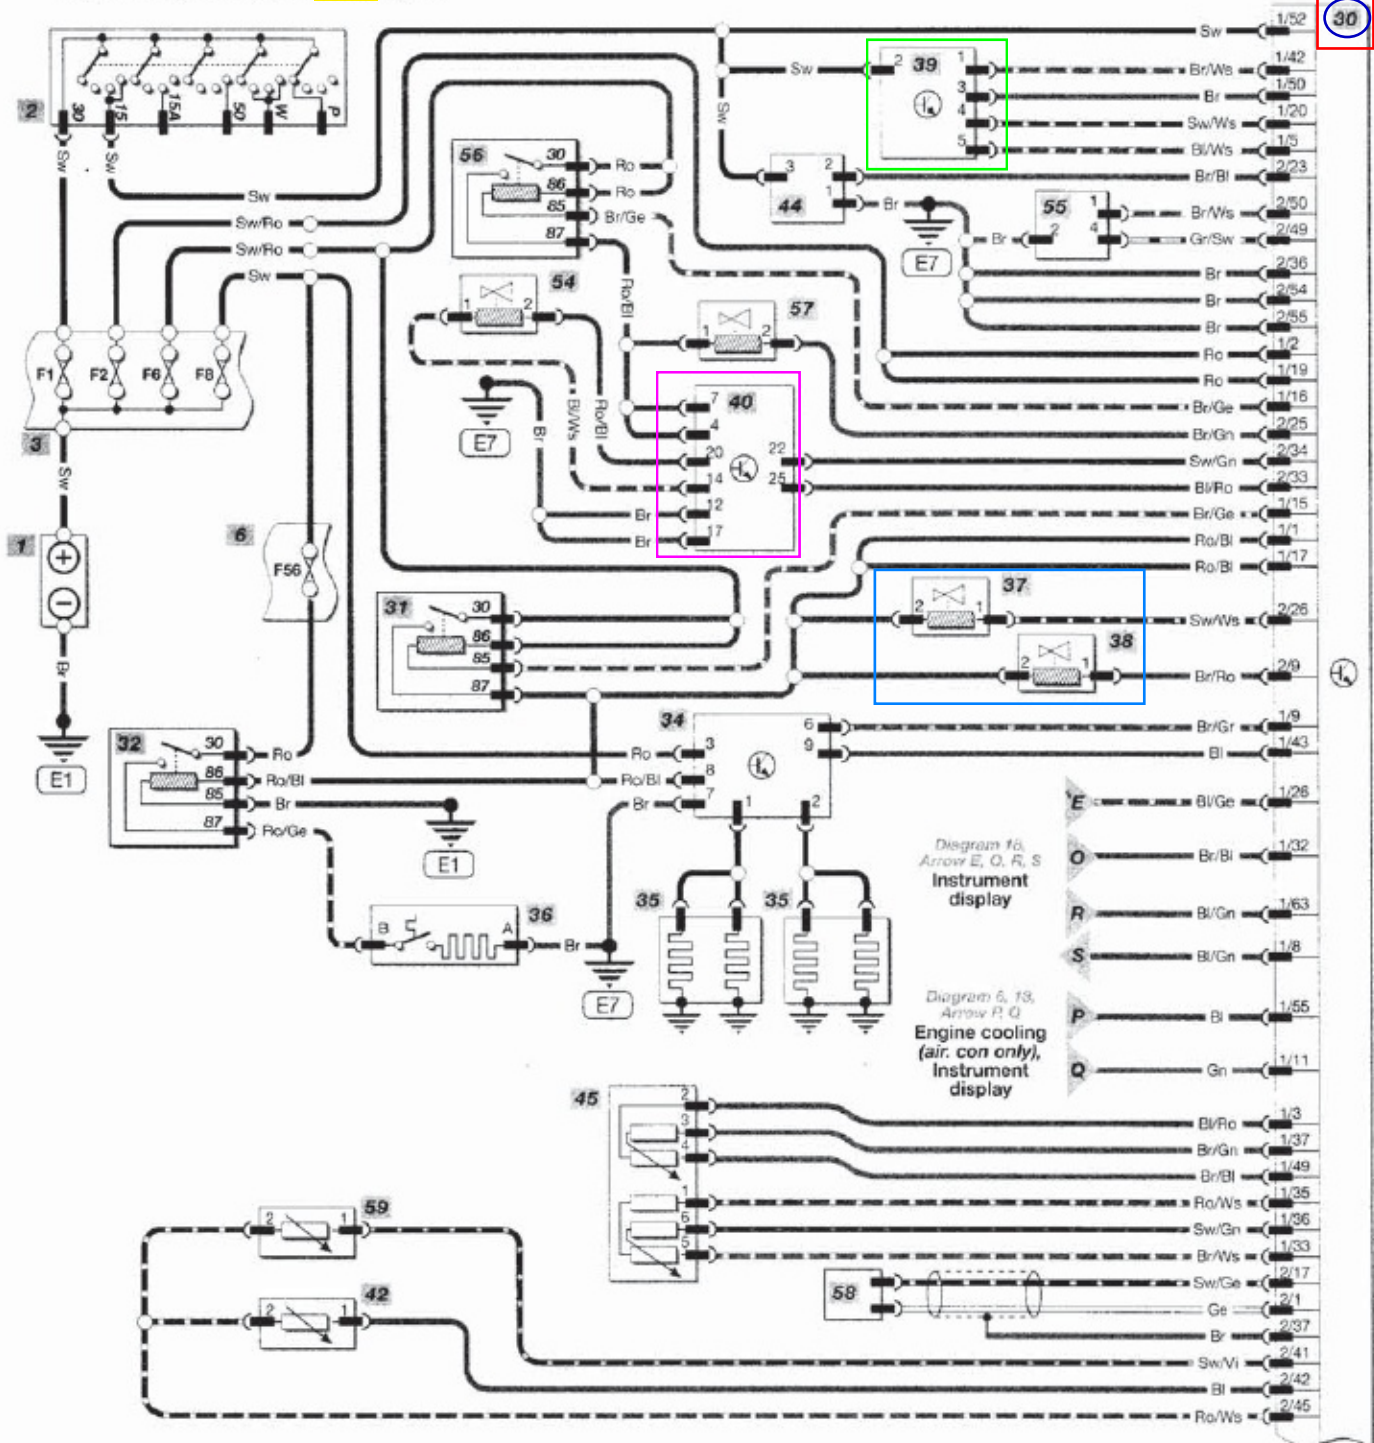

Key to items

Bl	Blue	Pu	Purple
Br	Brown	Ro	Red
Ge	Yellow	Sw	Black
Gr	Grey	Vi	Violet
Gn	Green	Ws	White
Or	Orange		


- 1 Battery
- 2 Ignition switch
- 3 Engine fuse box
- 6 Main fuse box
- 30 Diesel control unit
- 41 Boost pressure sensor
- 60 Atmospheric pressure sensor

- 61 Radiator blower motor
- 62 Radiator blower preristor
- 63 Air con. compressor clutch
- 64 Air con. pressure sensor
- 65 Engine cooling control unit

Note: prefix 1/ = X73 multi plug
 prefix 2/ = X74 multi plug
 prefix 3/ = X63 multi plug
 prefix 4/ = X64 multi plug

MTS

Engine management system Y17DT engine cont.

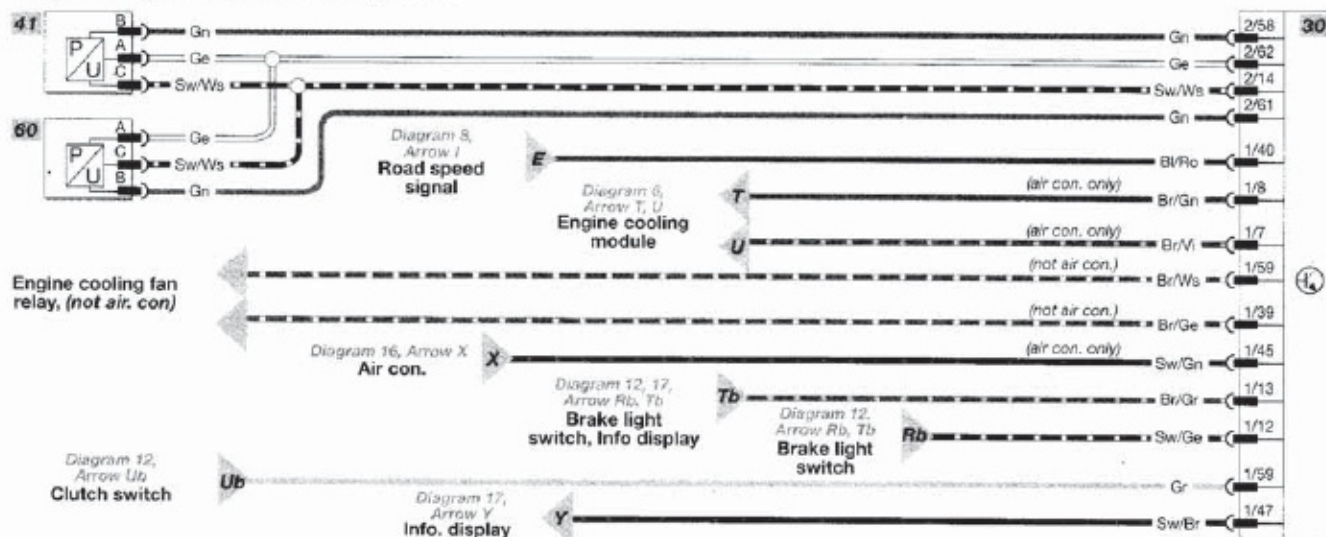

Engine cooling

