
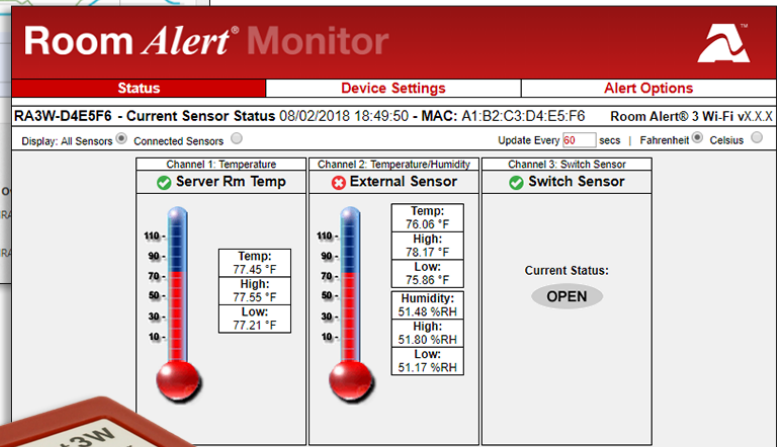


Room Alert® 3 Wi-Fi

User's Guide & Reference Manual

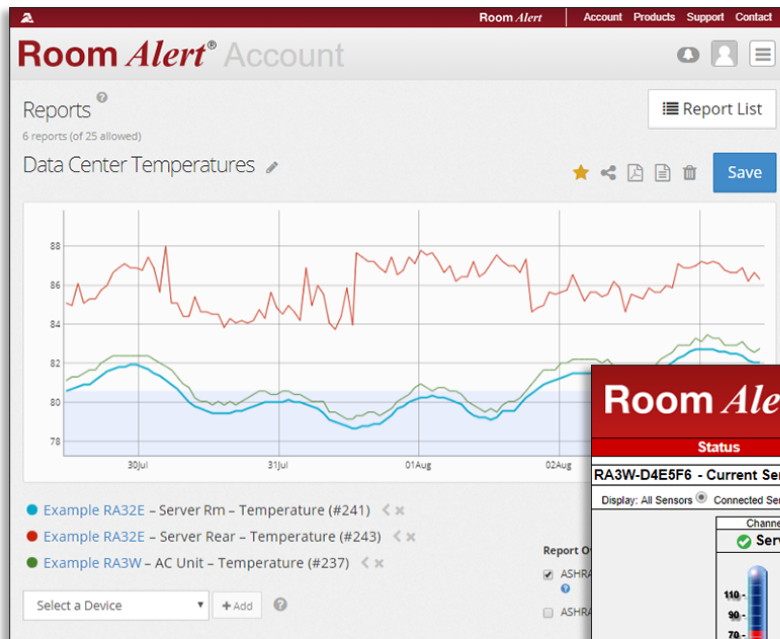

Contact Us

AVTECH Software, Inc.
16 Cutler Street, Cutler Mill
Warren, RI 02885-2761
USA

Sales: 888.220.6700
Phone: 401.628.1600
Fax: 401.628.1601

Sales@AVTECH.com
Support@AVTECH.com

Visit Us

AVTECH.com
RoomAlert.com

Privacy Promise

AVTECH does not sell or share your email or other contact information; however, AVTECH uses some email marketing because our prospects and customers consider it important and convenient. When we do, AVTECH provides customers with an easy means to decline further email of that type.

Current Versions

To download or confirm current software and firmware versions for your AVTECH products, please log into your account at RoomAlert.com and click *Downloads*.

Tell Us Your Story

We truly want to know when we do well and when we may miss expectations. Working to provide the best products and services means making changes that typically succeed and sometimes fall short. Please email us your feedback at Feedback@AVTECH.com.

Copyright Information

© Copyright 1988-2018 AVTECH Software Inc.

All Rights Reserved. No part of this book may be used or reproduced for commercial benefit in any form or by any means, or stored in a database or retrieval system, without prior written permission of AVTECH Software Inc., except in the case of brief quotations embodied in articles and reviews. Making copies of any part of this book for any purpose other than your individual use is a violation of United States copyright laws and international treaty provisions. For information or additional copies, contact AVTECH Software Inc., as directed below. Published in the United States of America.

Warning and Disclaimer

This publication is shipped as is, without warranty of any kind, either express or implied. While every precaution has been taken in the preparation of this publication, the publisher and authors assume no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information or instructions contained herein. It is further stated that the publisher and authors are not responsible for any damage or loss to your data or equipment that may result directly or indirectly from your use of this publication and the related hardware & software. Nothing on any AVTECH website or in documentation shall be construed as conferring any license under any of the AVTECH Software (AVTECH) or any third party's intellectual property rights, whether by estoppel, implication, or otherwise.

Trademark Acknowledgements

AlertScript, AVTECH, the AVTECH Logo, AVTECH Software, the AVTECH System Manager Character, AVTECH.com, AVTECHSoftware.com, Environment Alarm, "Environment Monitoring Made Easy!", EnvironmentMonitor.com, "IT Environment Monitoring Made Easy!", MUPS, Device Discovery, Device ManageR, "Protect Your Facility... Don't Wait Until It's Too Late!", "Protect Your IT Environment... Don't Wait Until It's Too Late!", Room Alert, Room Alert Signal Tower, Signal Tower, RoomAlert.com, RoomAlert.co.uk, RoomAlert.eu, TemPageR, TemPageR.com and "Temperature Monitoring Made Easy!", WiSH, and WiSPR, are trademarks or registered trademarks of AVTECH Software Inc. Any other trademarks, product or company names mentioned herein are the property of their respective owners and used strictly for the purpose of identifying compatibility. AVTECH Software Inc. cannot attest to the accuracy of any other organization's ownership claim to a trademark and use of any trademark in this publication should not be regarded as affecting the validity of any trademark or service mark.

How To Purchase AVTECH Products

AVTECH products are available around the world and used in over 180 countries.

Resellers: Order Through Your Favorite Reseller - Ask them to contact AVTECH on your behalf. AVTECH has a network of resellers world-wide and we are happy to recommend a reseller in your country.

Phone: 888.220.6700 / 401.628.1600 (9-5 EST) - Call AVTECH direct and ask to speak with a Product Specialist. They can take your order immediately or provide you with a quote by email. If outside the U.S.A. or Canada, please ask for an International Product Specialist as they can address international shipping and customs concerns.

Store: AVTECH.com - Place your order online anytime. International money rates are available online to view pricing and make payment in your local currency. Volume and combination specials are available on our store.

Email: Orders@AVTECH.com - Send your organization's purchase order (PO), completed quote form or order instructions to AVTECH via email anytime. Although we prefer to receive POs as PDFs, we can accept Word and Excel formats if required. Other file formats are not accepted.

Fax: 401.628.1601 - Send your purchase order (PO), completed quote form or order instructions to AVTECH via fax anytime. Faxes are received in a secure facility.

NOTE: International orders ship when payment in U.S.D. is received. Wire transfer or credit card payment is preferred. Checks must be in U.S.D., include a U.S. routing code, and drawn on a U.S. bank.

Table Of Contents

Room Alert 3 Wi-Fi Hardware 2

 Room Alert 3 Wi-Fi Hardware Features 2

 Standard Room Alert 3 Wi-Fi Package 2

How To Install Your Room Alert 3 Wi-Fi 3

 Step 1: Connect Your Room Alert 3 Wi-Fi To A Power Source 3

 Step 2: Configure Your Room Alert 3 Wi-Fi’s Network Settings..... 3

 A. Connect To The Room Alert 3 Wi-Fi’s Wireless Access Point..... 3

 B. Open The Room Alert 3 Wi-Fi’s Web Interface 4

 C. Connect The Room Alert 3 Wi-Fi To Your Wireless Network 5

 D. Check Your Room Alert 3 Wi-Fi’s IP Address 7

 E. Disconnect From Your Room Alert 3 Wi-Fi’s Wireless Access Point 7

 Step 3: Connect Additional Components..... 8

How To Use Room Alert 3 Wi-Fi’s Web Interface 9

 Status 9

 Device Settings..... 13

 QuickConnect..... 13

 Status..... 13

 Network 14

 User 16

 WLAN Profiles 17


 Alert Options 18

 Sensors..... 19

 SMTP Email 22

 Advanced 24

Room Alert 3 Wi-Fi Hardware

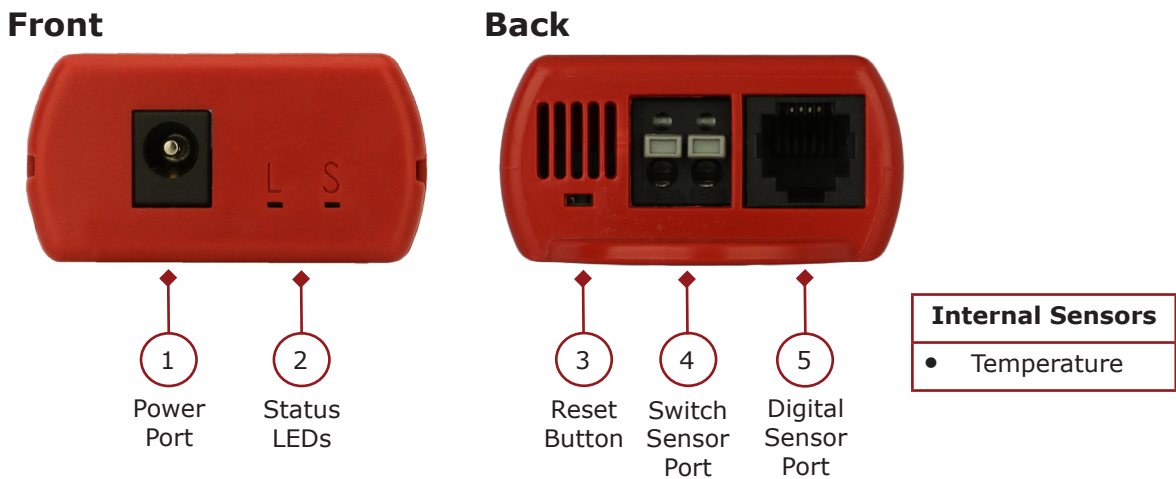

Room Alert 3 Wi-Fi Hardware Features

Internal Temperature Sensor	An internal digital sensor monitors ambient temperature with a range of -40° to 185° F (-40° to 85° C).
1 Power Port	A standard power port connects Room Alert 3 Wi-Fi to an electrical outlet with any AVTECH 5V 1A Power Adapter. Models are available for all countries.
2 Status LEDs	Two (2) LEDs display the Link ("L") state or Status ("S") of Room Alert 3 Wi-Fi.
3 Reset Button	A small push button resets Room Alert 3 Wi-Fi to factory default settings. (Please push softly.)
4 Switch Sensor Port	Dry contacts connect Room Alert 3 Wi-Fi to any AVTECH switch sensor or dry contact on a device (e.g., HVAC, generator, pump, fan, etc.) via standard speaker wire or low-voltage 2-wire cable.
5 Digital Port	Standard RJ-11 jack connects any AVTECH digital sensor to Room Alert 3 Wi-Fi via a standard RJ-11 (straight through) telephone cord.

Standard Room Alert 3 Wi-Fi Package

- The standard package includes:
- One (1) Room Alert 3W ID Box
 - One (1) AVTECH 5V 1A Power Adapter

How To Install Your Room Alert 3 Wi-Fi

Step 1: Connect Your Room Alert 3 Wi-Fi To A Power Source

- Connect one end of the AVTECH 5V 1A Power Adapter to the Room Alert 3 Wi-Fi's power port.
- Connect the other end to a surge-protected power source. Notice that the "S" LED (on the right) blinks once when the Room Alert 3 Wi-Fi is first connected to power.



NOTE

Use only AVTECH's 5V 1A Power Adapter. Others could damage the Room Alert 3 Wi-Fi and void your warranty. If you don't have one, please visit our online store at AVTECH.com. Models are available for all countries.

Step 2: Configure Your Room Alert 3 Wi-Fi's Network Settings


A. Connect To The Room Alert 3 Wi-Fi's Wireless Access Point

- In your Windows task bar, select your **Network Connection Status** icon  to open the list of your networks.



You'll see the Room Alert 3 Wi-Fi listed as an available wireless network. Its name (also known as its SSID) will be in this format: RA3W-XXXXXX.

- Select that name, and then select **Connect**.

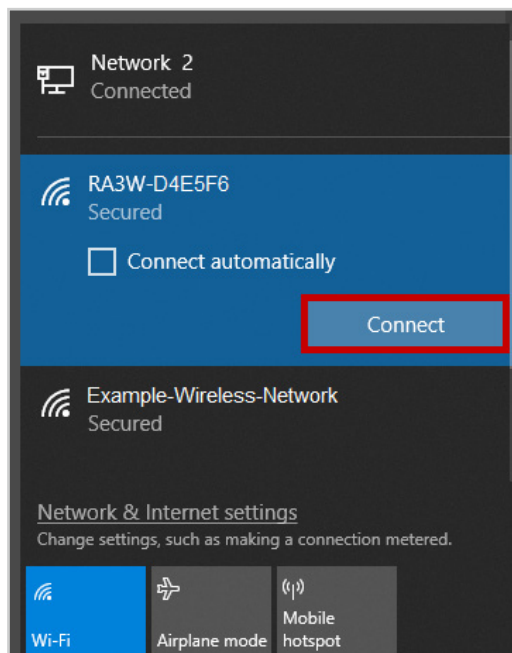


Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

- This will automatically disconnect your computer from your normal wireless network. You'll reconnect to it later in this process.
- When you're asked for the Room Alert 3 Wi-Fi's network security key, enter the following key, which is case-sensitive:

RoomAlert3W

- Then select **OK** or **Next**.

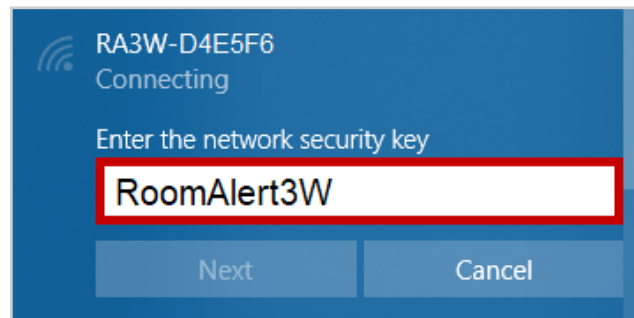


B. Open The Room Alert 3 Wi-Fi's Web Interface

- Open a web browser, and enter the Room Alert 3 Wi-Fi's default web interface address (its "soft AP") in the address bar:


192.168.0.1



- When you are asked for login credentials, enter the Room Alert 3 Wi-Fi's default username and password:
 - Username: **admin**
 - Password: **PASSWORD**

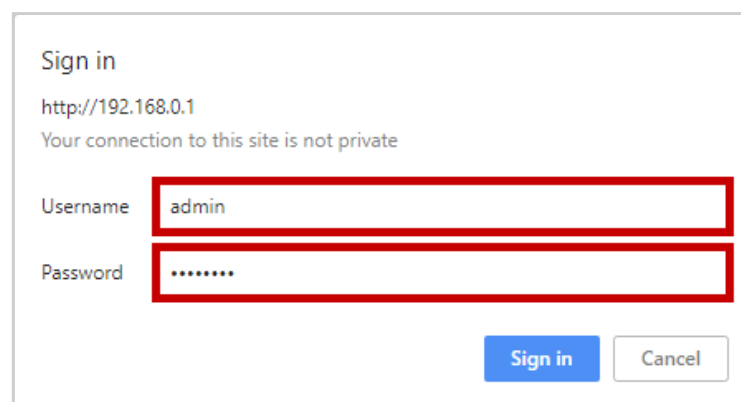

- The Room Alert 3 Wi-Fi's interface will now open to the Status page at its "soft AP":

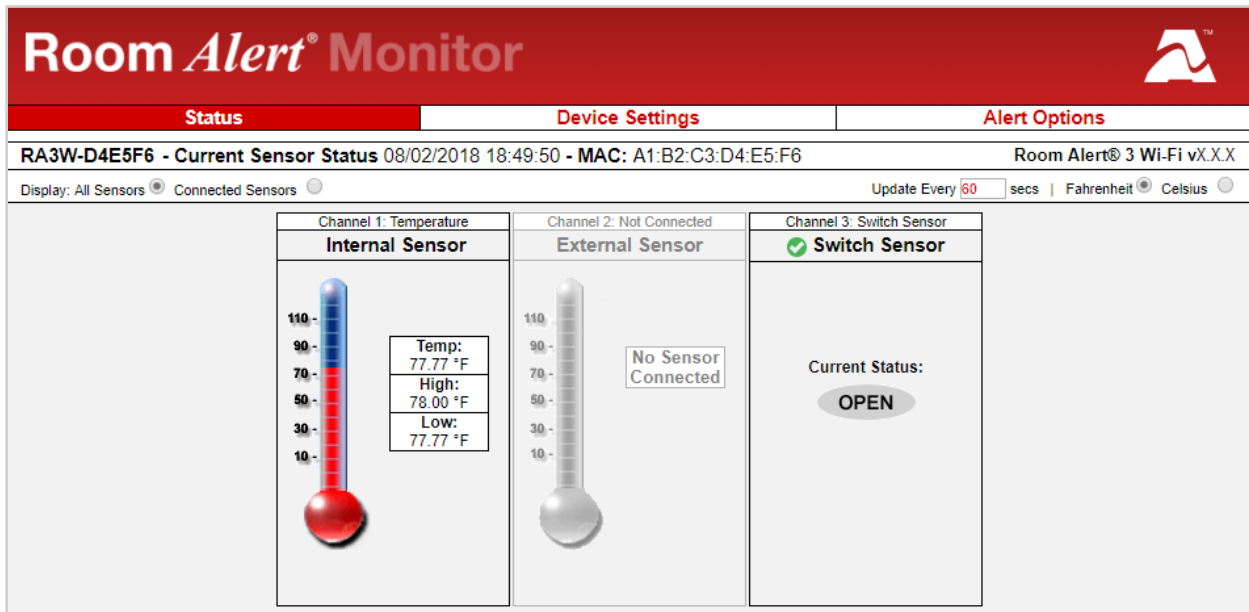


C. Connect The Room Alert 3 Wi-Fi To Your Wireless Network

Once you are in the Room Alert 3 Wi-Fi's interface, navigate to **Device Settings** → **QuickConnect** in order to configure the device to use your wireless network.

- In *Network Name*, select your Wifi network's network name (also called its SSID) from the list of networks.

In this example, we are choosing "Example-Wireless-Network."

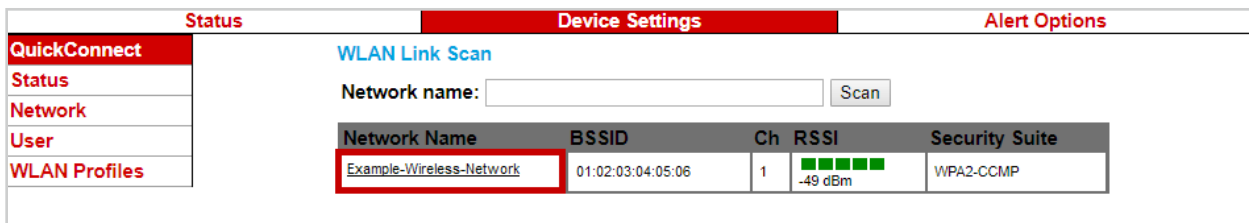

TIP

If your wireless network's name is hidden, type it (with correct capitalization) in the *Network name* field shown above; then select it when it appears in the list.

- A "WLAN Profile" for your network will automatically appear. Options on this menu vary depending your Wi-Fi network's security.
 - If you are required to, enter your Wi-Fi network's password in the *Password* field.
 - Select **Apply** to temporarily save your changes.

Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

Status	Device Settings	Alert Options																				
QuickConnect Status Network User WLAN Profiles	WLAN Profile "Example-Wireless-Network" <table border="1"> <thead> <tr> <th colspan="2">Connect To</th> </tr> </thead> <tbody> <tr> <td>Network Name (SSID):</td> <td>Example-Wireless-Network</td> </tr> <tr> <td>BSSID:</td> <td>01:02:03:04:05:06</td> </tr> <tr> <td>Security Suite:</td> <td>WPA2-CCMP</td> </tr> <tr> <td>Signal Strength:</td> <td>-49 dBm</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th colspan="2">Security</th> </tr> </thead> <tbody> <tr> <td>Key Type:</td> <td>☒ Passphrase ☐ Hex</td> </tr> <tr> <td>Password:</td> <td>*****</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th colspan="2">Advanced</th> </tr> </thead> <tbody> <tr> <td colspan="2"> Apply Test Connection Submit </td> </tr> </tbody> </table>	Connect To		Network Name (SSID):	Example-Wireless-Network	BSSID:	01:02:03:04:05:06	Security Suite:	WPA2-CCMP	Signal Strength:	-49 dBm	Security		Key Type:	☒ Passphrase ☐ Hex	Password:	*****	Advanced		Apply Test Connection Submit		
Connect To																						
Network Name (SSID):	Example-Wireless-Network																					
BSSID:	01:02:03:04:05:06																					
Security Suite:	WPA2-CCMP																					
Signal Strength:	-49 dBm																					
Security																						
Key Type:	☒ Passphrase ☐ Hex																					
Password:	*****																					
Advanced																						
Apply Test Connection Submit																						

- Then select **Submit** to commit your changes to the device.

Status	Device Settings	Alert Options																						
QuickConnect Status Network User WLAN Profiles	WLAN Profile "Example-Wireless-Network" Changed WLAN Profile New_Profile Instance to "Example-Wireless-Network". Changed WLAN Profile New_Profile Basic Network Name to "Example-Wireless-Network". Changed WLAN Profile New_Profile Security Suite to "WPA2". Changed WLAN Profile New_Profile Security WPAx Passphrase to "<Configured>". Changed WLAN Profile New_Profile Security WPAx Encryption to "CCMP". The changes have been successfully applied. WARNING: The changes will not persist after reboot unless you submit. <table border="1"> <thead> <tr> <th colspan="2">Basic</th> </tr> </thead> <tbody> <tr> <td>Network Name:</td> <td>Example-Wireless-Network</td> </tr> <tr> <td>State:</td> <td>☒ Enabled ☐ Disabled</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th colspan="2">Security</th> </tr> </thead> <tbody> <tr> <td>Suite:</td> <td>WPA2 ▾</td> </tr> <tr> <td>WPAx Key Type:</td> <td>Passphrase ▾</td> </tr> <tr> <td>WPAx Passphrase:</td> <td>*****</td> </tr> <tr> <td>WPAx Encryption:</td> <td>☒ CCMP ☐ TKIP</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th colspan="2">Advanced</th> </tr> </thead> <tbody> <tr> <td>TX Power Maximum:</td> <td>17 dBm</td> </tr> <tr> <td>Power Management:</td> <td>☐ Enabled ☒ Disabled</td> </tr> </tbody> </table> Test Connection Submit	Basic		Network Name:	Example-Wireless-Network	State:	☒ Enabled ☐ Disabled	Security		Suite:	WPA2 ▾	WPAx Key Type:	Passphrase ▾	WPAx Passphrase:	*****	WPAx Encryption:	☒ CCMP ☐ TKIP	Advanced		TX Power Maximum:	17 dBm	Power Management:	☐ Enabled ☒ Disabled	
Basic																								
Network Name:	Example-Wireless-Network																							
State:	☒ Enabled ☐ Disabled																							
Security																								
Suite:	WPA2 ▾																							
WPAx Key Type:	Passphrase ▾																							
WPAx Passphrase:	*****																							
WPAx Encryption:	☒ CCMP ☐ TKIP																							
Advanced																								
TX Power Maximum:	17 dBm																							
Power Management:	☐ Enabled ☒ Disabled																							

- Your Room Alert 3 Wi-Fi will automatically obtain an IP address on your network. Notice that the "L" LED on the Room Alert lights solid when it successfully connects.



D. Check Your Room Alert 3 Wi-Fi's IP Address

You can now check the Room Alert 3 Wi-Fi's IP address by navigating to **Device Settings** → **Status**.

Status

QuickConnect

Status

Network

User

WLAN Profiles

Device Settings

Product Information	
Firmware Version:	X.X.X/1.0
Build Date:	Mar 2 2018 (14:59:06)
Serial Number:	A1B2C3D4E5F6
Permanent Config:	saved
Network Settings	
MAC Address:	A1:B2:C3:D4:E5:F6
Interface ap0	
State:	Up
SSID:	RA3W-D4E5F6
Security Suite:	WPA2
IP Address:	192.168.0.1/24
Interface wlan0	
Connection State:	Connected
Active WLAN Profile:	Example-Wireless-Network
IP Address:	192.168.88.77/24
Default Gateway:	192.168.88.1
Hostname:	
Primary DNS:	8.8.8.8
Secondary DNS:	68.105.28.16

Alert Options

- In this example, the IP address is 192.168.88.77


TIP

You can also find the Room Alert 3W's IP address listed in your Room Alert Account. For more information, please see our Frequently Asked Question, [How To Discover AVTECH Devices With RoomAlert.com](#).

E. Disconnect From Your Room Alert 3 Wi-Fi's Wireless Access Point

- Disconnect from the Room Alert 3 Wi-Fi's wireless access point by selecting its name (in this example, **RA3W-D4E5F6**) and **Disconnect** in your wireless network list.

Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

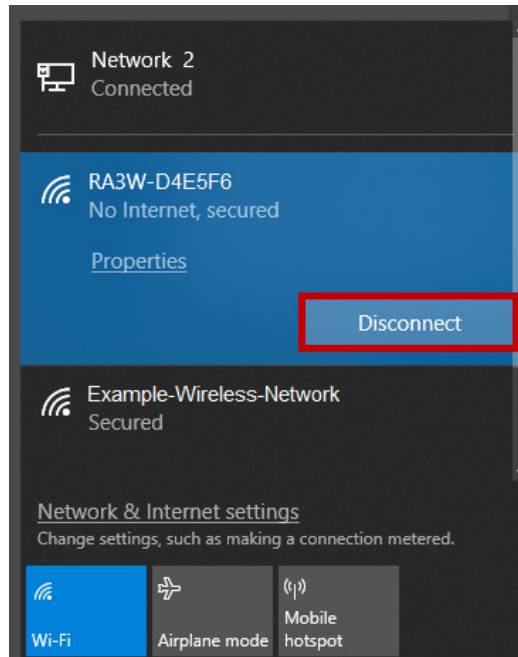

- Once you disconnect from the Room Alert 3 Wi-Fi's wireless access point:
 - Your computer should automatically reconnect to your regular Wi-Fi network.
 - The Room Alert 3 Wi-Fi will continue to appear in your available networks list. You may manually reconnect to its access point at 192.168.0.1 if necessary by selecting its name and then **Connect**.

Step 3: Connect Additional Components

If you purchased additional components that are compatible, connect them according to the instructional material included with them.

How To Use Room Alert 3 Wi-Fi's Web Interface

You may configure your Room Alert 3 Wi-Fi through its built-in web interface. To access the interface, you may either:


- Type the IP address of your Room Alert 3 Wi-Fi directly into the address bar of your web browser.
- Select your Room Alert 3 Wi-Fi in the Device Discovery utility and click the **Web** button.
- Select your Room Alert 3 Wi-Fi in the Device Manager software and click the **Open Web** button.
- Select your Room Alert monitor in your RoomAlert.com account and click the **Device Interface** button.

Your Room Alert 3 Wi-Fi's web interface has 3 tabs:

- Status
- Device Settings
- Alert Options

Status

To view your Room Alert 3 Wi-Fi's current sensor status, select **Status** in the navigation bar at the top of your screen.

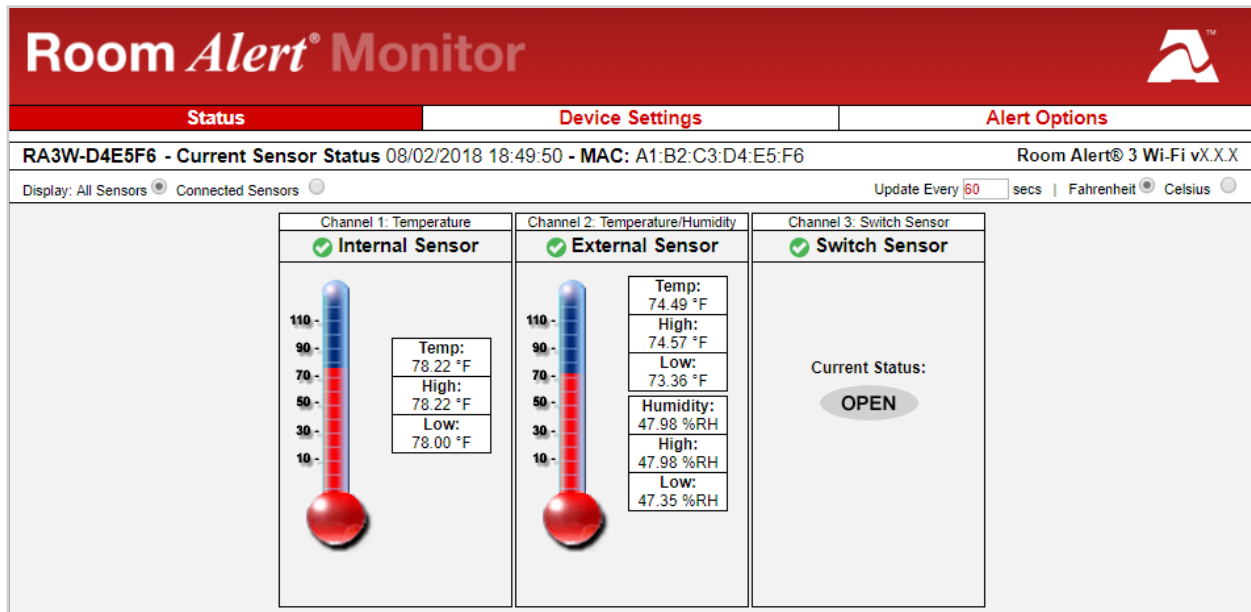

Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

Banner & Header


At the top of the page runs the red Room Alert banner.




- You may visit AVTECH.com by selecting the AVTECH logo in the banner.
- You may visit RoomAlert.com by clicking on "Room Alert Monitor" in the banner.

Below the Status tab is the *Current Sensor Status Bar*, where you may view basic information about your Room Alert 3 Wi-Fi and make temporary adjustments to the sensor display.

- You may find your Room Alert 3 Wi-Fi's name and MAC address here.




- To determine if your Room Alert 3 Wi-Fi's firmware is current, you may click **Room Alert 3 Wi-Fi vX.X.X** at the right.




TIP

Your Room Alert 3 Wi-Fi must be connected to the internet to check firmware versions.


- To temporarily modify the refresh interval of the Status screen, which is 60 seconds by default, you may enter a value as low as 5 seconds in the *Update Every* field. Click outside the field to temporarily commit the change.



- To temporarily toggle the temperature scale between Fahrenheit (F) and Celsius (C), click **Fahrenheit** or **Celsius**.



Sensor Display Area

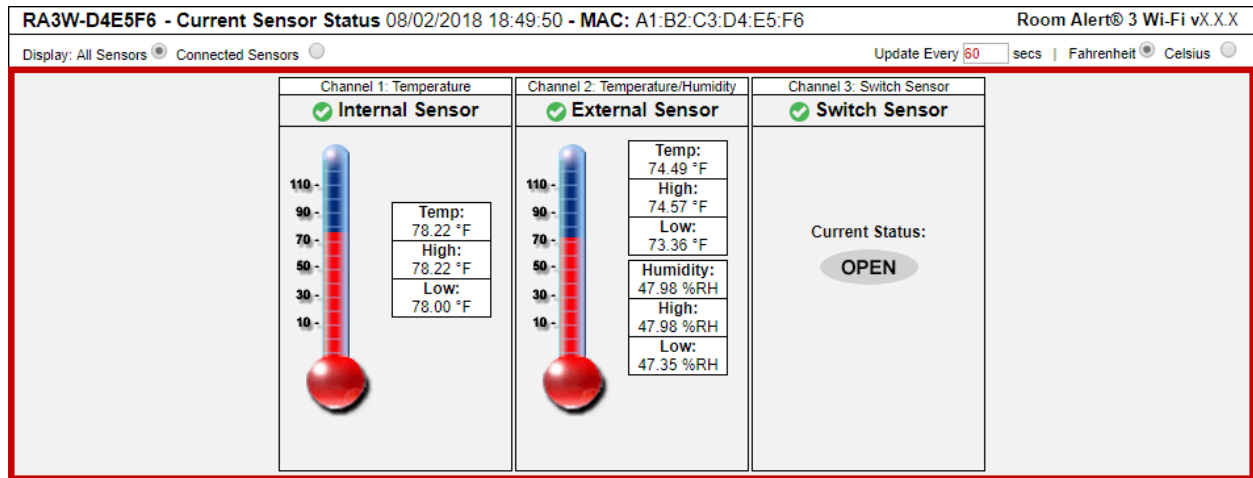


In the main viewing pane of the Status tab is the Sensor Display Area. Here you may view the current readings for your sensors, which are displayed left to right as follows:


Channel 1: Internal Temperature Sensor Channel 2: External Digital Sensor Channel 3: External Switch Sensor

Display All Sensors / Connected Sensors

If you have no external digital sensor connected, you may temporarily hide Channel 2.

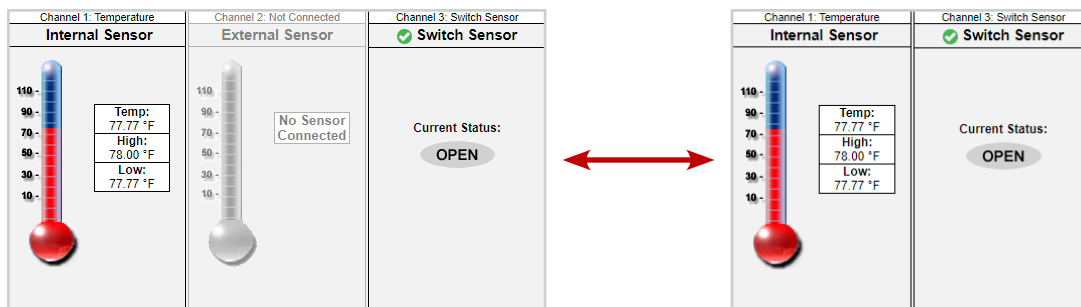

1. To hide the disconnected digital sensor, click **Connected Sensors** in the *Current Sensors Status* bar shown here.



2. To toggle the view back to all 3 sensor channels, click **All Sensors**.

Alarm Status Icons

Status icons are displayed for sensors that have thresholds set:

 Green circle with "✓" mark.....Sensor is in a clear state.

 Red circle with "X" mark.....Sensor is in an alarm state.

No status iconSensor has no thresholds set.

Device Settings

QuickConnect

Navigate to **Device Settings** → **QuickConnect** to open the *QuickConnect* screen.

Here, you may select the wireless network you wish to connect the Room Alert 3 Wi-Fi to.

For instructions, please refer back to [Step 2: Configure Your Room Alert 3 Wi-Fi's Network Settings](#) on page 3 in this manual.

Status	Device Settings	Alert Options										
QuickConnect Status Network User WLAN Profiles	WLAN Link Scan Network name: Scan <table border="1"> <thead> <tr> <th>Network Name</th> <th>BSSID</th> <th>Ch</th> <th>RSSI</th> <th>Security Suite</th> </tr> </thead> <tbody> <tr> <td>Example-Wireless-Network</td> <td>01:02:03:04:05:06</td> <td>1</td> <td> -49 dBm </td> <td>WPA2-CCMP</td> </tr> </tbody> </table>	Network Name	BSSID	Ch	RSSI	Security Suite	Example-Wireless-Network	01:02:03:04:05:06	1	-49 dBm	WPA2-CCMP	
Network Name	BSSID	Ch	RSSI	Security Suite								
Example-Wireless-Network	01:02:03:04:05:06	1	-49 dBm	WPA2-CCMP								

Status

Navigate to **Device Settings** → **Status** to open the *WLAN Status* screen.

Here you may see the device's current network information, such as its current IP address, default gateway and domain name server (DNS).

Status	Device Settings	Alert Options																																								
QuickConnect Status Network User WLAN Profiles	<table border="1"> <thead> <tr> <th colspan="2">Product Information</th> </tr> </thead> <tbody> <tr> <td>Firmware Version:</td> <td>X.X.X/1.0</td> </tr> <tr> <td>Build Date:</td> <td>Mar 2 2018 (14:59:06)</td> </tr> <tr> <td>Serial Number:</td> <td>A1B2C3D4E5F6</td> </tr> <tr> <td>Permanent Config:</td> <td>saved</td> </tr> <tr> <th colspan="2">Network Settings</th> </tr> <tr> <td>MAC Address:</td> <td>A1:B2:C3:D4:E5:F6</td> </tr> <tr> <th colspan="2">Interface ap0</th> </tr> <tr> <td>State:</td> <td>Up</td> </tr> <tr> <td>SSID:</td> <td>RA3W-D4E5F6</td> </tr> <tr> <td>Security Suite:</td> <td>WPA2</td> </tr> <tr> <td>IP Address:</td> <td>192.168.0.1/24</td> </tr> <tr> <th colspan="2">Interface wlan0</th> </tr> <tr> <td>Connection State:</td> <td>Connected</td> </tr> <tr> <td>Active WLAN Profile:</td> <td>Example-Wireless-Network</td> </tr> <tr> <td>IP Address:</td> <td>192.168.88.77/24</td> </tr> <tr> <td>Default Gateway:</td> <td>192.168.88.1</td> </tr> <tr> <td>Hostname:</td> <td></td> </tr> <tr> <td>Primary DNS:</td> <td>8.8.8.8</td> </tr> <tr> <td>Secondary DNS:</td> <td>68.105.28.16</td> </tr> </tbody> </table>	Product Information		Firmware Version:	X.X.X/1.0	Build Date:	Mar 2 2018 (14:59:06)	Serial Number:	A1B2C3D4E5F6	Permanent Config:	saved	Network Settings		MAC Address:	A1:B2:C3:D4:E5:F6	Interface ap0		State:	Up	SSID:	RA3W-D4E5F6	Security Suite:	WPA2	IP Address:	192.168.0.1/24	Interface wlan0		Connection State:	Connected	Active WLAN Profile:	Example-Wireless-Network	IP Address:	192.168.88.77/24	Default Gateway:	192.168.88.1	Hostname:		Primary DNS:	8.8.8.8	Secondary DNS:	68.105.28.16	
Product Information																																										
Firmware Version:	X.X.X/1.0																																									
Build Date:	Mar 2 2018 (14:59:06)																																									
Serial Number:	A1B2C3D4E5F6																																									
Permanent Config:	saved																																									
Network Settings																																										
MAC Address:	A1:B2:C3:D4:E5:F6																																									
Interface ap0																																										
State:	Up																																									
SSID:	RA3W-D4E5F6																																									
Security Suite:	WPA2																																									
IP Address:	192.168.0.1/24																																									
Interface wlan0																																										
Connection State:	Connected																																									
Active WLAN Profile:	Example-Wireless-Network																																									
IP Address:	192.168.88.77/24																																									
Default Gateway:	192.168.88.1																																									
Hostname:																																										
Primary DNS:	8.8.8.8																																									
Secondary DNS:	68.105.28.16																																									

Network

Navigate to **Device Settings** → **Network** to open the *Network* screen. You may view and configure your Room Alert's soft access point and wireless network settings on this page.

Wireless Local Area Network (wlan0)

To view your Room Alert 3 Wi-Fi's network settings:

- Select **wlan0** + **Interface** + **Status**. Here, you'll see the Room Alert 3 Wi-Fi's IP settings.

Status	Device Settings	Alert Options																																			
QuickConnect Status Network User WLAN Profiles	ap0 wlan0 Interface Link Status Configuration Interface wlan0 Status <table border="1"> <thead> <tr> <th>Property</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Status:</td> <td>Link up</td> </tr> <tr> <td>MAC Address:</td> <td>A1:B2:C3:D4:E5:F6</td> </tr> <tr> <td></td> <td>[Renew]</td> </tr> <tr> <th></th> <th>Current</th> <th>After Reboot</th> </tr> <tr> <td>State:</td> <td>Enabled</td> <td>Enabled</td> </tr> <tr> <td>DHCP Client:</td> <td>Enabled</td> <td>Enabled</td> </tr> <tr> <td>IP Address:</td> <td>192.168.88.77/24</td> <td>(DHCP)</td> </tr> <tr> <td>Default Gateway:</td> <td>192.168.88.1</td> <td>(DHCP)</td> </tr> <tr> <td>Hostname:</td> <td></td> <td></td> </tr> <tr> <td>Primary DNS:</td> <td>8.8.8.8</td> <td>(DHCP)</td> </tr> <tr> <td>Secondary DNS:</td> <td><None></td> <td>(DHCP)</td> </tr> <tr> <td>MSS:</td> <td>1460 bytes</td> <td>1460 bytes</td> </tr> </tbody> </table>	Property	Status	Status:	Link up	MAC Address:	A1:B2:C3:D4:E5:F6		[Renew]		Current	After Reboot	State:	Enabled	Enabled	DHCP Client:	Enabled	Enabled	IP Address:	192.168.88.77/24	(DHCP)	Default Gateway:	192.168.88.1	(DHCP)	Hostname:			Primary DNS:	8.8.8.8	(DHCP)	Secondary DNS:	<None>	(DHCP)	MSS:	1460 bytes	1460 bytes	
Property	Status																																				
Status:	Link up																																				
MAC Address:	A1:B2:C3:D4:E5:F6																																				
	[Renew]																																				
	Current	After Reboot																																			
State:	Enabled	Enabled																																			
DHCP Client:	Enabled	Enabled																																			
IP Address:	192.168.88.77/24	(DHCP)																																			
Default Gateway:	192.168.88.1	(DHCP)																																			
Hostname:																																					
Primary DNS:	8.8.8.8	(DHCP)																																			
Secondary DNS:	<None>	(DHCP)																																			
MSS:	1460 bytes	1460 bytes																																			

- Select **wlan0** + **Link** + **Status**. Here, you'll see the wireless network settings.

Status	Device Settings	Alert Options																		
QuickConnect Status Network User WLAN Profiles	ap0 wlan0 Interface Link Status WLAN wlan0 Status <table border="1"> <thead> <tr> <th>Property</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Connection State:</td> <td>Connected</td> </tr> <tr> <td>BSSID:</td> <td>01:02:03:04:05:06</td> </tr> <tr> <td>SSID:</td> <td>Example-Wireless-Network</td> </tr> <tr> <td>Active WLAN Profile:</td> <td>Example-Wireless-Network</td> </tr> <tr> <td>Encryption:</td> <td>CCMP</td> </tr> <tr> <td>Security Suite:</td> <td>WPA2</td> </tr> <tr> <td>Channel:</td> <td>1</td> </tr> <tr> <td>RSSI:</td> <td>-49 dBm</td> </tr> </tbody> </table>	Property	Status	Connection State:	Connected	BSSID:	01:02:03:04:05:06	SSID:	Example-Wireless-Network	Active WLAN Profile:	Example-Wireless-Network	Encryption:	CCMP	Security Suite:	WPA2	Channel:	1	RSSI:	-49 dBm	
Property	Status																			
Connection State:	Connected																			
BSSID:	01:02:03:04:05:06																			
SSID:	Example-Wireless-Network																			
Active WLAN Profile:	Example-Wireless-Network																			
Encryption:	CCMP																			
Security Suite:	WPA2																			
Channel:	1																			
RSSI:	-49 dBm																			

Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

You may set a static IP address for your Room Alert 3 Wi-Fi on the *Network* page by following these steps:

Status	Device Settings	Alert Options																								
QuickConnect	ap0 wlan0 Interface Link Status Configuration																									
Status																										
Network																										
User																										
WLAN Profiles																										
Interface wlan0 Configuration																										
<table border="1"><tr><td>State:</td><td colspan="2">☒ Enabled ☐ Disabled</td></tr><tr><td>DHCP Client:</td><td colspan="2">☐ Enabled ☒ Disabled</td></tr><tr><td>IP Address:</td><td colspan="2"> 192.168.88.31 </td></tr><tr><td>Default Gateway:</td><td colspan="2"> 192.168.88.1 </td></tr><tr><td>Hostname:</td><td colspan="2"> </td></tr><tr><td>Primary DNS:</td><td colspan="2"> 8.8.8.8 </td></tr><tr><td>Secondary DNS:</td><td colspan="2"> <None> </td></tr><tr><td>MSS:</td><td> 1460 </td><td>bytes</td></tr></table>			State:	☒ Enabled ☐ Disabled		DHCP Client:	☐ Enabled ☒ Disabled		IP Address:	192.168.88.31		Default Gateway:	192.168.88.1		Hostname:			Primary DNS:	8.8.8.8		Secondary DNS:	<None>		MSS:	1460	bytes
State:	☒ Enabled ☐ Disabled																									
DHCP Client:	☐ Enabled ☒ Disabled																									
IP Address:	192.168.88.31																									
Default Gateway:	192.168.88.1																									
Hostname:																										
Primary DNS:	8.8.8.8																									
Secondary DNS:	<None>																									
MSS:	1460	bytes																								
Submit																										

1. Select **wlan0** + **Interface** + **Configuration**.
2. In *State*, leave the default **Enabled** selected.
3. In *DHCP Client*, select **Disabled**.
4. In *IP Address*, enter the static IP. In this example, the static IP is 192.168.88.31.
5. In *Default Gateway*, enter the default gateway. In this example, the default gateway is 192.168.88.1.
6. You may enter a hostname if you wish. (This hostname will appear in the *Device Settings* → *Status* table and in the *Device Settings* → *Network* → *wlan0* table.)
7. In *Primary DNS*, enter the domain name server you want used by default. In this example, the DNS is 8.8.8.8.
8. In *Secondary DNS*, you may enter a back-up DNS if you wish. In this example, we have not configured one.
9. Typically, you can leave the *MSS* at the default, 1460 bytes.
10. Finally select **Submit** to commit your changes to the device.

Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

User

Navigate to **Device Settings** → **User** to open the *User* screen.

You may change the password for the web interface here. (The default password is **PASSWORD.**)

Status	Device Settings	Alert Options
QuickConnect	User Management	
Status	View or Edit	
Network	Delete	
User	admin	
WLAN Profiles		

1. First select **admin**.

Status	Device Settings	Alert Options
QuickConnect	User admin Configuration	
Status	Password:	
Network	Submit	
User		
WLAN Profiles		

2. Then in *Password*, enter your new password.
3. Select **Submit** to save your changes.

The next time you log in to your Room Alert 3 Wi-Fi web interface, enter these credentials:

Username: admin

Password: YourNewPassword

NOTE

You may not change the username for your Room Alert 3 Wi-Fi's web interface. The username is always "admin."

WLAN Profiles

Navigate to **Device Settings** → **WLAN Profiles** to open the *WLAN Profiles* screen.

Status	Device Settings	Alert Options
QuickConnect	WLAN Profile Management	
Status	View or Edit Delete	
Network	Example-Wireless-Network 	☐
User	Example-Wireless-Network-2	☒
WLAN Profiles	Create new WLAN Profile	
	Apply Submit	

You may add or delete network connections here.

To delete a network connection from your WLAN Profile list:

1. Select **Delete**.
2. Select **Apply** to temporarily save your changes.
3. Select **Submit** to commit your changes to the device.

TIP

If you are deleting the only wireless network in your list, skip "Apply" and immediately select **Submit**.

Alert Options

Navigating Alert Options

Alert Options has the following sub-tabs shown in the navigation bar at the top of your screen.

- Sensors
- SMTP
- Advanced

Status	Device Settings	Alert Options
Sensors SMTP Advanced		

You may navigate to each of these sections by selecting the appropriate sub-tab. Alert Options opens by default to the *Sensor Settings* page.

Saving Settings

To save a setting in *Alert Options*, use the **Save Settings** button at the bottom of the page. After you select the *Save Settings* button, your Room Alert 3 Wi-Fi will automatically reboot and commit your changes.



NOTE

You can only save settings in one tab at a time. For example, if you add custom sensor labels in the *Sensors* tab, you'll need to save those settings before moving to the *SMTP* tab.

Sensors

Navigate to **Alert Options** → **Sensors** to open the *Sensor Settings* screen.

You may configure alert thresholds for your Room Alert 3 Wi-Fi’s sensors in this screen. Your Room Alert 3 Wi-Fi sends alerts based on these thresholds.

NOTE For more information about AVTECH sensors and accessories, please visit the **Sensors and Accessories** sections of AVTECH.com.

Status

Device Settings

Alert Options

Sensors

SMTP

Advanced

Sensor Settings

General Alarm Configuration

Trigger Alarm If Sensor Is Disconnected? ☐

Alarm Thresholds

Internal Sensor Alarm Configuration

Sensor Type: Temperature

Sensor Label	Alarm On	High	Low	Adjust
Internal Sensor	Temperature (°F)	0	0	0

External Sensor Alarm Configuration

Sensor Type: Temp/Humidity

Sensor Label	Alarm On	High	Low	Adjust
External Sensor	Temperature (°F)	0	0	0
☐ Monitor Heat Index ?		Humidity (%RH)	0	0

Switch Sensor Settings

Sensor Label	Alarm On
Switch Sensor	Closed

General Alarm Configuration

General Alarm Configuration

Trigger Alarm If Sensor Is Disconnected? ☐

Trigger Alarm If Sensor Is Disconnected?

You may configure your Room Alert 3 Wi-Fi to send an alert if its external digital sensor is disconnected from the unit.

1. Check **Trigger Alarm If Sensor Is Disconnected?** if you want to receive an alert if the external digital sensor becomes disconnected. This check box is blank by default.
2. Select **Save Settings** at the bottom of the page. Your Room Alert will automatically reboot and commit your changes.

Alarm Thresholds (Internal and External Digital Sensor Alarm Configuration)

You may configure alarm thresholds for the digital sensors—both internal and external—in this section.



Room Alert 3 Wi-Fi has one internal digital Temperature Sensor. You can connect one external digital sensor.

In the example below, we will configure a Digital Temperature Sensor:

Internal Sensor Alarm Configuration				
Sensor Type: Temperature				
Sensor Label	Alarm On	High	Low	Adjust
Server Rm Temp	Temperature (°F)	79	61	0

1. In *Sensor Label*, you may leave the default label, “Internal Sensor” (or “Ext. Sensor 1”) or rename it to something more descriptive, such as “Server Rm Temp.”

TIP

Room Alert sensor labels may be up to 15 characters and can include the following: letters, numbers, spaces, hyphens (-), underscores (_) and periods (.).

2. The *Alarm On* field automatically fills in, in this case with “Temperature (F).”


TIP

Refer to [Advanced](#) on page 24 in this manual for instructions on setting the default temperature scale.

3. In *High* and *Low*, you may leave the default, 0, or enter values for high and low temperature thresholds. Your Room Alert will generate alerts based on these thresholds.
4. In *Adjust*, you may enter a value to adjust the temperature reading if it differs from a known value at that location.
5. Select **Save Settings** at the bottom of the page. Your Room Alert will automatically reboot and commit your changes.

External Switch Sensor Settings

You may configure the alert state for the external switch sensors in the *Switch Sensor Settings* fields. Shown below are the default settings.

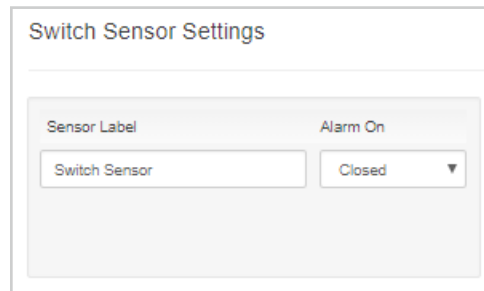


The screenshot shows a web form titled "Switch Sensor Settings". It contains two fields: "Sensor Label" with the text "Switch Sensor" and "Alarm On" with a dropdown menu set to "Closed".

Your Room Alert monitors your switch sensors for an "Open" or "Closed" circuit state. Room Alert defaults to alarming on "Closed," as you can see above; you may, however, need to change that depending on your sensor. AVTECH's Motion Sensor, for example, is "Open" when it detects movement and "Closed" when it doesn't; in that case, you'd likely want to configure the sensor to alarm on "Open" or when motion is detected.

The Alarm And Clear State Of Your Switch Sensor

To determine the alarm and clear state of your sensor, you may either refer to its [Installation Note](#) or check our Frequently Asked Question, [What Open & Closed States Mean In AVTECH Switch Sensors](#).

After you've checked what "Open" and "Closed" mean on your switch sensor, navigate to **Alert Options** → **Sensors** to configure your options in *Switch Sensor Settings*:

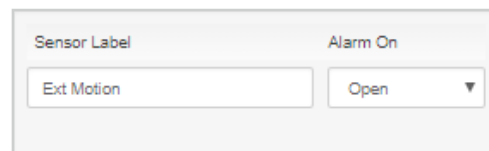

The screenshot shows the same "Switch Sensor Settings" form, but with updated values: "Sensor Label" is now "Ext Motion" and "Alarm On" is now "Open".

1. In *Sensor Label*, you may leave the default, "Switch 1" or enter something more descriptive, such as "Ext Motion" or "Main Entry."

TIP Room Alert sensor labels may be up to 15 characters and can include the following: letters, numbers, spaces, hyphens (-), underscores (_) and periods (.).

2. In *Alarm On*, select the alarm state (**Open** or **Closed**). In our example, the alarm state is **Open**.
3. Select **Save Settings** at the bottom of the page. Your Room Alert will automatically reboot and commit your changes.

TIP If you're not using the switch sensor, choose **Disabled** from the *Alarm On* drop-down menu to avoid confusion or false alerts.

Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

SMTP Email

You may configure your Room Alert 3 Wi-Fi to send alerts via email and email-to-SMS.

Navigate to **Alert Options** → **SMTP** to open the *Email Settings* screen.

Status	Device Settings	Alert Options						
Sensors SMTP Advanced								
Email Settings How To Set Up Email In Room Alert (FAQ) Email Enabled ☒ Email Footer Enabled ☒ Use SMS ☐ Mail Server: <table><tr><td>Domain Name/IP</td><td> mail.example.com </td></tr><tr><td>Port</td><td> 25 </td></tr><tr><td>Timeout</td><td> 5 </td></tr></table> Return Address (From) RoomAlert@Example.com Email Recipients (Separated By Comma) ITMgr@Example.com, 1234567890@ATT.txt.net, Facilities@Example Display URL Enabled ☐ Display URL Send Test Email Authentication (optional) Enable Authentication ☒ Username RoomAlert@Example.com Password *****			Domain Name/IP	mail.example.com	Port	25	Timeout	5
Domain Name/IP	mail.example.com							
Port	25							
Timeout	5							

1. Check **Email Enabled**.
2. You may leave **Email Footer Enabled** checked to include AVTECH contact information with email messages.
3. You may check **Use SMS** to send a shorter email with a reduced character count.
4. *Mail Server:*
 - In *Domain Name/IP*, enter the domain name or IP address of your mail server.
 - In *Port*, enter your mail server's SMTP port. The default is 25, a commonly-used port.

Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

- In *Timeout*, you may leave the default, 5 seconds, or enter another interval.
5. In *Return Address (From)*, enter an email address that resides on your mail server. This is the address alert messages will come from.
 6. In *Email Recipients*, enter the email and email-to-SMS addresses that you'd like to send alerts to. Separate each address with a comma. (Do not enter spaces after the commas.)
 - Email address: ITMgr@Example.com
 - Email-to-SMS address: 1234567890@ATT.txt.net
 - Addresses separated by commas: ITMgr@Example.com,1234567890@ATT.txt.net, etc.
 7. *Display URL* controls what IP or URL displays in email alerts. You may leave the default, a disabled, blank field, or enter a custom IP address or URL. To make a custom entry, you must first check **Display URL Enabled**.
 - When this field is left at the default (disabled, blank), your email alerts will contain the Room Alert's current IP address and HTTP port number in the body of the email.
 - When this field is overwritten with a custom IP or URL, your email alerts will contain that custom IP or URL in the body of the email.

Authentication (Optional)

8. If your mail server requires SMTP authentication, check **Enable Authentication**.
9. In *Username* and *Password*, enter a valid username and password for your mail server that will facilitate authentication.

TIP You password cannot be more than 11 alphanumeric characters.

10. Select **Save Settings** at the bottom of the page. Your Room Alert will automatically reboot and commit your changes.

When your Room Alert reboots, return to the *Email Settings* screen and select **Send Test Email** to send a test email to the addresses you entered in *Email Recipients*.

Advanced

Navigate to **Alert Options** → **Advanced** to open the *Advanced Settings* screen.

Advanced Settings [Reset to Defaults](#)

General

Temperature Scale: Fahrenheit

Date & Time Configuration

Time Zone: (GMT) Greenwich Mean Time (London, Lisbon)

Time Display: 24 hour

Time Format: MM/DD/YY Hour:Minute:Second

Enable Daylight Saving ☐ Adjust For Daylight Saving Time (+1 hr)

Time Server:

IP/Host Name: time.nist.gov

Auto Refresh: 12 Hours [Update Now](#)

General

In *Temperature Scale*, you may choose **Fahrenheit** or **Celsius** from the drop-down list. Fahrenheit is the default.

Time & Date Configuration

1. In *Time Zone*, select your time zone from the drop-down list. Greenwich Mean Time (GMT) is the default
2. In *Time Display*, you may select the 12 or 24 hour format from the drop-down list. The 24 hour setting is the default.
3. In *Time Format*, you may select either the MM/DD/YY or DD/MM/YY date format from the drop-down list. Month first (MM/DD/YY) is the default.
4. Select **Enable Daylight Savings** if you would like your Room Alert time setting to compensate by +1 hour for daylight savings time.

Time Server

5. In *IP/Host Name*, you may leave Room Alert's default Network Time Protocol (NTP) server, time.nist.gov, or enter another time server IP address.
6. In *Time Server Auto Refresh*, you may select how often Room Alert automatically synchronizes with your time server.
 - You may leave the default, **12 Hours**, or choose another interval, as frequent as 10 minutes, from the drop-down list.

Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

- You may manually synchronize the time by selecting **Update Now**. Clicking this button does not affect the *Auto Refresh* interval.
7. Select **Save Settings** at the bottom of the page. Your Room Alert will automatically reboot and commit your changes.

Room Alert 3 Wi-Fi (RA3W-ES0-BAS)

For More Information...

Visit our Support Center.

Go to <https://AVTECH.com/Support/> to view our collection of:

- [Frequently Asked Questions](#)
- [Installation Notes](#)
- [Product Tours](#)
- and more

Find us on YouTube.

Go to the [AVTECH Software, Inc. YouTube Channel](#), and let us walk you through the steps to configure alerts & reports for your Room Alert Monitors—and so much more.

Common Questions

[How To Update Firmware On Room Alert Monitors](#)

[How To Reset A Room Alert Monitor To Factory Defaults](#)

[How To Create Alerts In Your RoomAlert.com Account](#)

[How To Create A Report In Your RoomAlert.com Account](#)

[How To Trigger Push To RoomAlert.com More Frequently Than The Default Intervals](#)