SCADA OVERVIEW SCREEN – FOLLOWS OVERALL SLD BFE/PR/26/01 (VALUES ILLUSTRATIVE)

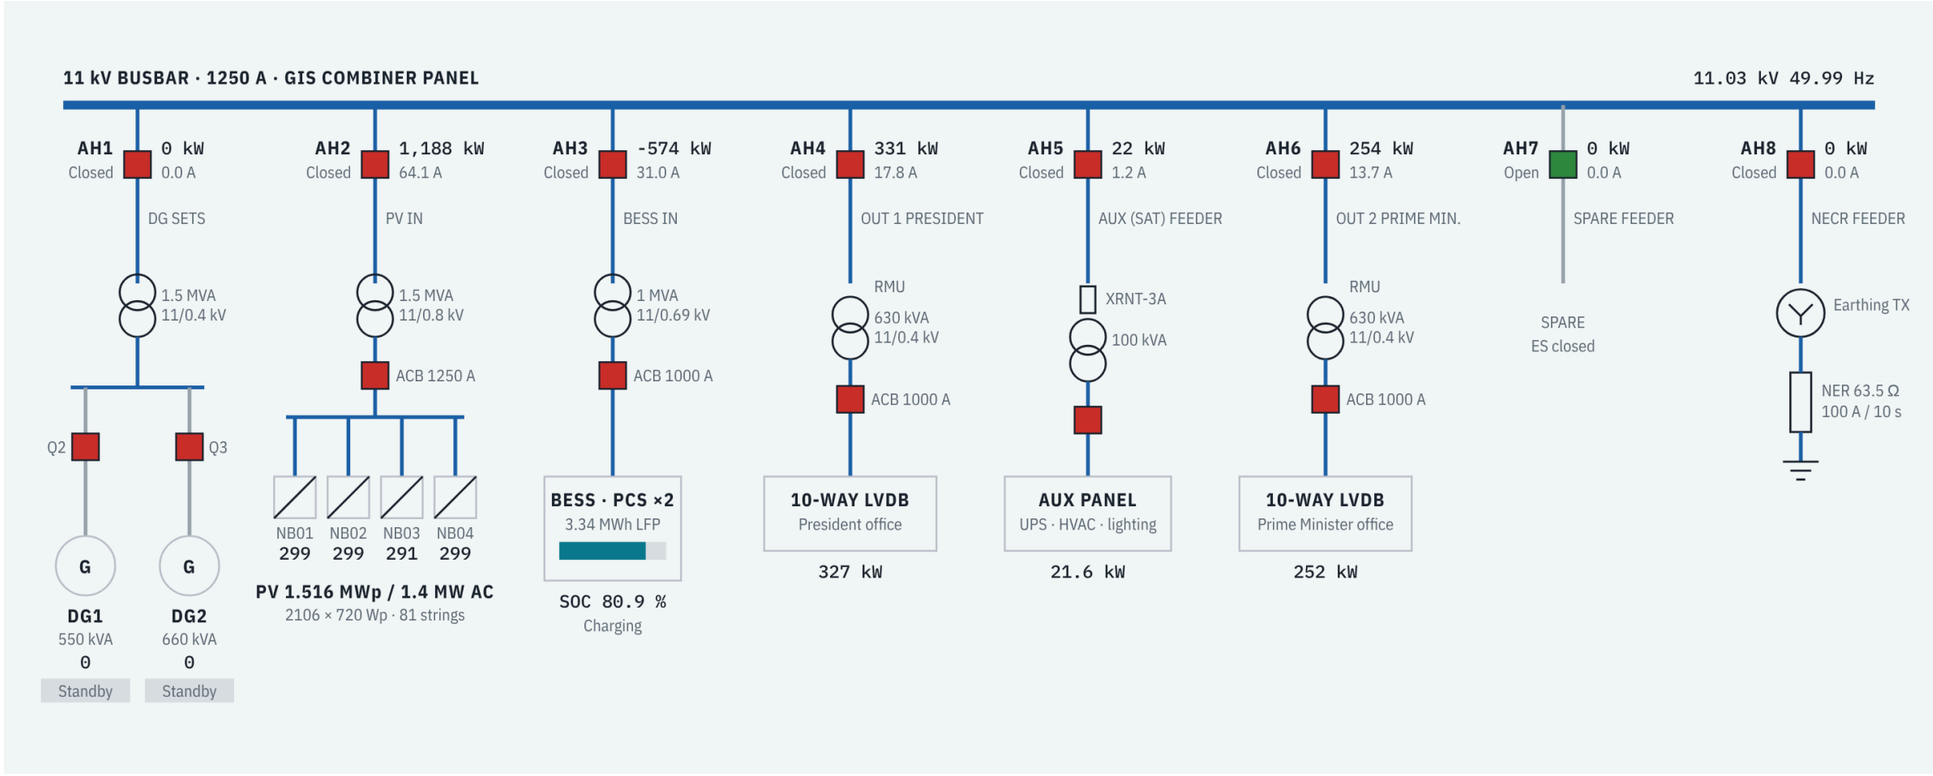


TABLE A – SYMBOL TO SIGNAL REFERENCE

Symbol	Status / measurement tags	Source
AH1…AH8 VCB	VS_GIS_AHn_QF_CLS / _OPN / _TRP	Rack 2 DI (hard-wired)
AH1…AH8 values	VS_GIS_AHn_P / _IA / _UAB	P5M30-AHn
AH1…AH8 command	VS_GIS_AHn_CMD_CLS / _CMD_OPN	Rack 2 DO, SBO
Earth switch	VS_GIS_AHn_QL_ES	Rack 2 DI
DG ACB Q2 / Q3	VS_DG_DGn_ACB_CLS / _ACB_TRP	Rack 2 DI
DG1 / DG2 block	VS_DG_DGn_P / _RUN / _AUTO	DGC-n (RS485)
PV ACB	VS_PV_LV_ACB_CLS / _ACB_TRP	Rack 2 DI
Inverter kW	VS_PV_INV_NB0n_PAC / _STATE	NTS-PVn (RS485)
BESS ACB	VS_BESS_LV_ACB_CLS / _ACB_TRP	Rack 2 DI
BESS block, SOC	VS_BESS_SYS_SOC / _P / PCSn_GF	BESS-EMS
LVDB incomer	VS_LV_LVDB_PRES/PM_INC_CLS	NTS-LVP / NTS-LVM
LVDB kW	VS_LV_LVDB_PRES/PM_P	PM5320-LVP / -LVM
Aux panel	VS_AUX_PNL_INC_CLS · VS_AUX_TX_FUSE	Rack 2 DI
NECR	VS_GIS_NECR_NER_TMP / _EFT_TRP	P5M30-AH8 / Rack 2
Bus kV / Hz	VS_GIS_AH3_UAB / _F (bus calc.)	P5M30, PLC

TABLE B – SYMBOL AND COLOUR CONVENTIONS

Element	Convention
Breaker closed	Filled red square, text "Closed"
Breaker open	Filled green square, text "Open"
Breaker tripped	Filled amber square, text "TRIPPED", P1 alarm
Energised conductor	Blue line
De-energised conductor	Grey line
Bad quality / comms lost	Value shown in magenta with "?" (to be added at detail design)
Alarm priority	P1 red · P2 amber · P3 blue, shown in alarm banner

TABLE C – OPERATOR INTERACTION

Action	Result
Click breaker	Faceplate: status, values, interlocks, select-before-operate
Click equipment	Opens detail screen (Generators, BESS, PV, Distribution, Aux)
Command	Select → operate within 10 s; PLC checks permissives
User level	Viewer: monitor only · Operator: commands · Engineer: setpoints
Logging	Every command and setpoint stored with user and time

SCREEN HIERARCHY

Level	Screens
1 – Plant	Overview SLD (this sheet)
2 – Area	11 kV GIS · Generators · BESS · PV & Weather · Distribution · UPS & Fire
3 – Function	Plant Control (PPC) · Alarms · Trends · Network · I/O List
4 – Faceplates	Breaker, DG, PCS, inverter, MCCB pop-ups

LEGEND

- Breaker closed
- Breaker open
- Breaker tripped
- Energised
- De-energised

NOTES

1. Screen captured from the HMI mock-up hmi/villa-somalia-scada.html. Values are simulated and for illustration only.
2. Layout follows the Overall SLD and 11 kV switchgear configuration of BFE/PR/26/01.
3. Tag names follow the I/O list docs/villa-somalia-io-list.csv.
4. Breaker status is from hard-wired auxiliary contacts and confirmed by the relay. Operators must verify locally before working on equipment.

REV	DESCRIPTION	DATE
A	Draft for internal review	16-OCT-2026

CLIENT:
MINISTRY OF ENERGY & WATER RESOURCES – SOMALIA
SITE: VILLA SOMALIA

CONTRACTOR:
BLUEFLAG ENERGY CO. LTD

PROJECT TITLE:
SOLARIZATION VILLA SOMALIA

SHEET TITLE:
SCADA OVERVIEW SLD
HMI overview screen and signal reference

SCALE: NTS	DATE: 16-OCT-2026	SIZE: A3
DESIGNED		SIGN
DRAWN		SIGN
CHECKED		SIGN
APPROVED		SIGN

DRW NO. **BFE/PR/26/01-SCADA-005** **REV A**