零死角玩转STM32



如何安装KEIL5

淘宝: firestm32.taobao.com

论坛: www.chuxue123.com



扫描进入淘宝店铺

主讲内容



01 获取KEIL5安装包

02 开始安装KEIL5

03 安装STM32芯片包

参考资料:《零死角玩转STM32》

"如何安装KEIL5"章节

获取KEIL5安装包



注意事项

- 1、安装路径不能带中文,必须是英文路径。
- 2、安装目录不能跟51的KEIL或者KEIL4冲突,三者目录必须分开。
- 3、KEIL5的安装比起KEIL4多了一个步骤,必须添加芯片包,不然没法使用。
- 4、如果使用的时候出现莫名其妙的错误,先百度查找解决方法,莫乱阵脚。

获取KEIL5安装包


百度搜索关键字"KEIL5下载"即可,我们这里使用MDK5.15版本,如果后面出了更高的版本选择性升级即可。

网友提供:http://pan.baidu.com/s/1bpc7Xmf?qq-pf-to=pcqq.c2c


开始安装KEIL5



①:双击KEIL5安装包,Next。

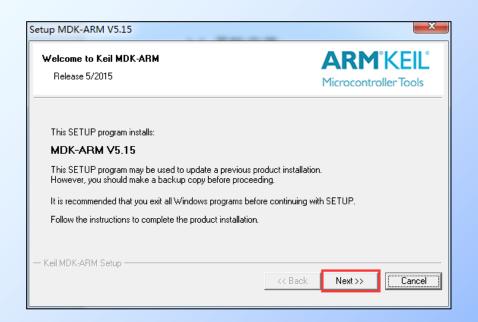


②:同意协议, Next。

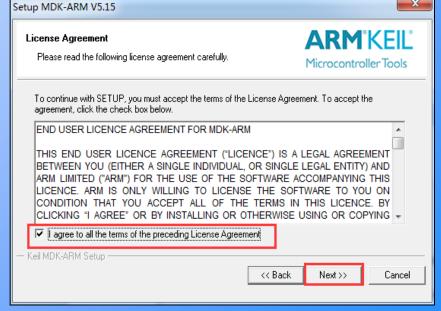


开始安装KEIL5



③:选择安装路径,路径不能带中文(要特别注意),Next。

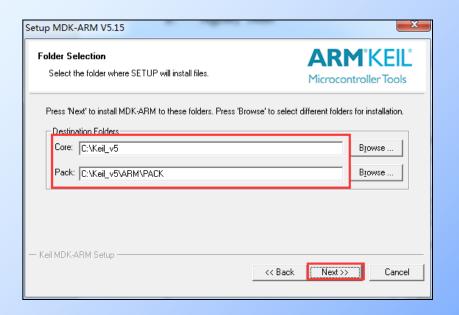


④:填写用户信息,全部填空格(键盘的space键)即可,Next。

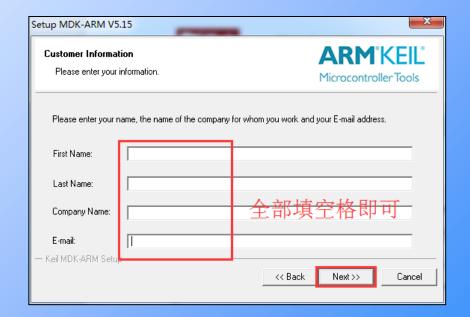

开始安装KEIL5



⑤: Finish, 安装完毕。

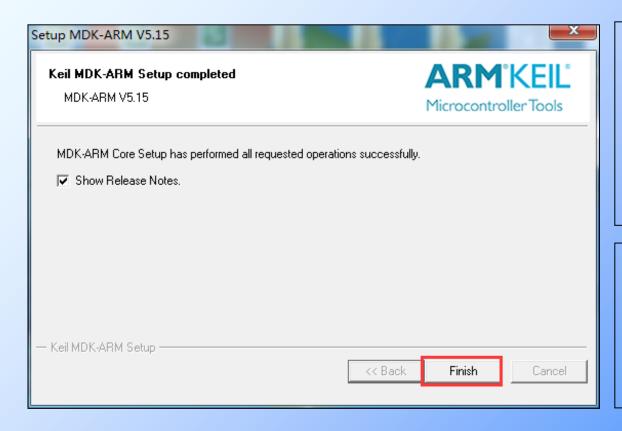

如果安装的是KEIL4,到这里已经安装完毕,与KEIL4自带各种芯片包不同,KEIL5需要用户手动安装,否则在新建工程的时候没有芯片可选。

如果后面更新了有更高的版本可选择安装更高的版本。要注意的是KEIL5的工程KEIL4打不开。

安装STM32芯片包



- 1、STM32芯片包需要去KEIL的官网下载,有F0/1/2/6/4/7这几个系列, 具体下载和安装哪个系列的包,具体看你的芯片型号。
- 2、下载完成后,双击安装,安装目录同KEIL5即可。

网址: http://www.keil.com/dd2/pack/

> STMicroelectronics STM32F1 Series Device Support, Drivers and Examples	2.0.0
➤ STMicroelectronics STM32F2 Series Device Support, Drivers and Examples	2.5.0
➤ STMicroelectronics STM32F3 Series Device Support and Examples	1.3.0
➤ STMicroelectronics STM32F4 Series Device Support, Drivers and Examples	2.7.0 ±
➤ STMicroelectronics STM32F7 Series Device Support, Drivers and Examples	2.4.0

零死角玩转STM32





论坛: www.chuxue123.com

淘宝: firestm32.taobao.com



扫描进入淘宝店铺