

Children's Electric Ride On Car

Installation And Operation Manual



Model: LX570
Age Range: 37-95 Month
Maximum Weight: 35 KGS
Execution Standard:
GB6675&GB19865 ☐
EN71&EN62115 ☐

LX570



Pictures are for reference only , please adhere to the original products as standard

Warning:

This is a Child's Toy and NOT intended for Off-Road Use.

1:All spare parts When open the carton



WARNING:



If you want to use carry handle under the specification of four motors, please switch to mode of 2*2 (Two motors drive).

Assembling Procedure (Must be assembled by Adults)

1.Install gearboxes for left and right sides



Please find gearboxes in the car and disconnect the connection lines. Please connect the gearboxes to the axle, and then make the lines of gearboxes insert into the hole of car body. (Please refer to the photos) and re-connect the lines to the power lines.

2.Connect electricity



Please first put the sleeves into the wheels.

Tips: Please note that the cotter pins should be bent into circle otherwise it will be scuffing the wheels.(Please refer to the photos)



Please take out sleeves from the screw&bolts bags and put into inner and outer sides of front wheels, as well as outer sides of back wheels, and then put one metal gasket into the axle, and then put wheel into the axle, insert the cotter pins to the hole on the axle, and then make the cotter pin across(refer to the photo). Finally, please put the cover onto the wheels.

3.Install steering wheel



Due to the reason of movement of steering tube, sometimes there is possibility that the hole on the steering wheel and the hole on the steering tube can not match well. If this happens, please use one hand to hold the hook under the car body in order to fix the steering tube. (Referring to the picture)

4. Connect power



Open the hood and the cover under the hood. Connect the power lines refer to the photo.

5: Install seat



Put the seat on the car and use two screws to fix.

6: Install rear view mirrors



Make the rearview mirrors aim at the neck and push inside.

Explosive View



■ Specifications

Item	Specifications
Battery	12V7AH/12V10AH
Motor	35W
Available Ages	Children from 37-95 month
Maximum Weight	35KGS
Size	134*85*63cm
Speed	3-5km/h
Charging Time	8-12hours
Remote Control Batteries	2PCS of AAA Batteries
Charger	Input:220V/110V Output:DC12v1000MA

■ CHARGING PRECAUTIONS

Battery polarity cannot be reversed, please ensure the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal

- Press the power switch to OFF position to turn the power off.
 - Open the seat, connect the battery plug, red to red.
 - Never drain battery completely or to a crawling speed, recharge the battery when a decrease in speed and power is noticed. Warranty will be voided if misuse has occurred.
 - Battery charging must be done by adults only. Never allow children to charge the battery. A child could be injured by the electricity involved in charging the battery.
 - Please don't connect the wires to a short circuit. The charger and the battery are not a toy. Do not allow children to play with the charger and the battery. Only operate the battery and charger specified according to the manual instructions.
 - Please do not open the battery and the charger.
 - To maintain safety of vehicle, always secure the battery with the bracket.
 - The battery must be handled and operated by adults only: the battery is heavy and contains sulfuric acid (electrolyte). Dropping the battery could result in serious injury.
 - Before charging the battery check for wear or damage to the battery, charger, the connectors and other parts. If any damage found, the charger should be repaired or replaced immediately. Do not use a damaged charger.
 - It is normal for the adaptor to feel warm during charging, but if the charger feels too hot, stop charging immediately and check the battery and adaptor. When charging please turn off the power switch. Please charge the battery for 8-10 hours after first use. Subsequent charges should be 6-8 hours but not exceeding 10 hours. If do not use the car for a long time, please charge at least once a month to keep the battery cells active.
1. Plug the charger into the charging socket.
 2. Plug the other end of the charger into your wall socket.
- Batteries are perishable items that are subject to under and over charging. Please observe the charging time.

■ TROUBLESHOOTING


Problem: The car will not move

Answer 1: The battery is low, please charge for 6-8 hours but not exceeding 10 hours.

Charge at least once a month to keep the battery cells active.

Answer 2: The battery is low. Please charge the battery for 6-8 hours but not exceeding 10 hours.

Charge at least once a month to keep battery cells active.

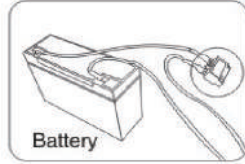

To avoid short fuse or power cut off:

1. Do not overload the product. Max load is 35Kg.
2. Do not drag any item behind this product.
3. Do not allow water or any liquid into electric parts.
4. Do not change wire system without a professional.

■ TROUBLESHOOTING

Problem: The car only runs for a short time

Answer 1: The battery is low, please charge for 6-8 hours but not exceeding 10 hours.

Charge at least once a month to keep the battery cells active.

Answer 2: The battery may need to be replaced depending on its charging history and age.

Problem: The sound does not work.

Please ensure the volume is turned up and the MP3 line is not connected. Sounds from steering wheel will not work when MP3 is plugged in.


Problem: Charger overheating

It is normal for battery and charger to be slightly warm during charging.


If the charger feel excessively hot, please check for a current overload or battery short circuit.

■ SAFETY PRECAUTIONS

01. While driving , adult supervision is required all the time
02. Always wear a helmet when driving
03. Please don't drive near road or on the footpath.
04. It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
05. It is recommended to drive this vehicle on smooth surface only.
06. Please don't drive this vehicle outdoors when it is raining.
07. Make sure that the vehicle stop completely before changing direction from forward to reverse
08. Please don't allow children to operate the charger or play with the battery
09. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children about safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please don't let children touch the wheels or be near them when the car is moving.
20. Please mind fingers when opening and closing doors.

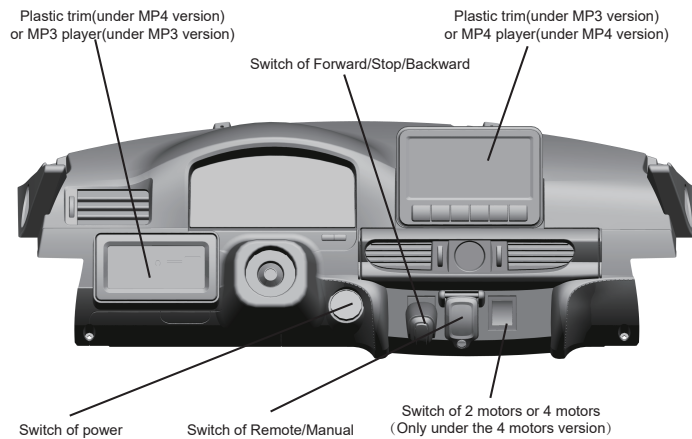


Description for the switch of Manual / Remote:
 Under the Manual: the car only can drive by the child;
 Under the Remote: the car only can drive by the remote control;

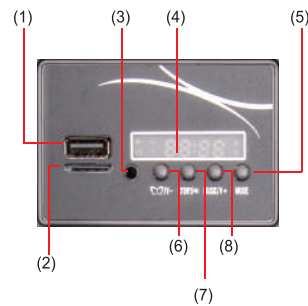

1. socket
- 2.Storage card socket
- 3.Audio input
- 4.Display
- 5.MODE choose(Radio/wireless connection/Storage card connection)
- 6.Education(Pressing for a longer time and it will lower the volume)
- 7.Story(Play/ Pause under the wireless connection/Storage card functions)
- 8.Music(Pressing for a longer time and it will higher the volume)

- 1.Press the music button on the steering wheel for horn or music.
- 2.Plug in your MP3 device to play your own music through the car.
Please note the steering wheel sounds will not work when the MP3 device is connected.

Remote control frequency matching

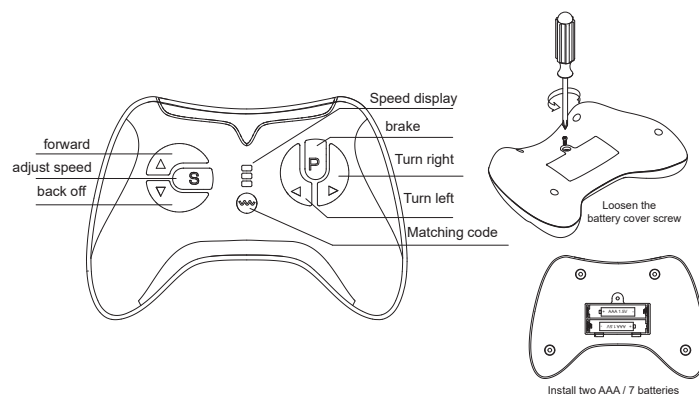

2.4G remote control manual

he first use requires code matching. This product has built-in memory, and it is unnecessary to code after replacing the battery.

1. Turn off the power of the car body, press and hold the "m" key of the remote control, the first indicator light starts to flash after 3 seconds, and then release the key
2. At this time, turn on the power switch of the car body, the first indicator light of the remote control will become normally on, and the code matching is successful
3. When the remote control is not in use, it will enter the sleep state after 10 seconds. Press any key to wake up.
4. Key function description: "forward", "backward", "left", "right", "s" speed regulation, "P" brake.

Press the "s" key to set the speed, one light is low speed, two lights are medium speed, three lights are high speed, only medium speed when reversing
 Press the "P" key to enter the braking state, the indicator lights all flash, and press the "P" key again to exit the braking state

Remote control instructions

Warning! It is not suitable for children under 3 years old.

There are small parts inside and there is a risk of suffocation

- Install two AAA / 7 (1.5V) dry batteries as shown in the figure
- Use a non rechargeable battery, do not charge the battery
- Different types of batteries or old and new batteries cannot be mixed
- Take out the battery from the product in time when the battery runs out
- The positive and negative terminals of the power supply shall not be short circuited
- The package of this product contains important information, please keep it

Warning! The remote control should be used by a guardian.
There are small parts inside and there is a risk of suffocation.
Please keep away from children.

*Manufactured according to FCC certification testing and
ECM credential.

*This remote is to be used by adult only.

Warning-When replacing a replaceable battery, first open the lid and take out the old battery. Put in the new battery, pay attention to the positive and negative poles, cover the lid.



WARNING!

For safety reasons,

*please use this vehicle under adult guidance and supervision.

*do not use this product on main roads, slopes, highways or other dangerous places.

*children must wear shoes and protective gears when operating the vehicle.

*children should be seated with the seat belt fasten when driving.

*only load a maximum of 35Kg on the vehicle.

*only children aged 37 - 95 months should be allowed on this vehicle.

*use this toy strictly according to safety manual.

*please check the tires, breaks, steering wheels, seats and seat belts before operating vehicle.

*this toy vehicle should be used with caution and requires skill to avoid fall or collision with third parties.

Pictures are for reference only, please adhere to the original products as standard

WARNING:

To reduce the risk of injury, adult supervision is required.

Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.

To ensure the safe use of this ride-on vehicle, regular maintenance is required.

1)Regular Maintenance

Regular inspection and maintenance are essential to keep the vehicle safe for use.

2)Parts to be Checked Regularly

-The following parts should be checked, maintained and, if necessary, replaced regularly:

- Wheels and wheel assemblies**
- Steering wheel and steering system**
- Screws, bolts and connecting parts**
- Drive components**
- Battery and electrical connections**

3)No Unauthorized Modifications

Do not modify the product in any way other than as described in these instructions.

4)Damaged Parts

Any damaged, worn or malfunctioning parts must be repaired or replaced immediately.

5)Sharp Edges Warning

During use, sharp edges may develop due to wear or damage.

These should be removed promptly. For example, replace damaged plastic parts or covers.

6)Self-locking Parts Warning

Self-locking nuts and other self-locking fasteners may lose their effectiveness after repeated assembly and disassembly.

Please check them regularly and replace if necessary.

7)Maintenance Frequency

Check the vehicle before each use

Perform a full inspection regularly (e.g. weekly or monthly depending on frequency of use)