DAYTONA ANIMA 190F ENGINE

Owner's Manual

ANIMA 190F --- Four-Valve Head Engine ---

ENGLISH MANUAL SECTION Page 2 - 25

PARTS CATALOGUE SECTION Page 26 - 36
CATALOGUE DES PIECES DATACHEES Page 26 - 36





Owner's Manual



INTRODUCTION

Thank you for purchasing of a ANIMA 190f Engine.

This manual explains operation, inspection, basic maintenance and tuning of the engine. If you have any questions, please contact the dealer you purchased the engine/bike from. Please read this manual very carefully before use.



- ANIMA 150f ENGINE is designed strictly FOR COMPETITION USE, ONLY ON A CLOSED COURSE. It is illegal to use this engine on any public road or highway. Off-road use on public space is also illegal.
 - Please check local regulation before use.
- This engine is to be used by EXPERIENCED RIDERS ONLY.
 Fatal accident may be caused unless it is used by experienced riders or maintained by professional and experienced mechanics.
- This engine is to be maintained by professional and experienced mechanics.Serious damage may occur, otherwise.
- 4. This manual explains ONLY THE BASIC operation, inspection, maintenance and tuning, but it is customer's responsibility to maintain the engine to the best possible performance, depending on the circumstances of the time.

Owner's Manual

CUSTOMER'S RESPONSIBILITY & CUSTOMER SERVICE

GENERAL EXCLUSIONS

Any failures caused by the following reasons are NOT considered as the defects of Products.

(1) Overheating due to improper engine oil temp. control



ENGINE OIL TEMPERATURE MUST BE CONTROLLED AT 90 DEGREES CELSIUS (194 DEGREES FAHRENHEIT) OR LOWER.

Serious damage will occur in the engine if engine oil temperature exceeds 90 degrees Celsius or 194 degrees Fahrenheit.

It is solely customer's responsibility to control the engine oil temperature.

- (2) Installation of parts or accessories that is not originally equipped on Products. This includes DAYTONA UPGRADE KIT PARTS as well, since those are designed for the top competition riders.
- (3) Abnormal strain, neglect, or abuse
- (4) Accident or collision damage
- (5) Modification to original parts
- (6) Lack of proper maintenance
- (7) Damage due to improper transportation or use

THE CUSTOMER'S RESPONSIBILITY

THE CUSTOMER'S RESPONSIBILITY shall be:

(1) Operate and maintain Products as specified in the appropriate Owner's Manual

CUSTOMER SERVICE

If Products require services, you must take it to the authorized dealer, who is appointed by authorized local distributors of DAYTONA.

DAYTONA Corp. JAPAN is NOT in the position to take care of services of any kind with the customers or authorized dealers due to the contract with authorized local distributors.

Owner's Manual

CONTENTS

INTRODUCTION	Page 2
CUSTOMER'S RESPONSIBILITY & CUSTOMER SERVICE	Page 3
CONTENTS	Page 4
PART NAMES	Page 5
GENERAL SPECIFICATIONS	Page 6
MAINTENANCE SPECIFICATIONS	Page 7 – 10
MAINTENANCE INTERVALS	Page 11 - 13
PRE-OPERATION INSPECTION AND MAINTENANCE ENGINE OIL LEVEL INSPECTION CARBURETOR SETTING IGNITION TIMING SELECTION REV LIMITER SELECTION	Page 14 Page 14 Page 15 - 17 Page 18 Page 19
ENGINE OIL TEMPERATURE CONTROL	Page 20
ELECTRICAL DIAGRAM	Page 21
OPTIONAL PARTS	Page 22 - 25
PARTS CATALOGUE	Page 26 – 36

Owner's Manual

PART NAMES





Owner's Manual

GENERAL SPECIFICATIONS

ENGINE		
Engine Weight (Dry)	21.5 kg	
Engine type	Air Cooled 4-stroke SOHC	
Cylinder arrangement	Single cylinder, Horizontally mounted	
Displacement (ANIMA150f)	187.18 cm3	
Bore × stroke (ANIMA150f)	62.0 × 62.0 mm (2.441 × 2.441 in)	
Compression ratio	12.1 : 1	
Starting system	Kick (Kick pedal is NOT included in the Engine Kit)	
Lubrication system	Wet sump	
Recommended Engine Oil	SAE 10W-40 or higher grade	
	API "SG" or higher grade	
Engine oil capacity		
Periodic oil change	0.60 L	
With oil filter replacement	0.65 L	
Total amount	0.70 L	
	* Need more amount of oil when oil cooler is in use	
Spark plug		
Type/manufacturer	ER9EH / NGK (resistance type)	
Gap	0.6 ~ 0.7 mm (0.024 ~ 0.028 in)	
Clutch type	Wet, Multi-plate 6-disc	
Transmission		
Primary reduction system	Gear	
Primary reduction ratio	67/18 (3.722)	
Transmission type	4-Speed	
Gear ratio	(Counter / Main)	
1st	34/13 (2.6153)	
2nd	26/15 (1.7333)	
3rd	25/21 (1.1904)	
4 th	22/24 (0.9166)	
GEAR SHIFT PATTERN	N-1-2-3-4	
Electrical		
Ignition system	AC-CDI	
Generator system	AC magneto	

Owner's Manual

Item	Standard	Limit
Cylinder head		0.05 mm
Warp limit		(0.002 in)
Cylinder:		
Bore size	62.00 - 62.015mm (2.4409 – 2.4415)	
Out of round limit		0.05 mm
		(0.002 in)
Camshaft:		
Drive method	Chain drive (Left)	
Cam dimensions		
H		
Intake "H	30.18 ~ 30.30 mm	29.84 mm
	(1.1882 ~ 1.1929 in)	(1.1748 in)
"D		
Exhaust "H	30.21 ~ 30.33 mm	29.87 mm
	(1.1894 ~ 1.1941 in)	(1.1760 in)
"D	,	

Owner's Manual

Timing chain: Timing chain No. of links Timing chain adjustment method Valve, valve seat, valve guide:	0.05 ~ 0.07 mm (0.0020~ 0.0028 in)		
Timing chain adjustment method	Automatic 0.05 ~ 0.07 mm (0.0020~ 0.0028 in)		
method	0.05 ~ 0.07 mm (0.0020~ 0.0028 in)		
	0.05 ~ 0.07 mm (0.0020~ 0.0028 in)		
Valve, valve seat, valve guide:	0.05 ~ 0.07 mm (0.0020~ 0.0028 in)		
	· ·		
Valve clearance (cold) II			
	0.05 ~ 0.07 mm (0.0020~ 0.0028 in)		
E.	<		
Valve dimensions:			
		I.	
	l\ B		
<u>Α</u>		≓D	
,	,	1	
"A" head diameter IN	24.4 ~ 24.6 mm (0.9606 ~ 0.9685 in)		
EX	20.9 ~ 21.1 mm (0.8228 ~ 0.8307 in)		
"B" face width IN			
EX			
"C" seat width IN	0.8 ~ 1.0 mm (0.0314 ~ 0.03937 in)	1.6 mm (0.0630 in)	
EX	0.8 ~ 1.0 mm (0.0314 ~ 0.03937 in)	1.6 mm (0.0630 in)	
"D" margin thickness IN			
EX			
	4.470 ~ 4.485 mm(0.17598 ~ 0.1766 in)	4.42 mm (0.1740 in)	
	4.470 ~ 4.485 mm(0.17598 ~ 0.1766 in)	4.42 mm (0.1740 in)	
Guide inside diameter IN	4.500 ~ 4.512 mm(0.17716 ~ 0.1776 in)	4.55 mm(0.1791 in)	
EX	EX 4.500 ~ 4.512 mm(0.17716 ~ 0.1776 in)		
Stem-to-guide clearance IN	0.015 ~ 0.042 mm(0.0005 ~ 0.0016 in)	0.08 mm(0.003 in)	
EX	0.03 ~ 0.057 mm(0.0011 ~ 0.0022 in)	0.10 mm(0.004 in)	
Valve spring:			
Free length			
IN (φ 16.2)	42.59 mm(1.6767 in)	40.38 mm(1.5897 in)	
EX (φ 16.2)	42.59 mm(1.6767 in)	40.38 mm(1.5897 in)	

Owner's Manual

Item	Standard	Limit
Piston:		
Piston to cylinder clearance	0.01 ~ 0.04 mm	0.1mm(0.004 in)
	(0.00039 ~ 0.00157in)	
Piston size "D"	61.975 ~ 61.99 mm	
H	(2.4399 ~ 2.4405 in)	
Measuring point "H"	8 mm (0.31 in)	
Piston off-set		
Piston pin bore inside	14.002 ~ 14.013 mm	14.06 mm
diameter	(0.5513 ~ 0.5517 in)	(0.5535 in)
Piston pin outside diameter	13.995 ~ 13.998 mm	13.97 mm
	(0.5510 ~ 0.5511 in)	(0.55 in)
Piston rings:	,	
Top ring:		
Dimensions (H × W)	0.8 × 2.25 mm (0.06 × 0.09 in)	
End gap (installed)	0.05 ~ 0.20 mm (0.006 ~ 0.010 in)	0.4 mm (0.020 in)
Side clearance (installed)	0.015 ~ 0.045 mm(0.0012 ~ 0.0026in)	0.10 mm (0.005 in)
2nd ring: W Dimensions (H × W)	0.8 × 2.25 mm (0.06 × 0.09 in)	
End gap (installed)	0.05 ~ 0.20 mm (0.006 ~ 0.010 in)	0.4 mm (0.031 in)
Side clearance	0.015 ~ 0.045 mm(0.0012 ~ 0.0026in)	0.10 mm (0.005 in)
Oil ring: Dimensions (H × W)	1.50 × 2.25 mm (0.06 × 0.09 in)	
End gap (installed)	0.2 ~ 0.7 mm (0.004 ~ 0.016 in)	0.9 mm (0.005 in)

Owner's Manual

Item	Standard	Limit
Crankshaft:		
Crank width "A"	42.2 mm (1.66142 in)	
Runout limit "C"	0.03 (one-side)	0.1 mm (0.0039 in)
Big end side clearance "D"	0.1 ~ 0.35 mm (0.0039 ~ 0.0137 in)	0.6 mm (0.0236 in)
Small end free play "E"		
C C C A D		
Clutch:		
Friction plate thickness	2.9 ~ 3.1 mm (0.114 ~ 0.122 in)	2.7 mm (0.106 in)
Quantity	6	
Clutch plate thickness	0.9 ~ 1.0 mm (0.043 ~ 0.051 in)	0.7 mm (0.0275 in)
Quantity	5	
Warp limit		0.2 mm (0.0787 in)
Clutch spring free length		
Quantity	4	

Owner's Manual

MAINTENANCE INTERVALS

Item	After break-	Every race	Every third	Every fifth	As requir	Remarks
	in		(or 500	(or 1,000	ed	
	(50km)		km)	km)		
ENGINE OIL						
Replace	•	•				
Inspect					•	
ENGINE VALVES						The engine must
Check the valve	•		•			be cold.
clearances						Check the valve
Inspect			•			seats and valve
Replace					•	stems for wear.
VALVE SPRINGS						Check the free
Inspect			•			length and the tilt.
Replace					•	
CAMSHAFTS						Inspect the
Inspect			•			camshaft surface.
Replace					•	
TIMING CHAIN						Check for wear on
SPROCKETS, TIMING						the teeth and for
CHAIN			•			damage.
Inspect					•	
Replace						
PISTON						Inspect crack
Inspect			•		•	Inspect carbon
Clean					•	deposits and
Replace					•	eliminate them.

Owner's Manual

MAINTENANCE INTERVALS

PISTON RING Inspect Replace PISTON PIN Inspect Replace CYLINDER HEAD Replace (50km) km) km) km) Check ring 6 gap Inspect Replace Inspect carbon deposits and deposits and eliminate them. Change gasket CYLINDER	
Inspect Replace PISTON PIN Inspect Replace CYLINDER HEAD Inspect and clean Replace Replace Change gasket	end
Replace PISTON PIN Inspect Replace CYLINDER HEAD Inspect and clean Replace Replace Inspect carbon deposits and eliminate them. Change gasket	siiu
PISTON PIN Inspect Replace CYLINDER HEAD Inspect and clean Replace Medium deposits and eliminate them. Change gasket	
Inspect Replace CYLINDER HEAD Inspect and clean Replace Inspect carbon deposits and eliminate them. Change gasket	
Replace CYLINDER HEAD Inspect and clean Replace Replace Inspect carbon deposits and eliminate them. Change gasket	
CYLINDER HEAD Inspect and clean Replace Inspect carbon deposits and eliminate them. Change gasket	
Inspect and clean Replace Inspect and clean Replace Change gasket	
Replace eliminate them. Change gasket	
Change gasket	
TOTALINDEN TOTALISTED SU	
Inspect and clean marks	OIE
Replace Inspect wear	
CLUTCH Inspect housing	
Inspect and adjust • friction plate,	,
Replace Clutch plate and	
spring	
TRANSMISSION Inspect wear	of
Inspect gear and bearin	
Replace	J -
SHIFT FORK, SHIFT Inspect wear	
CAM, GUIDE BAR	
Inspect	
Replace	
ROTOR NUT	
Retighten •	
CRANK	
Inspect and align	
CARBURETOR	
Inspect, adjust, clean	

Owner's Manual

MAINTENANCE INTERVALS

Item	After break- in (50km)	Every race	Every third (or 500 km)	Every fifth (or 1,000 km)	As requir e-ed	Remarks
SPARK PLUG	(Committee)		,	,		
Inspect and clean	•		•			
Replace					•	
OIL COOLING						
SYSTEM(Option)						
Check hoses &	•	•				
leakage						
Replace hoses and					•	
gaskets						
AIR FILTER (Option)						Use foam air-filter
Clean and lubricate	•	•				oil or equivalent oil
Replace					•	
OIL FILTER						
Replace	•	•				
OIL STRAINER						
Clean				•		

Owner's Manual

PRE-OPERATION INSPECTION AND MAINTENANCE

Before riding for break-in operation, practice or a race, make sure the engine is in good operating condition.

Before using this engine, check the following points.

ENGINE OIL LEVEL INSPECTION

- 1. Start the engine, warm it up for several minutes, and then turn off the engine and wait for a few minutes.
- 2. Place the bike on a level place and hold it up on upright position.
- Check the oil level through the sight glass.
 Oil level should be between the upper and the central point of the sight glass.



4. Add oil to proper level



Add oil as necessary, when install the oil cooler.

Owner's Manual

PRE-OPERATION INSPECTION AND MAINTENANCE

CARBURETOR SETTING

The carburetor is extremely sensitive to foreign matter (dirt, sand, water, etc.).

During installation, do not allow foreign matter to get into the carburetor.

Always handle the carburetor and its components carefully. Even slight scratches, bends or damage to carburetor parts may prevent the carburetor from functioning correctly.

Carefully perform all servicing with the appropriate tools and without applying excessive force.

After installing the carburetor, check that the throttle operates correctly and opens and closes smoothly.

It is highly recommended that the carburetor setting is performed by an experienced mechanic to obtain the best possible performance.

Atmospheric conditions and carburetor settings

Air Temp.	Humidity	Air Pressure	Mixture	Setting
		(Altitude)		
High	High	Low	Richer	Leaner
		(High)		
Low	Low	High	Leaner	Richer
		(Low)		

The air density (i.e., concentration of oxygen in the air) determines the richness or leanness of the air/fuel mixture. Therefore, refer to the above table for mixture settings.


That is:

- Higher temperature expands the air with its resultant reduced density.
- Higher humidity reduces the amount of oxygen in the air by so much of the water vapor in the same air.
- Lower atmospheric pressure (at a high altitude) reduces the density of the air.

Owner's Manual

PRE-OPERATION INSPECTION AND MAINTENANCE

Effects of the setting parts on the throttle valve opening

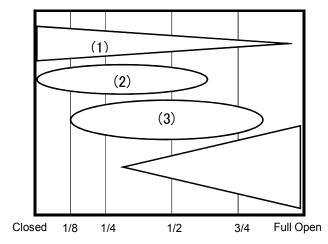

- (1) Slow Jet / Pilot Screw
- (2) Throttle valve cutaway
- (3) Jet Needle / Needle Jet
- (4) Main Jet

Here is the recommended setting information of KEIHIN PWK33 and PE28 carburetor, for your reference.

Tested Conditions

Carburetor KEIHIN PWK33
Air Temperature 20 degrees Celsius

Humidity 50% Atmospheric Pressure 1000 hPa

Item	Recommendation
Main Jet	#125(with UNI Air Filter)
Slow Jet	#42
Throttle Valve	#6.0
Jet Needle	#86590 W956R-1175W(DAYTONA original)
	#86640 W956R-1171N
	Clip position: In the 2 nd or 3rd groove from the top
Air screw	2 return

Owner's Manual

PRE-OPERATION INSPECTION AND MAINTENANCE

Carburetor KEIHIN PE28

Air Temperature 20 degrees Celsius

Humidity 50%

Atmospheric Pressure 1000 hPa

Item	Recommendation
Main Jet	#125(with UNI Air Filter)
Slow Jet	#42
Throttle Valve	#3.0
Jet Needle	#69414 / 46JFQ (-2 / ϕ 2.505)
	Clip position: In the 3rd groove from the top
Air screw	2 return

Owner's Manual

PRE-OPERATION INSPECTION AND MAINTENANCE

IGNITION TIMING SELECTION

ANIMA 190f ENGINE comes with ignition timing selectable CDI unit.

To change the ignition timing, it needs to change the connection of the wires that come out of the CDI unit.

WIRE CONNECTION TABLE

Color of Wire	WHITE	GREEN	YELLOW	GREEN	INGITION TIMING
Timing (1)	0	0	0	0	REDUSE
Timing (2)	0	0	0		
Timing (3)	<u> </u>		0	0	
Timing (4)	0	_	0		ADVANCE
MARNING THE THE PROPERTY OF TH					



USE ADVANCE TIMING GIVES HIGH TEMPERATURE TO ENGINE.
SERIOUS DAMAGE WILL OCCURE IN THE ENGINE BY ABNORMAL COMBUSTION.

Notes

- (a) Reduce Timing gives more torque at low-middle rpm level.
- (b) Advance Timing gives more torque at higher rpm level than the Reduce Timing.

Example (How to select)

* To select Timing (2), connect Yellow and Green wires.

Owner's Manual

PRE-OPERATION INSPECTION AND MAINTENANCE

REV LIMITER SELECTION

ANIMA 190f ENGINE comes with rev limiter selectable CDI unit.

To change the rev limiter, it needs to change the connection of the wires that come out of the CDI unit.

WIRE CONNECTION TABLE

Color of Wire	BLUE	GREEN	BLACK/ YELLOW	GREEN	GREEN/ WHITE
Rev Limiter (1) -11,500rpm	0	0	0	0	0
Rev Limiter (2) -12,200rpm	0	0	0		0
Rev Limiter (3) -12,900rpm	0	0	0	0	0
Rev Limiter (4) -13,600rpm	0	<u> </u>	0	0	
Rev Limiter (5) -15,000rpm	<u> </u>		<u> </u>		0

Example (How to select)

^{*} To select Rev Limiter (3)-12,900rpm, connect Blue and Green wires.

Owner's Manual

PRE-OPERATION INSPECTION AND MAINTENANCE

ENGINE OIL TEMPERATURE CONTROL



WARNING


Engine oil temperature is to be strictly controlled at 90 degrees Celsius (194 degrees Fahrenheit) or lower.

Serious damage will occur in the engine if engine oil temperature exceeds 90 degrees Celsius or 194 degrees Fahrenheit.

It is solely customer's responsibility to control the engine oil temperature.

Any failures caused by overheating are NOT considered as the defects of Products.

It is highly recommended to use HIGH-EFFICIENT OIL COOLER and OIL TEMPERATURE GAUGE to protect the engine.

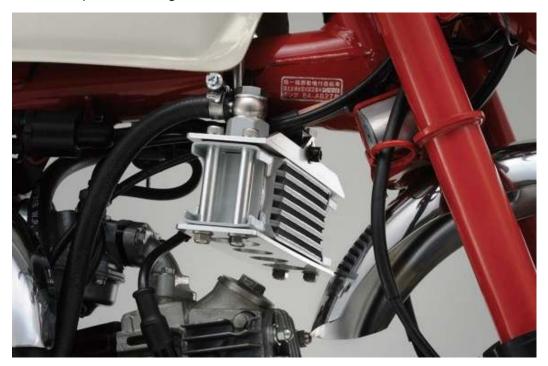


The above OIL COOLER is just a recommendation.

Engine oil temperature can be heated up over 90 degrees Celsius or 194 degrees Fahrenheit, even if the above recommended OIL COOLER is used.

Again, customer needs to control the oil temperature very carefully.

Owner's Manual

ELECTRICAL DIAGRAM

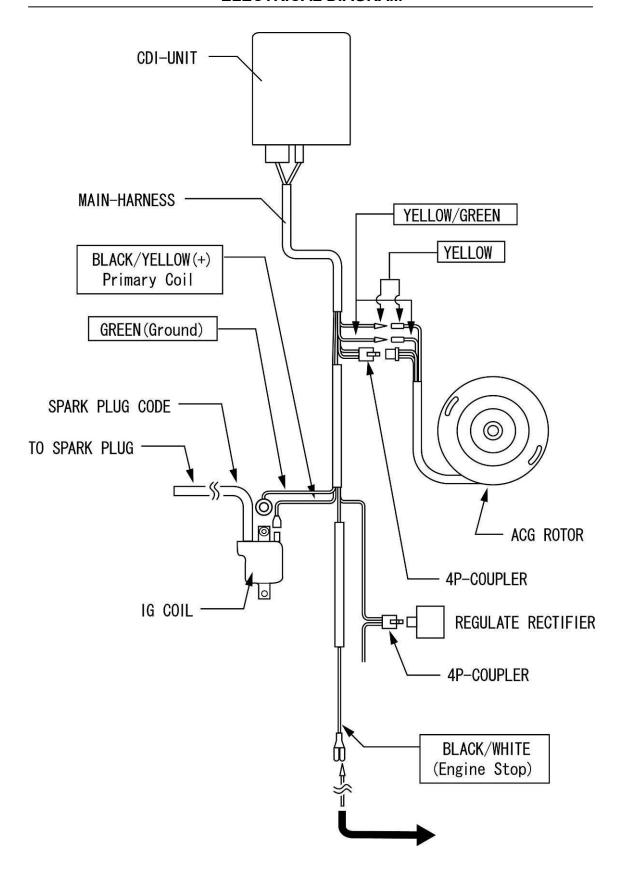

Owner's Manual

OPTIONAL PARTS

OIL COOLER

The following oil coolers are available from Daytona, but the mount bracket must be made by the customer to fit on his/her bike. The kit components are shown in the below photo.





OIL TEMPERATURE GAUGE & FITTING

The following temp. gauge and fitting are available from Daytona. The temp. gauge (#47101) can be used with the Daytona oil cooler (#61785) by using the Daytona sensor fitting (#43350).

Daytona Part# 85995


Temp. gauge & sensor, 0-270 degrees Celsius PT1/8(Tapered Thread)-Sensor fitting



The following temp. gauge and fitting are available from Daytona. The temp. gauge (#85995) can be used with the Daytona oil cooler (#74019) by using the Daytona sensor fitting (#43350).

Owner's Manual

OPTIONAL PARTS

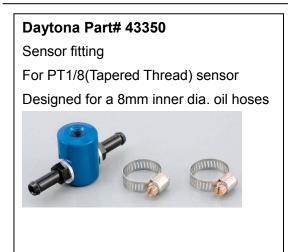



REINFORCED CLUTCH FRICTION DISC

Daytona Part # 84749 Reinforced clutch friction disc, 1pc Made by FCC JAPAN



Owner's Manual

OTIONAL PARTS



Since these UPGRADE KIT PARTS are designed specifically for the top competition riders, ANY FAILURES CAUSED BY THE INSTALLATION OF THESE OPTIONAL PARTS ARE NOT CONSIDERED AS THE DEFECTS OF PRODUCTS.

CARBURETOR KEIHIN PWK33



CARBURETOR SETTING PARTS



CARBURETOR SETTING PARTS

Daytona Part # 31123

Main Jet Set (8 pcs/set) for Keihin #115,118,120,122,125,128,130,&132

Daytona Part # 31124

Main Jet Set (8 pcs/set) for Keihin #128,130,132,135,138,140,142,&145



Daytona Part # 69906

Slow Jet Set, 6pcs/set Air bleed type For Keihin PE & PWK #35, 38, 40, 42, 45, & 48



Owner's Manual

OTIONAL PARTS



Since these UPGRADE KIT PARTS are designed specifically for the top competition riders, ANY FAILURES CAUSED BY THE INSTALLATION OF THESE OPTIONAL PARTS ARE NOT CONSIDERED AS THE DEFECTS OF PRODUCTS.

CARBURETOR KEIHIN PE28



CARBURETOR SETTING PARTS

Daytona Part # 31123

Main Jet Set (8 pcs/set) for Keihin #115,118,120,122,125,128,130,&132

Daytona Part # 31124

Main Jet Set (8 pcs/set) for Keihin #128,130,132,135,138,140,142,&145



Daytona Part # 69906

Slow Jet Set, 6pcs/set Air bleed type For Keihin PE & PWK #35, 38, 40, 42, 45, & 48



Page 25/38

Owner's Manual

OTIONAL PARTS

Daytona Part # 65414

JET NEEDLE

#69359 / 46JFL (+2 / Diameter of straight ϕ 2.465 / RICH)

#69361 / 46JFM (+1 / ϕ 2.475)

#69374 / 46JFN (0 / ϕ 2.485)

#69376 / 46JFP (-1 / ϕ 2.495)

#69414 / 46JFQ (-2 / φ2.505)

#69378 / 46JFR (-3 / φ2.515)

#69380 / 46JFS (-4 / ϕ 2.525 / LEAN)



^{*}Angle of taper = 3 deg (all)

Daytona Part No.

Throttle valve / For PE28

#65416 (#2.0)

69353 (# 2.5)

69354 (# 3.0)

69355 (# 4.0)




^{*} Height to taper = 26.77mm(all)

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 000000001-)

#TH5

PART CATALOGUE (ENGINE No. ANIMAI50F000000001~) REVISED DATE 19 January, 2012

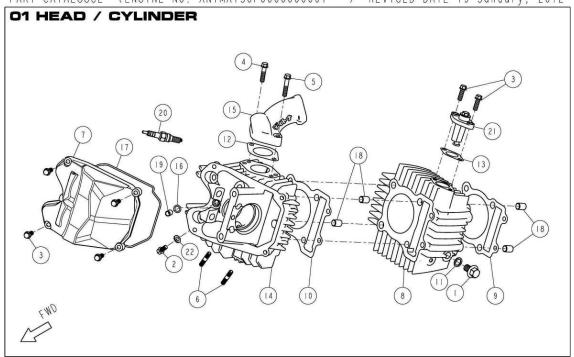


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86448	BOLT, HEXAGON FLANGE M10x16	1	
2	85877	BOLT, HEXAGON FLANGE M6x12	1	
3	86468	BOLT, HEXAGON FLANGE M6x18	6	
4	86466	BOLT, HEXAGON FLANGE M6x25	1	
5	86471	BOLT, HEXAGON FLANGE M6x30	1	
6	83703	BOLT, STUD M6x32	2	
7	86367	COVER, CYLINDER HEAD	1	
8	86633	CYLINDER	1	Ф 62.0mm
9	86436	GASKET, BASE CYLINDER	1	t=0.25
10	86440	GASKET, HEAD CYLINDER	1	t=0.25
11	86476	GASKET, M10	1	
12	86405	GASKET, MANIFOLD	1	
13	86439	GASKET, TANSIONER CAM CHAIN	1	
14	86622	HEAD, CYLINDER	1	
15	86404	MANIFOLD, INTAKE	1	
16	86479	O-RING	1	
17	86434	O-RING, COVER HEAD	1	
18	83720	PIN, DOWEL Φ10xΦ8.4x14	4	
19	83747	PIN, DOWEL Φ8xΦ6.3x12	1	
20	86429	SPARK PLUG ER9EH	1	M8xP1
21	86396	TENSIONER, CAM CHAIN COMP	1	
22	86456	WASHER, Φ6.3xΦ12x1.5	1	

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 0000000001-)



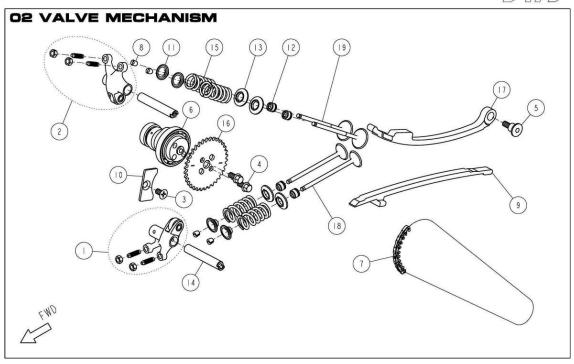


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86481	ARM, ROCKER ROLLER EX. COMP	1	
2	86393	ARM, ROCKER ROLLER IN. COMP	1	
3	86460	BOLT, COUNTERSINK M6x15	1	
4	86465	BOLT, HEXAGON FLANGE M6x12	2	
5	86447	BOLT, TENSIONER	1	
6	86388	CAMSHAFT 240° ROLLER	1	LOBE CENTER 101° (INT, EXH)
7	86391	CHAIN, CAMSHAFT DRIVE	1	94L
8	86402	COTTER, VALVE	8	
9	86395	GUDE, CHAIN CAMSHAFT	1	
10	86389	PLATE, STOPPER CAM	1	
11	86400	RETAINER, SPRING VALVE	4	
12	86403	SEAL, VALVE STEM Φ4.5	4	
13	86401	SEAT, SPRING VALVE	4	
14	86392	SHAFT, ROCKER	2	
15	86624	SPRING, VALVE	4	
16	86390	SPROCKET, CAMSHAFT DRIVEN	1	34T
17	86394	TENSIONER, CAM CHAIN	1	
18	86623	VALVE, EXHAUST Φ21	2	
19	86397	VALVE, INTAKE Φ24.5	2	

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 0000000001-)



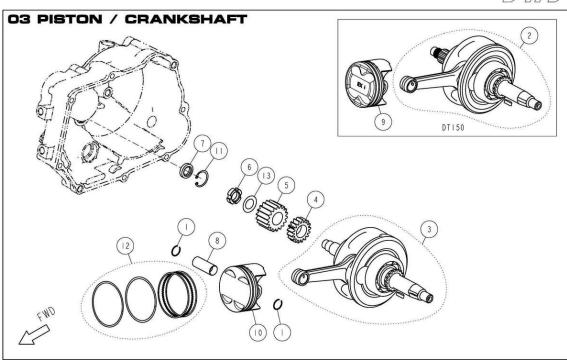


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86453	CLIP, PIN PISTON	2	
3	86620	CRANK SHAFT ASSY 190F	1	STROKE 62.0mm
4	86383	GEAR, OIL PUMP DRIVE	1	17T
5	86415	GEAR, PRIMARY DRIVE	1	18T
6	86450	NUT, SMALL M14	1	
7	86443	OIL SEAL, Φ12xΦ20x5t	1	
8	86379	PIN, PISTON Φ14	1	
10	86621	PISTON for 190F	1	BORE Φ62.0
11	86462	RETAINING RING, RTWN22	1	
12	86380	RING SET, PISTON	1	
13	86411	WASHER, SPRING	1	

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 0000000001-)

#1157

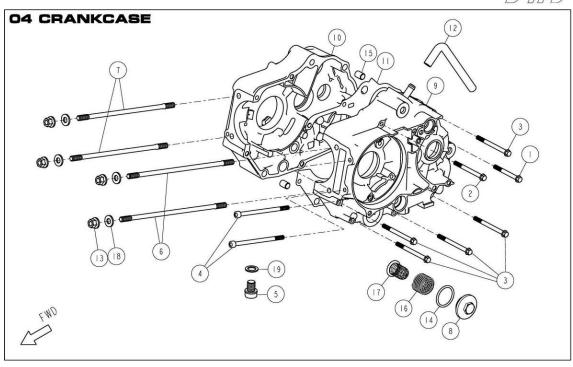


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86474	BOLT, HEXAGON FLANGE M6x55	1	
2	83761	BOLT, HEXAGON FLANGE M6x65	1	
3	86360	BOLT, HEXAGON FLANGE M6x70	5	
4	86459	BOLT, HEXAGON SOCKET M6x105	2	
5	83755	BOLT, OIL DRAIN M12x1.5	1	
6	86444	BOLT, STUD A	2	M8xP1.25 L=223mm
7	86445	BOLT, STUD B	2	M8xP1.25 L=203.5mm
8	86369	COVER, STRAINER OIL	1	
9	86370	CRANK CASE, LH	1	
10	86372	CRANK CASE, RH	1	
11	86438	GASKET, CRANKCASE	1	
12	86371	HOSE, BREATHER	1	
13	86451	NUT FLANGE, M8	4	
14	86433	O-RING, Φ30xΦ3	1	
15	83720	PIN, DOWEL Φ10x Φ8.4x14	2	
16	86385	SPRING, STRAINER	1	
17	86387	STRAINER, OIL	1	
18	86457	WASHER, GASKET M8	4	
19	83754	WASHER, OIL DRAIN M12	1	

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 000000001-)

#11\#57

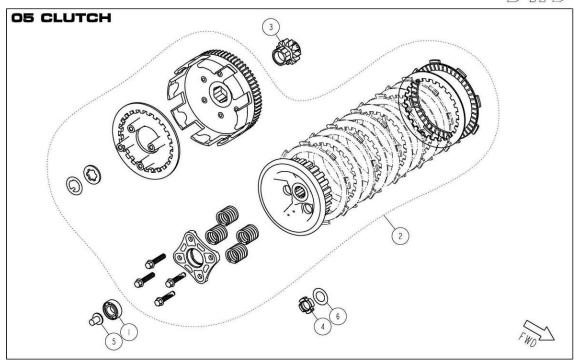


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	83786	BEARING, #6000	1	
2	86409	CLUTCH COMP	1	
3	86417	GEAR, STARTER DRIVEN 2 13T	1	
4	83768	NUT, SMALL M14	1	86450
5	83787	PIN, LIFTER CLUTCH	1	
6	86410	WASHER, SPRING Φ24xΦ14.2x1.2	1	

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 0000000001-)

5411-57

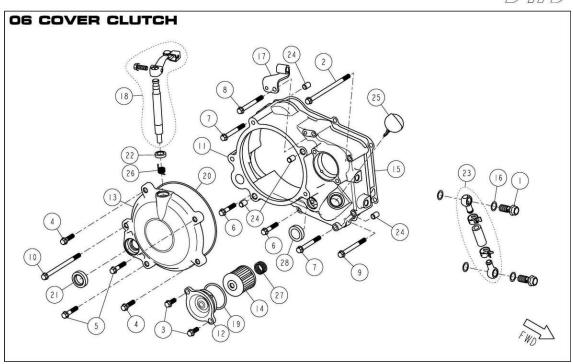


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86446	BOLT, BANJO M10x22.5	2	
2	86362	BOLT, HEXAGON FLANGE M6x105	1	
3	86486	BOLT, HEXAGON FLANGE M6x15	2	
4	86469	BOLT, HEXAGON FLANGE M6x22	2	
5	86485	BOLT, HEXAGON FLANGE M6x28	2	
6	86471	BOLT, HEXAGON FLANGE M6x30	2	
7	86473	BOLT, HEXAGON FLANGE M6x50	2	
8	86474	BOLT, HEXAGON FLANGE M6x55	1	
9	83759	BOLT, HEXAGON FLANGE M6x60	1	
10	86361	BOLT, HEXAGON FLANGE M6x90	1	
11	86376	COVER, CLUTCH	1	
12	86374	COVER, OIL FILTER	1	
13	86377	COVER, SMALL CLUTCH	1	
14	86384	FILTER, OIL	1	
15	86437	GASKET, COVER CLUTCH	1	
16	86476	GASKET, M10	4	
17	86412	HOLDER, CABLE CLUTCH	1	
18	86414	LEVER, CLUTCH COMP	1	
19	86432	O-RING, Φ38.6x2.6	1	
20	86435	O-RING, COVER SMALL CLUTCH	1	
21	86441	OIL SEAL, Φ16xΦ26x7	1	
22	86442	OIL SEAL, Φ17xΦ10x5	1	
23	86406	OIL THROUGH COMP	2	
24	83747	PIN, DOWEL Φ8xΦ6.3x12	4	
25	86386	RULER	1	
26	86413	SPRING, LEVER CLUTCH	1	
27	86375	SPRING, OIL FILTER	1	
28	86475	WINDOW, OIL LEVEL	1	

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 0000000001-)

541457

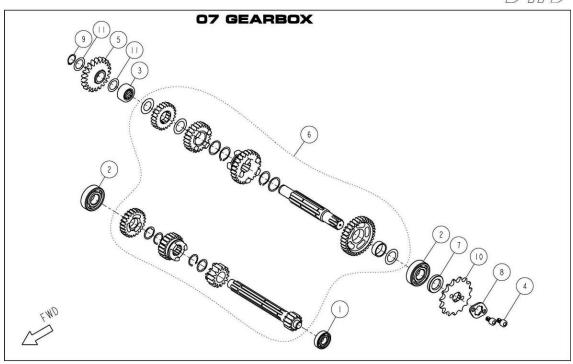


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	83788	BEARING #6001	1	
2	83795	BEARING #6203	2	
3	86454	BEARING NK152712	1	
4	86464	BOLT, HEXAGON SOCKET M6x10	2	
5	86418	GEAR IDLE, STARTER	1	
6	86416	GEAR, COMP	1	
7	83796	OIL SEAL, Φ29xΦ17x5	1	
8	86420	PLATE, FIXING SPROCKET DRIVE	1	
9	86463	RETAINING RING Φ13.6	1	
10	86419	SPROCKET, DRIVE 15T	1	
11	86455	WASHER, Φ22xΦ15x0.5	2	

GEAR,		(4speed)		
1st 2nd 3rd				4th
MAIN	13	15	21	24
COUNTER	34	26	25	22

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 0000000001-)



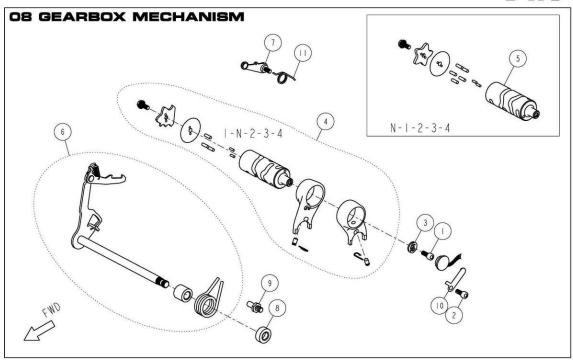


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86449	BOLT, HEXAGON SOCKET M6	1	
2	85877	BOLT, HEXAGON SOCKET M6x15	1	
3	83833	CONTACT,GEAR INDICATION	1	
5	86421	DRUM, SHIFT N-1-2-3-4 COMP	1	
6	86422	LEVER, GEAR SHIFT COMP	1	
7	86424	LOCATING PLATE UNIT	1	
8	83837	OIL SEAL, Φ24xΦ16x10	1	
9	86480	PIN, LOCATING SHIFT LEVER	1	
10	85876	PLATE, LOCATING SWITCH N.	1	
11	86423	SPRING, LOCATING PLATE	1	`

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 0000000001-)



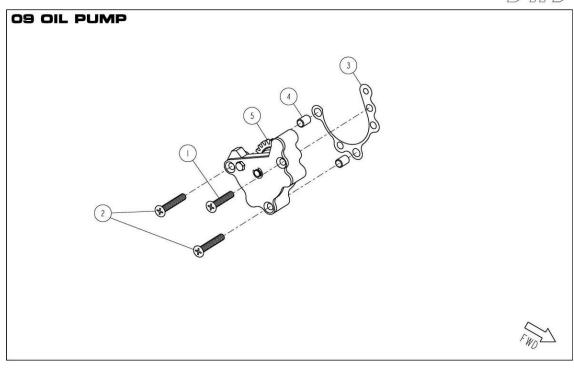


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	84678	BOLT, COUNTERSUNK M6x30	1	
2	84677	BOLT, COUNTERSUNK M6x35	2	
3	84676	GASKET, PUMP OIL	1	
4	83747	PIN, DOWEL Φ8xΦ6.3x12	2	
5	86382	PUMP, OIL ASSY	1	

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 0000000001-)

541457

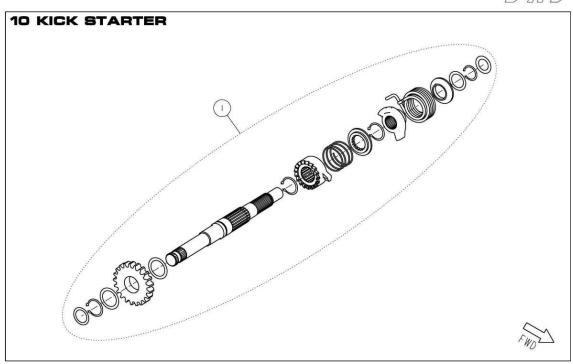


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86407	KICK STARTER ASM	1	

Owner's Manual

PARTS CATALOGUE (Engine No. ANIMA190F 0000000001-)

5411-57

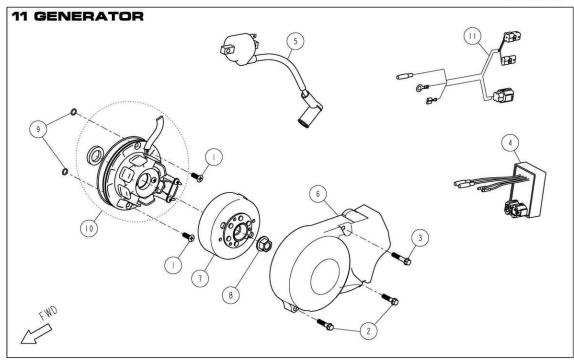

Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86461	BOLT, COUNTERSUNK M6x15	2	
2	86464	BOLT, HEXAGON FLANGE M6x25	2	
3	86472	BOLT, HEXAGON FLNAGE M6x32	1	
4	86427	BOX, CDI	1	W/ SELECTABLE REV LIMITER
5	86426	COIL, IGN ITION	1	
6	86373	COVER, MAGNET	1	
7	86431	FLYWHEE MAGNET COMP	1	
8	86452	NUT, MAGNET M12	1	
9	86479	O-RING, Φ6.5x Φ1.8	2	
10	86430	STATOR ASSY	1	
11	86428	WIRE HERNESS	1	

