Fire box build guide

The made-to-measure cabinet between your two BESTÅ cabinets that holds the 127 cm electric fire: every cut, hole, fixing and measurement, from your design.



The finished unit, rendered from the 3D planner (evening light, fire and LEDs on).

1310 × 380	875–2185	110–490	1250 × 327
the box, 400 deep like the cabinets	along the wall from the patio corner	off the floor, flush with the cabinets	the hole in the face for the fire

How it works

The fire box is a third cabinet, cut from a BESTÅ 60×40×192 frame so its top matches the cabinets either side. It has no back. Its ends are full height with the top and bottom between them, so every screw goes in through an end and is hidden against a cabinet. It hangs on a batten on the wall, bolts to both cabinets, and is tied to a second batten at the bottom. A face the doors' size, cut from a BESTÅ top panel, goes on the front on thin spacers so it sits level with the doors. The fire slides through the face and sits on two rests at its ends.

How to read it


- All measurements are in **millimetres**. Positions **along the wall** are from the **patio corner**, heights from the **floor**, depths out from the slats. On the drawings of single parts, measurements are from that part's own edges.
- The numbers come from your design as saved on 29 October 2026. A few depend on things you can only measure once you have them (the fire, the doors); the guide says which, and what to do if yours differ.

> **Replaces the first version.** If you have the first version of the main build guide, use this guide for the fire box instead. The face panel turned out to be 12 thick, not 16. The ends are now full height so the screws hide. And the fire sits on two rests at its ends rather than along the box's bottom, which would sag over 1274. The main guide on the site has been updated to match.

Made from the Ground floor 3D planner on 1 November 2026.

The box at a glance

The unit from the front, to scale. The fire box is the middle 1310, between the two 600 BESTÅ cabinets.

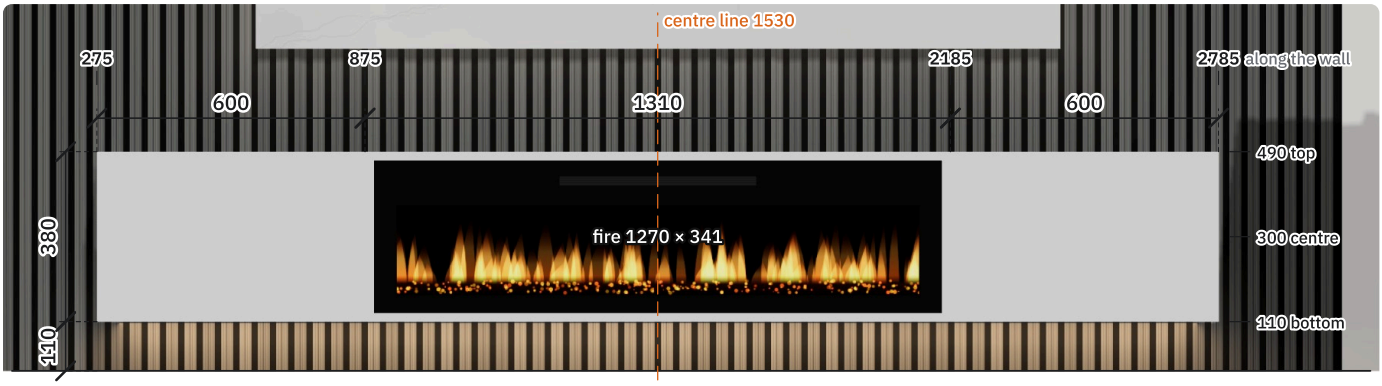


Front elevation of the unit.

ALONG THE WALL	MM
Left cabinet	275–875
Fire box	**875–2185**
Right cabinet	2185–2785
Face (2 in from the box's ends)	877–2183
Fire's front frame	895–2165
Hole in the face	905–2155
Centre line	1530

HEIGHTS	MM
Unit and fire box	**110–490**
Face (the doors' height)	112–488
Fire's front frame	129.5–470.5
Hole in the face	136.5–463.5
Fire centre	300
Top batten	428–472
Bottom batten	128–172

How it goes together

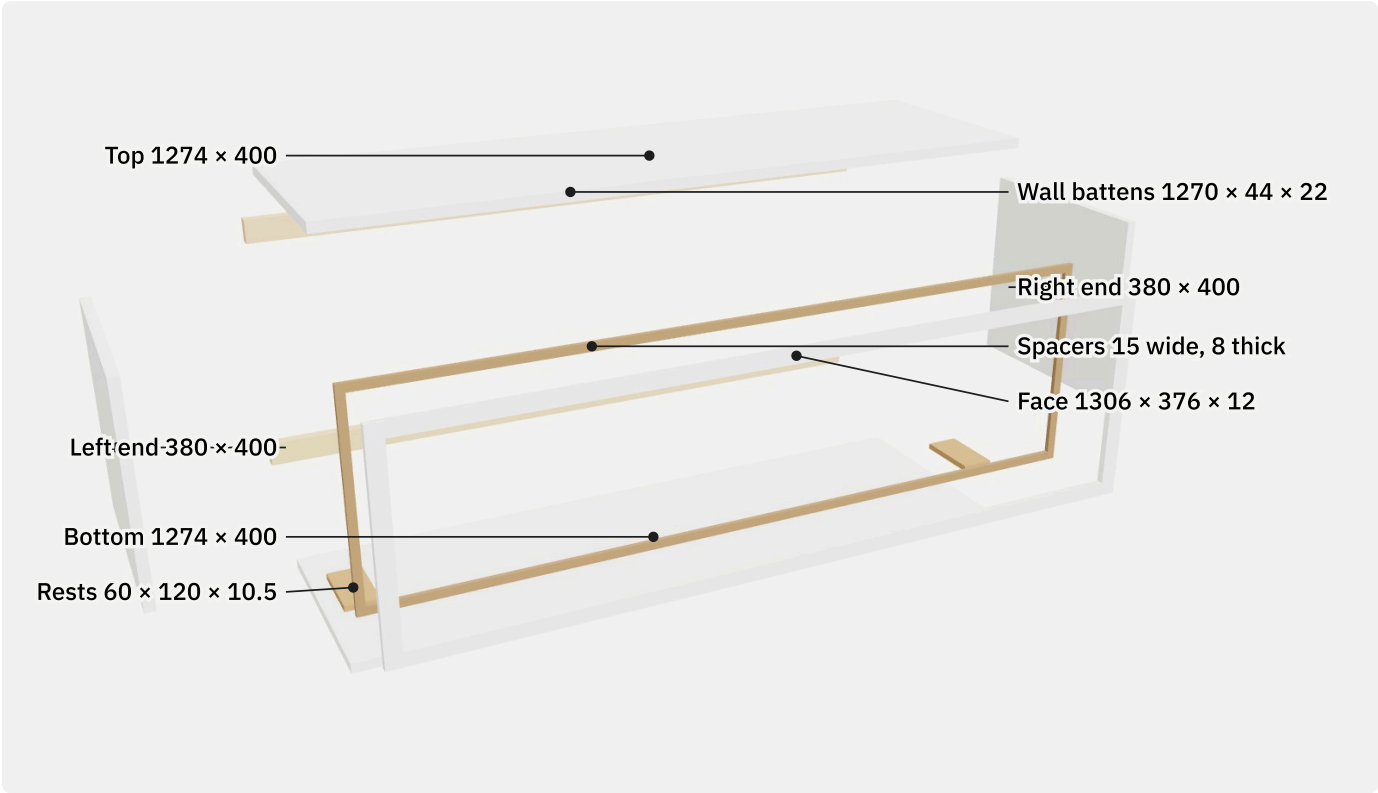


The fire box pulled apart. The battens (pale timber) are fixed to the wall; everything else is the box.


PART	QTY	SIZE	MADE FROM	JOB
Top and bottom	2	1274 × 400 × 18	the 192 frame's sides	the top matches the cabinets' tops
Ends	2	380 × 400 × 18	the 192 frame's top and bottom	carry the box; bolt to the cabinets
Face	1	1306 × 376 × 12	BESTÅ top panel	holds the fire; level with the doors
Spacers	4	15 × 8	ply, MDF or hardboard	bring the face forward to the doors
Rests	2	60 × 120 × 10.5	ply or hardwood	carry the fire at its ends
Wall battens	2	1270 × 44 × 22	planed timber	hold the box to the wall

Why the rests. The fire weighs 20–30 kg and sits right at the front of the box. Spread along the bottom, that weight would bow it over its 1274 span and pull the face out of line. On two rests beside the ends, the weight goes straight into the ends, which are bolted to the cabinets. The fire's steel body is stiff enough to bridge between them.


Sections

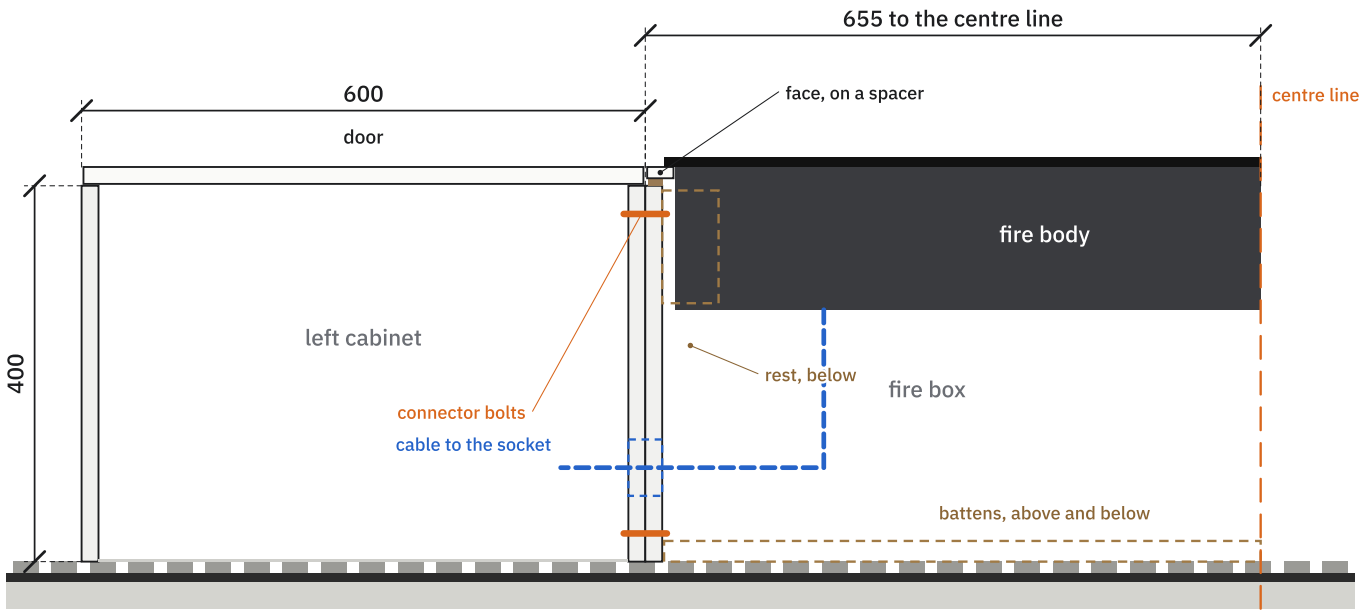

Plan, cut through the fire's middle and looking down: the left half (the right is its mirror image). Dashed: the battens, a rest and the cable hole, above or below the cut.

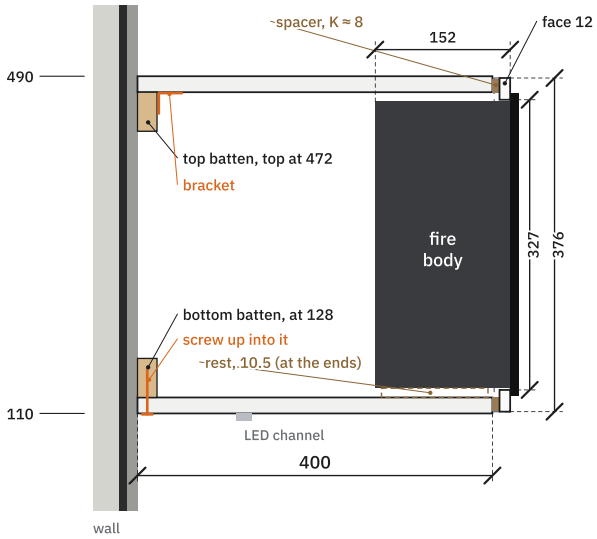

Section through the centre line, looking from the patio end. The rests sit at the fire's ends, so they're beyond this cut (dashed).

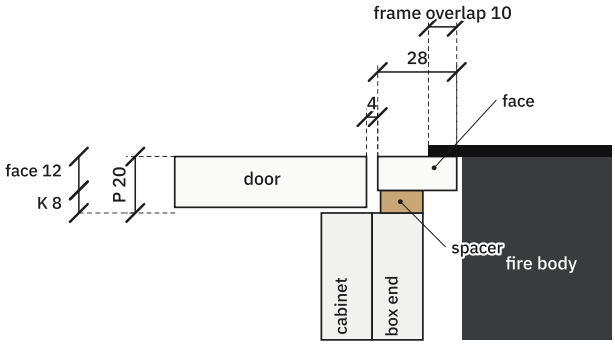


The front corner, close up. A door stands **P** in front of its frame; the face is 12 thick, so its spacers are **K = P − 12** thick (8 if P is 20). The box itself sits flush with the cabinets.

Clearances round the fire's body inside the box: 14 each side, 10.5 below (the rests), 10.5 above (to the top batten's line) and about 246 behind (to the battens). The back is open to the wall.

Before you cut

Do these checks first. Each one changes a number in this guide if yours differs.

- [ ] **The fire.** Measure its body, the part that goes into the box. This guide uses the listing: **1246 × 323**, **152** deep, with a **1270 × 341** front frame. The hole is the body plus 2 all round; the frame must overlap the hole by at least 5 all round (here 10 at the sides and 7 top and bottom). If the body differs, change the hole to match and keep it centred.
- [ ] **The fire's manual.** Read its recessed-fitting section before you build. Check it's happy with the clearances in the Sections page and an open back, and note how it fixes in a recess. Most front-vented electric fires need nothing more, but some ask for a gap round the body or a vent.
- [ ] **The BESTÅ boards.** Measure a frame panel's thickness (this guide uses 18). Then cut a little off an offcut corner and look at the edge: you'll see two thin skins over a paper honeycomb. Measure the gap between the skins; your fill strips are that thick (usually about 12).
- [ ] **The doors.** On the floor, fit a door to one cabinet frame with its hinges. Measure **P**, from the frame's front edge to the door's front (this guide uses 20), and the door's **height** (this guide uses 376). The face is cut to the door's height, and the spacers are K = P − 12 thick.
- [ ] **The 192 frame's sides.** One face of each side has rows of shelf-pin holes. That's the inside face: it stays inside the box, so the top and bottom show their plain faces.
- [ ] **Power.** The fire plugs into the double socket behind the left cabinet (main guide, step 3). If it isn't there yet, book a registered electrician before the cabinets go up.

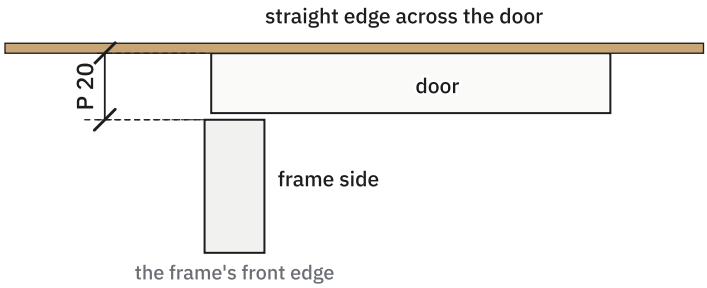

Measuring P: lay a straight edge across the door and measure back to the frame's front edge.

What you need

From your shopping list

- INMOZATA electric fire 127 cm (50")
- BESTÅ frame, white, 60×40×192 (cut down for the fire box body)
- BESTÅ top panel, high-gloss white, 180×42 (fire box face; it is 12 mm particleboard)
- Fire box fixings: 12 mm MDF for the cut edges, 4×50 screws, 8 connector bolts, 22×44 batten, concrete screws, small brackets, hybrid adhesive, white edging tape

The fixings, in detail, and extras

- A small sheet of 12 mm MDF (about 600 × 600), for the edge fills
- Wood glue (PVA) and one cartridge of hybrid adhesive
- 16 countersunk wood screws, 4 × 50
- 8 connector bolts (sex bolts) for joining two 18 mm panels
- One 2.4 m length of planed 22 × 44 batten
- 10 concrete screws, 7.5 × 100
- 3 small angle brackets (about 25 mm) and 3.5 × 16 screws
- Ply or hardwood for the two rests, 10.5 thick (or thinner with packers)
- About 3.5 m of strip for the spacers, 15 wide and 8 thick: ply, MDF, or layers of the 192 frame's spare back panel
- White iron-on edging tape, 5 m
- Two 60 mm cable grommets
- Low-tack masking tape

Tools

- Track saw, or a circular saw with a guide rail, and a fine (48 tooth or more) blade
- Jigsaw with a fine down-cut blade, for the hole in the face
- Oscillating multi-tool, to cut the face's bridges on the wall
- Drill-driver, 3 mm pilot bit, countersink, a 60 mm hole saw, and the drill size your connector bolts ask for
- SDS or hammer drill and masonry bits for the concrete screws
- Four F-clamps, 300 or longer
- Combination square, a 1.5 m straight edge, tape, pencil
- Laser level and a 600 spirit level
- A narrow chisel or old screwdriver, to scrape out the honeycomb
- An old clothes iron, an edge trimmer or sharp block plane, sanding block
- Caulking gun

> **Safety.** Wear a dust mask and eye protection when cutting board. Clamp work down, never hold it. The fire is a two-person lift.

1 Cut the parts




Where each piece comes from. Blue: the box's parts. Peach: the face.

PIECE	QTY	SIZE	CUT FROM	NOTES
Top and bottom	2	1274 × 400	the 192 frame's sides (1920 long)	Trim 20 off the factory end, then cut to length, so both ends are fresh and square
Ends	2	380 × 400	the 192 frame's top and bottom (564 long)	Take 92 off each end, so the factory fittings go
Face	1	1306 × 376	the BESTÅ top panel (1800 × 420)	Keep the factory long edge as its top and a factory end; the hole comes later

1. Mark every cut with masking tape on both faces, and score the line with a knife. It stops the foil chipping.
2. Cut with the guide rail, the **good face down** if your saw cuts upwards (most circular saws), or up with a track saw's splinter guard. Cut slowly.
3. Check each piece's length at both edges and its corners with the square. The top and bottom must be exactly the same length, or the box won't be square.
4. Number the parts in pencil on their inside faces: L and R on the ends, T and B on the top and bottom, and an arrow to the front on each.

2 Fill the cut edges

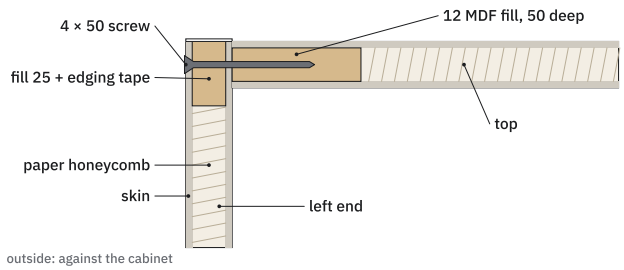

The top's end meeting the left end, cut through. The screw goes through the end's own fill and into the top's.


A cut BESTÅ frame edge is hollow: two thin skins over paper honeycomb. Every cut edge gets a glued-in strip of MDF so it can take screws and edging tape.

EDGE	FILL DEPTH	THEN
Both ends of the top and bottom	50	the screws go in here
Top and bottom edges of each end	25	edging tape: you see these

1. Rip the 12 mm MDF into strips 50 and 25 wide and cut them 398 long, 2 short of the board's depth.
2. Scrape the honeycomb out of each cut edge to the strip's width plus 2, with a narrow chisel or an old screwdriver. Don't press on the skins.
3. Try the strip: it should slide in snugly. If it's loose, glue a layer of card on it; if it's tight, sand it.
4. Spread glue on both faces of the strip and the inside of both skins, push it in flush with the edge, and clamp the skins gently onto it between two offcuts. Leave it overnight.
5. Sand the edge flat. On the ends' top and bottom edges only, iron on the white edging tape and trim it flush.

> **Factory edges.** The long edges (front and back) of every frame board are factory edges with solid strips inside: the bolts and the brackets go there, within about 30 of the edge.


3 Drill the ends

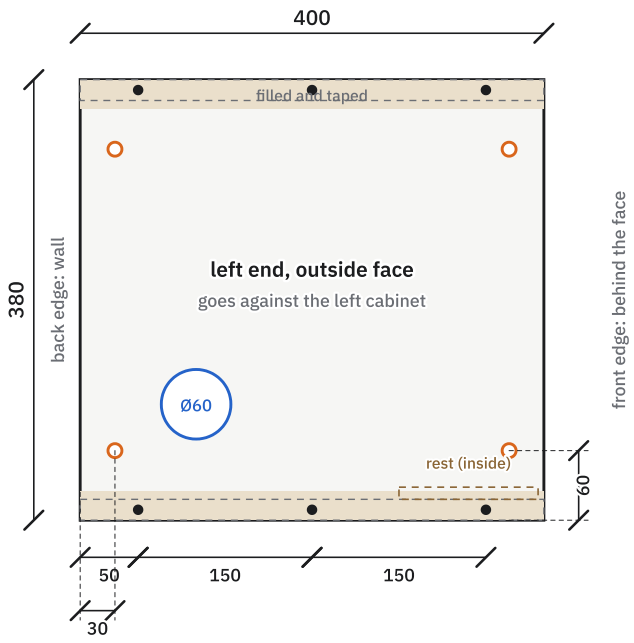

The left end, from outside (the face that goes against the left cabinet). The right end is its mirror image, without the cable hole.


HOLES IN EACH END	WHERE (FROM THE BACK EDGE; UP FROM THE BOTTOM)
6 screw holes, 4 mm, countersunk on the outside	50, 200, 350 from the back; 9 from the top and bottom edges (the middle of the top and bottom's thickness)
4 connector bolt holes	30 from the front and back edges; 60 from the top and bottom. Drill these on the wall, through the end and the cabinet together.
Ø60 cable hole (left end only)	centre 100 from the back, 100 up. Also drilled on the wall, through both.

Drill only the screw holes now. Use the square to mark them, drill straight through, and countersink on the outside so the heads sit just below the surface: the end has to lie flat against the cabinet.

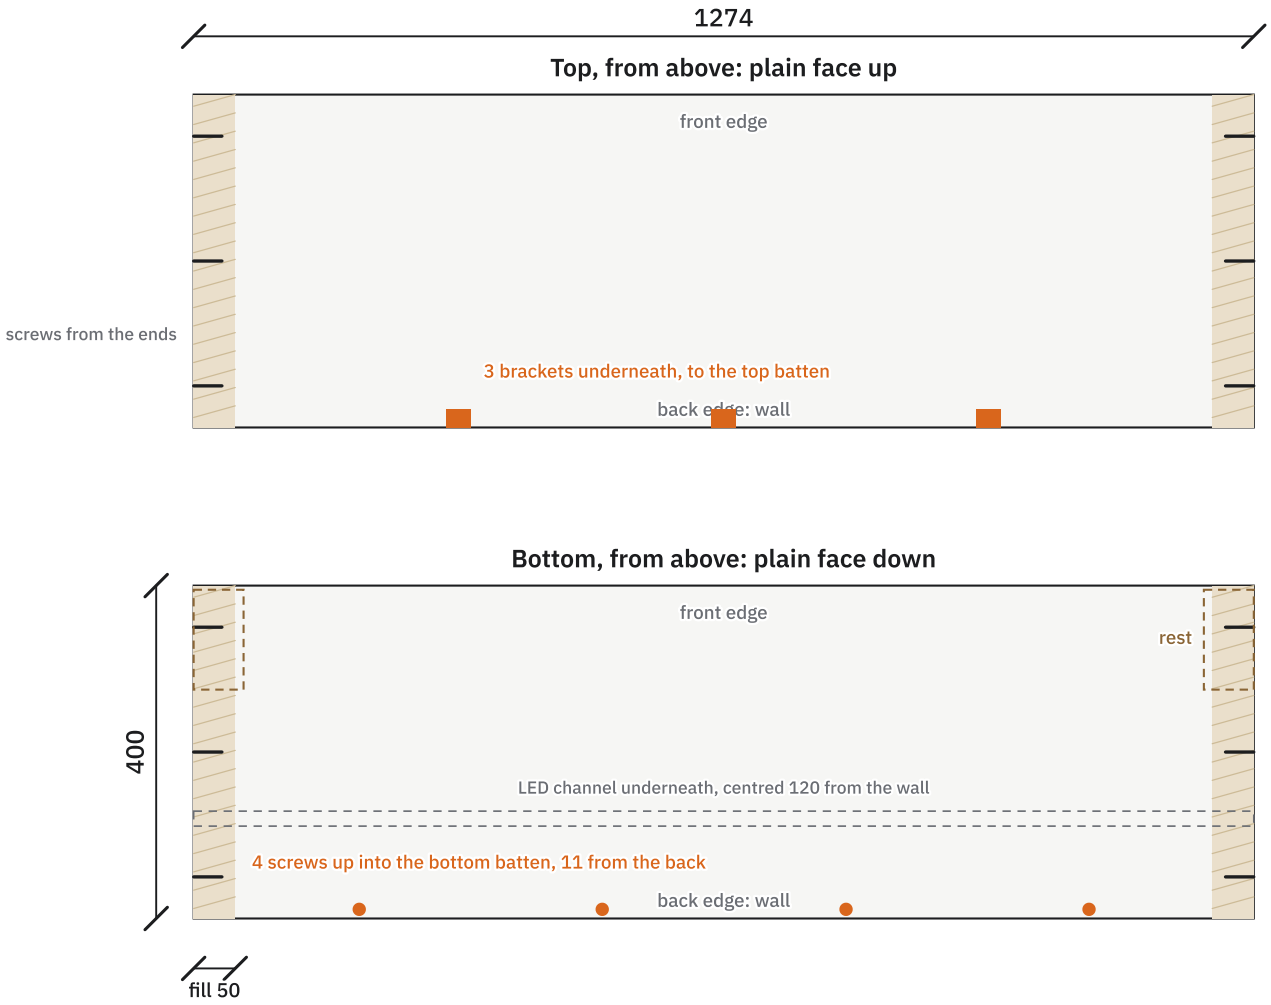


The top and bottom from above, wall side at the bottom. Hatched: the 50 fills. Orange: brackets to the top batten, and screws up into the bottom batten. Dashed: the rests, and the LED channel under the bottom.

4 Assemble the box

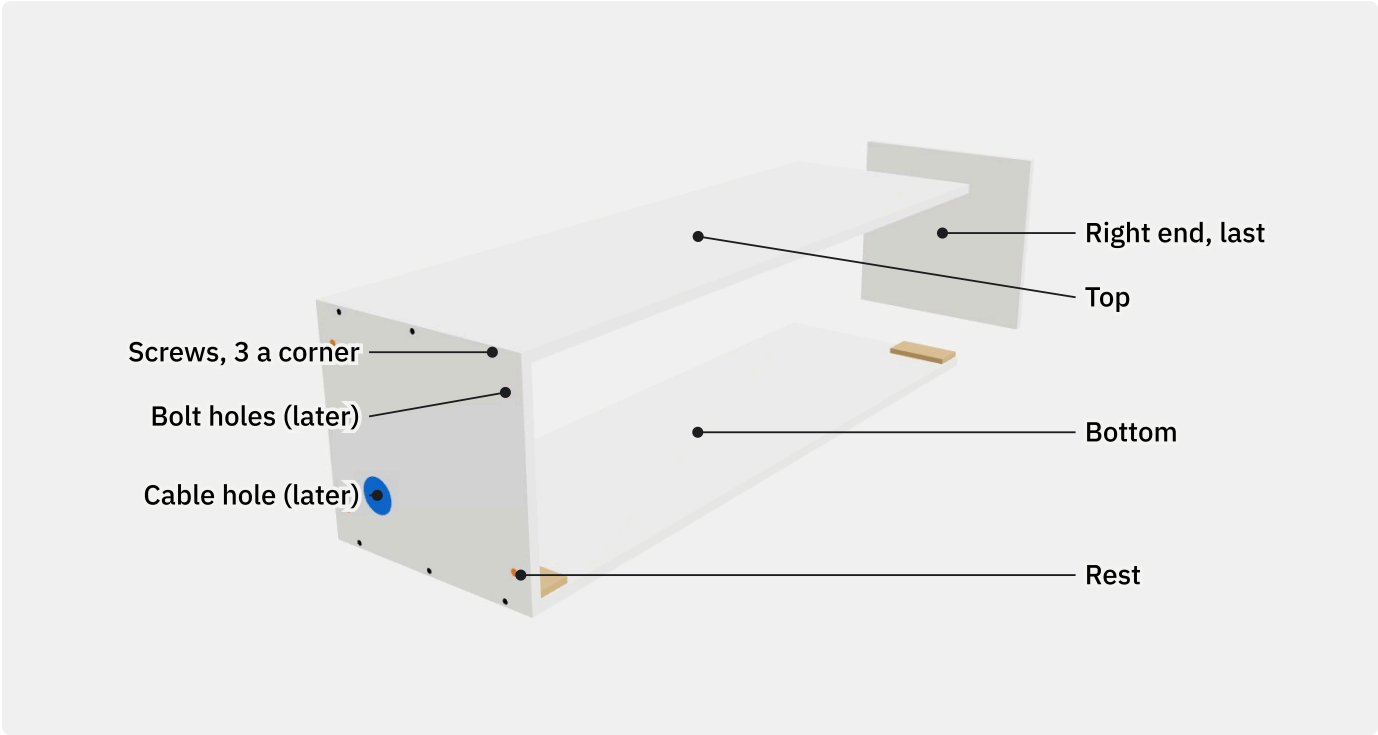


The left end screwed to the top and bottom; the right end goes on the same way.

1. Stand the bottom on a flat floor on its front edge, inside face towards you. Glue its left end's fill, hold the left end against it with the outside face out and the front edges flush, and drive three 4 × 50 screws through the end into the fill (3 mm pilot holes first). Do the top the same way.
2. Put the right end on the same way. Before the glue sets, measure both diagonals across the front: they must match within 1. If not, push the long corner in and measure again.
3. Lay the box on its back on the floor and check the front is flat with the straight edge. Leave it overnight.
4. Glue a **rest** (60 × 120, **10.5** thick) on the bottom against each end, 5 back from the front edge. That height puts the fire's body 2 above the hole's bottom edge, centred in the hole.

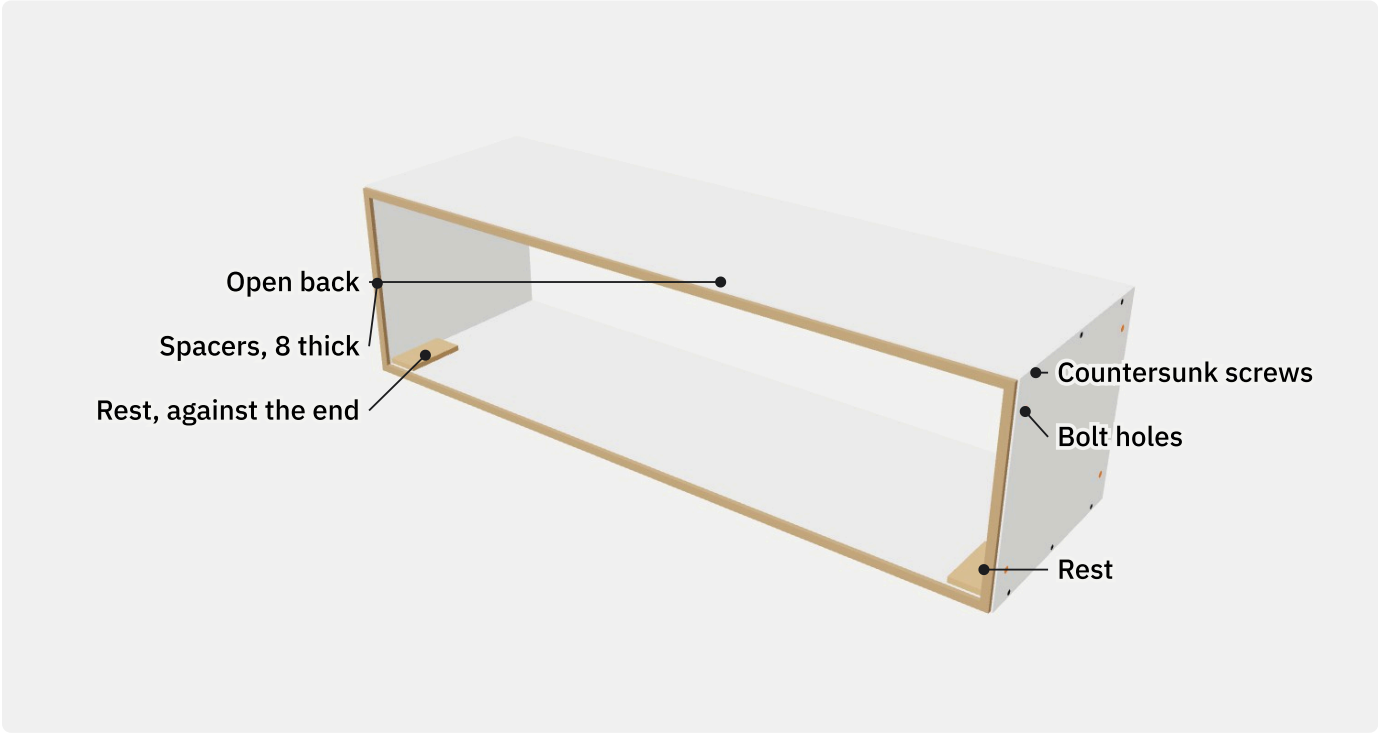

The finished box with its rests and spacers (the spacers go on later, once you know K).

5 Make the face

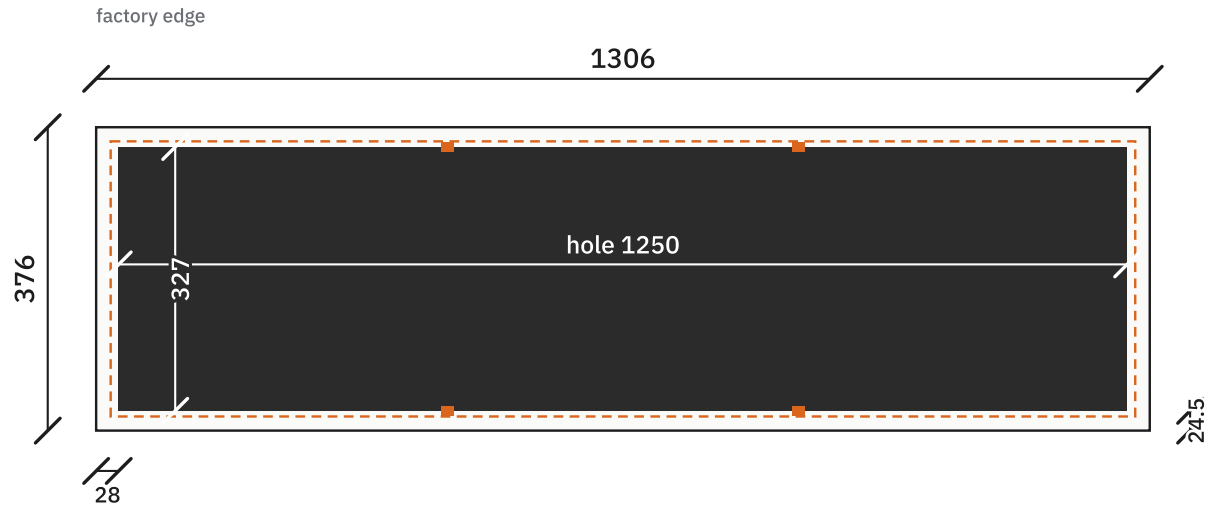


dashed: the fire's 1270 × 341 front frame; orange: bridges, cut last

The face, 1306 × 376 and 12 thick, from the front. The hole is centred.


1. Check your fire's body once more and mark the hole on the face's **back**: **28** in from each end and **24.5** from the top and bottom, for a **1250 × 327** hole.
2. Lay the face, back up, on a flat sheet with a strip of scrap under each line, and clamp it down. Drill a 10 hole inside each corner.
3. Cut along the lines with the jigsaw, but stop to leave **four bridges** about 15 long (orange): two on the top line and two on the bottom. They keep the face rigid until it's glued on; you cut them on the wall.
4. The fire's frame covers the hole's edges by 10, so they don't need to be perfect, just straight.
5. Iron white edging tape onto the face's two cut edges (the bottom and one end) and trim it flush. Keep the factory edge at the top.

> **Handle it flat.** Even with its bridges in, the face is a 12 board with 24.5 strips. Carry it flat between two people, or on a sheet.


6 Fit the box to the wall

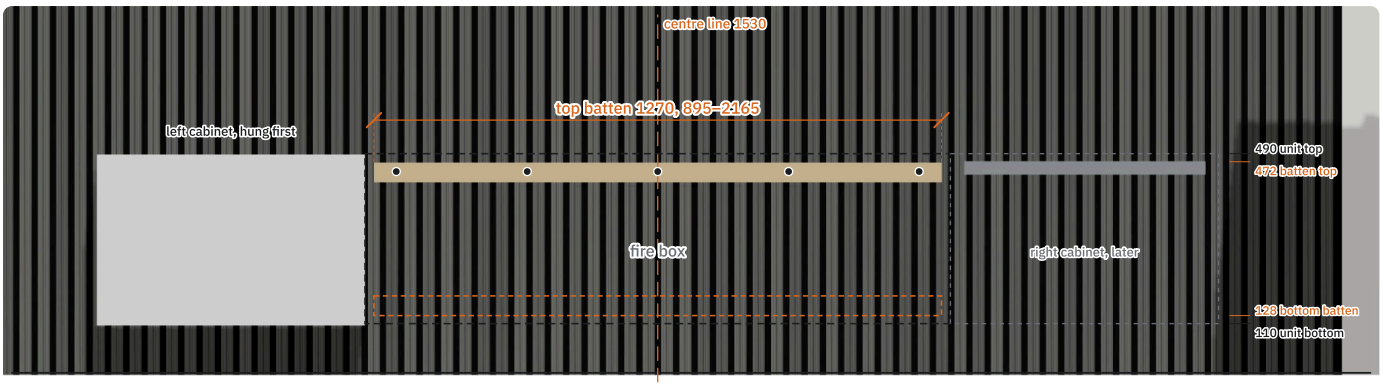

Top batten and its screws. Dashed: where the box goes, and the bottom batten, which goes in later.

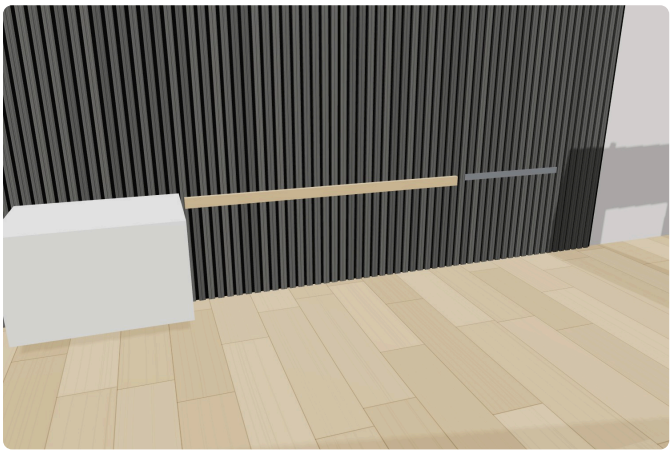

The left cabinet hung, and the top batten up.

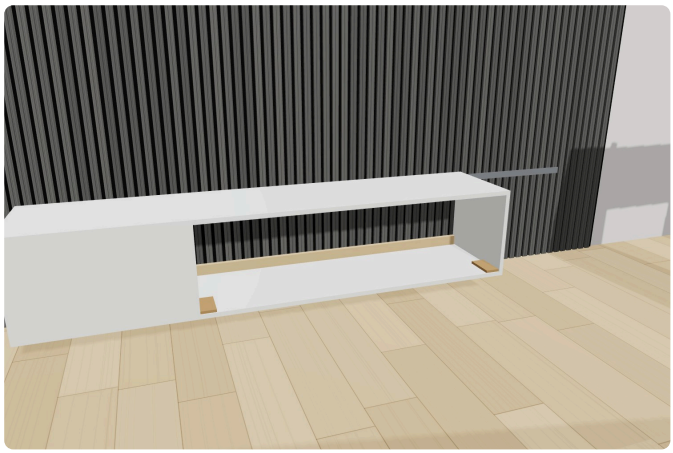


The box on the batten, bolted to the left cabinet, the bottom batten in.


1. Hang the **left** cabinet first (main guide, step 4): **275–875** along the wall, its bottom at **110**.
2. Fix the **top batten** (1270 long) from **895** to **2165**, its top edge at **472**, level on the laser. Use five 7.5 × 100 concrete screws at about 945, 1238, 1530, 1823, 2115, moving each onto the nearest solid slat. Snug, not tight, so the felt isn't crushed.
3. With two people, hold the box level, push it back over the batten so the batten goes in through the open back, and lower its top onto it. Slide it left against the cabinet. Its back should touch the slats.

6 Fit the box to the wall (continued)

4. Check the box is at **875–2185**, flush with the cabinet at the top, bottom and front. Clamp its left end to the cabinet's side at the front and back.
5. From inside the cabinet, drill the **four bolt holes** through both boards, 30 in from the front and back edges and 60 from the top and bottom, and fit the connector bolts. Then drill the **60 cable hole** through both, centred 100 from the back and 100 up.
6. Tie the top to the batten with **three small brackets** inside, at about the quarter points, screwed to the batten's front and into the top's underside within 20 of its back edge.
7. Sit the **bottom batten** on the box's bottom, against the slats, from 895 to 2165 (its bottom edge is then at 128). Reach in from the front and fix it with five concrete screws, like the top one.
8. From underneath, drill up through the bottom 11 from its back edge and drive four 4 × 50 screws into the batten, at about 1092, 1384, 1677, 1969.
9. Hang the **right** cabinet on its rail and slide it left until it closes tight against the box. Check it's flush, clamp, and bolt it the same way (no cable hole on this side).
10. Hang both **doors**, the left one hinged on its left side and the right one on its right, so they open away from the fire. Set their gaps.

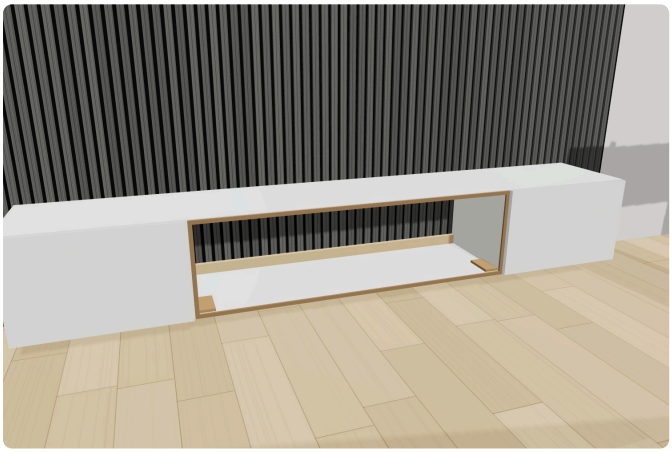


Right cabinet and doors on, and the spacers on the box.

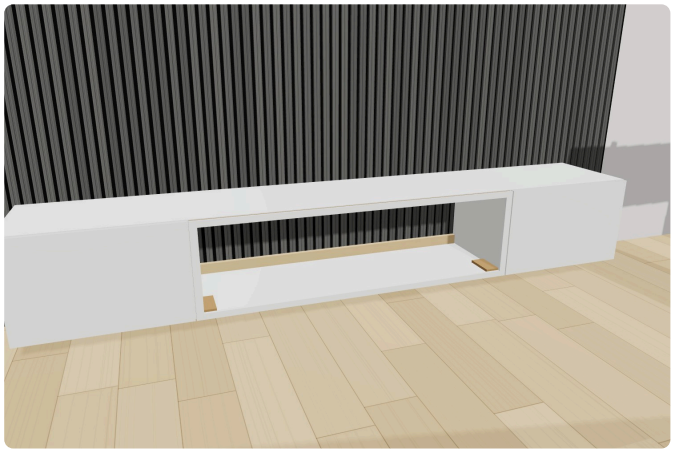

The face on, ready for the fire.


7 Put the face on

1. Lay the straight edge across the left door's front so it reaches over the box, and measure back to the box's front edge. Take off 12: that's **K**, the spacers' thickness (about 8). Check the right door too; if they differ by more than 1, adjust the hinges first.
2. Make up the **spacers**: strips 15 wide and K thick, from ply, MDF or layers of the 192 frame's spare back panel. Glue them onto the box's front edges, 3 back from the outside so they don't show: one along the top, one along the bottom, and one up each end between them.
3. Run a bead of hybrid adhesive along the middle of each spacer. Offer up the face with its bridges still in: 4 card packers in each gap to the doors, its top and bottom lined up with the doors' top and bottom edges.
4. Press it on and check it's level with the doors with the straight edge. Hold it with strips of masking tape over the top onto the box, and leave it a day.
5. Cut the four bridges with the multi-tool, holding the middle so it doesn't drop, and lift it out. Clean the hole's edges with a sanding block.

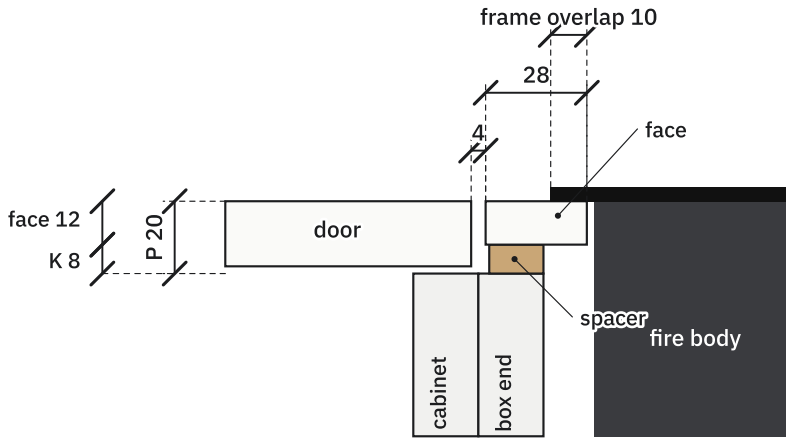

The front corner again: spacer K, face 12, and the 4 gap to the door.

8 The fire

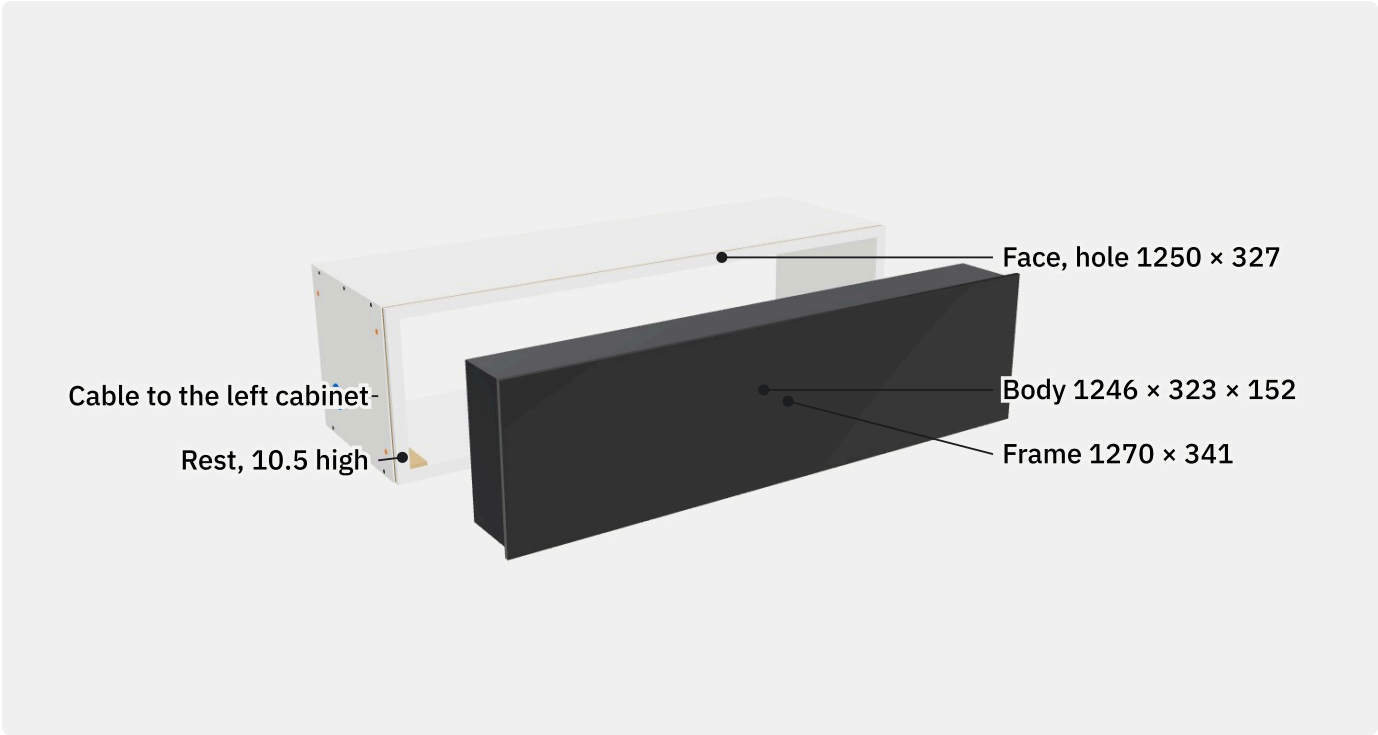

The fire slides in through the face and sits on the two rests.

1. Check the rests: lay the straight edge across them, from front to back. It should be 2 above the hole's bottom edge. Pack them up or sand them down to suit.
2. Feed the fire's plug, edge first, from the box through the two 60 holes into the left cabinet. Fit a grommet in each hole.
3. With two people, slide the body in through the hole onto the rests, until its frame sits against the face. Centre it: the face should show 18 round the frame's sides.
4. Look under the body with a torch: its middle must not touch the bottom. Then fix it as the manual's recessed fitting says. The rests carry its weight; its fixings only stop it moving.
5. Plug it straight into the wall socket, never an extension. The socket's switch, inside the left cabinet, is the fire's off switch.
6. Run it on full heat for an hour. The face, the unit's top and the panel above should only get warm, and nothing should be in the way of the heater's outlet.

Quick reference

Take this page to the bench and the wall.

Sizes to cut

Top and bottom	2 × 1274 × 400	Face (12 thick)	1306 × 376
Ends	2 × 380 × 400	Hole in the face	1250 × 327
Wall battens	2 × 1270	Hole from the face's ends / top and bottom	28 / 24.5
Rests	2 × 60 × 120 × 10.5	Spacers, 15 wide	K ≈ 8 thick
Edge fills (12 MDF)	4 × 50, 4 × 25	Fill length	398

ALONG THE WALL, FROM THE PATIO CORNER	MM
Left cabinet	275–875
Fire box	**875–2185**
Right cabinet	2185–2785
Battens	895–2165
Batten screws	945, 1238, 1530, 1823, 2115
Bottom screws	1092, 1384, 1677, 1969
Face	877–2183
Centre line	1530

HEIGHTS, FROM THE FLOOR	MM
Unit and box	110–490
Top batten, top edge	472
Bottom batten, bottom edge	128
Face	112–488
Hole	136.5–463.5
Fire centre	300
Cable hole centre	210

ON EACH END (FROM ITS BACK EDGE; UP FROM ITS BOTTOM)	MM
Screws, 4 × 50, countersunk outside	50, 200, 350 from the back; 9 from the top and bottom
Connector bolts	30 from the front and back; 60 from the top and bottom
Cable hole, Ø60, left end only	100 from the back; 100 up
Rests, on the bottom against each end	front edge 5 behind the box's front edge