Media wall build guide

The centre section: two wall-hung BESTÅ cabinets with a made-to-measure fire box between them, the 127 cm electric fire, and the floating Egger Crystal Marble MFC panel with the 55" TV through it.



The finished wall, rendered from the 3D planner (evening light, LEDs on).

2510 × 380 unit, 110–490 off the floor	**1800 × 1100** panel, 720–1820 off the floor	**1270** TV centre height	**1530** centre line, from the patio corner

How to read this guide

- All measurements are in **millimetres**. Positions **along the wall** are from the **patio corner** (the left-hand end as you face the wall). **Heights** are from the floor. **Depths** are out from the wall.
- Everything is symmetrical about the **centre line, 1530** from the patio corner, the middle of the 3060 slat wall.
- The numbers come from your design as saved on 29 October 2026. Where a number depends on a product you haven't measured yet, the guide says so and tells you what to check: do those checks before you cut anything.

Made from the Ground floor 3D planner on 1 November 2026.

What you're building

The whole wall from the front, to scale. The dimension chains along the bottom and top add up to the wall's 3060; the heights on the left add up to 2350.



Front elevation. The bookcases (70–370 and 2690–2990 along the wall, 620–1954 high) go up last and are only shown for position.


The unit

Left BESTÅ cabinet	275–875
Fire box	875–2185
Right BESTÅ cabinet	2185–2785
Height off the floor	110–490
Depth (frame + doors)	400 + 20
Gap to each end of the slat wall	275

Panel and TV

Floating panel	630–2430
Panel height off the floor	720–1820
Gap, unit top to panel	230
TV (55", 1230 × 710)	915–2145
TV height off the floor	915–1625
Panel border round the TV	285 sides, 195 top and bottom

Before you start

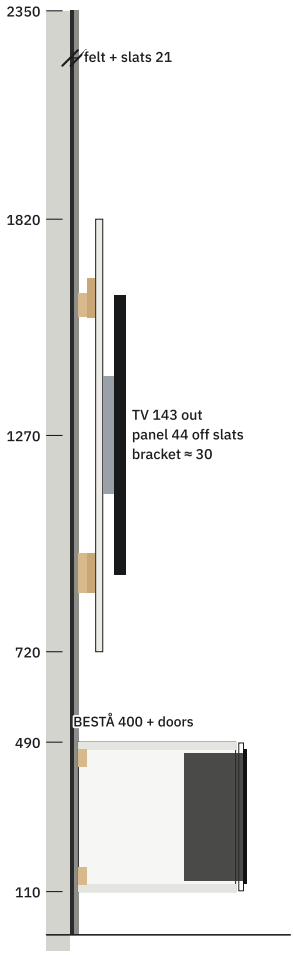

Section through the centre line, looking from the patio. Depths out from the wall.

Check these first

- [ ] **The wall.** It should be solid masonry (brick or block): every fixing here is a concrete screw into it. Scan the whole area with a detector for cables and pipes, and never drill straight above or below a socket or switch.
- [ ] **Its size.** The slats run 3060 from the patio corner, and the ceiling is 2350 (measured), so every 2400 slat panel is trimmed to length. Check the height at both ends of the wall, and keep every height in this guide measured from the floor.
- [ ] **A level line.** Floors are rarely level over 3 m. Shoot a laser line at 1000 across the wall and take every height from it (a height of 110 is 890 below the line), not from the floor at each spot.
- [ ] **The fire.** Measure the body that goes into the wall. This guide uses the listing: 1246 × 323, 152 deep, with a 1270 × 341 front frame. The hole in the face is the body plus 2 all round. The frame must overlap it by at least 5 all round, so check that too.
- [ ] **BESTÅ board thickness.** Measure a frame panel. The cut sizes assume 18; if yours differs, the fire box's top and bottom are 1310 minus twice the thickness.
- [ ] **Your TV and bracket.** Buy a fixed, low-profile bracket (about 30 deep) now: the blocks behind the panel go where its holes are, before the panel goes up.
- [ ] **Power.** You need a double socket behind the left cabinet (step 3). If there isn't one, book a registered electrician before the slats go up.

> **Safety.** Two people for the panel (about 23 kg) and the fire. Wear a dust mask when cutting board. Turn the power off at the consumer unit before working round a socket. The fire plugs straight into the wall socket: never an extension lead.

Tools and materials

Tools

- Cross-line laser level and a 1 m spirit level
- Tape, pencil, masking tape (to mark on the slats)
- Cable and pipe detector
- SDS or hammer drill with masonry bits for the concrete screws (the screw box gives the bit size)
- Drill-driver, countersink, a 60 mm hole saw
- Track saw or circular saw with a guide rail and a fine blade, for clean cuts in the BESTÅ boards
- Jigsaw with a fine down-cut blade, for the hole in the face
- A table saw to rip the cleat at 45°, or ask the timber merchant to do it
- Clamps, a sharp chisel, an old clothes iron for the edging tape

Also needed (not on the shopping list)


- A fixed TV bracket for your TV's VESA pattern, rated for its weight, about 30 deep
- Four 7.5 × 150 concrete screws for the TV bracket (it goes through the panel and blocks, about 85 before the masonry)
- 7.5 × 100 concrete screws (about 25) for the battens and the wall cleat; 6.3 × 75 for the BESTÅ rails
- 8 connector bolts (sex bolts) for joining two 18 mm panels, to join the fire box to the cabinets
- A small sheet of 12 mm MDF, ripped into strips to fill the cut edges of the BESTÅ boards; 4 × 50 screws; wood glue; hybrid adhesive
- Offcuts of ply or hardwood for the fire's two rests and the face's spacers
- Plastic packers, 1–10 mm
- An aluminium LED channel with diffuser, 2500 long, for under the unit
- A 2 m black HDMI cable, cable clips, three 60 mm grommets, a surge-protected extension

From your shopping list

ITEM	QTY
BESTÅ frame, white, 60×40×38	2
SELSVIKEN high-gloss white, 60×38	2
BESTÅ push-open hinges (pair)	2
BESTÅ suspension rail, 60 cm	2
INMOZATA electric fire 127 cm (50")	1
BESTÅ frame, white, 60×40×192 (cut down for the fire box body) Body, from the BESTÅ frame: top and bottom 2× 1274×400 from its long sides, ends 2× 380×400 from its top and bottom. Face: 1306×376 (the doors' size) with a 1250×327 hole for the back of the fire (measure the fire first); the fire's frame covers the hole's edges. The box sits flush with the cabinets and the face goes on spacers about 8 mm thick, so it is level with the doors. The fire box build guide has every cut	1
BESTÅ top panel, high-gloss white, 180×42 (fire box face; it is 12 mm particleboard)	1
Fire box fixings: 12 mm MDF for the cut edges, 4×50 screws, 8 connector bolts, 22×44 batten, concrete screws, small brackets, hybrid adhesive, white edging tape	1
Floating panel: Egger Crystal Marble MFC, soft veins, cut to size (Cut My) 180 × 110 cm, 18 mm, cut to size with matching edging all round	1
Floating panel fixings: 2× planed timber 22×100 mm, 2.4 m (French cleat, spacers, TV blocks), concrete screws, hybrid adhesive, wood screws Rip one length at 45° for the cleat. Everything sits 15 cm in from the panel’s edges, and the two 22 mm cleats hold it 4.4 cm off the slats	1
COB LED strip, 24 V, with driver (warm white, 2700–3000 k) About 8 m: 5.6 m round the back of the panel and 2.4 m under the unit, so two 5 m reels and a 100 W driver	1

1 Mark out the wall

Mark everything before you fix anything. On the slats, mark on masking tape so the pencil comes off.

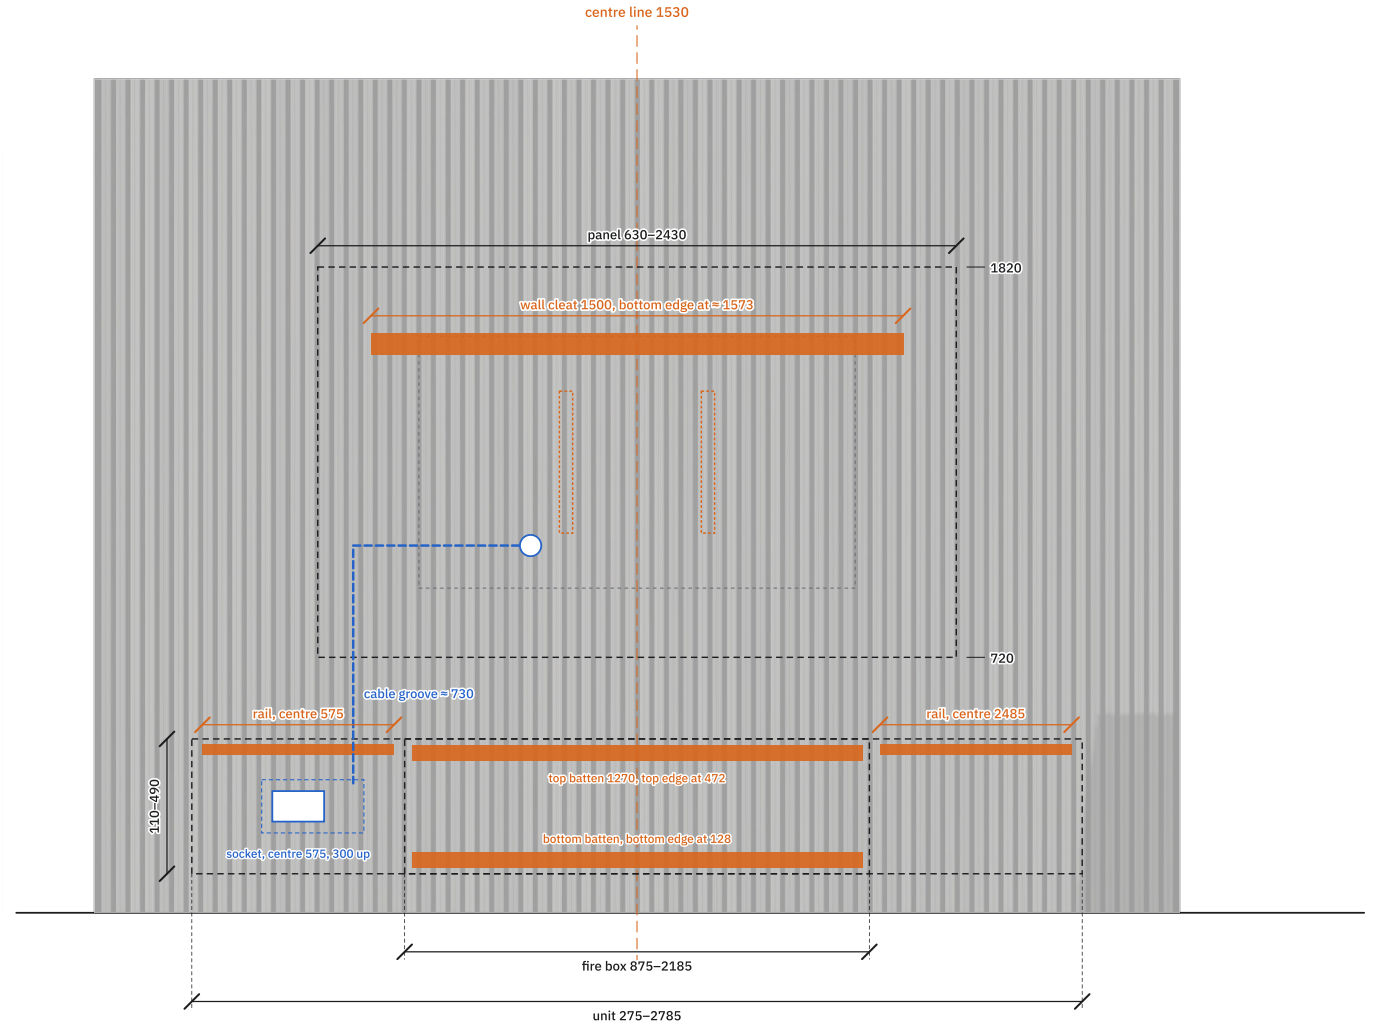


Fixings: BESTÅ rails, fire box battens, wall cleat, TV blocks (dashed). Power: socket, cabinet back opening (dashed), cable route. Dashed black: the cabinets, fire box, panel and TV.

1. Shoot the level line (see Before you start) and the **centre line** at **1530**. Check the centre line is plumb with the laser.
2. Mark the unit: **275–2785** along the wall, **110–490** high. The fire box is the middle **1310** (875–2185).
3. Mark the panel: **630–2430**, **720–1820** high, and the TV's centre at **1270**.
4. Check the marks with the laser, not the tape: both ends of the unit and the panel must be on the same level line.

2 Slat wall

Skip this if the slats are already up. Your design uses the **full wall** pattern; this step covers a full wall of 600 wide panels.

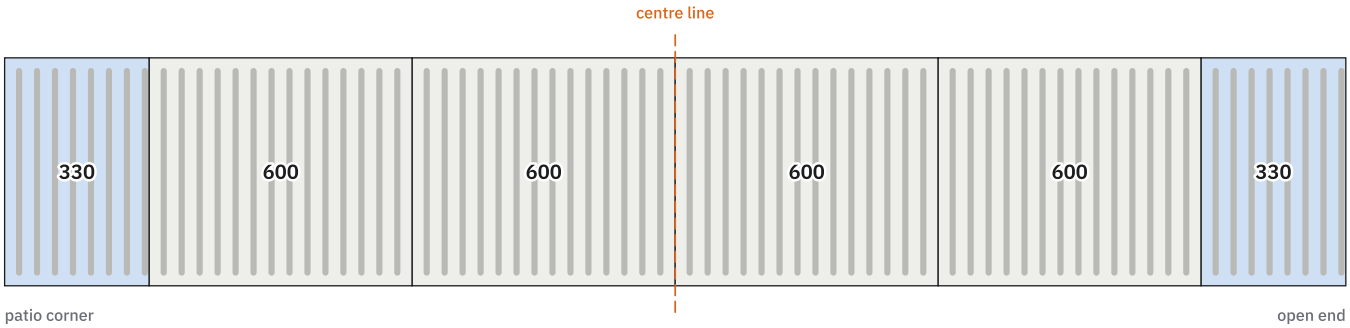

4 whole panels in the middle and a 330 piece at each end, so the joints are symmetrical about the centre line.


1. Take off the skirting along this wall so the panels sit flat on the plaster.
2. Cut the two end pieces to **330**, cutting through the felt in a gap between slats. At the patio corner the cut edge goes into the corner. At the open end (3060, where the wall carries on towards the kitchen) keep the panel's factory edge outwards.
3. Before fixing the panel behind the left cabinet, cut its opening for the socket (146 × 86, centred 575 along and 300 up).
4. Fix the panels as their maker says (screws through the felt in the gaps, into plugs), starting from the joint on the centre line and working out. Trim them to the floor-to-ceiling height less 3, so they go in without binding.
5. Choose the slat gap nearest **730** along the wall for the cables (step 7) and keep it clear of screws from 225 up to 820.

3 Power and cables

Everything is powered from the **left cabinet**: the fire plugs straight into the wall socket, and the TV, the LED driver and any boxes run from a surge-protected extension in the other half of the socket.

- **Socket:** a double socket centred **575** along the wall and **300** up, inside the left cabinet's outline. New sockets are a job for a registered electrician.
- **Cable route:** from a 60 hole in the panel behind the TV (1230 along, 1035 up), across the 44 gap behind the panel, out of its bottom edge at 730, then down the slat groove into the cabinet. In the 230 between the panel and the unit the cables sit in the groove on the black felt, where black cables disappear.
- **Into the cabinet:** an opening in the cabinet's back panel about 288 × 150, from 472 to 760 along and 225–375 high, takes the socket and the cables.

4 Hang the BESTÅ cabinets

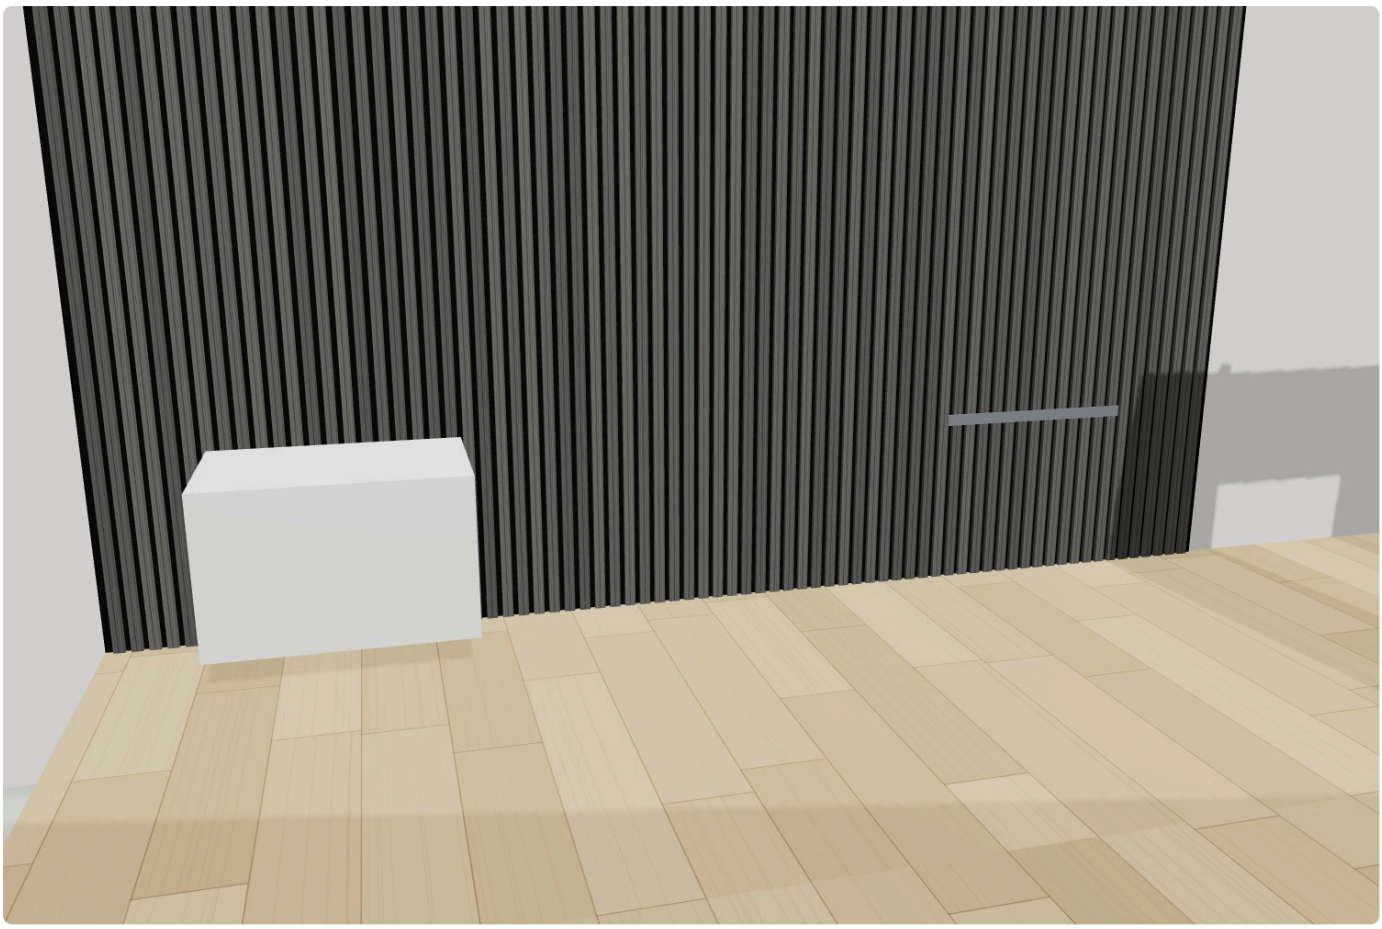

Both rails up; the left frame hung. The right frame goes up after the fire box, so it can close tight against it.


1. Build both frames as IKEA's instructions say for wall mounting. Leave the doors off. Cut the opening in the **left** frame's back panel (step 3). The hole for the fire's plug, in its right-hand side, is drilled later through the fire box too.
2. Find the rail height: hook a frame onto its rail on the floor and measure from the rail's top edge to the frame's top, **R**. Each rail's top edge goes at **490 − R**.
3. Fix the rails centred on **575** and **2485**, level with each other on the laser, with 75 mm concrete screws through the solid slats (not the gaps). Snug, not tight, so the felt isn't crushed.
4. Hang the **left** frame, slide it to **275–875**, and check the bottom is at **110** and level.

> **Load.** IKEA rates wall-hung BESTÅ only by the wall and fixings, so don't skimp: masonry, at least four screws per rail, and nothing heavy stood on the unit's top.


5 Build the fire box

The box is 1310 × 380 and 400 deep, the same depth as the cabinets, made from a BESTÅ 60×40×192 frame so it matches them. It has no back: it hangs on a batten on the wall and bolts to the cabinet each side. The fire rests on two blocks at its ends.

> **Its own guide.** The fire box has a separate, more detailed guide with every cut, hole and fixing drawn out: **fire-box-build-guide.pdf**, next to this one on the site. The steps here are the summary.

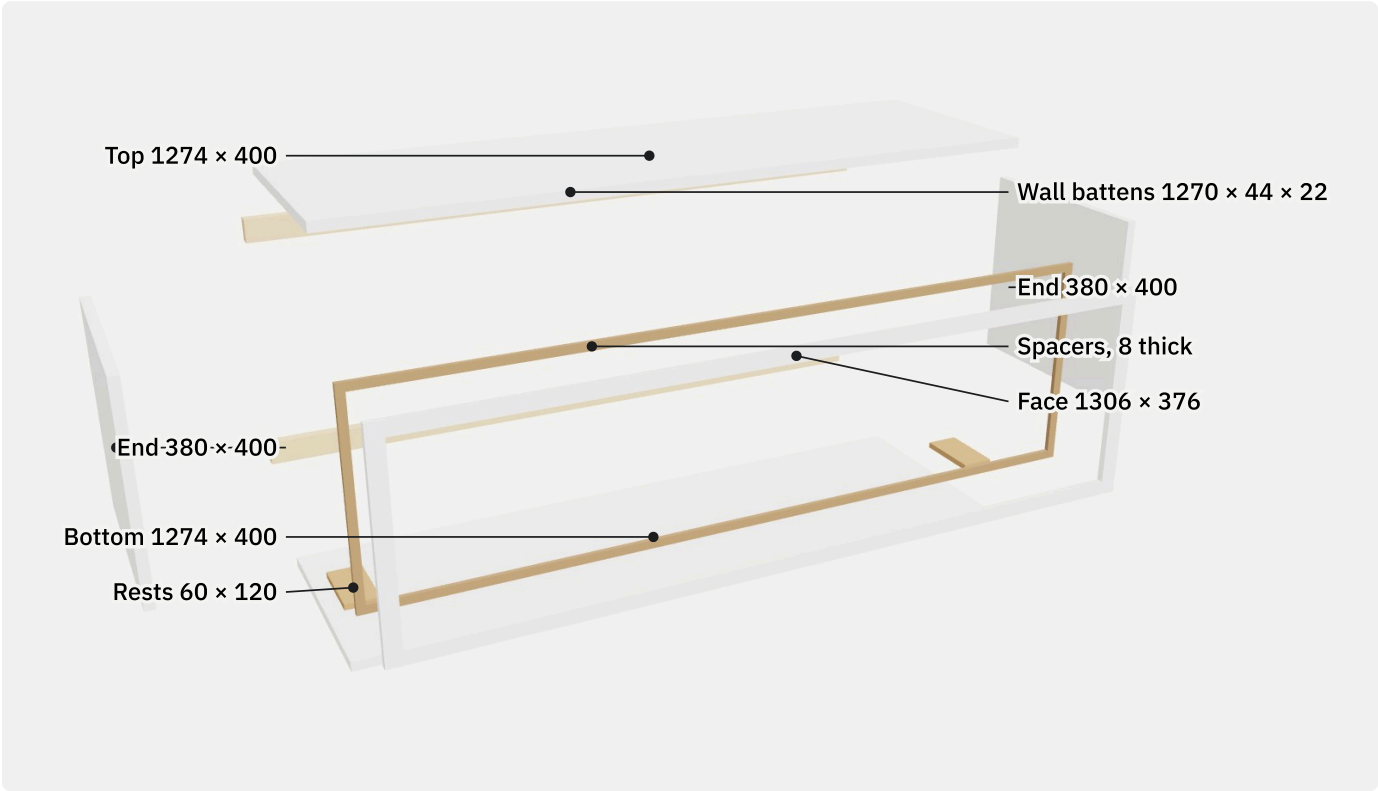

The fire box, pulled apart. The ends go outside the top and bottom; the face, with its 1250 × 327 hole for the fire, goes on spacers over the front edges.

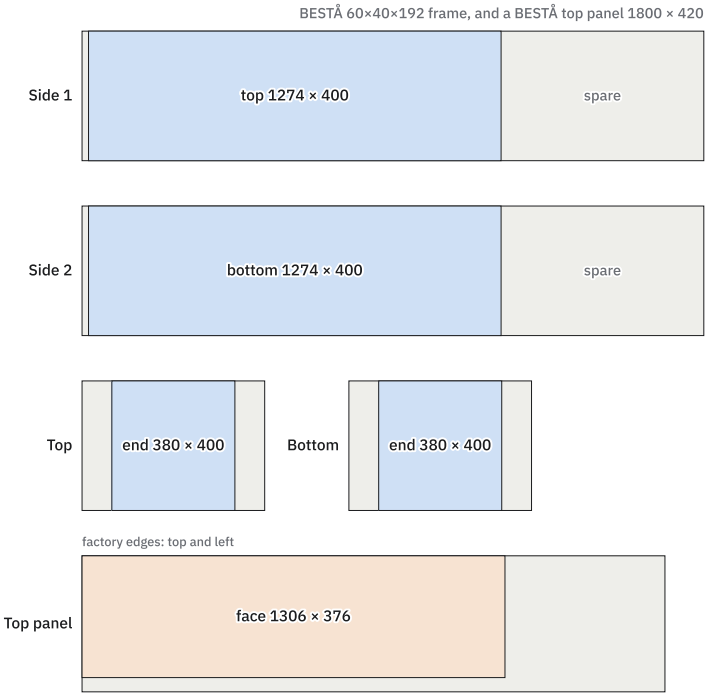

Where each piece comes from. Every edge that's cut gets filled (see over); the offcuts are spare.

5 Build the fire box (continued)


PIECE	QTY	SIZE	FROM
Top and bottom	2	1274 × 400	the 192 frame's two sides, both ends cut
Ends	2	380 × 400	the 192 frame's top and bottom, both ends cut
Face	1	1306 × 376	BESTÅ top panel, 12 thick; the doors' size
Wall battens	2	1270 × 44 × 22	timber batten
Rests for the fire	2	60 × 120 × 10.5	ply or hardwood

Honeycomb core. BESTÅ frame boards are two thin skins over a paper honeycomb, with solid strips only round their edges. A cut edge is hollow and won't hold a screw. Scrape the honeycomb out of every cut edge and glue in a strip of 12 mm MDF: 50 deep at the ends of the top and bottom, where the screws go, and 25 deep on the ends' top and bottom edges, which then get edging tape. Put bolts within 30 of a factory edge.

Cut and assemble


1. Cut the top and bottom to **1274** long from the frame's sides, keeping their full 400 depth. The sides' inside faces have rows of shelf-pin holes: keep those faces inside the box.
2. Cut the ends to **380** from the frame's top and bottom panels, taking the same off each end so the factory fittings go.
3. Fill the cut edges (callout above).
4. The ends go outside the top and bottom, flush at the front and back. Glue each joint and drive three 4 × 50 screws through the end into the filled edge, countersunk so they lie flat against the cabinet. Check the diagonals match, so it's square.
5. Glue a rest on the bottom against each end, 5 back from the front edge. The bolt holes and the fire's cable hole are drilled on the wall, through the box and the cabinet together.

The face

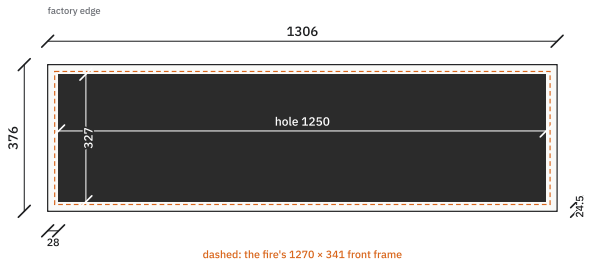


The face is the doors' size, so its edges line up with theirs. Cut the hole to the fire's body plus 2 all round, and keep the top panel's factory edge as the face's top edge, the one you see from above.

6 Fit the fire box

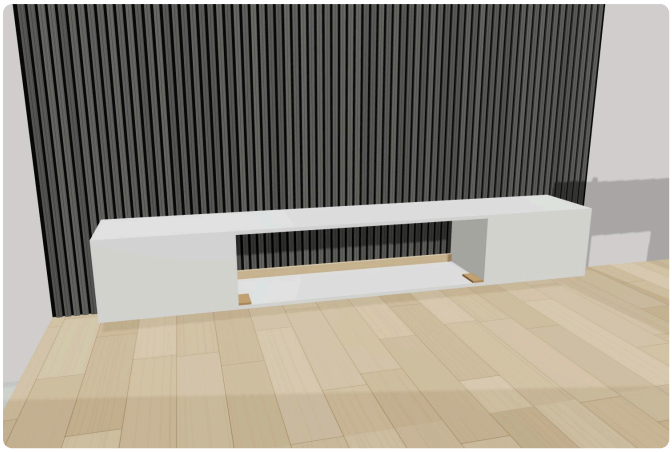

The open box between the frames, on its two battens.

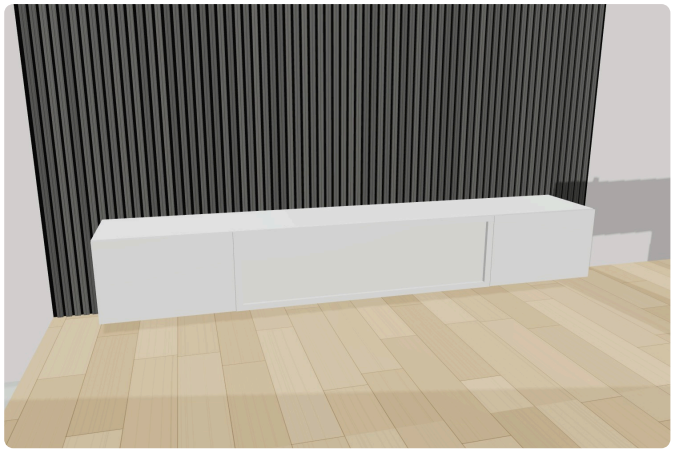


Box in, right frame closed up, face and doors on.


1. Fix the **top batten** (1270 long) with its top edge at **472**, centred on the centre line, with 100 concrete screws through the slats every 300 or so.
2. Lift the box in against the left frame, its top resting on the batten and its back against the slats, like the cabinets. Check it's at **875–2185** and 110–490 high, flush with the frame at the top, bottom and front.
3. Clamp the box's left end to the frame and join them with four connector bolts, 30 in from the front and back edges and 60 from the top and bottom. Drill the 60 cable hole through both, 100 from the back and 100 up. Tie the top to the batten with three small angle brackets inside.
4. Sit the **bottom batten** on the box's bottom against the slats (its bottom edge at **128**), fix it to the wall, then screw up through the bottom into it.
5. Hang the **right** frame and slide it along its rail until it closes tight against the box, then bolt that side the same way. Hang both doors, hinged on their outer sides.
6. Lay a straight edge across a door's front and measure back to the box's front edge: take off the face's 12 and that's **K**, the spacers' thickness (about 8). Glue K-thick spacers on the box's front edges, 3 in from the outside.
7. Fix the face to the spacers with hybrid adhesive, with a 4 gap to each door, and tape it in place while it sets. It should be level with the doors.

7 The floating panel

The 1800 × 1100 panel hangs on a French cleat and sits **44** off the slats on spacers, so the LED halo behind it has room to spread. Everything on its back sits **150** in from its edges.

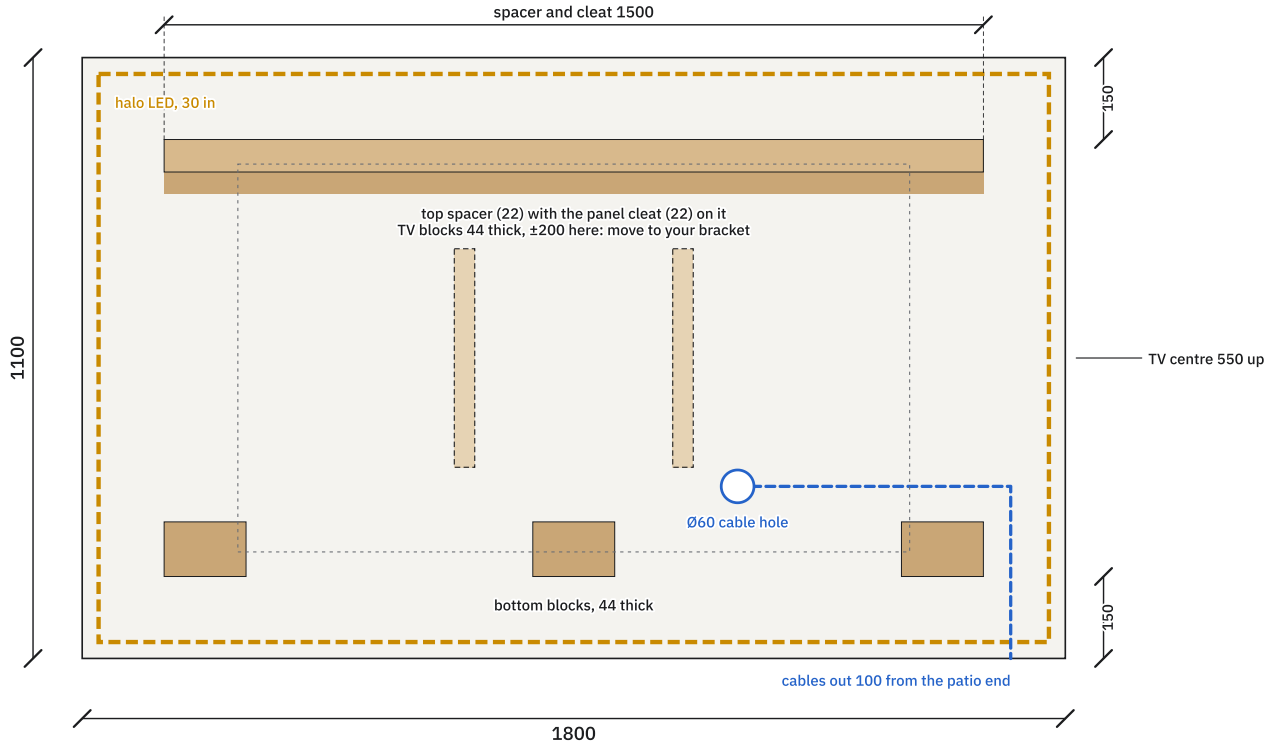

The back of the panel, as you look at it lying face down (so left and right are swapped). Dashed: the TV blocks, which go where your bracket's holes are.

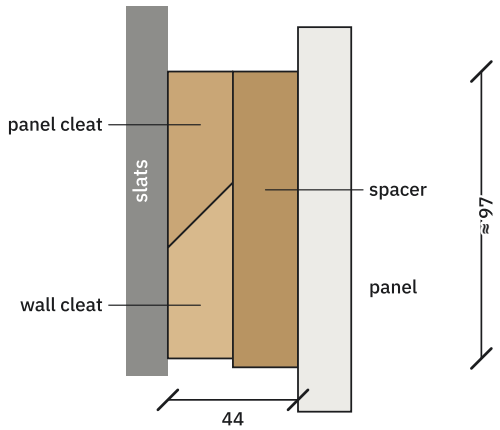


The French cleat: one 22 × 100 board ripped at 45°.

Timber (two 2.4 m lengths of 22 × 100)

Length 1, ripped at 45°	wall cleat 1500, panel cleat 1500; offcuts cut into four 400 pieces for the TV blocks
Length 2	top spacer 1500; offcut cut into six 145 pieces for the three bottom blocks (two layers each)

7 The floating panel (continued)

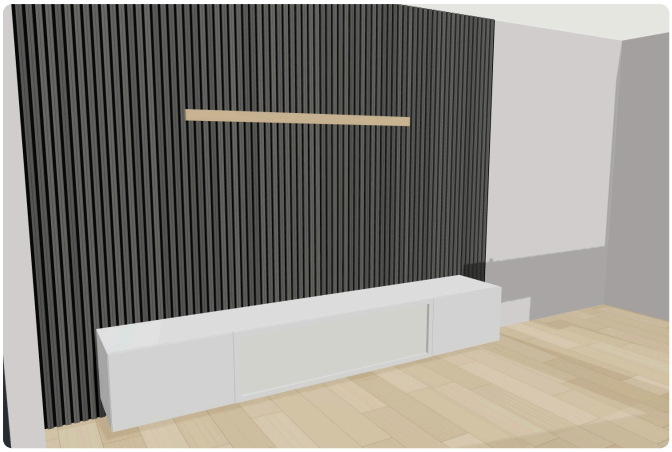

The wall cleat up, centred above the unit.



The panel hung, 44 off the slats.

Prepare the back (panel face down on a blanket)

1. Glue and screw the **top spacer** on with its top edge **150** below the panel's top edge, 150 in from each end. Use 4 × 16 screws: the panel is only 18 thick.
2. Glue and screw the **panel cleat** onto the spacer, its top edge flush with the spacer's, the bevel at the bottom sloping down towards the wall.
3. Glue on the **three bottom blocks** (two layers each, 44 thick) with their bottom edges 150 up from the panel's bottom edge.
4. Mark your bracket's holes (TV centre at **1270**, 550 above the panel's bottom edge) and glue the two **TV blocks** (44 thick) behind them.
5. Turn the panel face up, tape over each spot so the face doesn't chip, and drill the 60 **cable hole** and the bracket's holes through the panel and blocks. Turn it back over.
6. Stick the **halo LED strip** 30 in from the edges all round (5.6 m), starting and finishing where the cables leave the bottom edge, at the patio end.

Hang it

1. Hold the wall cleat against the panel cleat, bevels together, and measure from the panel's top edge to the wall cleat's bottom edge: about **247**. Fix the wall cleat with its bottom edge that far below **1820** (about **1573**), centred on the centre line and level, with 100 concrete screws every 300 through the slats.
2. With two people, lift the panel above the cleat, lower it on, and check the top is at **1820** and the ends at **630** and **2430**. Slide it sideways to centre it.
3. Drill into the wall through the bracket holes and fix the TV bracket with the 150 concrete screws. These clamp the panel too.

8 Cables and LEDs

LED STRIP	LENGTH	WHERE
Halo, behind the panel	5.6 m	On the panel's back, 30 in from the edges, lighting the slats
Under the unit	2.4 m	In the aluminium channel under the cabinets and box, 120 out from the wall, 50 in from each end
Total	**8 m**	Two 5 m reels of 24 V COB strip

- **Driver:** 24 V, at least 100 W for 8 m of strip at about 10 W/m, with 20% spare. A two-zone dimmer lets you set the halo and the under-light separately. It lives in the left cabinet.
- **Halo and TV cables** run behind the panel from the cable hole to its bottom edge at 730, clipped to the panel's back clear of the blocks, then down the slat groove and into the left cabinet through the back opening.
- **Under-unit strip:** feed it from its left end through a small hole in the left cabinet's bottom panel, near the back.
- **The fire's plug** goes through the 60 holes in the box's left end and the cabinet's side, then into the wall socket. Grommet both holes.

9 Fire, doors and TV



Finished.

1. Feed the fire's cable through, slide the body into the face onto its two rests, and fix it as its manual says. Its middle shouldn't touch the box's bottom: the rests carry it at its ends, right beside the box's ends.
2. Check the doors' gaps once more and that the push-open hinges clear the face.
3. Hang the TV on the bracket: its bottom edge should be at **915** and its centre at **1270**.
4. Run the fire for an hour on full heat with the TV off, and feel the panel above it and the TV's underside: they should only be warm.

Quick reference

Take this page to the wall. Along the wall from the patio corner; heights from the floor (or from the level line).

ALONG THE WALL	MM
Centre line	**1530**
Unit	275–2785
Left cabinet / its rail centre	275–875 / 575
Fire box	875–2185
Right cabinet / its rail centre	2185–2785 / 2485
Fire's front frame	895–2165
Panel	630–2430
TV	915–2145
Wall cleat	780–2280
Socket centre	575
Cable groove	≈ 730
Bookcase left	70–370
Bookcase right	2690–2990

HEIGHTS	MM
Unit bottom	110
Bottom batten, bottom edge	128
Fire centre	300
Socket centre	300
Top batten, top edge	472
Unit top	490
Panel bottom	720
TV bottom	915
TV centre	**1270**
Wall cleat, bottom edge	≈ 1573
TV top	1625
Panel top	1820
Bookcases	620–1954
Ceiling	2350

Sizes to cut

Fire box top and bottom	2 × 1274 × 400	Face (12 thick)	1306 × 376
Fire box ends	2 × 380 × 400	Hole in the face	1250 × 327
Fire box battens	2 × 1270	Cleats and top spacer	3 × 1500
Slat end pieces	2 × 330	Bottom blocks	3 × 150 × 100 × 44