



圖庫列表

Picture Library List

本手冊將 EasyBuilder Pro 中的圖庫列出

UM023003T_20230719



目錄

1	圖庫分類	1
2	系統圖庫	1
3	[System Equipment]	2
3.1	System Control Panel	2
3.1.1	Button Switch.....	2
3.1.2	DIP Switch	2
3.1.3	Key Lock Switch.....	3
3.1.4	Magnetic Switch.....	3
3.1.5	Nameplates.....	3
3.1.6	Rocker Switch.....	3
3.1.7	Selector Switch.....	4
3.1.8	Slide Switch	4
3.2	System Industrial Equipment	4
3.2.1	Motor	5
3.2.2	Pump	5
3.2.3	Sensor.....	5
3.2.4	Valve.....	6
4	System Icon.....	6
4.1	System Icon	6
4.1.1	Address Edit	7
4.1.2	Alarm.....	7
4.1.3	Arrow	8
4.1.4	Audio Video.....	9
4.1.5	Barcode	9
4.1.6	Cloud	10
4.1.7	Communication.....	10
4.1.8	Credential Password	11
4.1.9	Database	11
4.1.10	Email.....	12
4.1.11	File Folder.....	12

4.1.12	Flat.....	13
4.1.13	Keyboard Call icon.....	13
4.1.14	Link Share.....	14
4.1.15	Logistics.....	14
4.1.16	Notification	15
4.1.17	QR Code	15
4.1.18	Reserved System Setting.....	16
4.1.19	SD Card USB	16
4.1.20	Settings.....	17
4.1.21	Shape.....	17
4.1.22	Upload Download	18
4.2	System Industrial Icon	18
4.2.1	Plain.....	18
4.3	System P&ID Symbol	19
4.3.1	Connecting Shapes Symbol 1	19
4.3.2	Connecting Shapes Symbol 2	20
4.3.3	Equipment Symbol.....	20
4.3.4	Heat Exchanger 1	21
4.3.5	Heat Exchanger 2	21
4.3.6	Instrument Symbol 1.....	22
4.3.7	Instrument Symbol 2.....	23
4.3.8	Motor Symbol	23
4.3.9	Peripheral Symbol 1	24
4.3.10	Peripheral Symbol 2	24
4.3.11	Piping Symbol.....	25
4.3.12	Pump Symbol 1	26
4.3.13	Pump Symbol 2	26
4.3.14	Valve Symbols 1	27
4.3.15	Valve Symbols 2	28
4.3.16	Valve Symbols 3	28

4.3.17	Vessel Symbol	29
5	UI Element	29
5.1	System Background	29
5.1.1	Crystal	29
5.1.2	Flat.....	30
5.1.3	Ribbon	30
5.1.4	Standard.....	30
5.2	System Bar Graph.....	30
5.2.1	Ribbon	30
5.3	System Button	31
5.3.1	Crystal	31
5.3.2	Flat.....	31
5.3.3	Ribbon	31
5.3.4	Standard.....	32
5.4	System Check Box.....	32
5.4.1	Crystal	32
5.4.2	Flat.....	32
5.4.3	Ribbon	32
5.4.4	Standard.....	33
5.5	System Input Box.....	33
5.5.1	Crystal	33
5.5.2	Flat.....	33
5.5.3	Ribbon	33
5.5.4	Standard.....	34
5.6	System Keyboard.....	34
5.6.1	Crystal	34
5.6.2	Flat.....	34
5.6.3	Ribbon	34
5.6.4	Standard.....	34
5.7	System Lamp	35
5.7.1	Crystal	35
5.7.2	Flat.....	35

5.7.3	Ribbon	35
5.7.4	Standard.....	35
5.8	System Meter	36
5.8.1	Crystal	36
5.8.2	Gradient	36
5.8.3	Ribbon	36
5.8.4	Standard.....	37
5.9	System Pipe	37
5.9.1	Standard.....	37
5.10	System Radio	37
5.10.1	Crystal	37
5.10.2	Flat.....	38
5.10.3	Ribbon	38
5.10.4	Standard.....	38
5.11	System Switch.....	38
5.11.1	Crystal	38
5.11.2	Flat.....	39
5.11.3	Ribbon	39
5.11.4	Standard.....	39
6	如何自訂圖庫	39

1 圖庫分類

EasyBuilder Pro 的圖片庫分為 [工程檔案] 和 [系統圖庫]，詳細使用方式可以參考 EasyBuilder Pro 使用手冊 14.3.1. 圖片管理。

本文件將 EasyBuilder Pro 中的系統圖庫列出方便使用者設計時可以參考。

2 系統圖庫


[System Equipment]
System Control Panel ►
System Industrial Equipment ►
[System Icon]
System Icon ►
System Industrial Icon ►
System P&ID Symbol ►
[UI Element]
System Background ►
System Bar Graph ►
System Button ►
System Check Box ►
System Input Box ►
System Keyboard ►
System Lamp ►
System Meter ►
System Pipe ►
System Radio Button ►
System Switch ►

3 [System Equipment]


3.1 System Control Panel



3.1.1 Button Switch

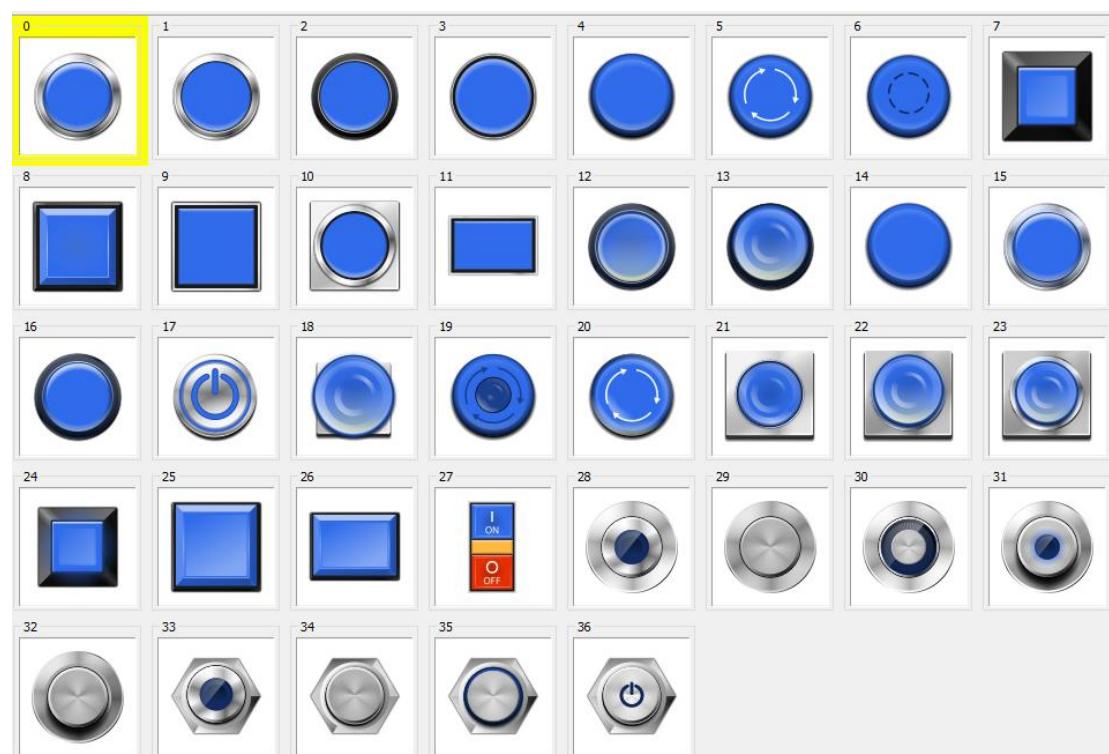


3.1.2 DIP Switch

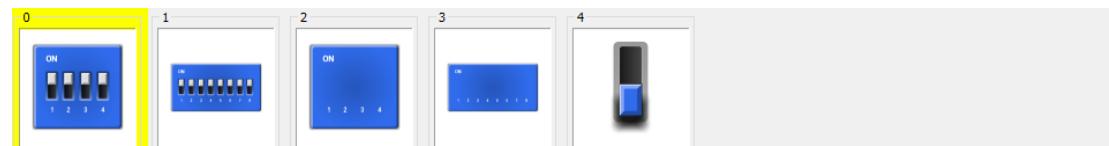

3.1.3 Key Lock Switch



3.1.4 Magnetic Switch

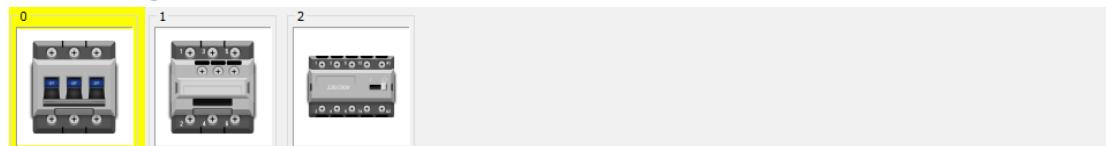


3.1.5 Nameplates



3.1.6 Rocker Switch



3.1.7 Selector Switch

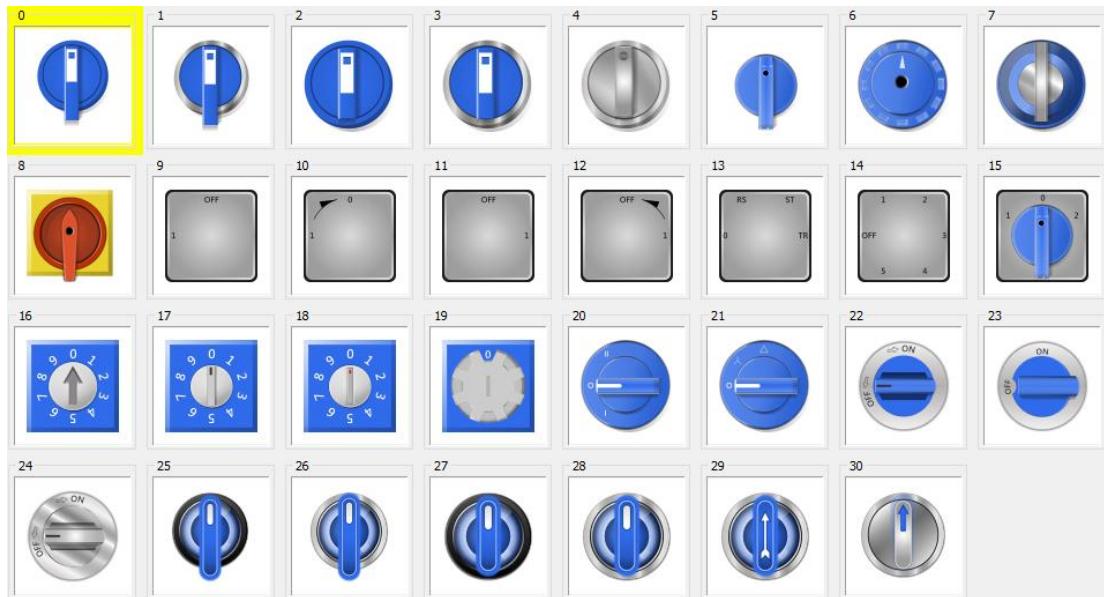

3.1.8 Slide Switch



Toggle Switch



3.2 System Industrial Equipment


Motor

Pump


Sensor

Valve


3.2.1 Motor

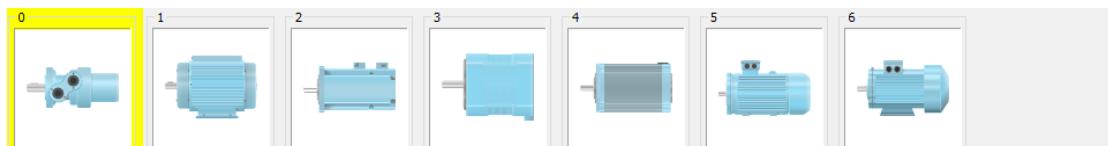


3.2.2 Pump

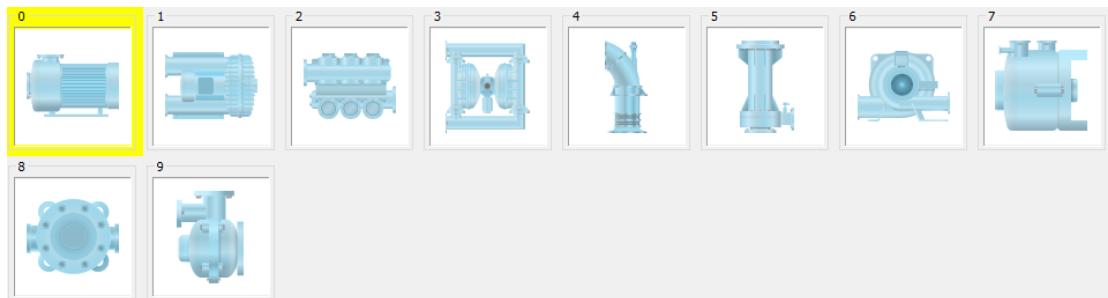

3.2.3 Sensor

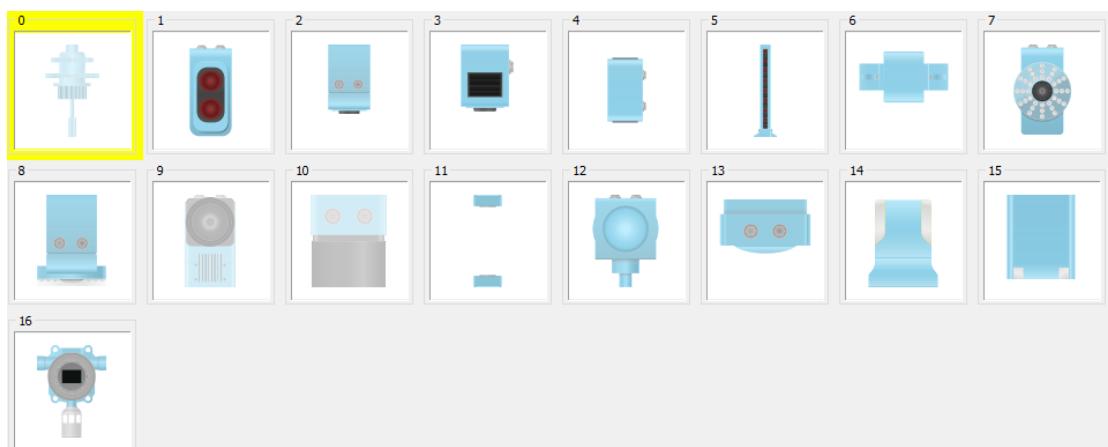

3.2.4 Valve

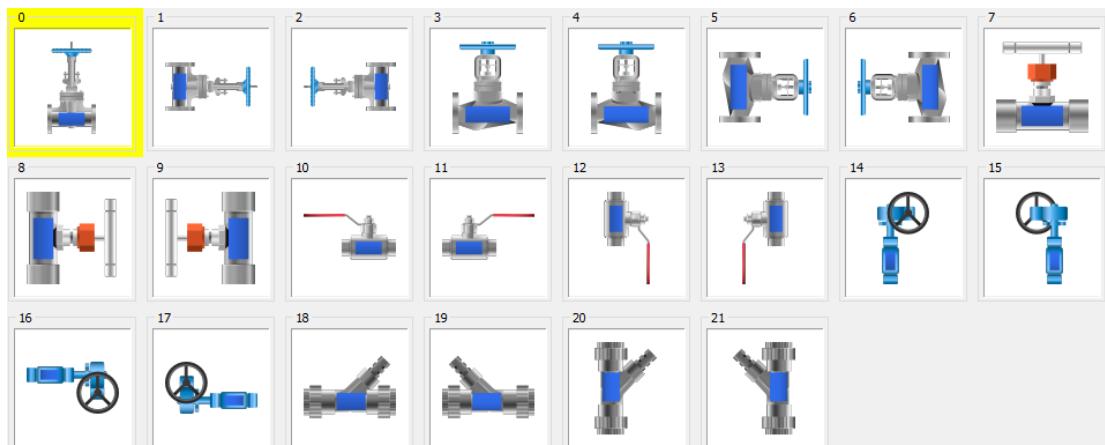


4 System Icon


4.1 System Icon

- Address Edit
- Alarm
- Arrow
- Audio Video
- Barcode
- Cloud
- Communication
- Credential Password
- Database
- Email
- File Folder
- Flat
- Keyboard Call icon
- Link Share
- Logistics
- Notification
- QR Code
- Reserved System Setting
- SD Card USB
- Settings
- Shape
- Upload Download


4.1.1 Address Edit

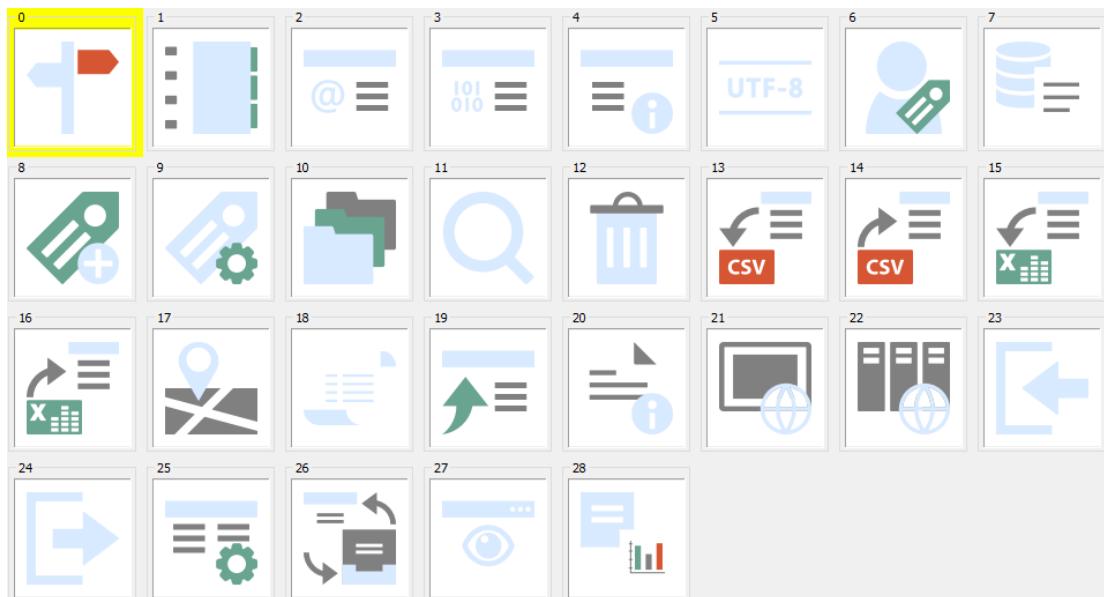

4.1.2 Alarm

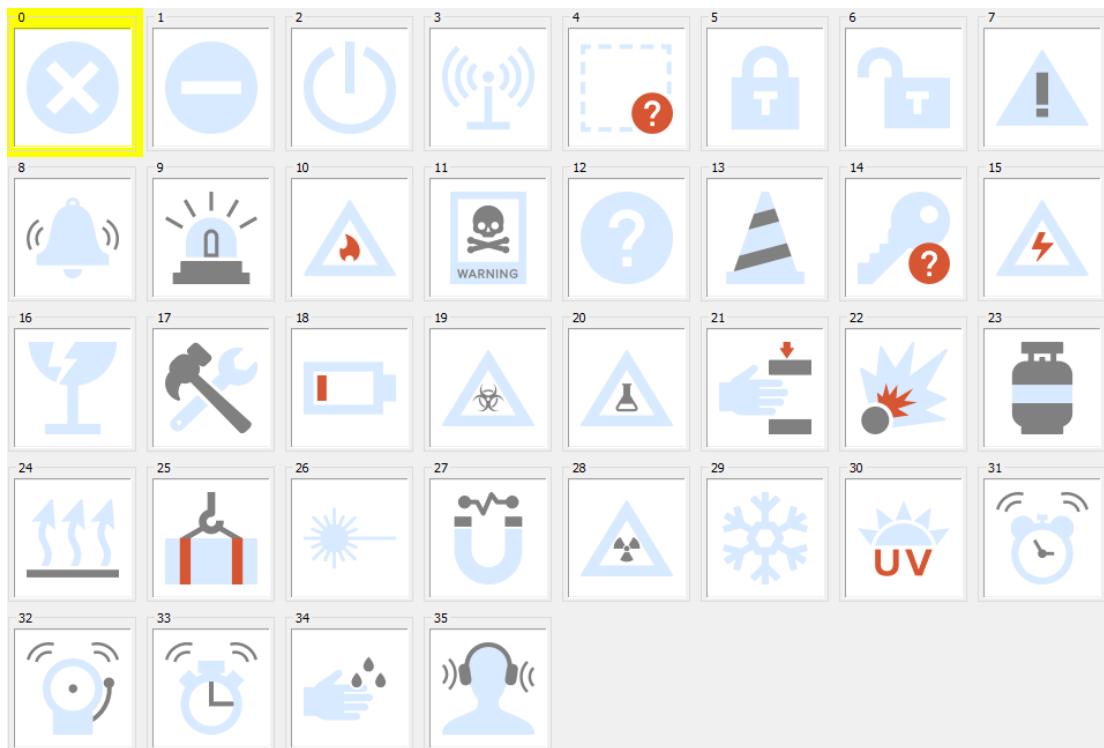


4.1.3 Arrow

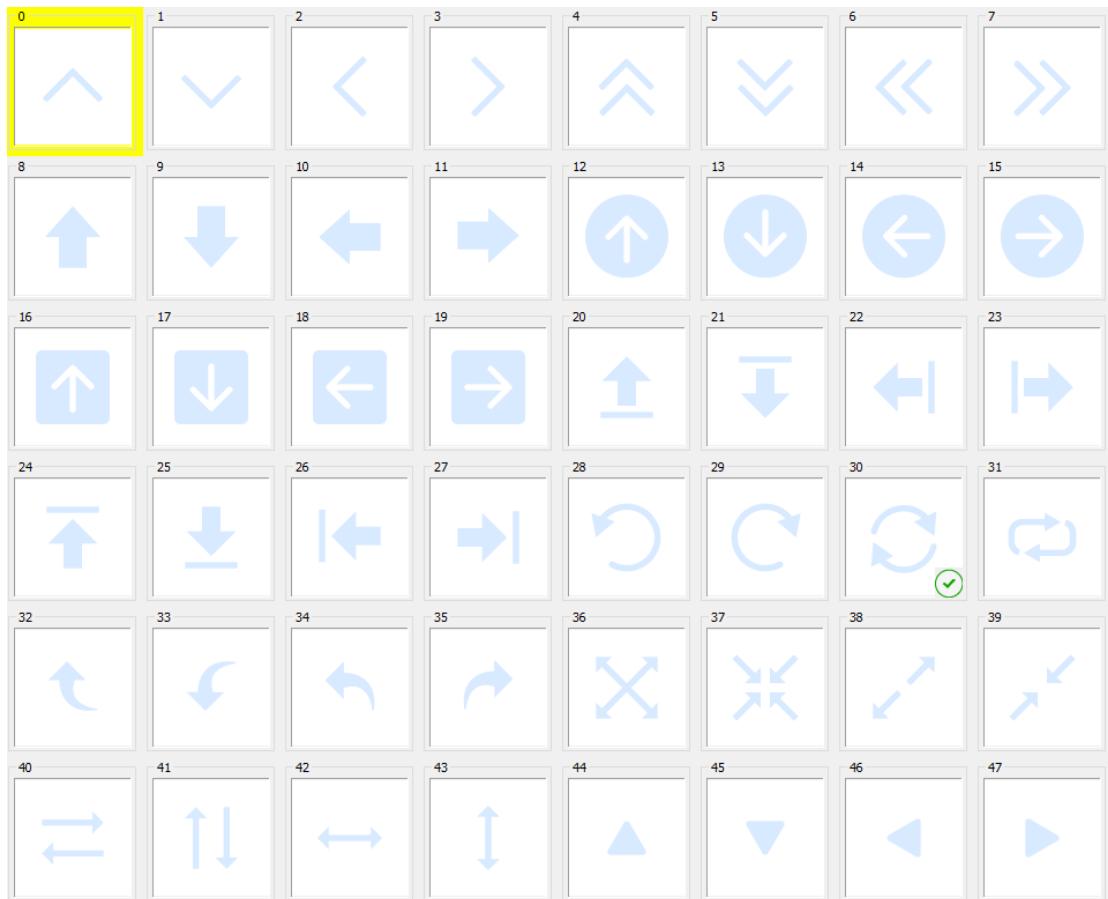


4.1.4 Audio Video




4.1.5 Barcode

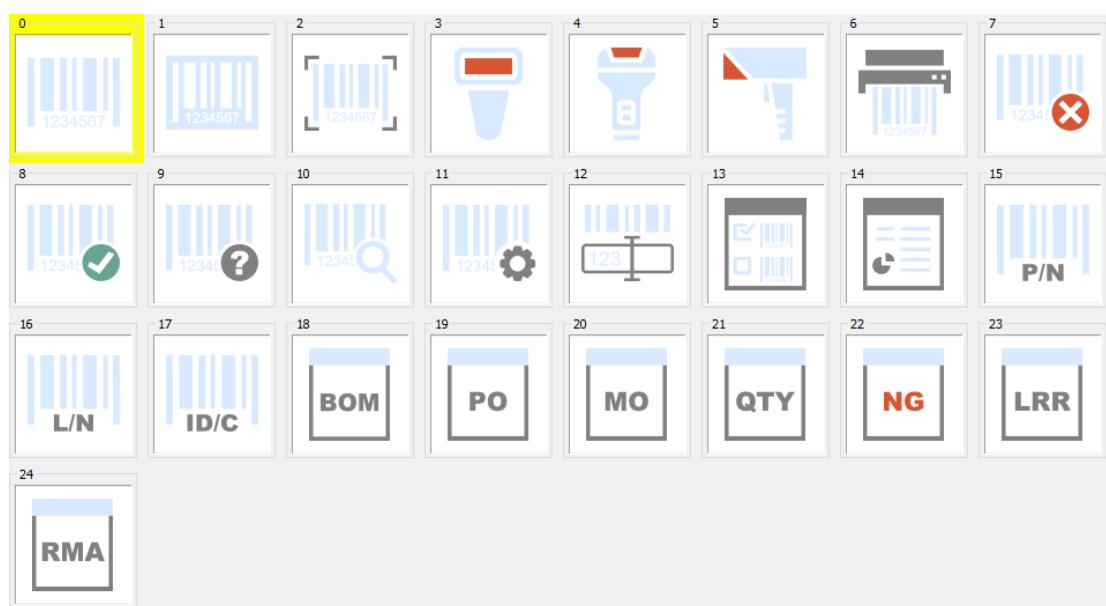


4.1.6 Cloud

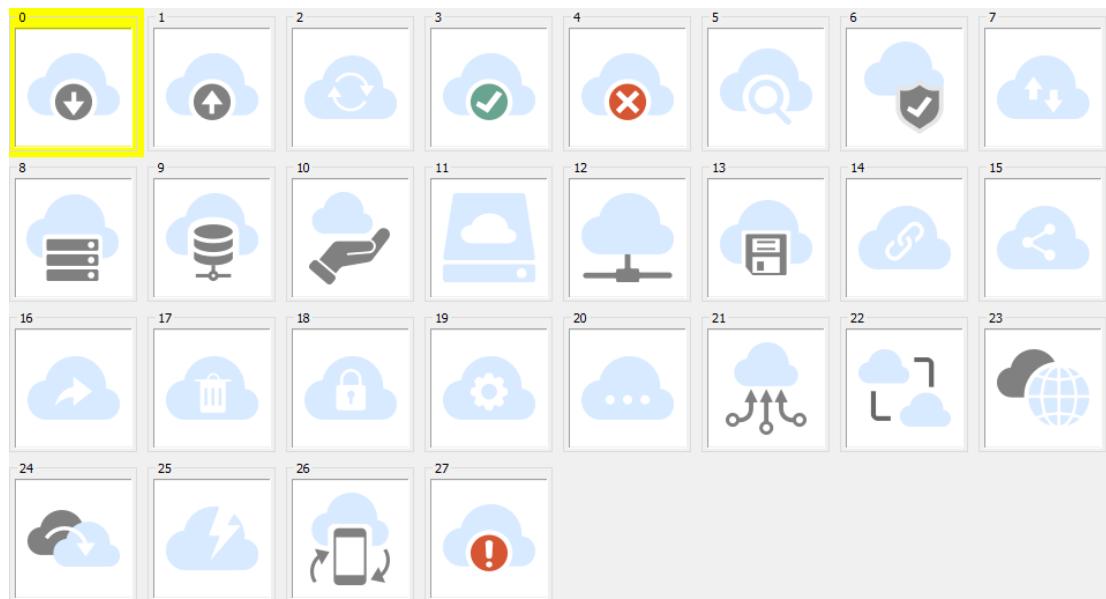


4.1.7 Communication

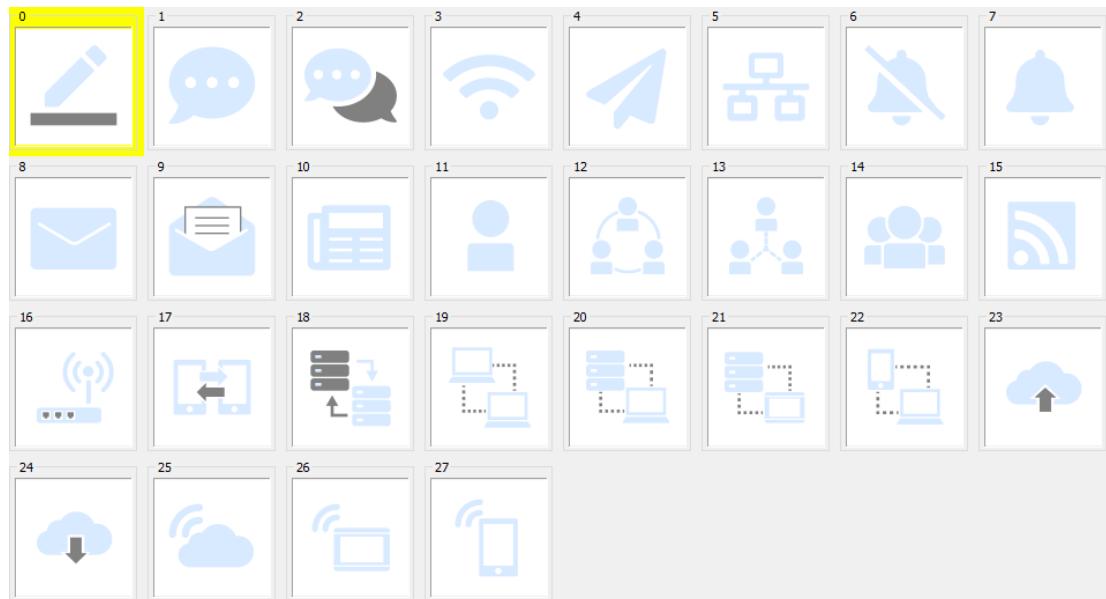


4.1.8 Credential Password

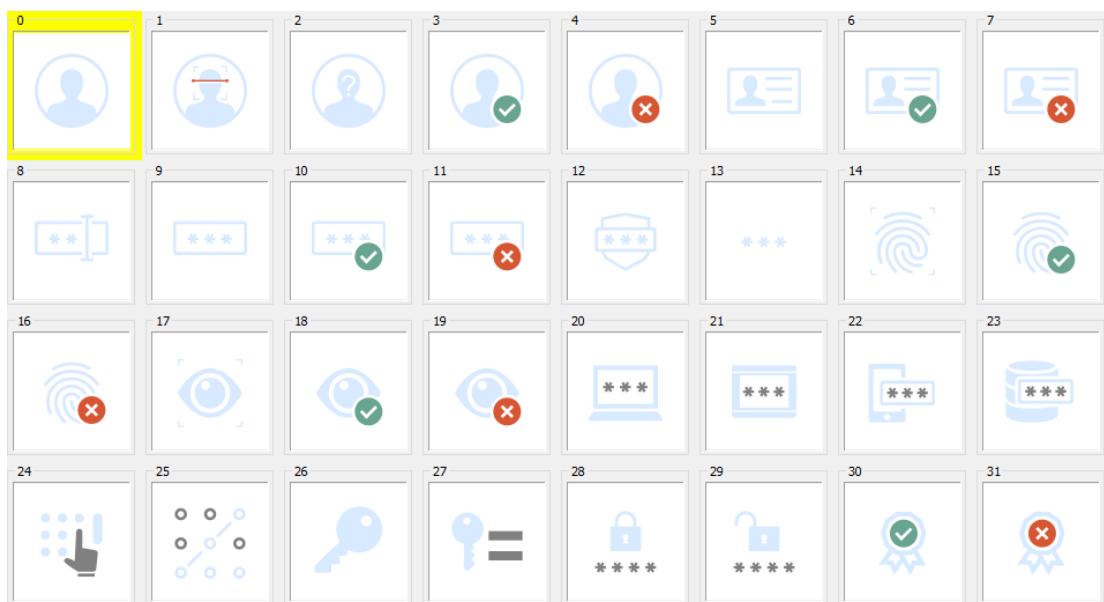


4.1.9 Database

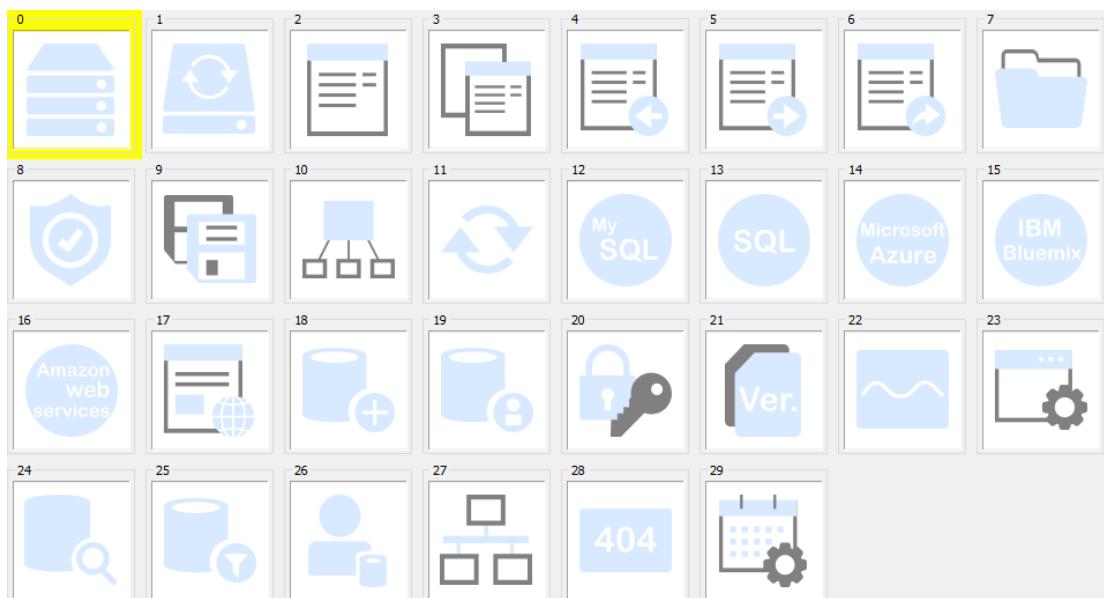


4.1.10 Email

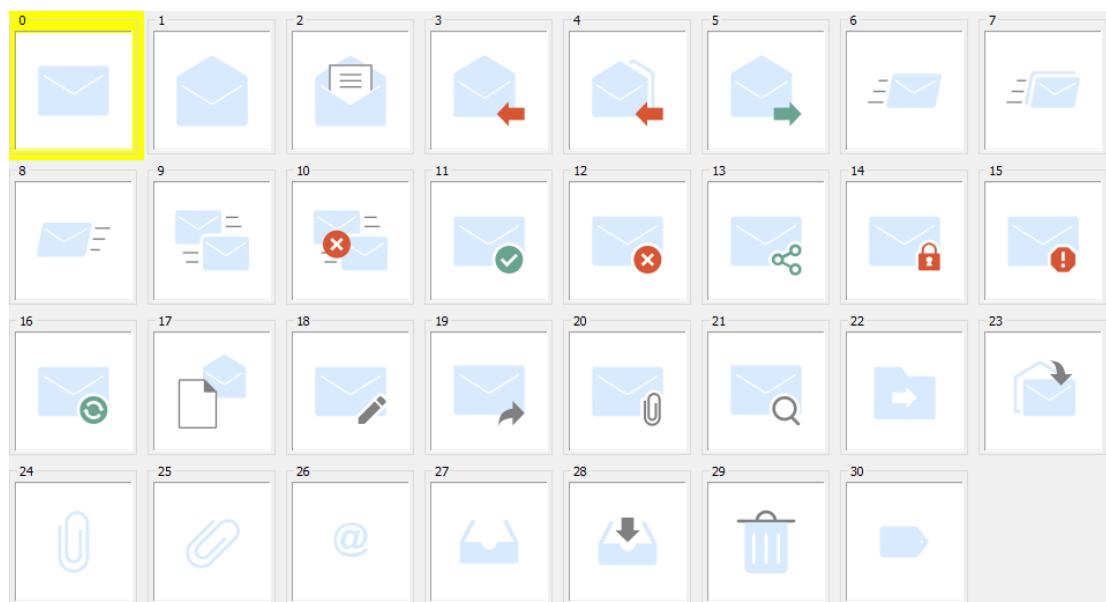


4.1.11 File Folder

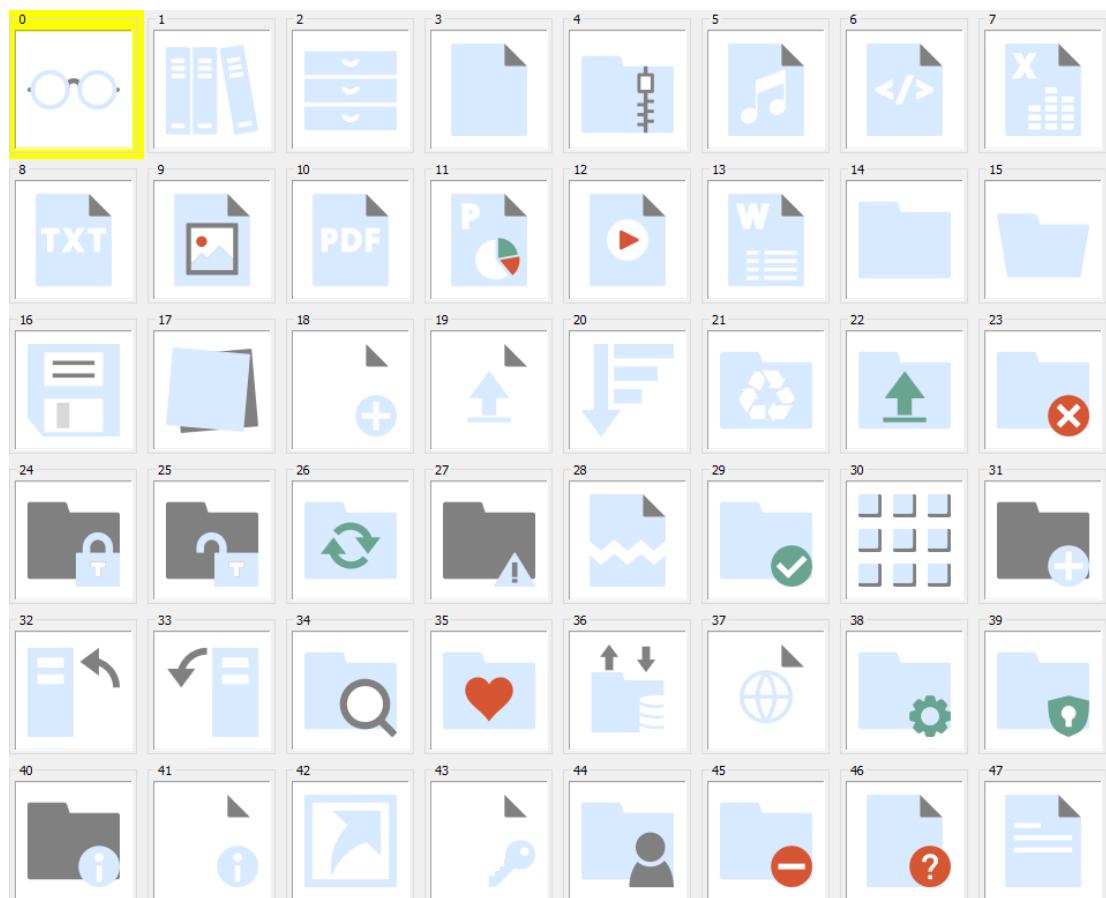


4.1.12 Flat

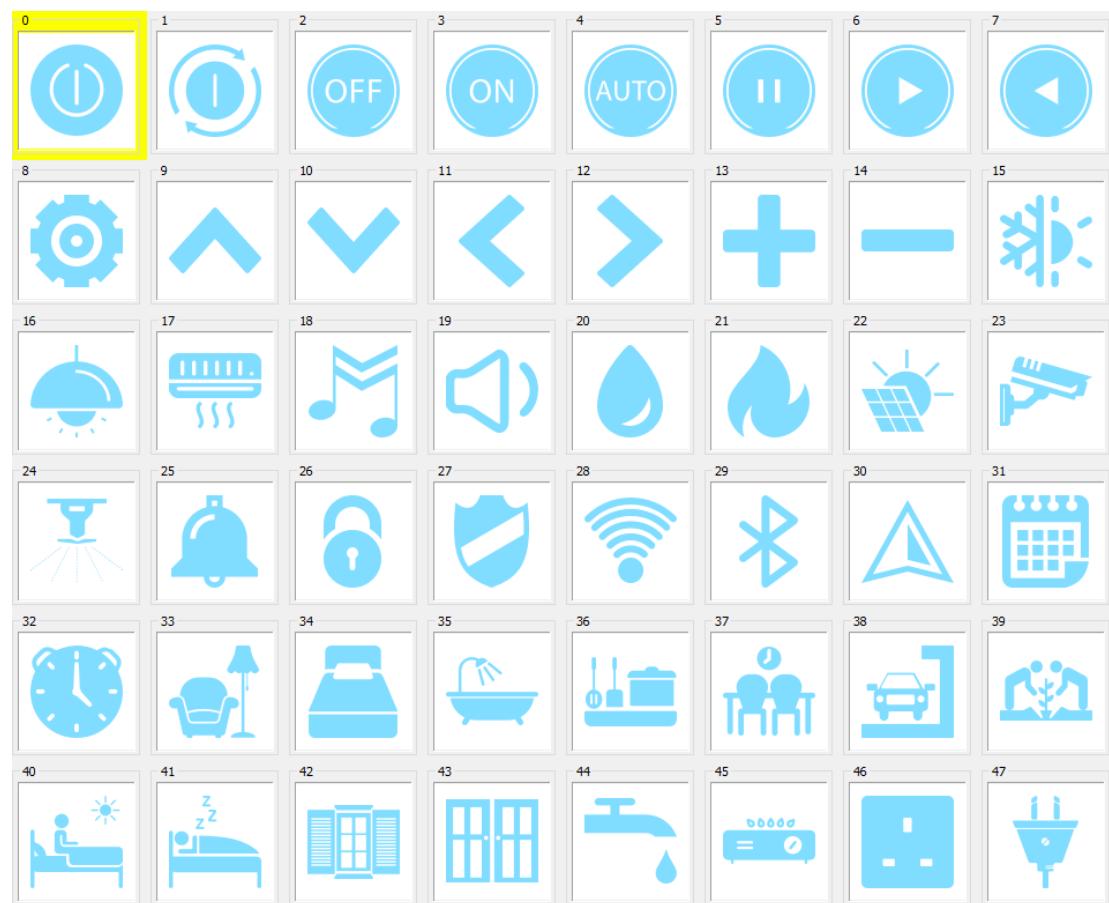


4.1.13 Keyboard Call icon

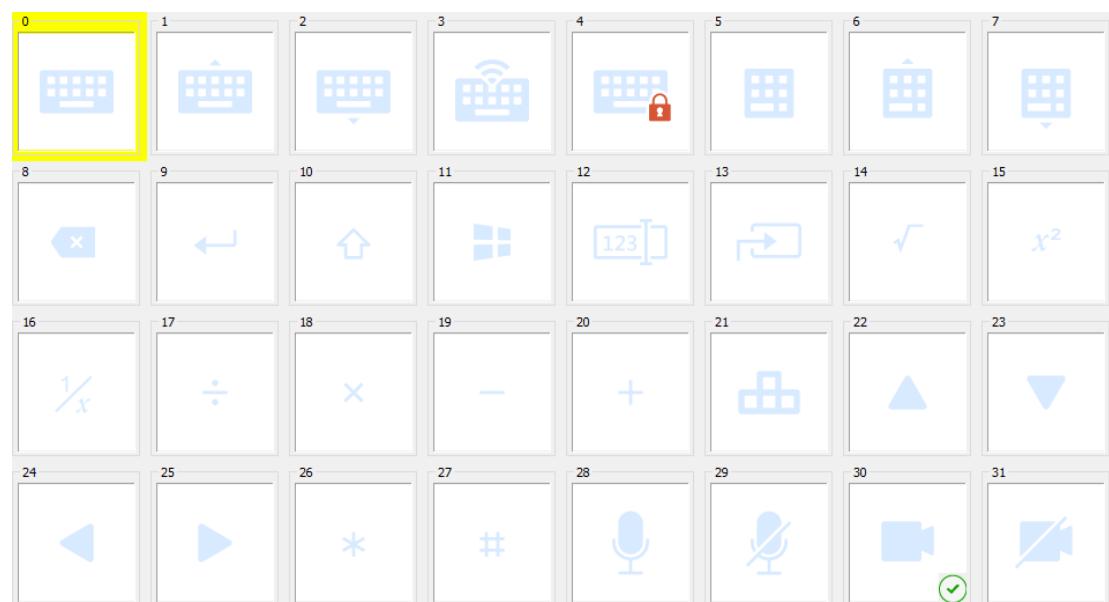


4.1.14 Link Share

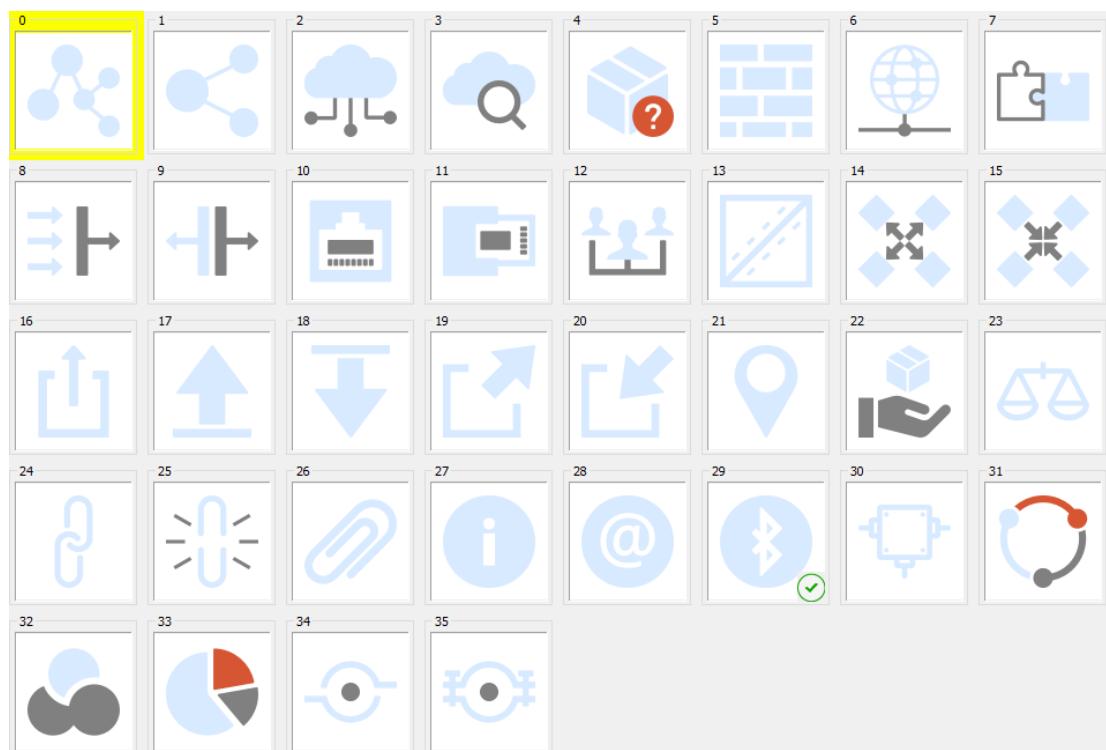

4.1.15 Logistics

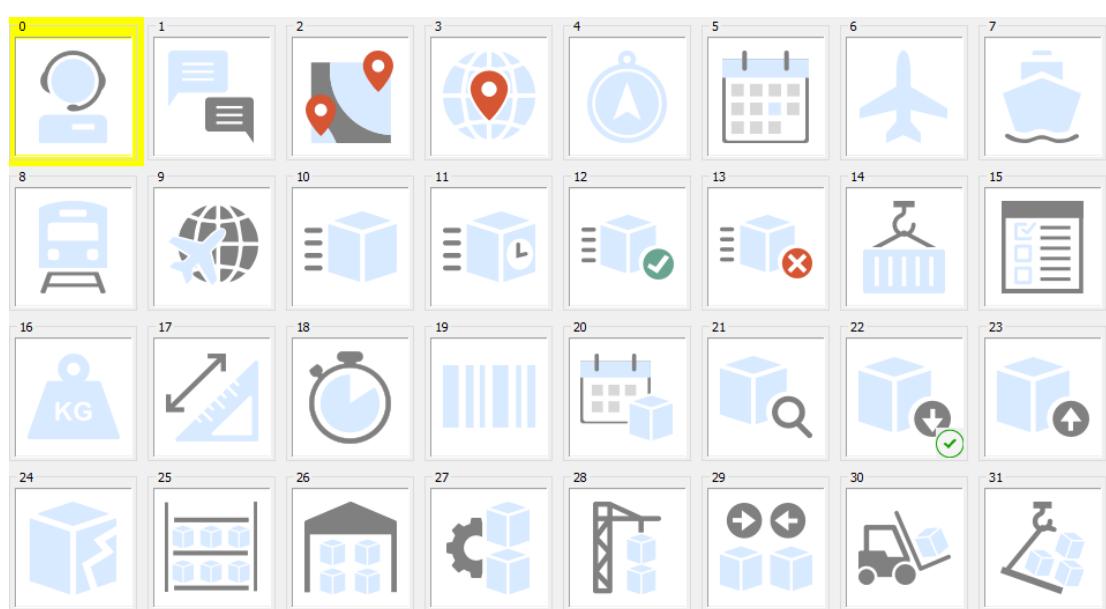


4.1.16 Notification

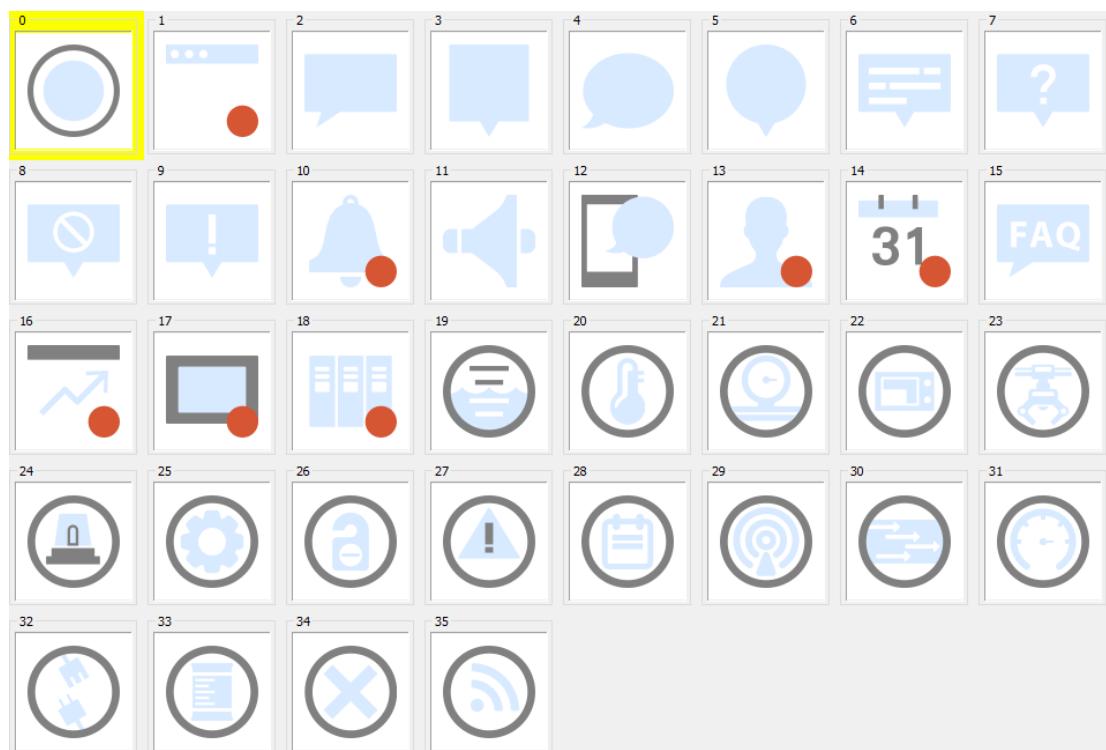


4.1.17 QR Code




4.1.18 Reserved System Setting

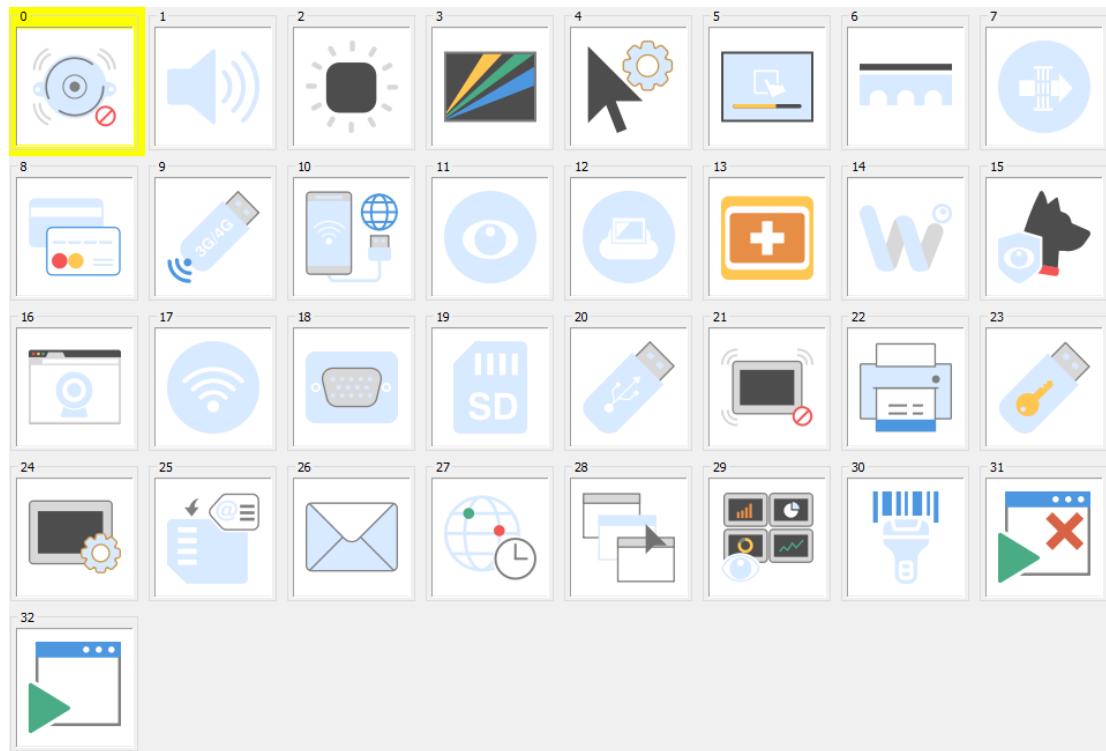


4.1.19 SD Card USB

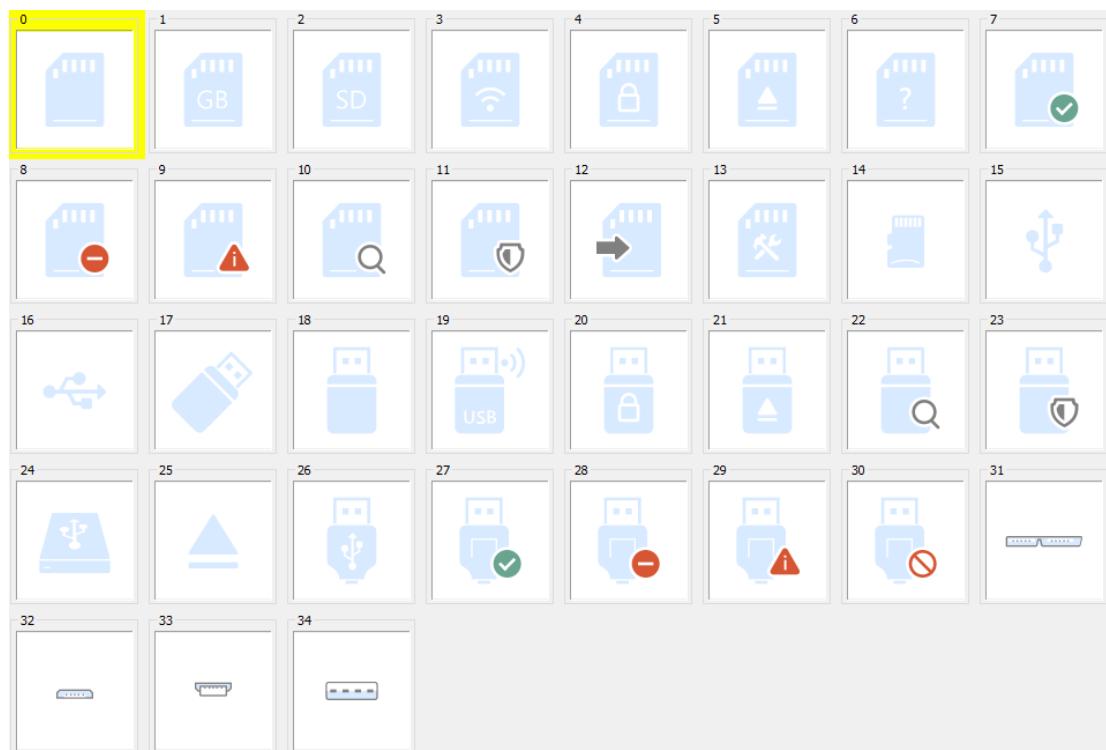


4.1.20 Settings

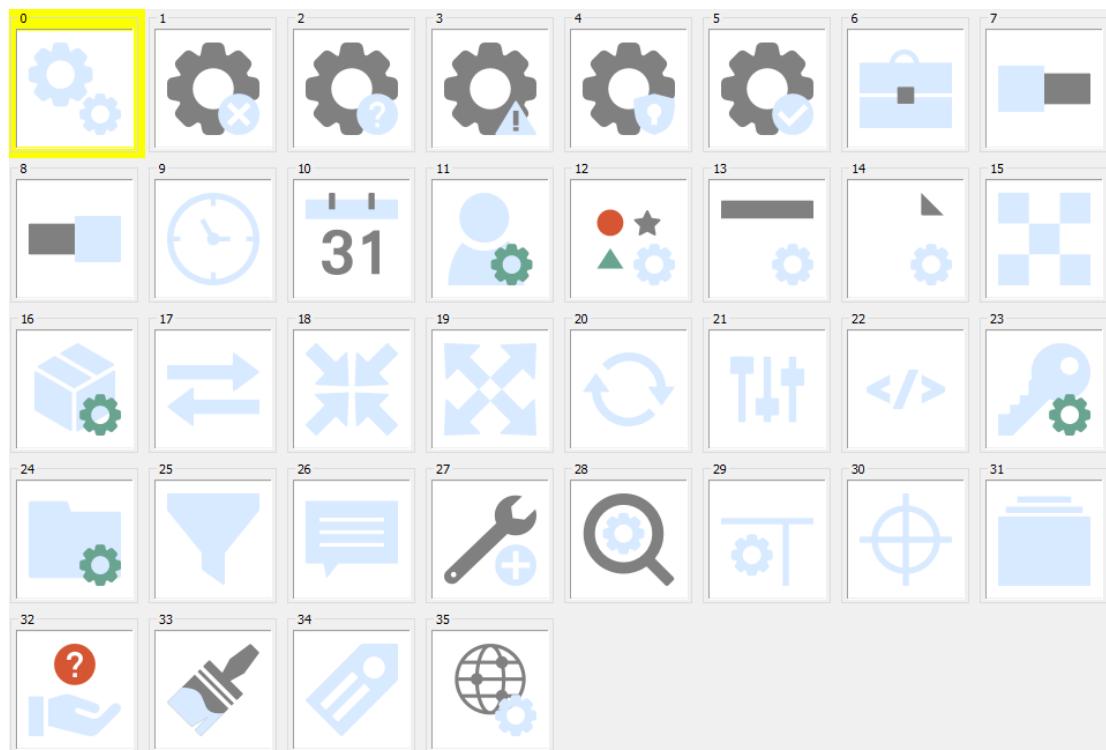

4.1.21 Shape

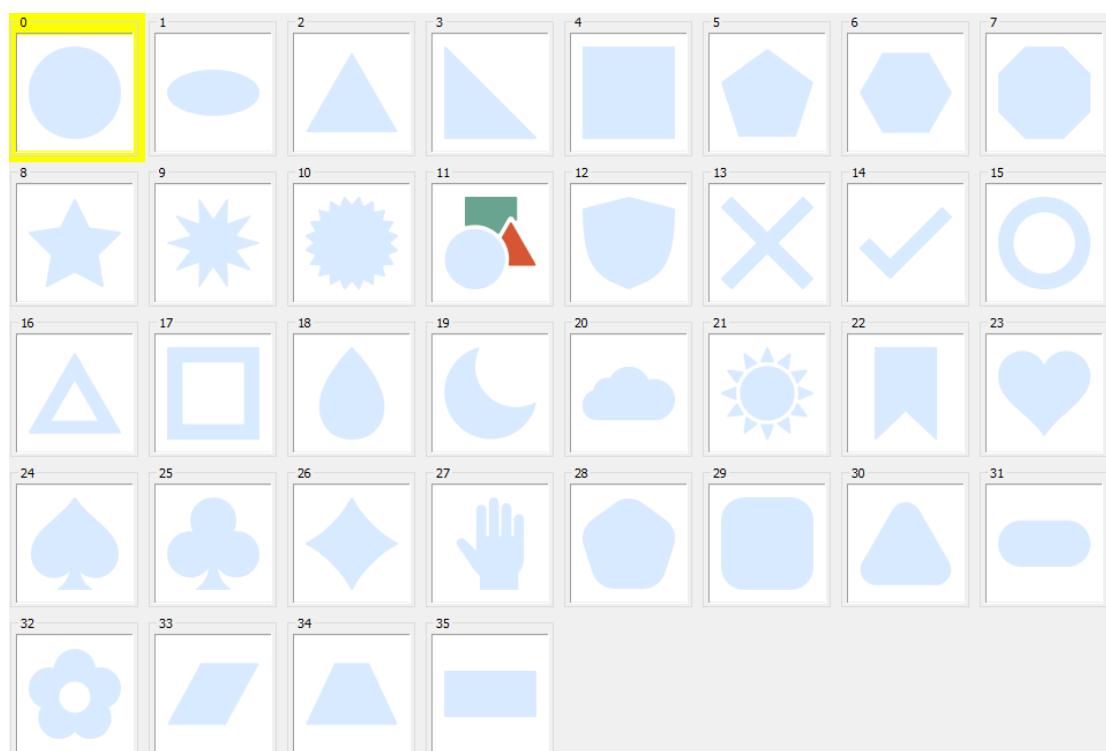


4.1.22 Upload Download

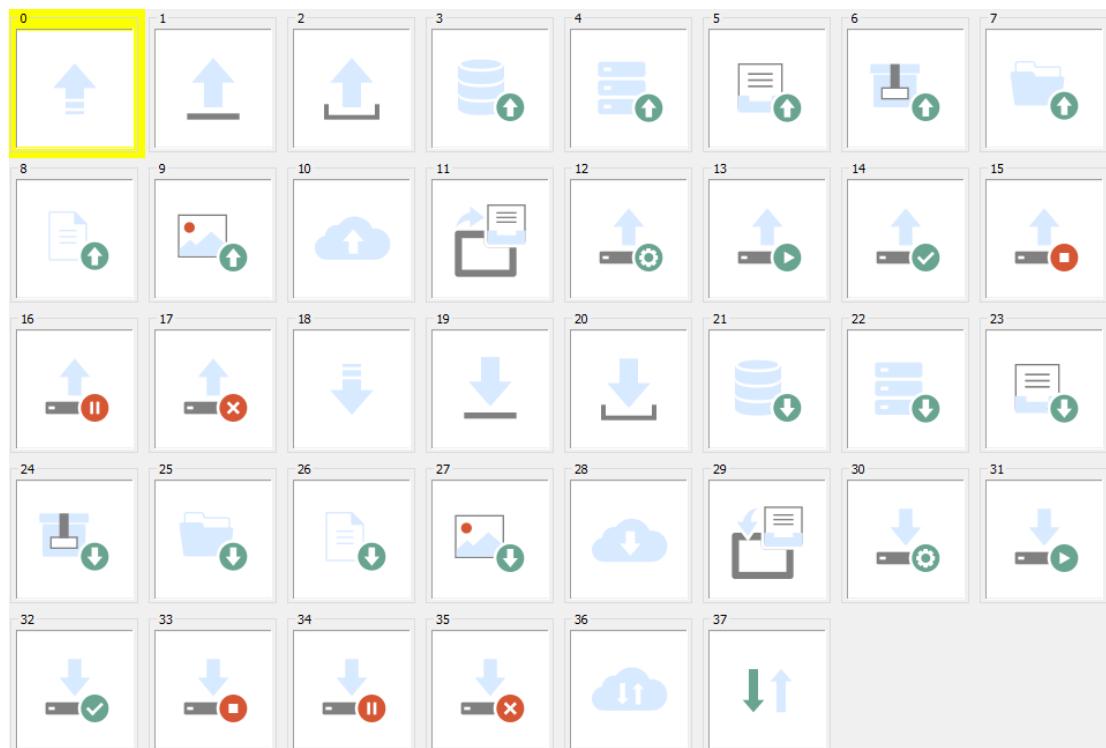

4.2 System Industrial Icon

4.2.1 Plain

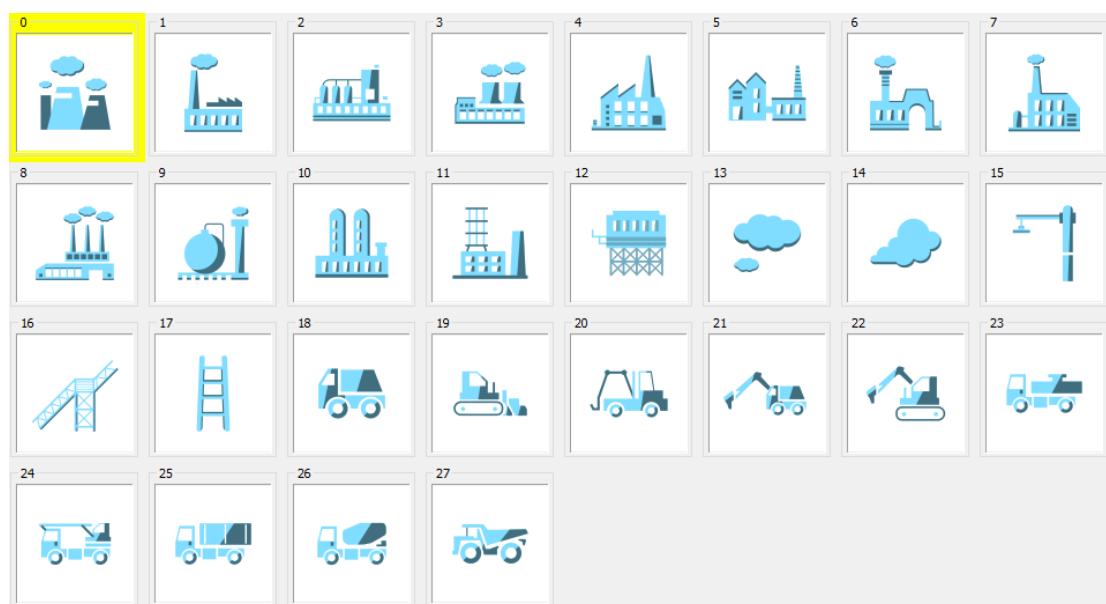


4.3 System P&ID Symbol

- Connecting Shapes Symbol 1
- Connecting Shapes Symbol 2
- Equipment Symbol
- Heat Exchanger 1
- Heat Exchanger 2
- Instrument Symbol 1
- Instrument Symbol 2
- Motor Symbol
- Peripheral Symbol 1
- Peripheral Symbol 2
- Piping Symbol
- Pump Symbol 1
- Pump Symbol 2
- Valve Symbols 1
- Valve Symbols 2
- Valve Symbols 3
- Vessel Symbol


4.3.1 Connecting Shapes Symbol 1




4.3.2 Connecting Shapes Symbol 2

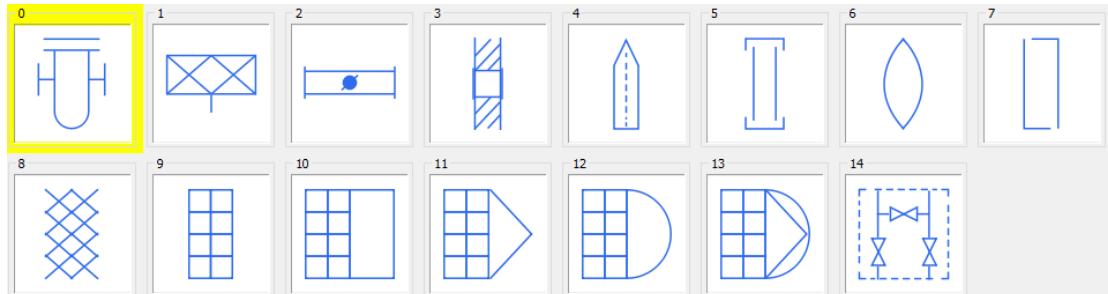


4.3.3 Equipment Symbol

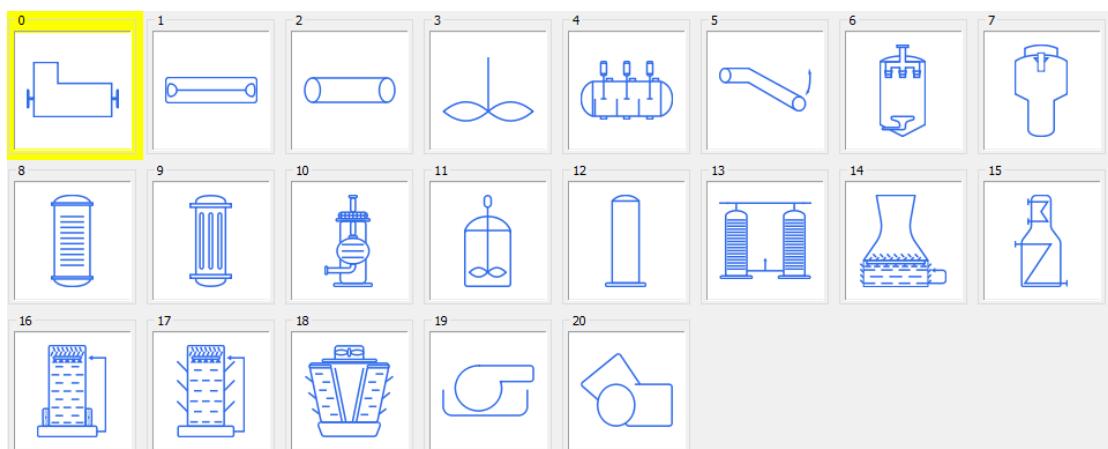


4.3.4 Heat Exchanger 1

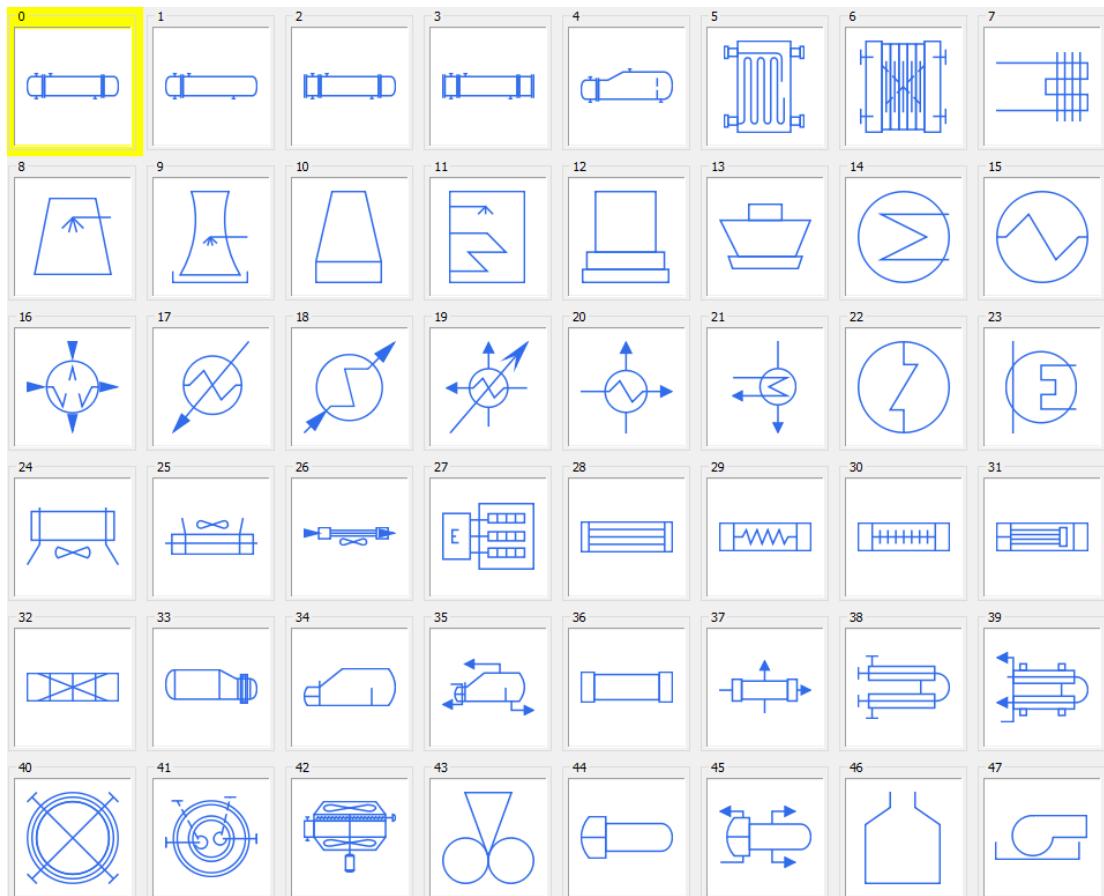


4.3.5 Heat Exchanger 2

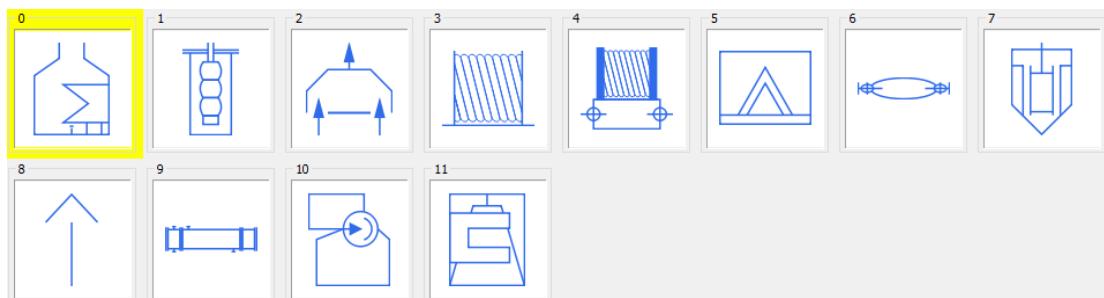


4.3.6 Instrument Symbol 1

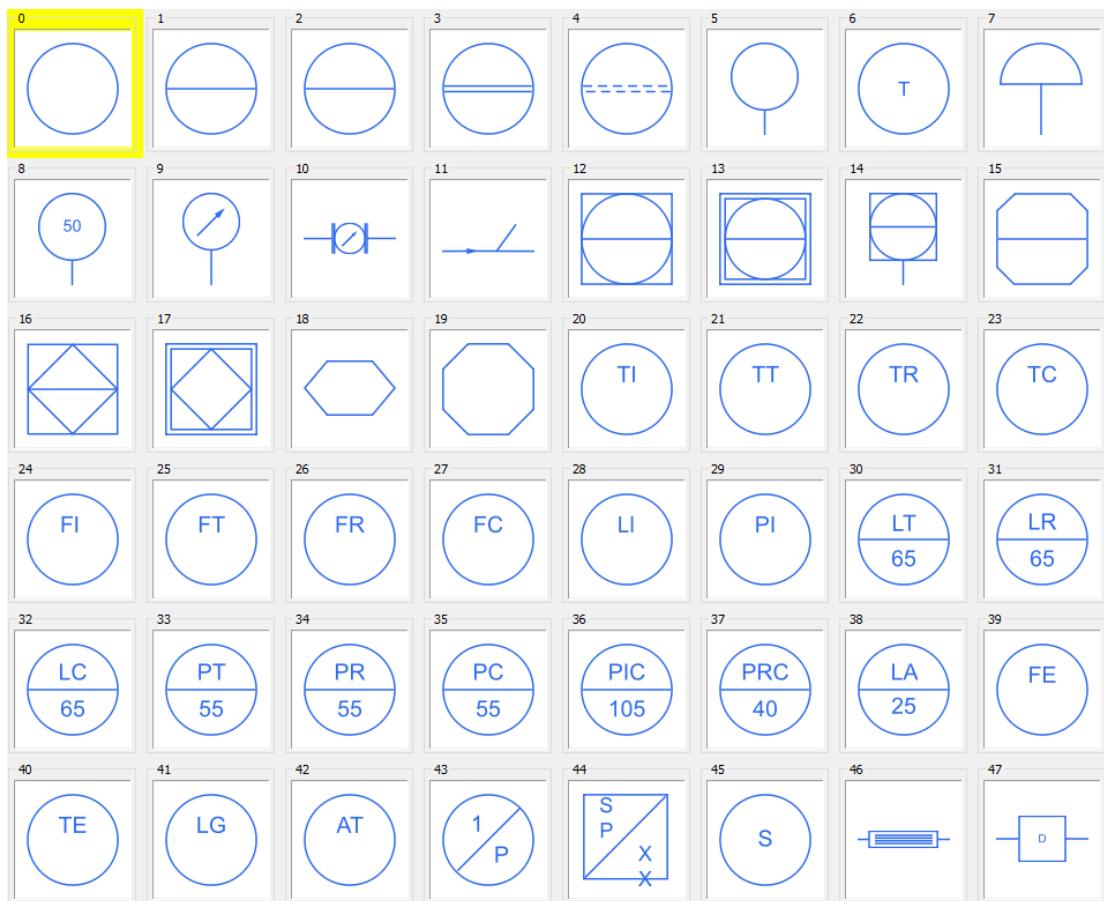


4.3.7 Instrument Symbol 2

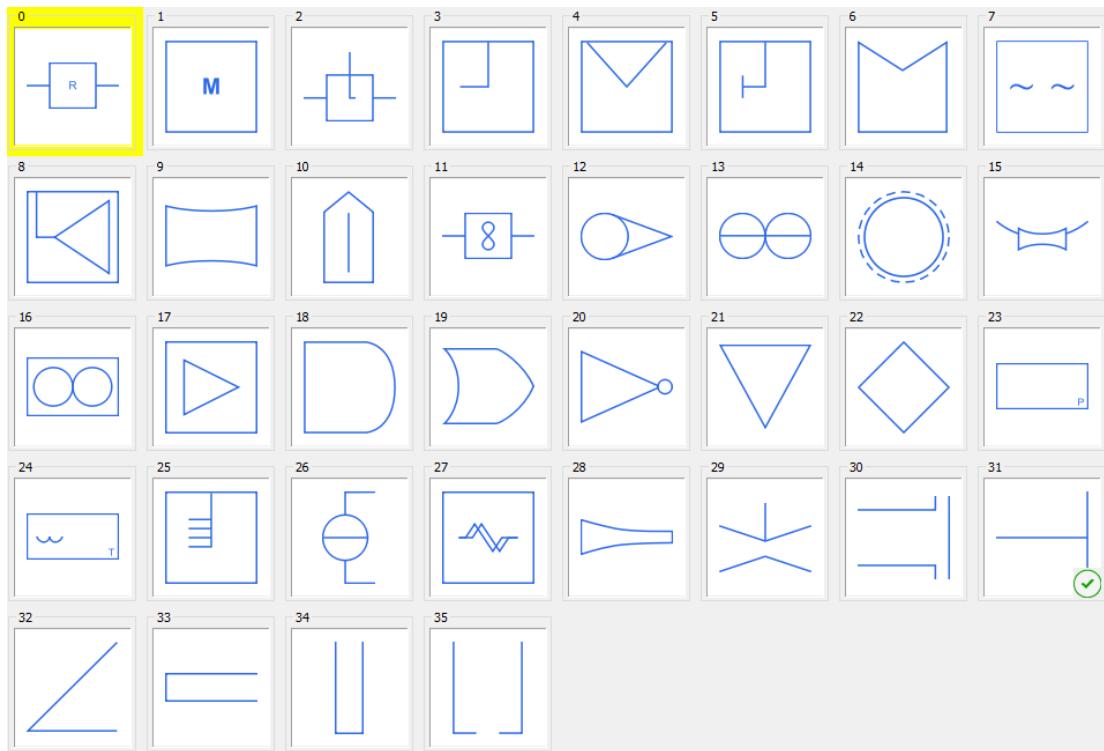


4.3.8 Motor Symbol

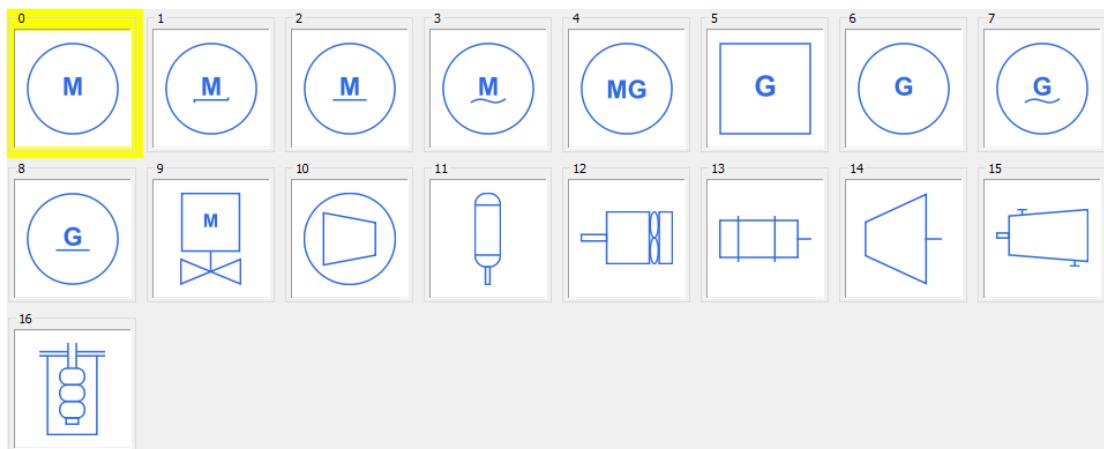


4.3.9 Peripheral Symbol 1

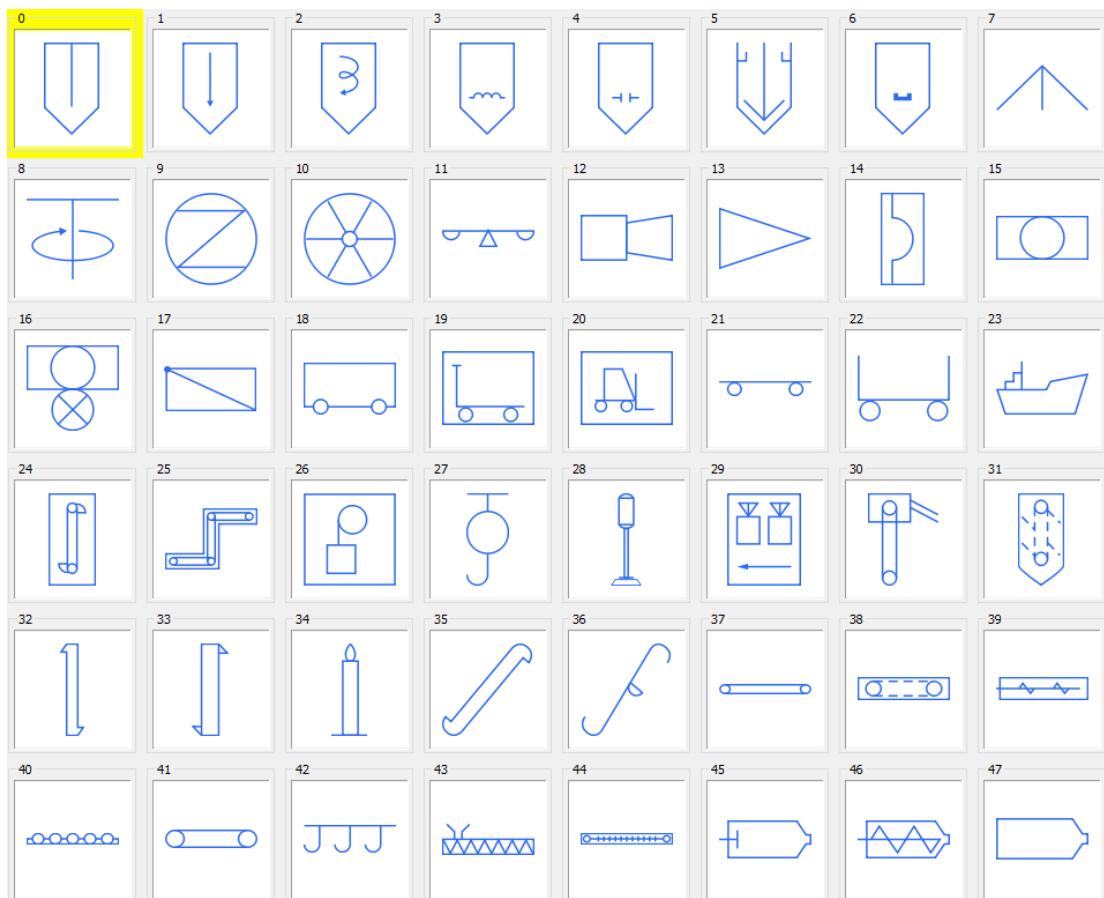


4.3.10 Peripheral Symbol 2

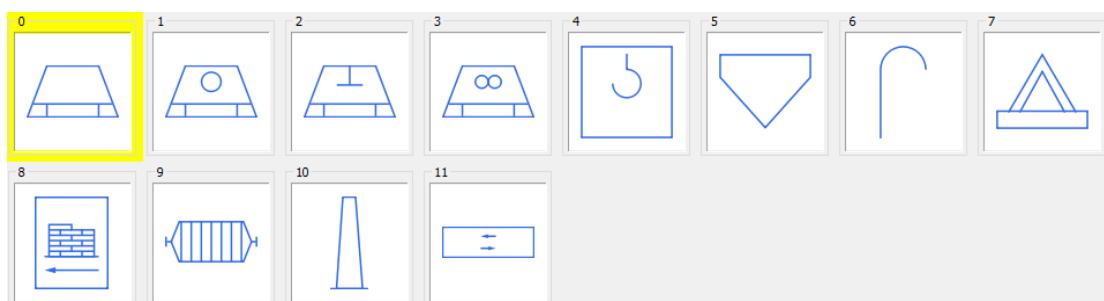


4.3.11 Piping Symbol

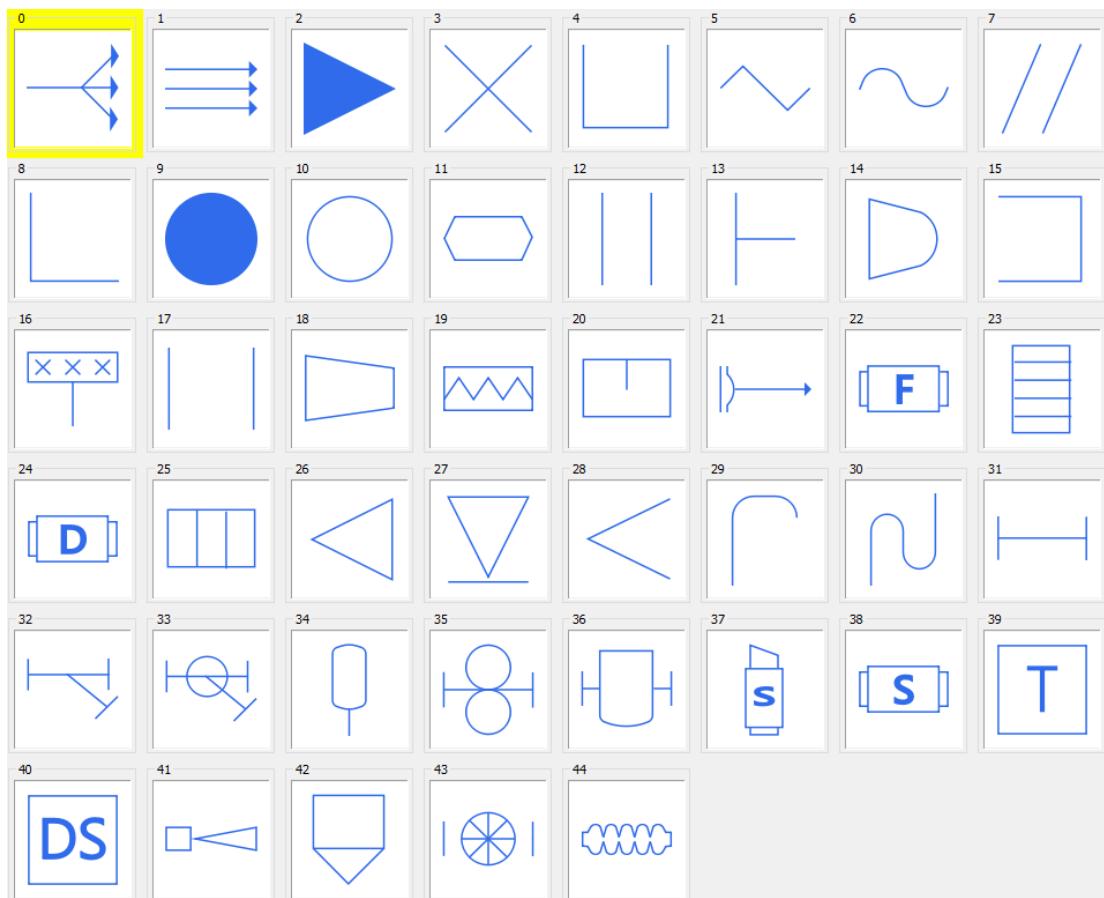


4.3.12 Pump Symbol 1

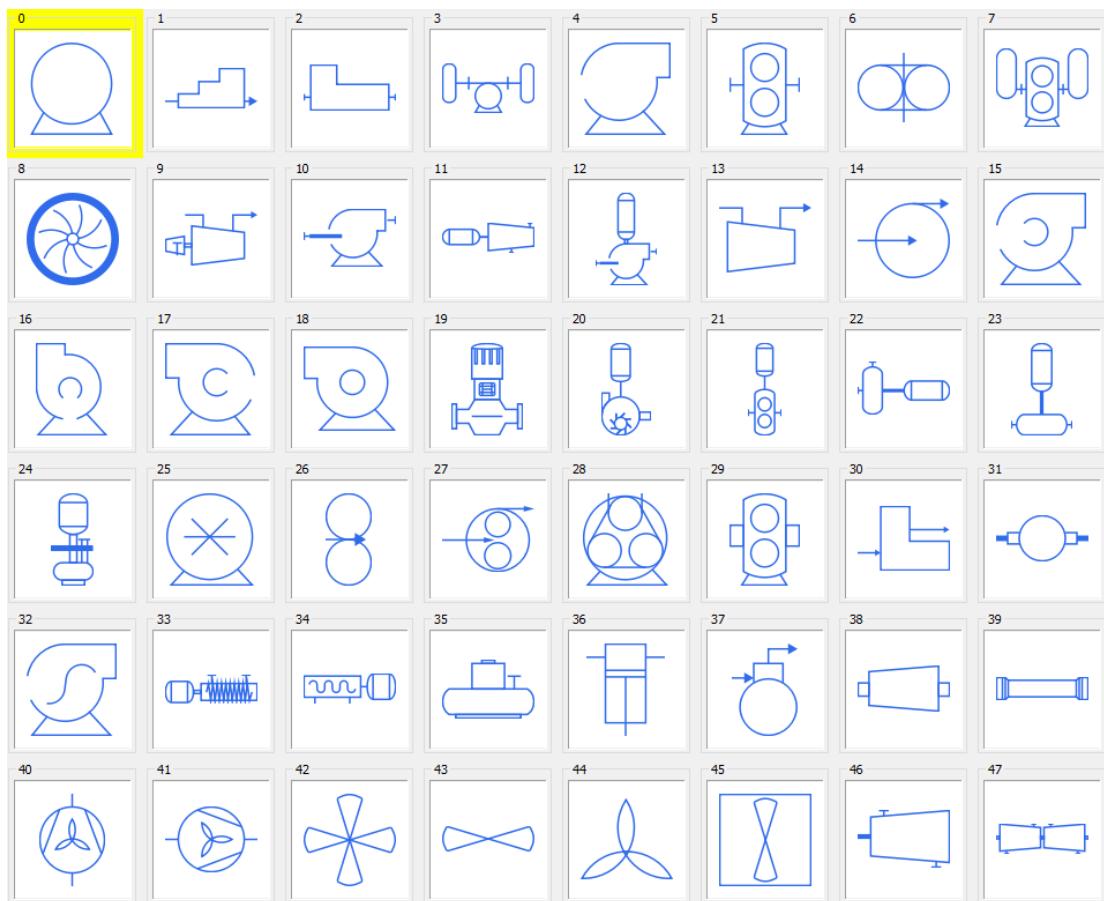


4.3.13 Pump Symbol 2

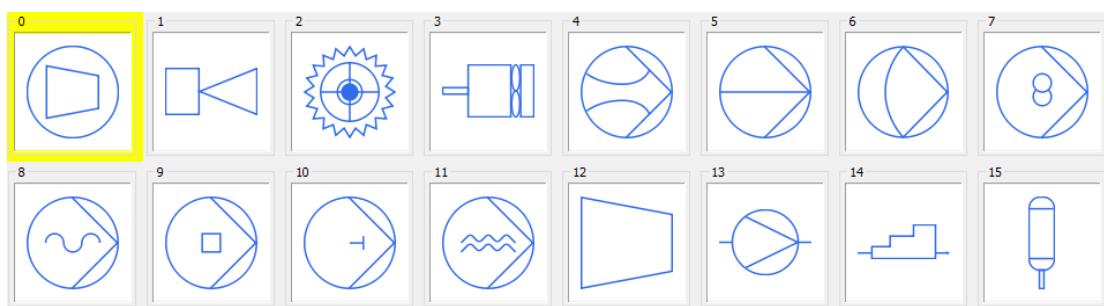


4.3.14 Valve Symbols 1

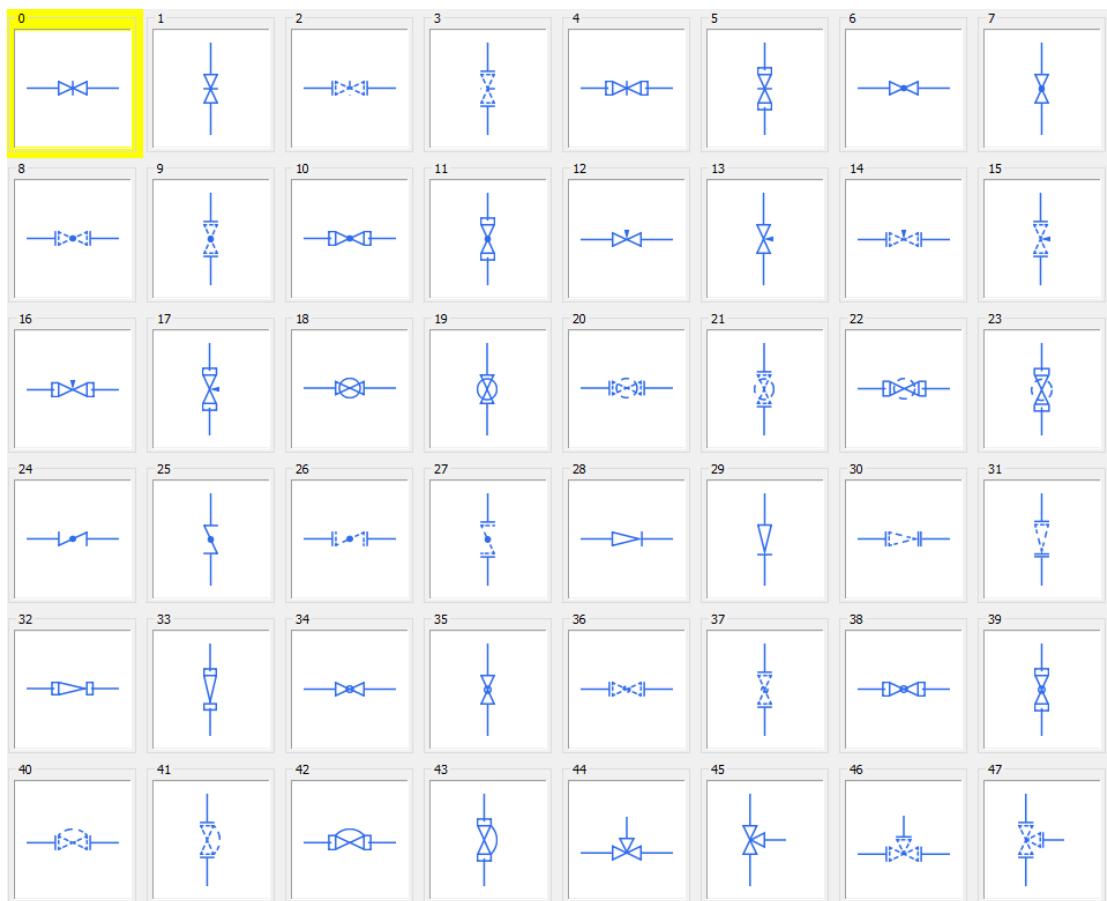


4.3.15 Valve Symbols 2

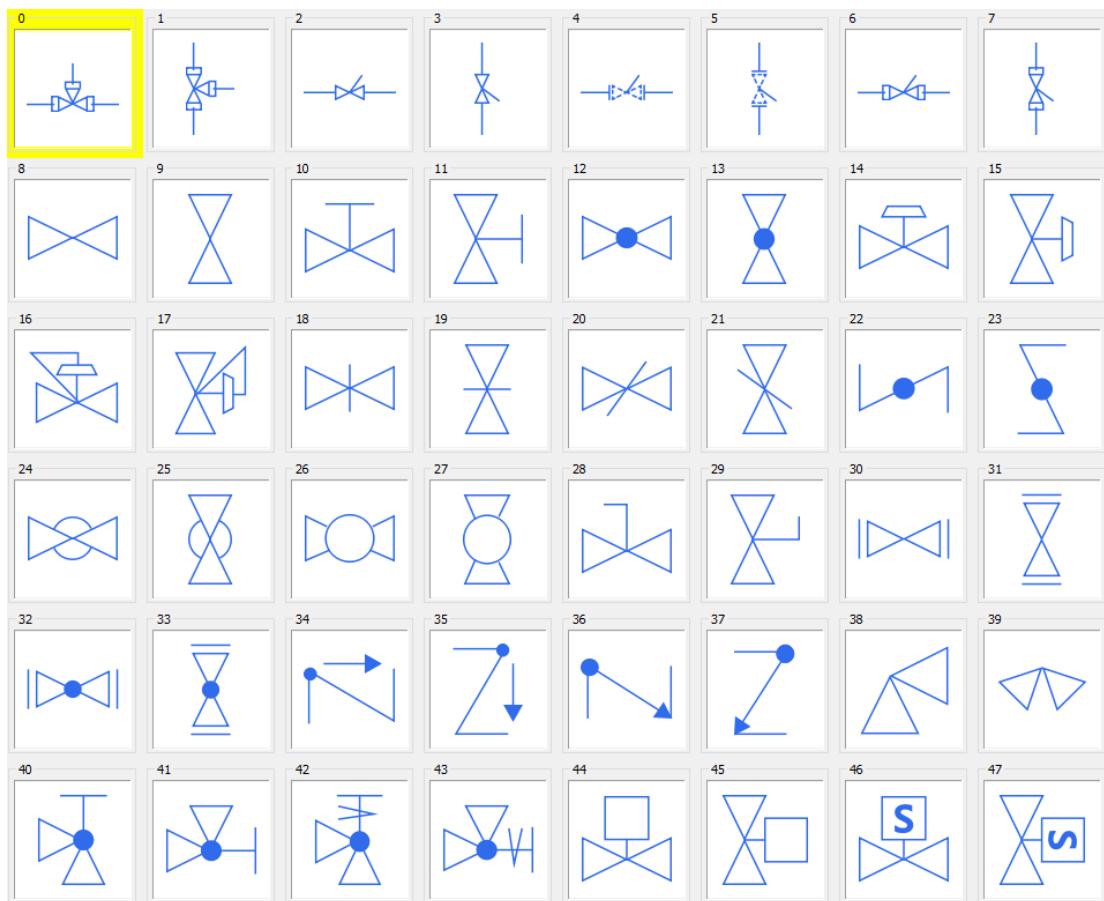

4.3.16 Valve Symbols 3

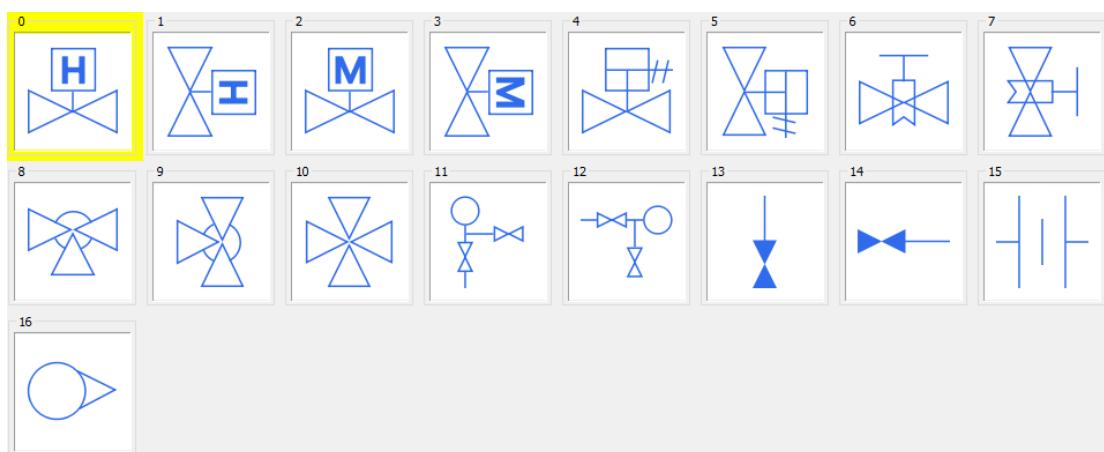


4.3.17 Vessel Symbol

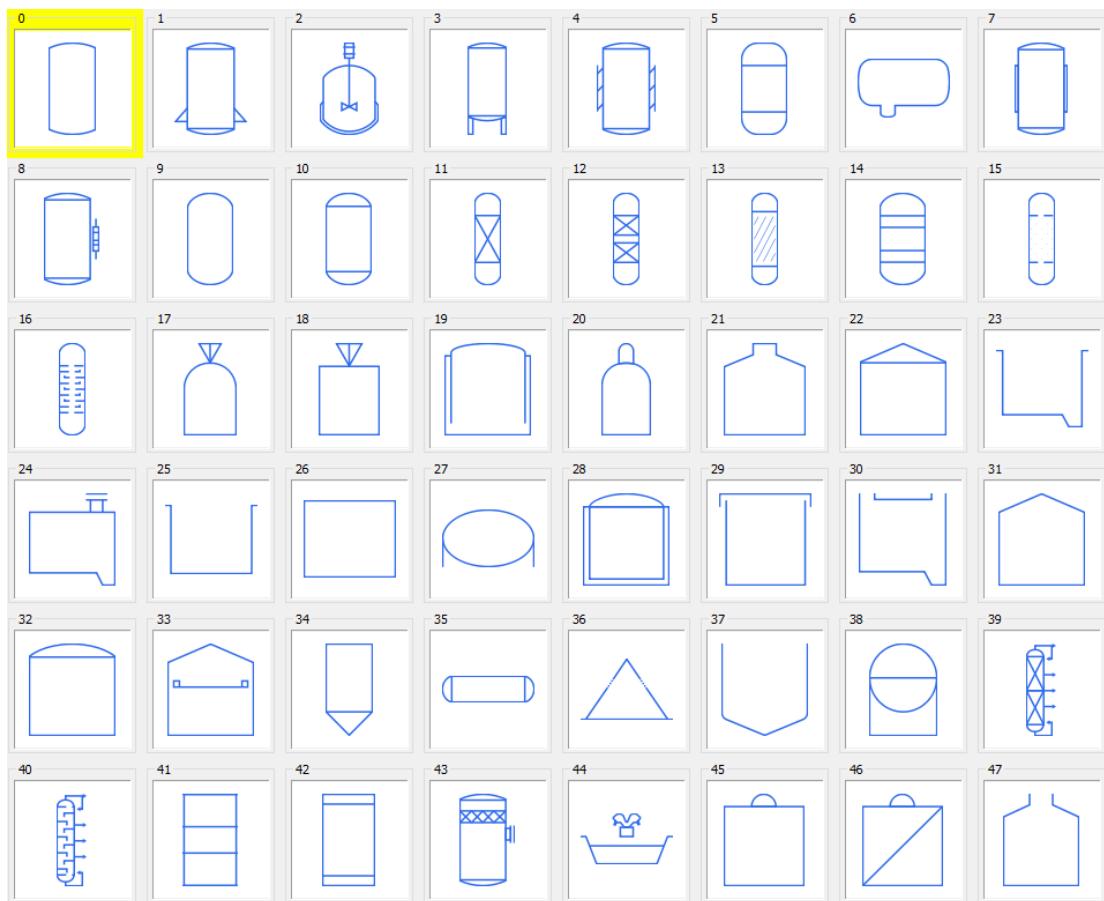


5 UI Element

5.1 System Background


5.1.1 Crystal

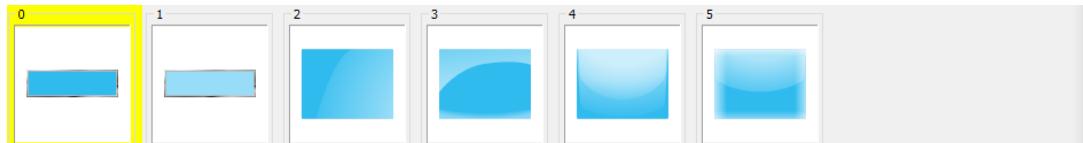


5.1.2 Flat

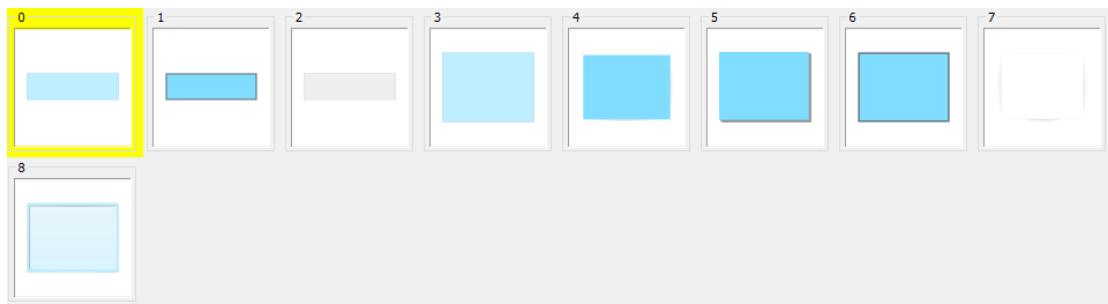

5.1.3 Ribbon

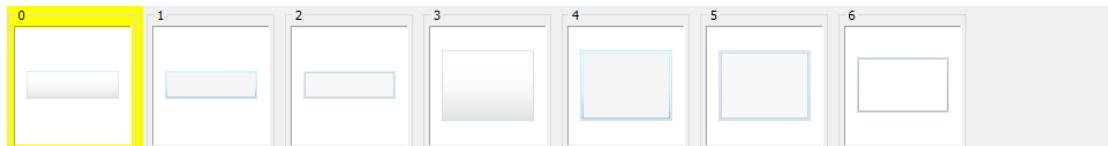

5.1.4 Standard

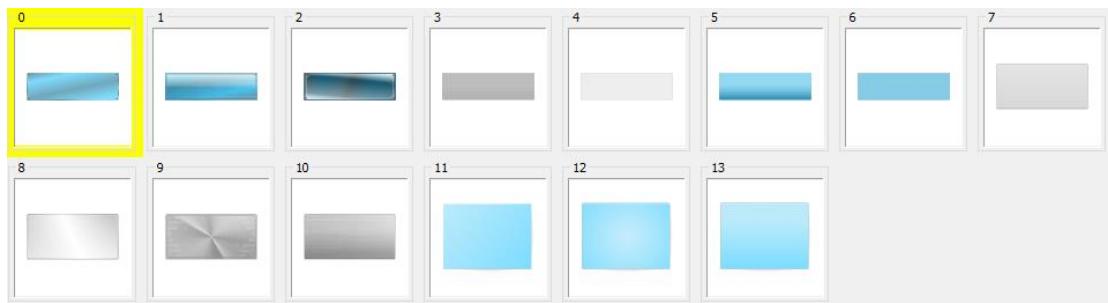


5.2 System Bar Graph

5.2.1 Ribbon




5.3 System Button


5.3.1 Crystal

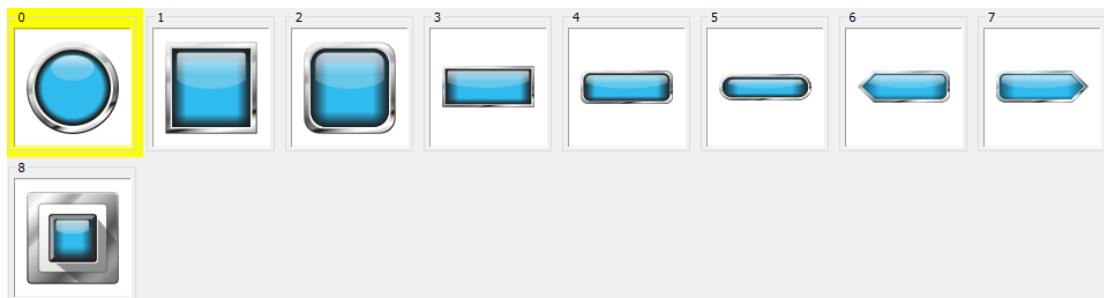


5.3.2 Flat

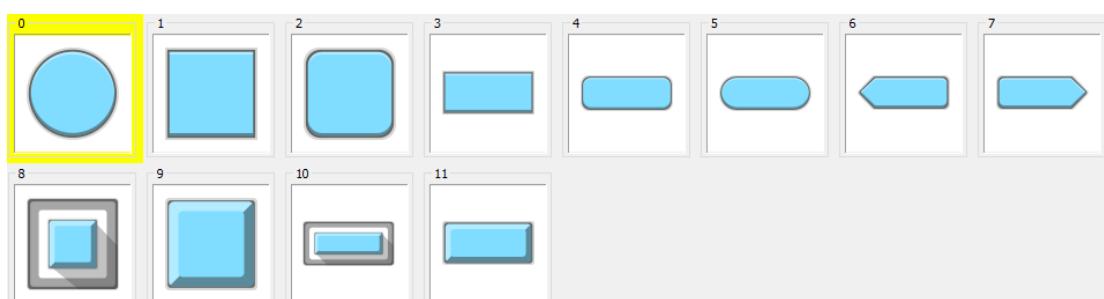

5.3.3 Ribbon

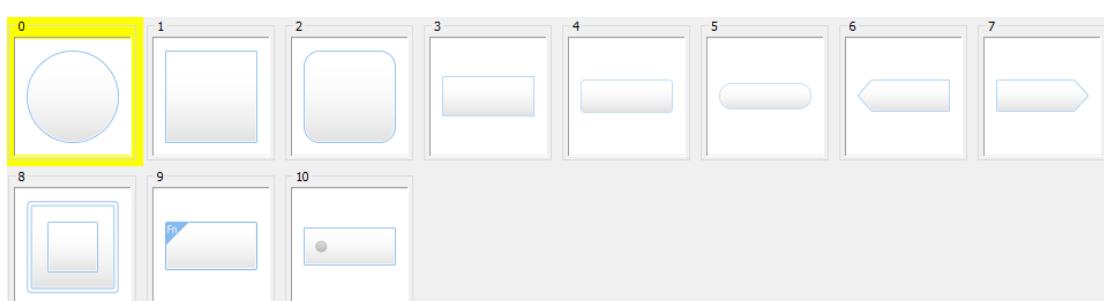

5.3.4 Standard

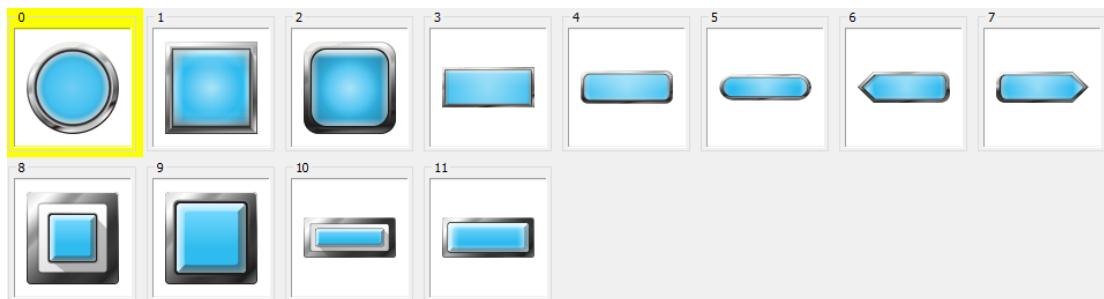


5.4 System Check Box

5.4.1 Crystal



5.4.2 Flat

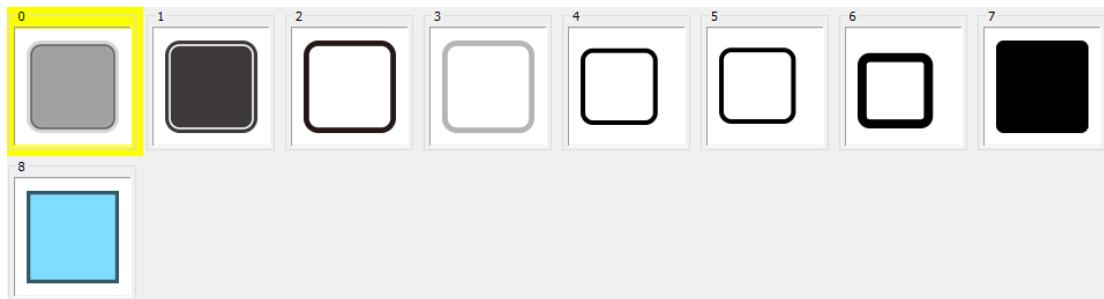

5.4.3 Ribbon




5.4.4 Standard




5.5 System Input Box


5.5.1 Crystal

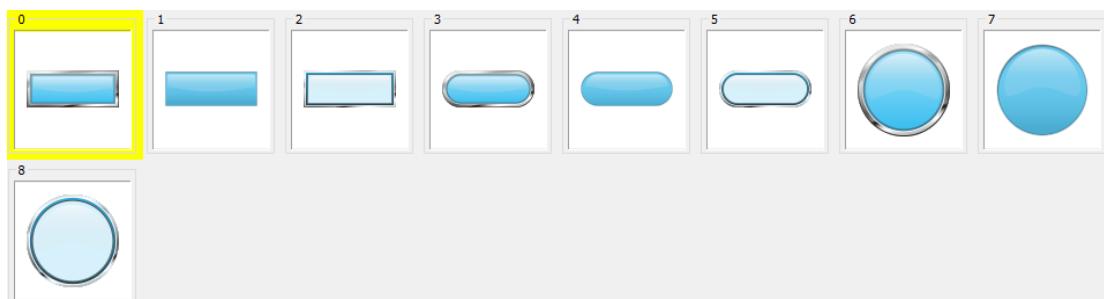


5.5.2 Flat

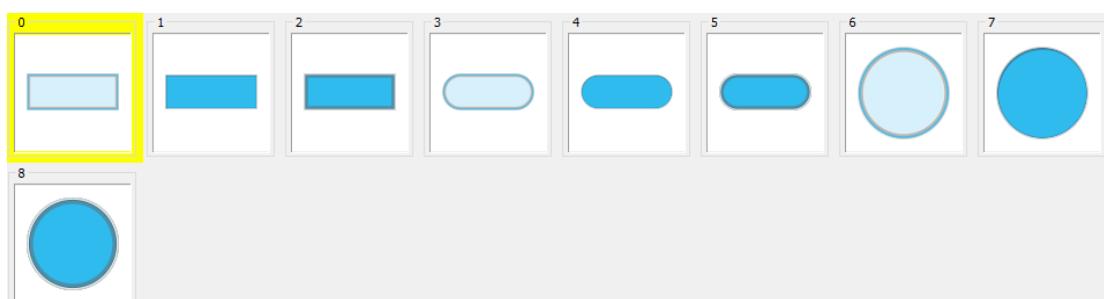

5.5.3 Ribbon

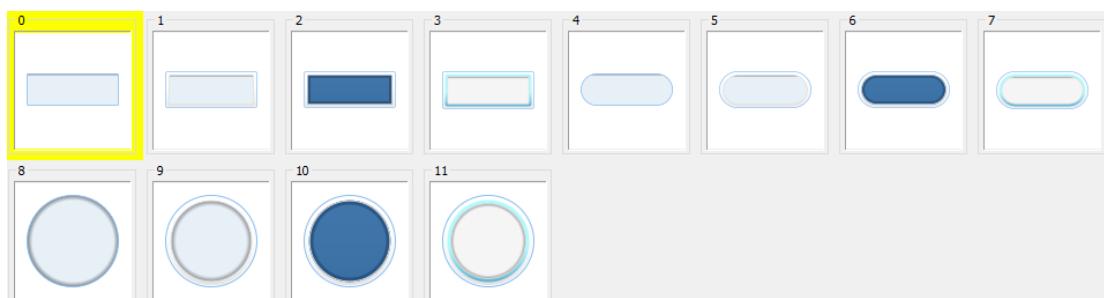

5.5.4 Standard

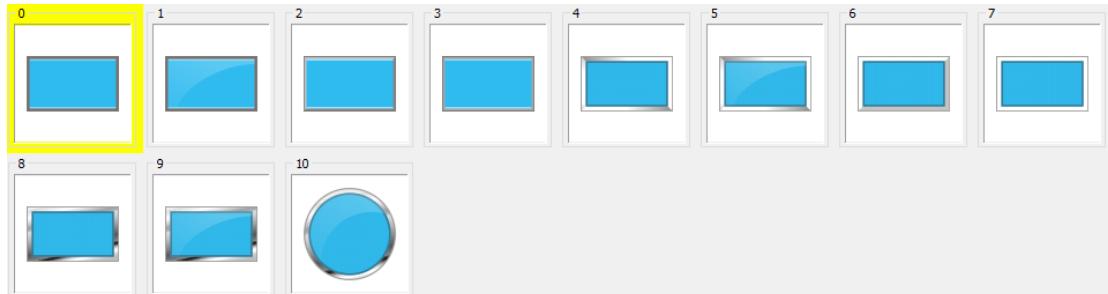


5.6 System Keyboard


5.6.1 Crystal




5.6.2 Flat

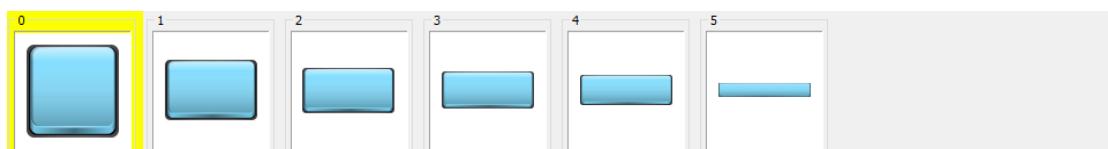

5.6.3 Ribbon

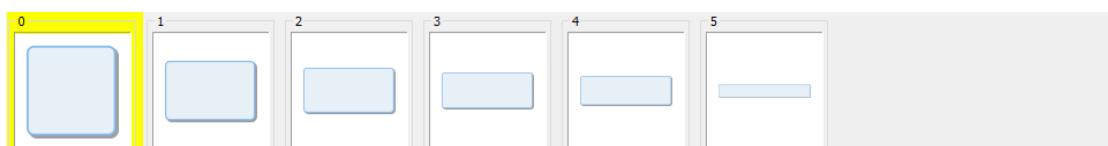

5.6.4 Standard

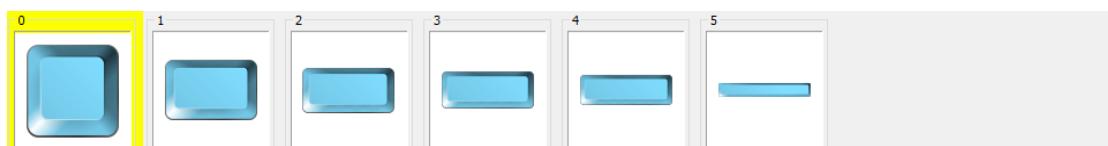


5.7 System Lamp


5.7.1 Crystal



5.7.2 Flat

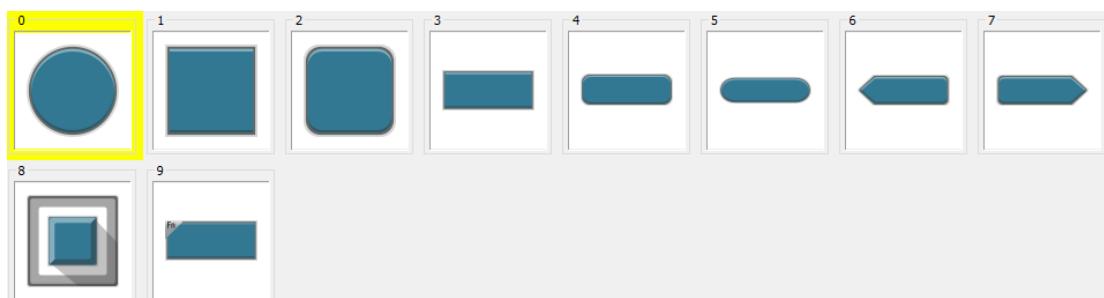

5.7.3 Ribbon

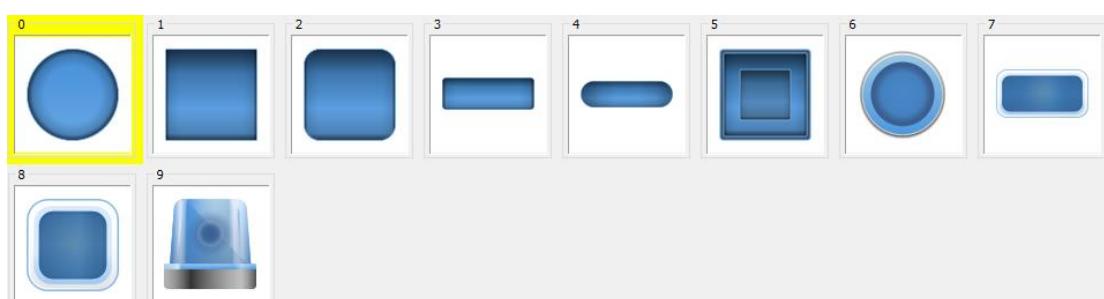


5.7.4 Standard



5.8 System Meter


5.8.1 Crystal

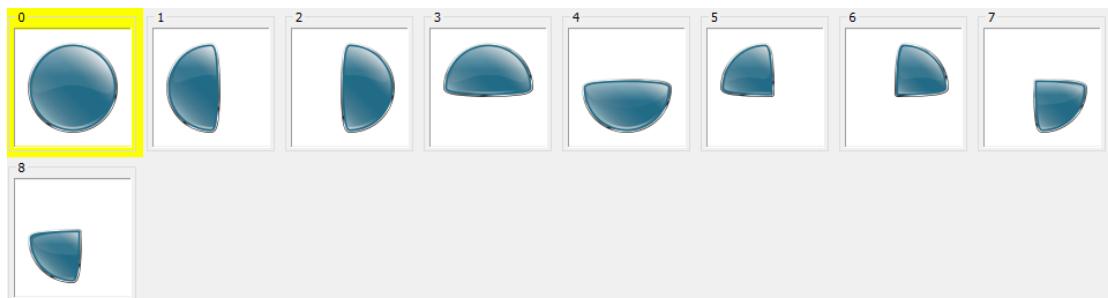


5.8.2 Gradient



5.8.3 Ribbon

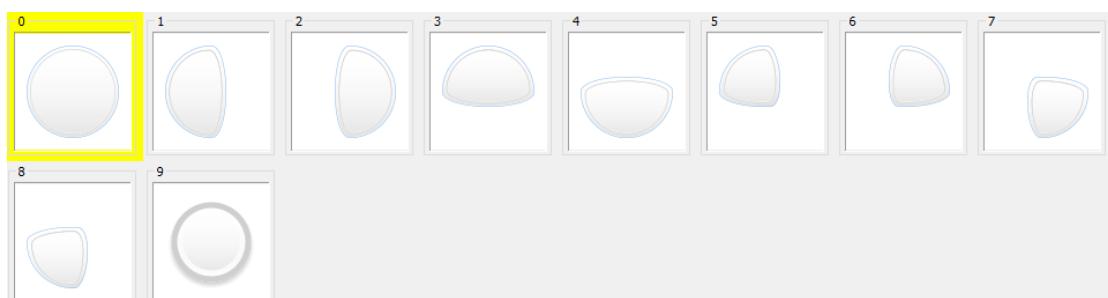


5.8.4 Standard

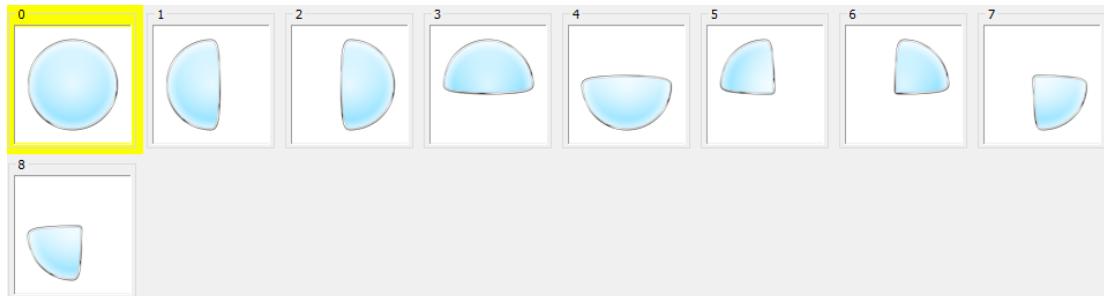

5.9 System Pipe

5.9.1 Standard

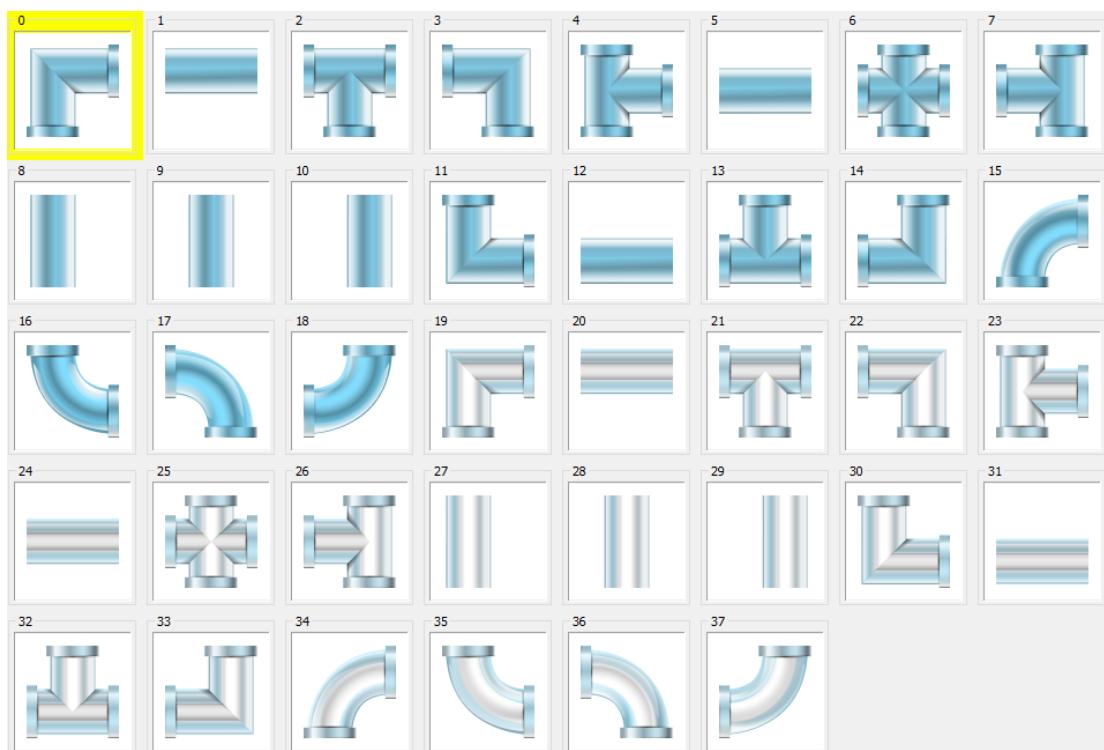


5.10 System Radio


5.10.1 Crystal




5.10.2 Flat

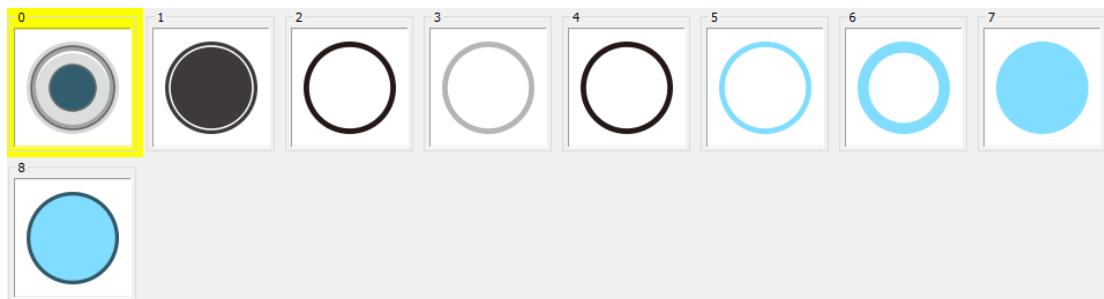

5.10.3 Ribbon

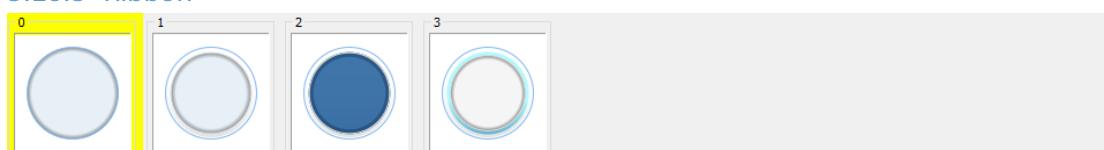

5.10.4 Standard

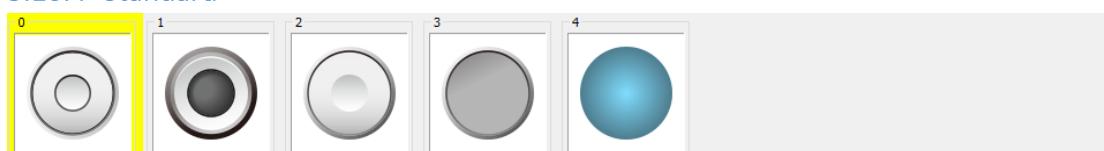


5.11 System Switch

5.11.1 Crystal



5.11.2 Flat

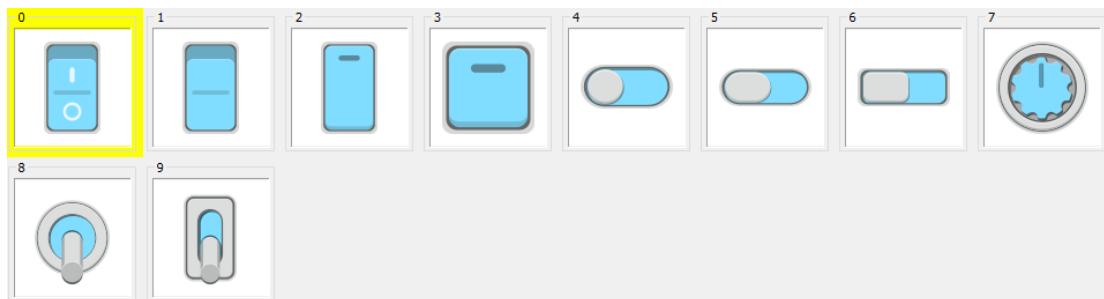

5.11.3 Ribbon




5.11.4 Standard




6 如何自訂圖庫

在系統圖庫中有些圖的順序不符合時，使用者可以自行按需求的順序複製到工程檔案圖庫。

如以下範例，若需要 System Control Panel – Selector Switch 第 0 個圖的狀態 1 和狀態 2 時，可以依照以下步驟設定。

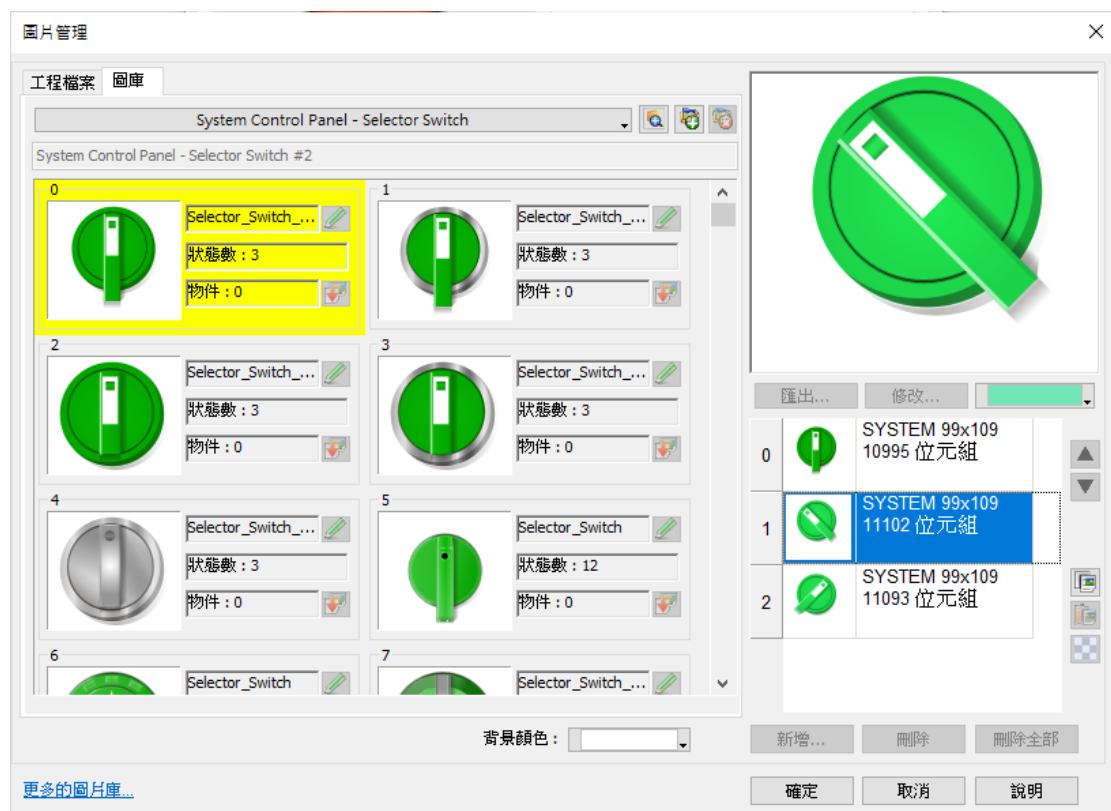


1. 先複製狀態 1。

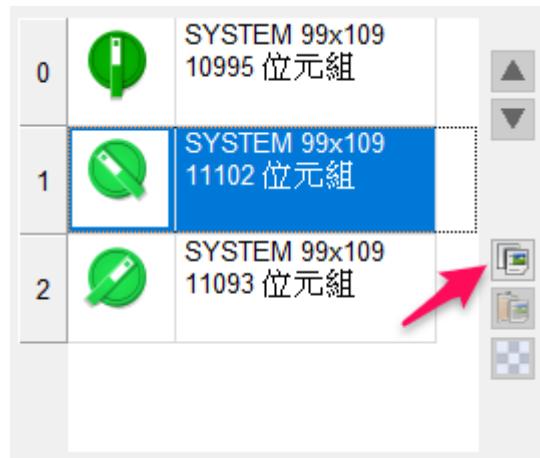

2. 在工程檔案圖庫按下 [新增圖片]。



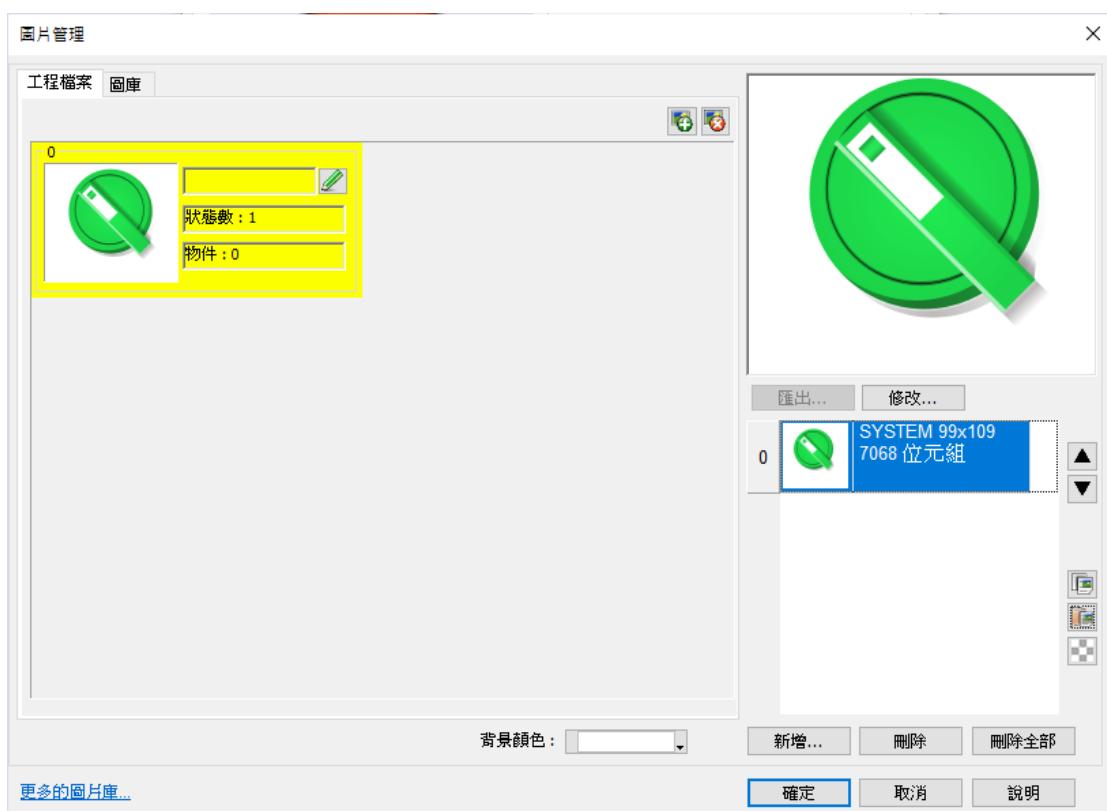

3. 再重複複製狀態 2 的圖片，這樣就完成一個二段選擇開關的圖。

