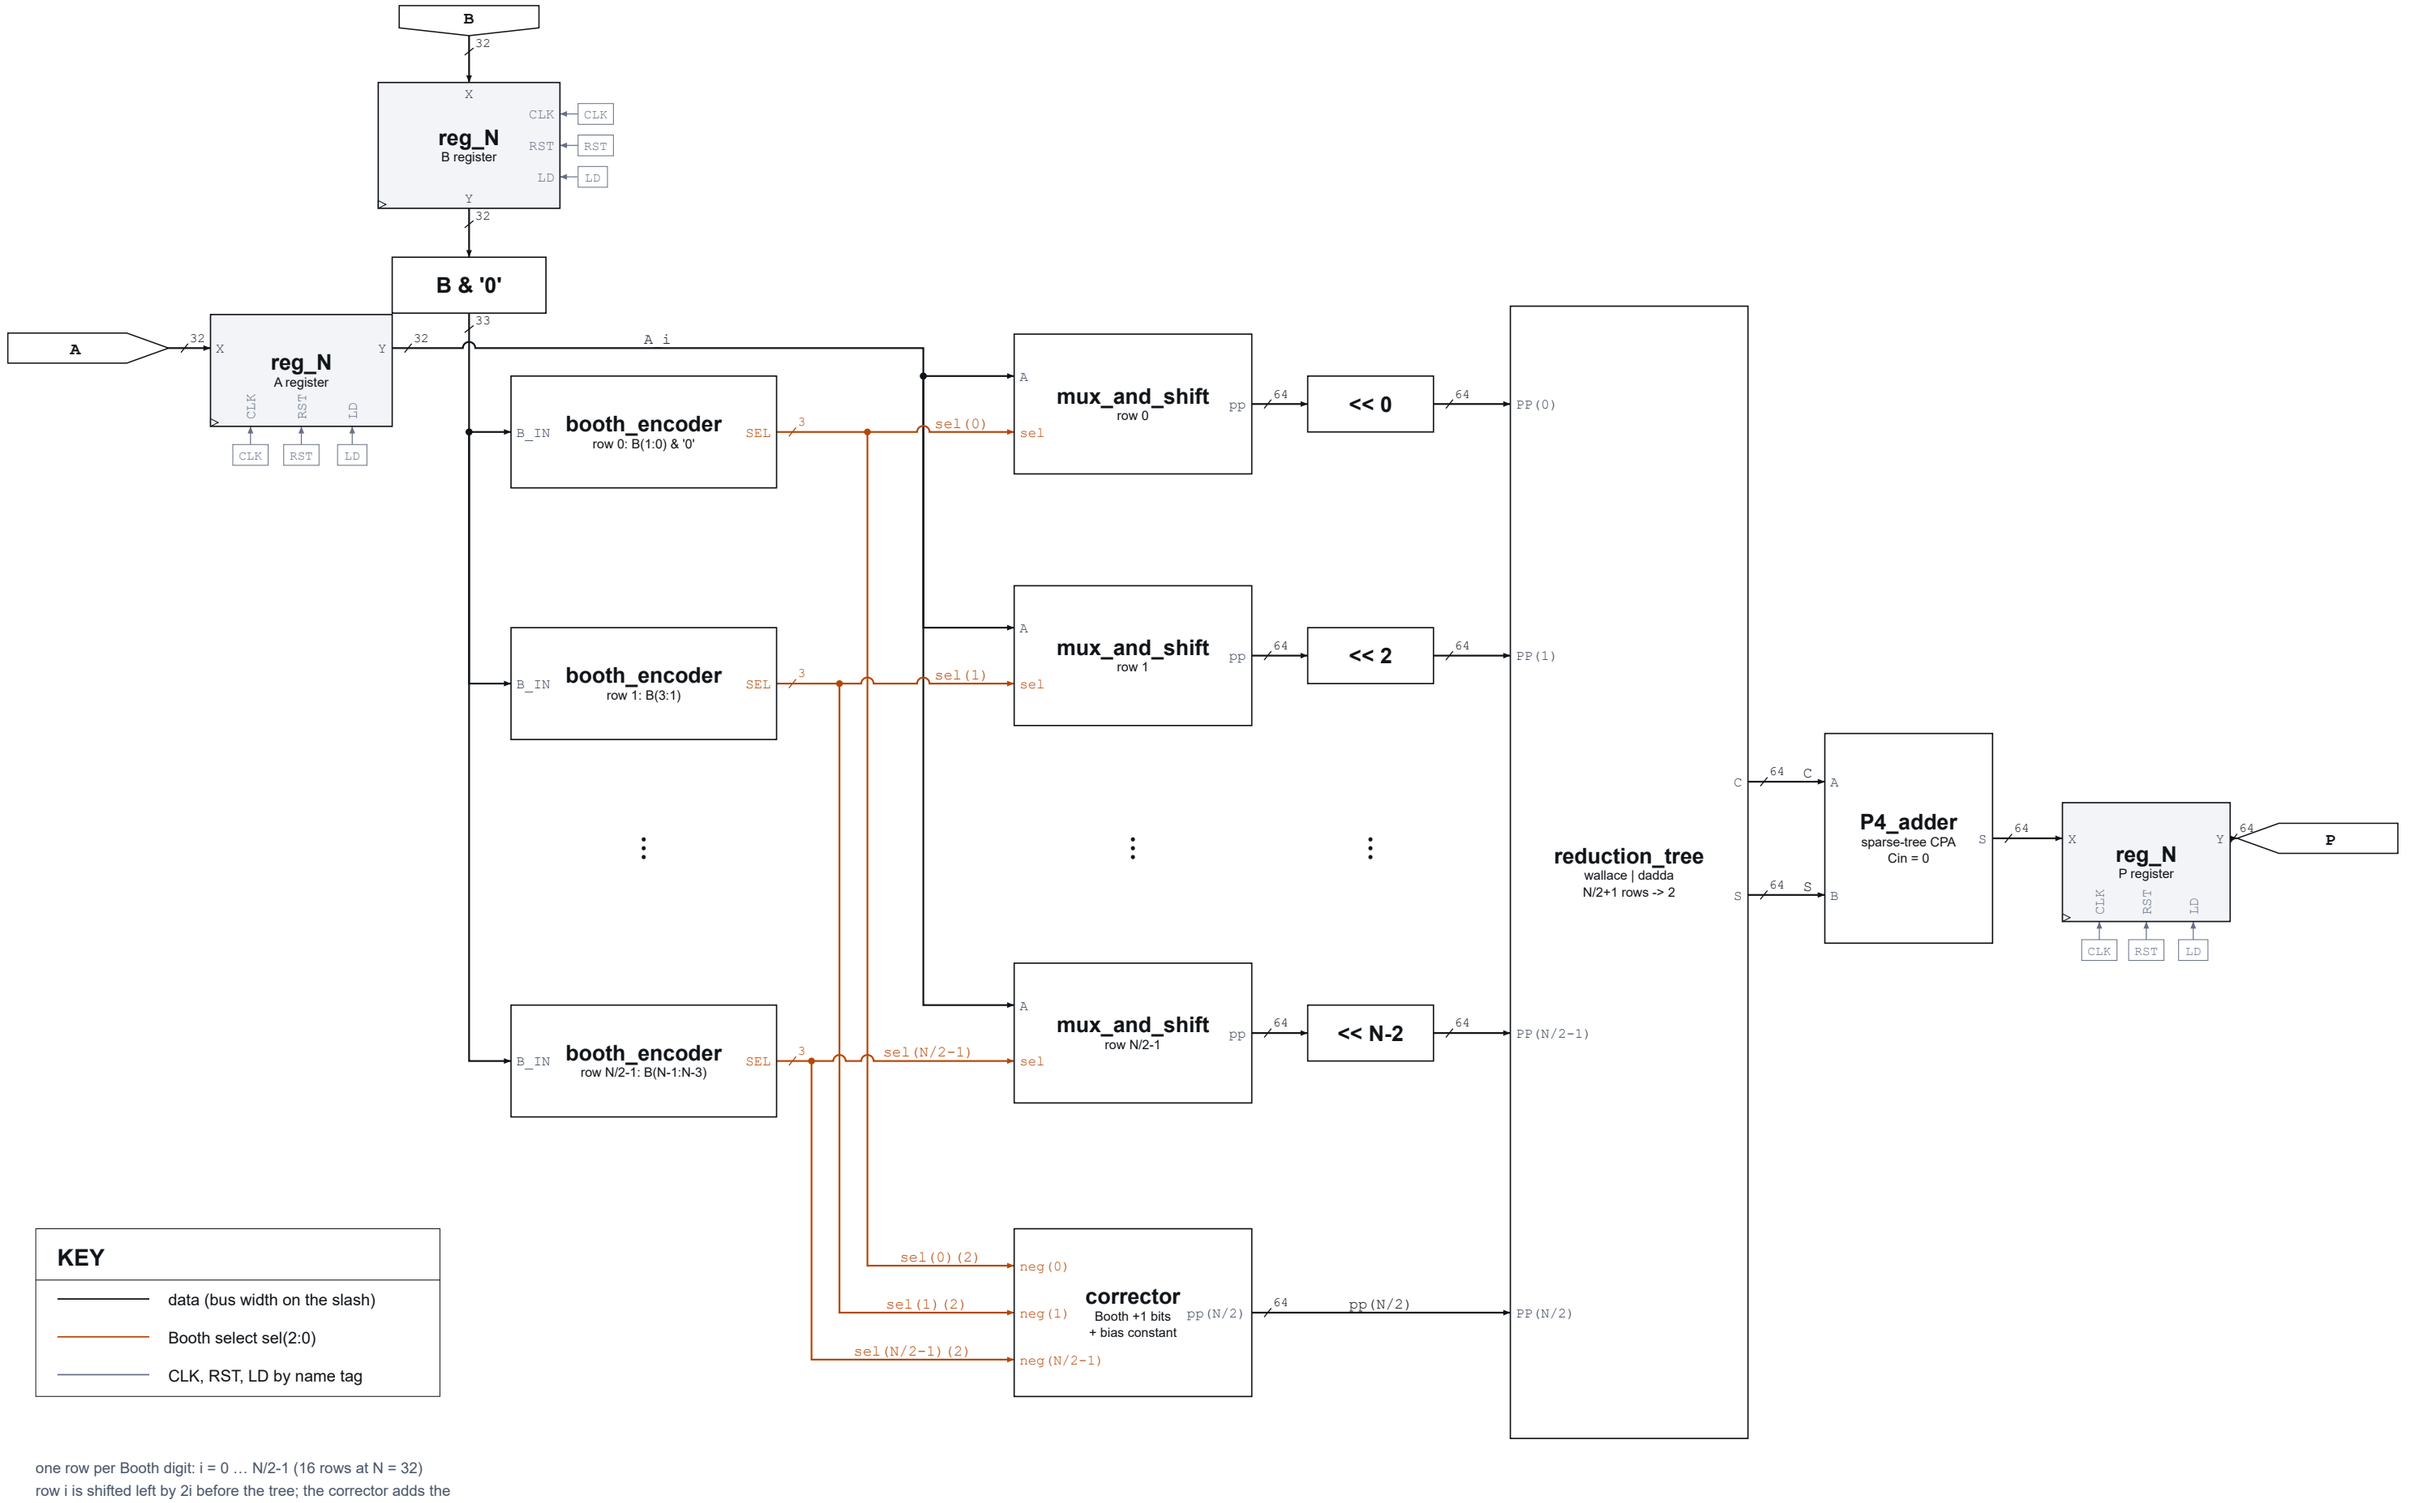


one row per Booth digit: i = 0 … N/2-1 (16 rows at N = 32)
row i is shifted left by 2i before the tree; the corrector adds the
Booth +1 of every negative row and the sign-extension bias constant