


NUCLEO-F446RE Bootloader State Machine

Binary Mode | UART2 @ 115200 | APP @ 0x08008000

Packet layout (little-endian):
[0x55 sync] [MagicNumber 4B] [CRC32 4B] [ImageSize 4B] [Firmware data...]

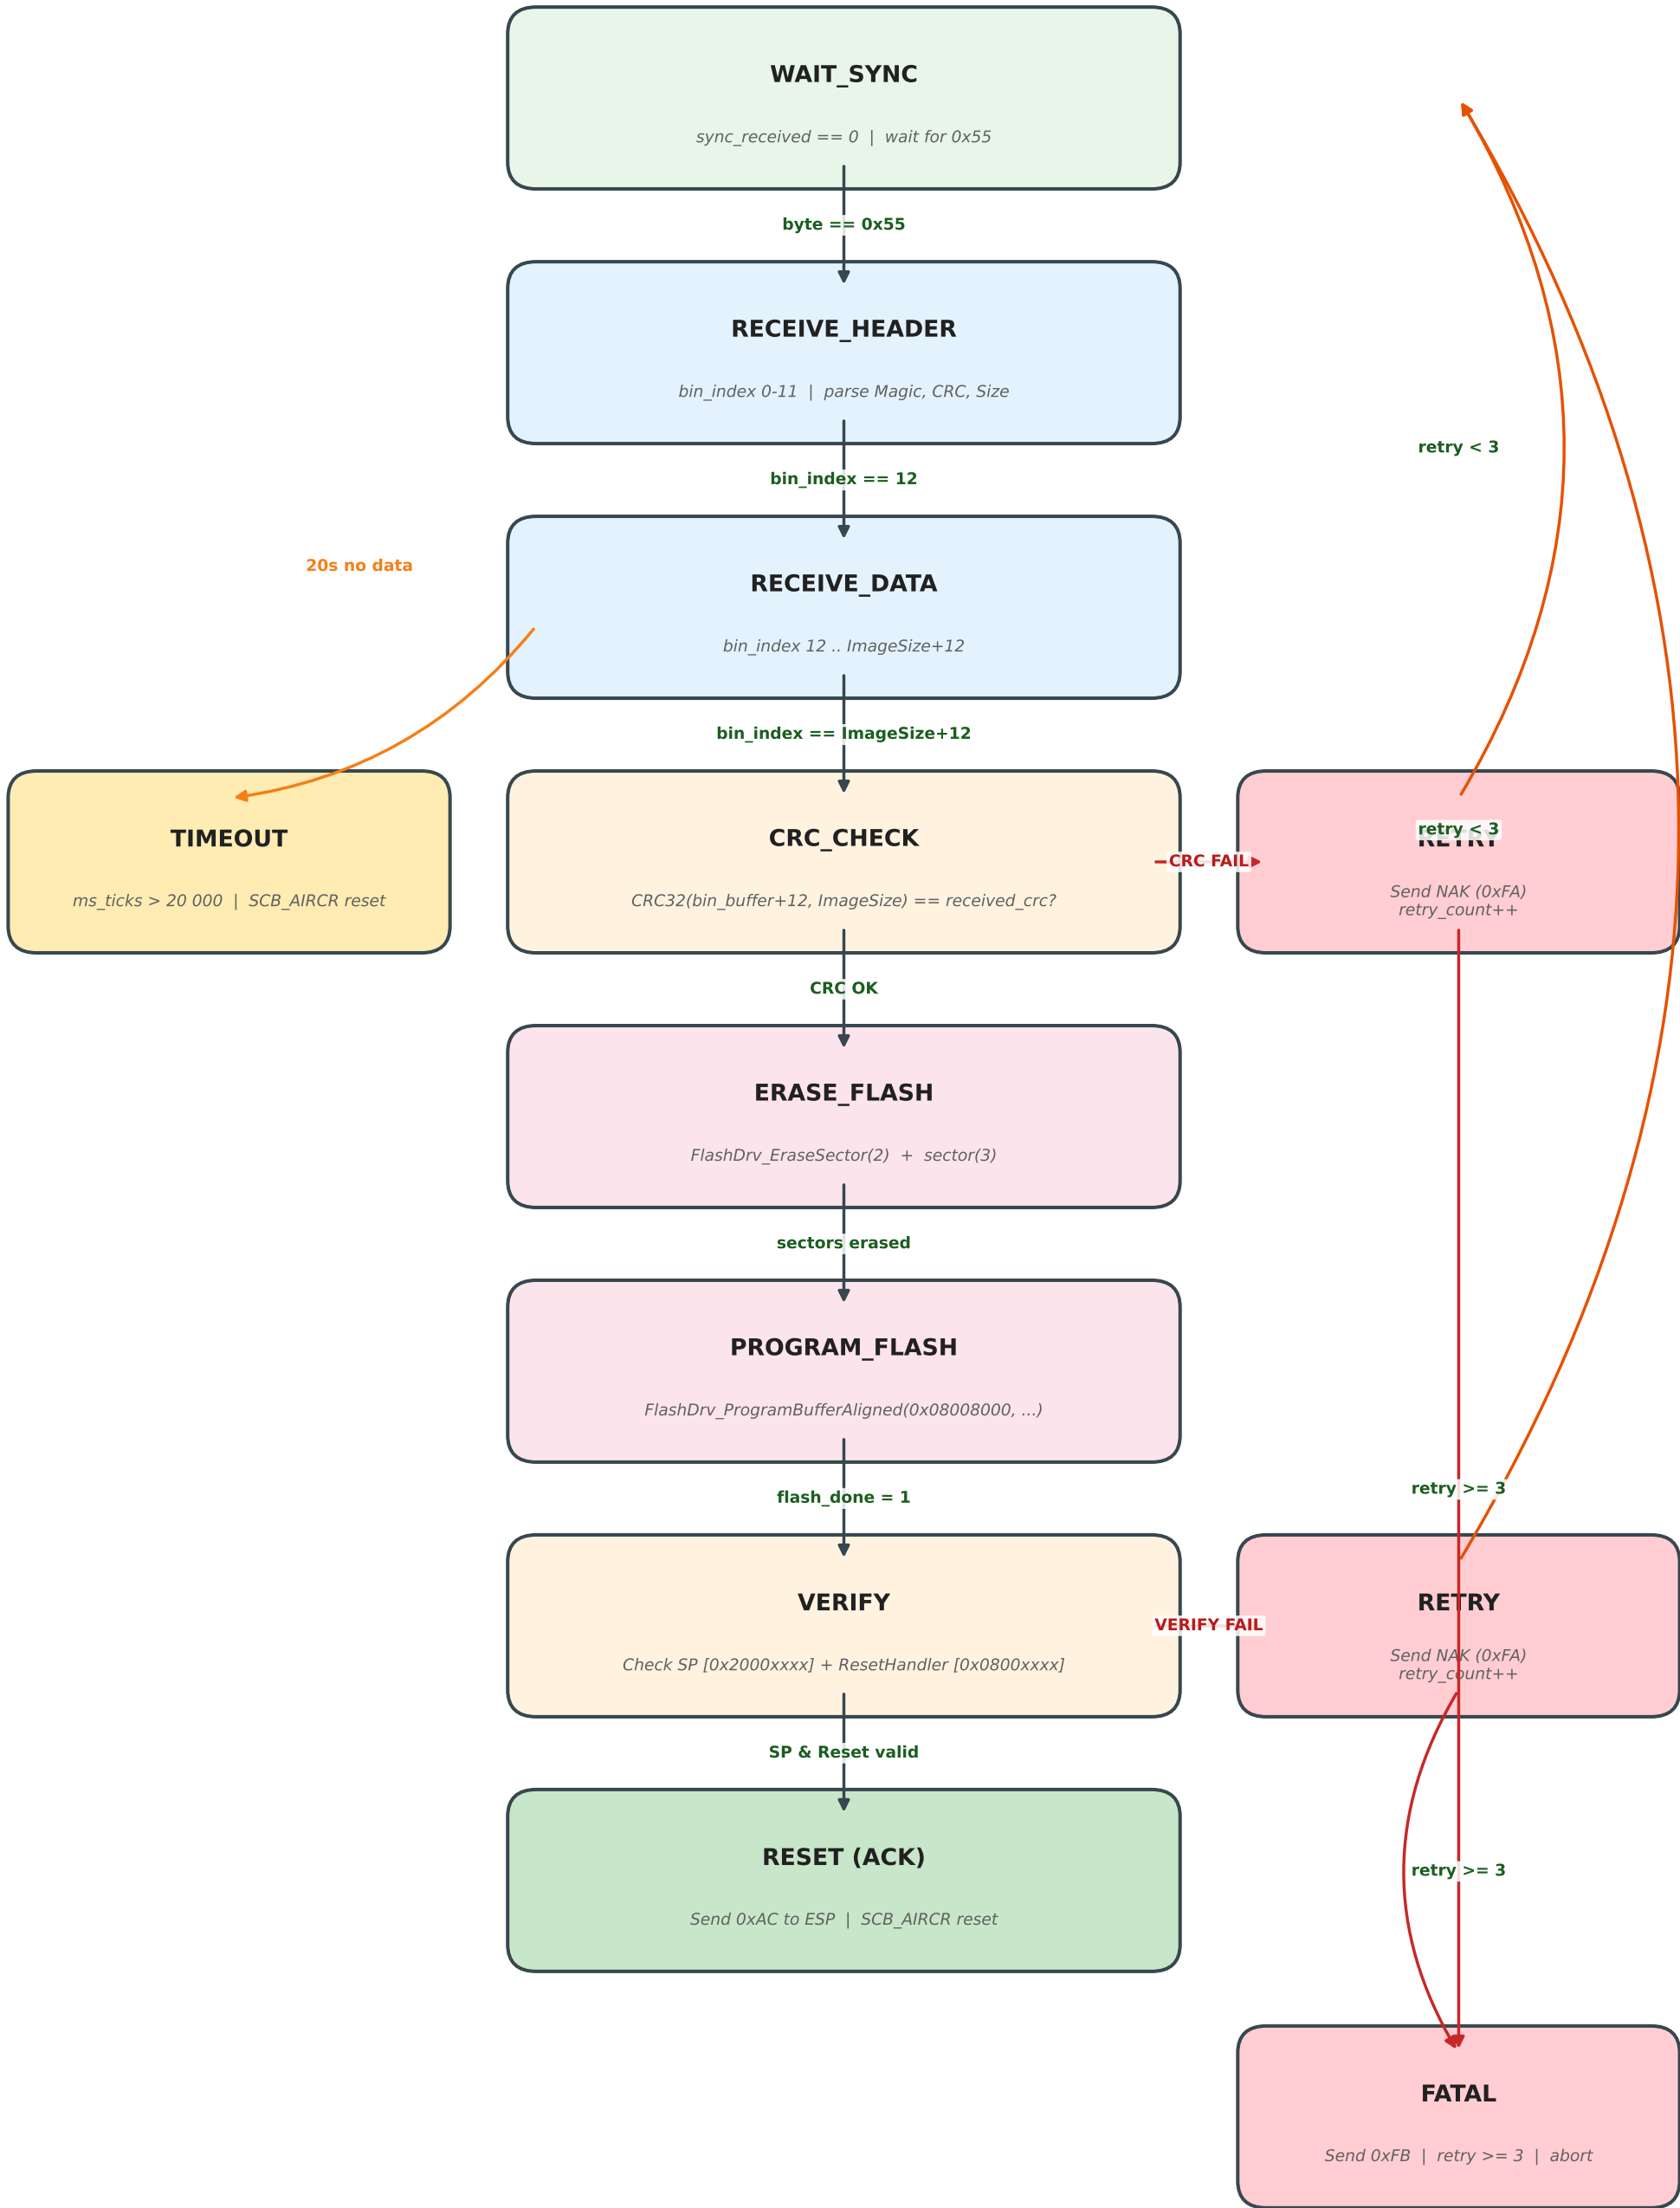

Legend:

- Idle / Init
- Receiving
- Validation
- Flash Operation
- Success
- Error / Retry
- Timeout