


RAPTOR

BLS-04

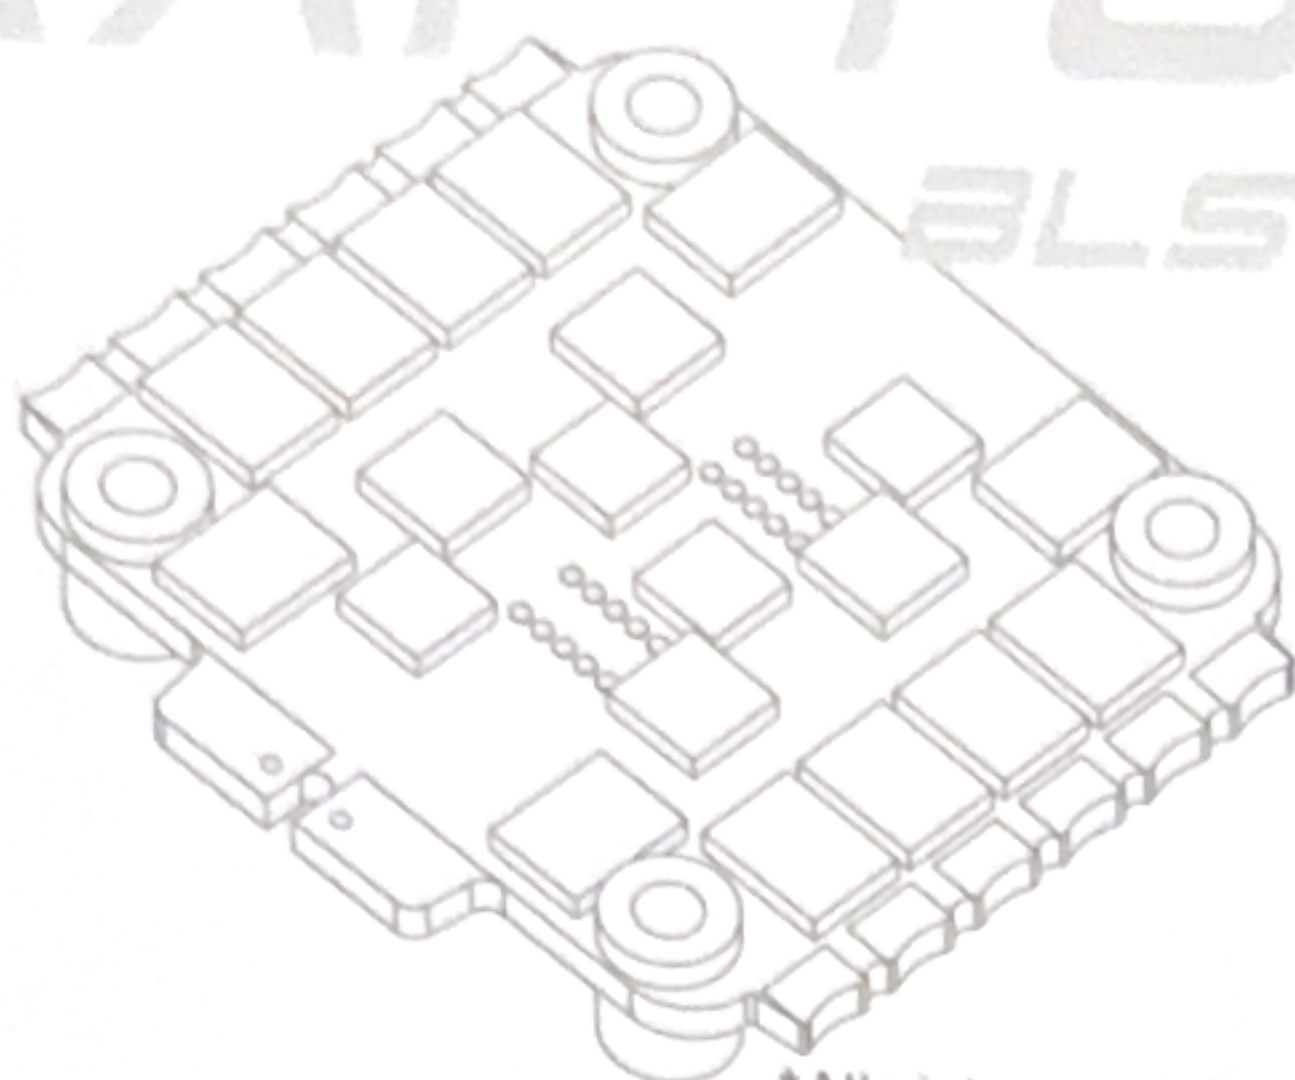

*All pictures are for reference only



Thank you for using our product. Any Improper operation may cause personal injury damage to the product and related equipments. This high power system for RC model can be dangerous ,we strongly recommend reading the user manual carefully and completely. We will not assume any responsibility for any losses caused by unauthorized modifications to our product. We have the right to change the design, appearance, performance and usage requirements of the product without notice.


01 Main features

- ESCs use EFM8BB21F16G MCU, pipelined 8-bit C8051 core with 50 MHz maximum operating frequency.
- Supports firmware 1: Bluejay, A-H-30 (Using Bluejay configurator). Supports firmware 2: BLHeli-S,A-H-30 (Using BLHeliSuite). Subject to specific model.
- Simplified and practical 4 in 1 ESC, extremely high cost performance ratio.
- Perfectly compatible with a range of flight controls such as Flycolor F4/F7/H7. Simply connect the flight control with a very short wire for faster installation.
- Dedicated 3in1 drivers, makes the start more smooth. ESC maximum speed is limited to 500k eRPM.
- Firmware is designed for superior performance in multirotors, and uses hardware generated motor pwm for smooth throttle response and silent operation.
- Built in current meter and Vbat battery voltage output.
- Silicon spacer for supporting could reduce the effect of vibration, makes the flight more stable.
- Bluejay firmware supports Dshot300 & Dshot600.
- BLHeli-S code supports regular 1-2ms pulse width input, as well as Oneshot125 , Oneshot42 and Multishot , supports all Dshot .
- Damped light does regenerative braking, causing very fast motor retardation, and inherently also does active freewheeling (BLHeli-S firmware).
- Supports higher power load, more suitable for violent flight of racing drone.

02 Specification



•Model:	Raptor BLS-04 4in1
•Con. Current:	45A ~ 65A (Subject to specific model)
•BEC:	No
•LiPo cells:	3-6S
•Weight:	16.2g
•Size:	45x41x5.8mm
•Mounting:	30.5x30.5mm,M3
•Configurator:	Bluejay configurator or BLHeliSuite
•Firmware :	A-H-30
•Application:	170-450 multi-rotors

03 Connect diagram

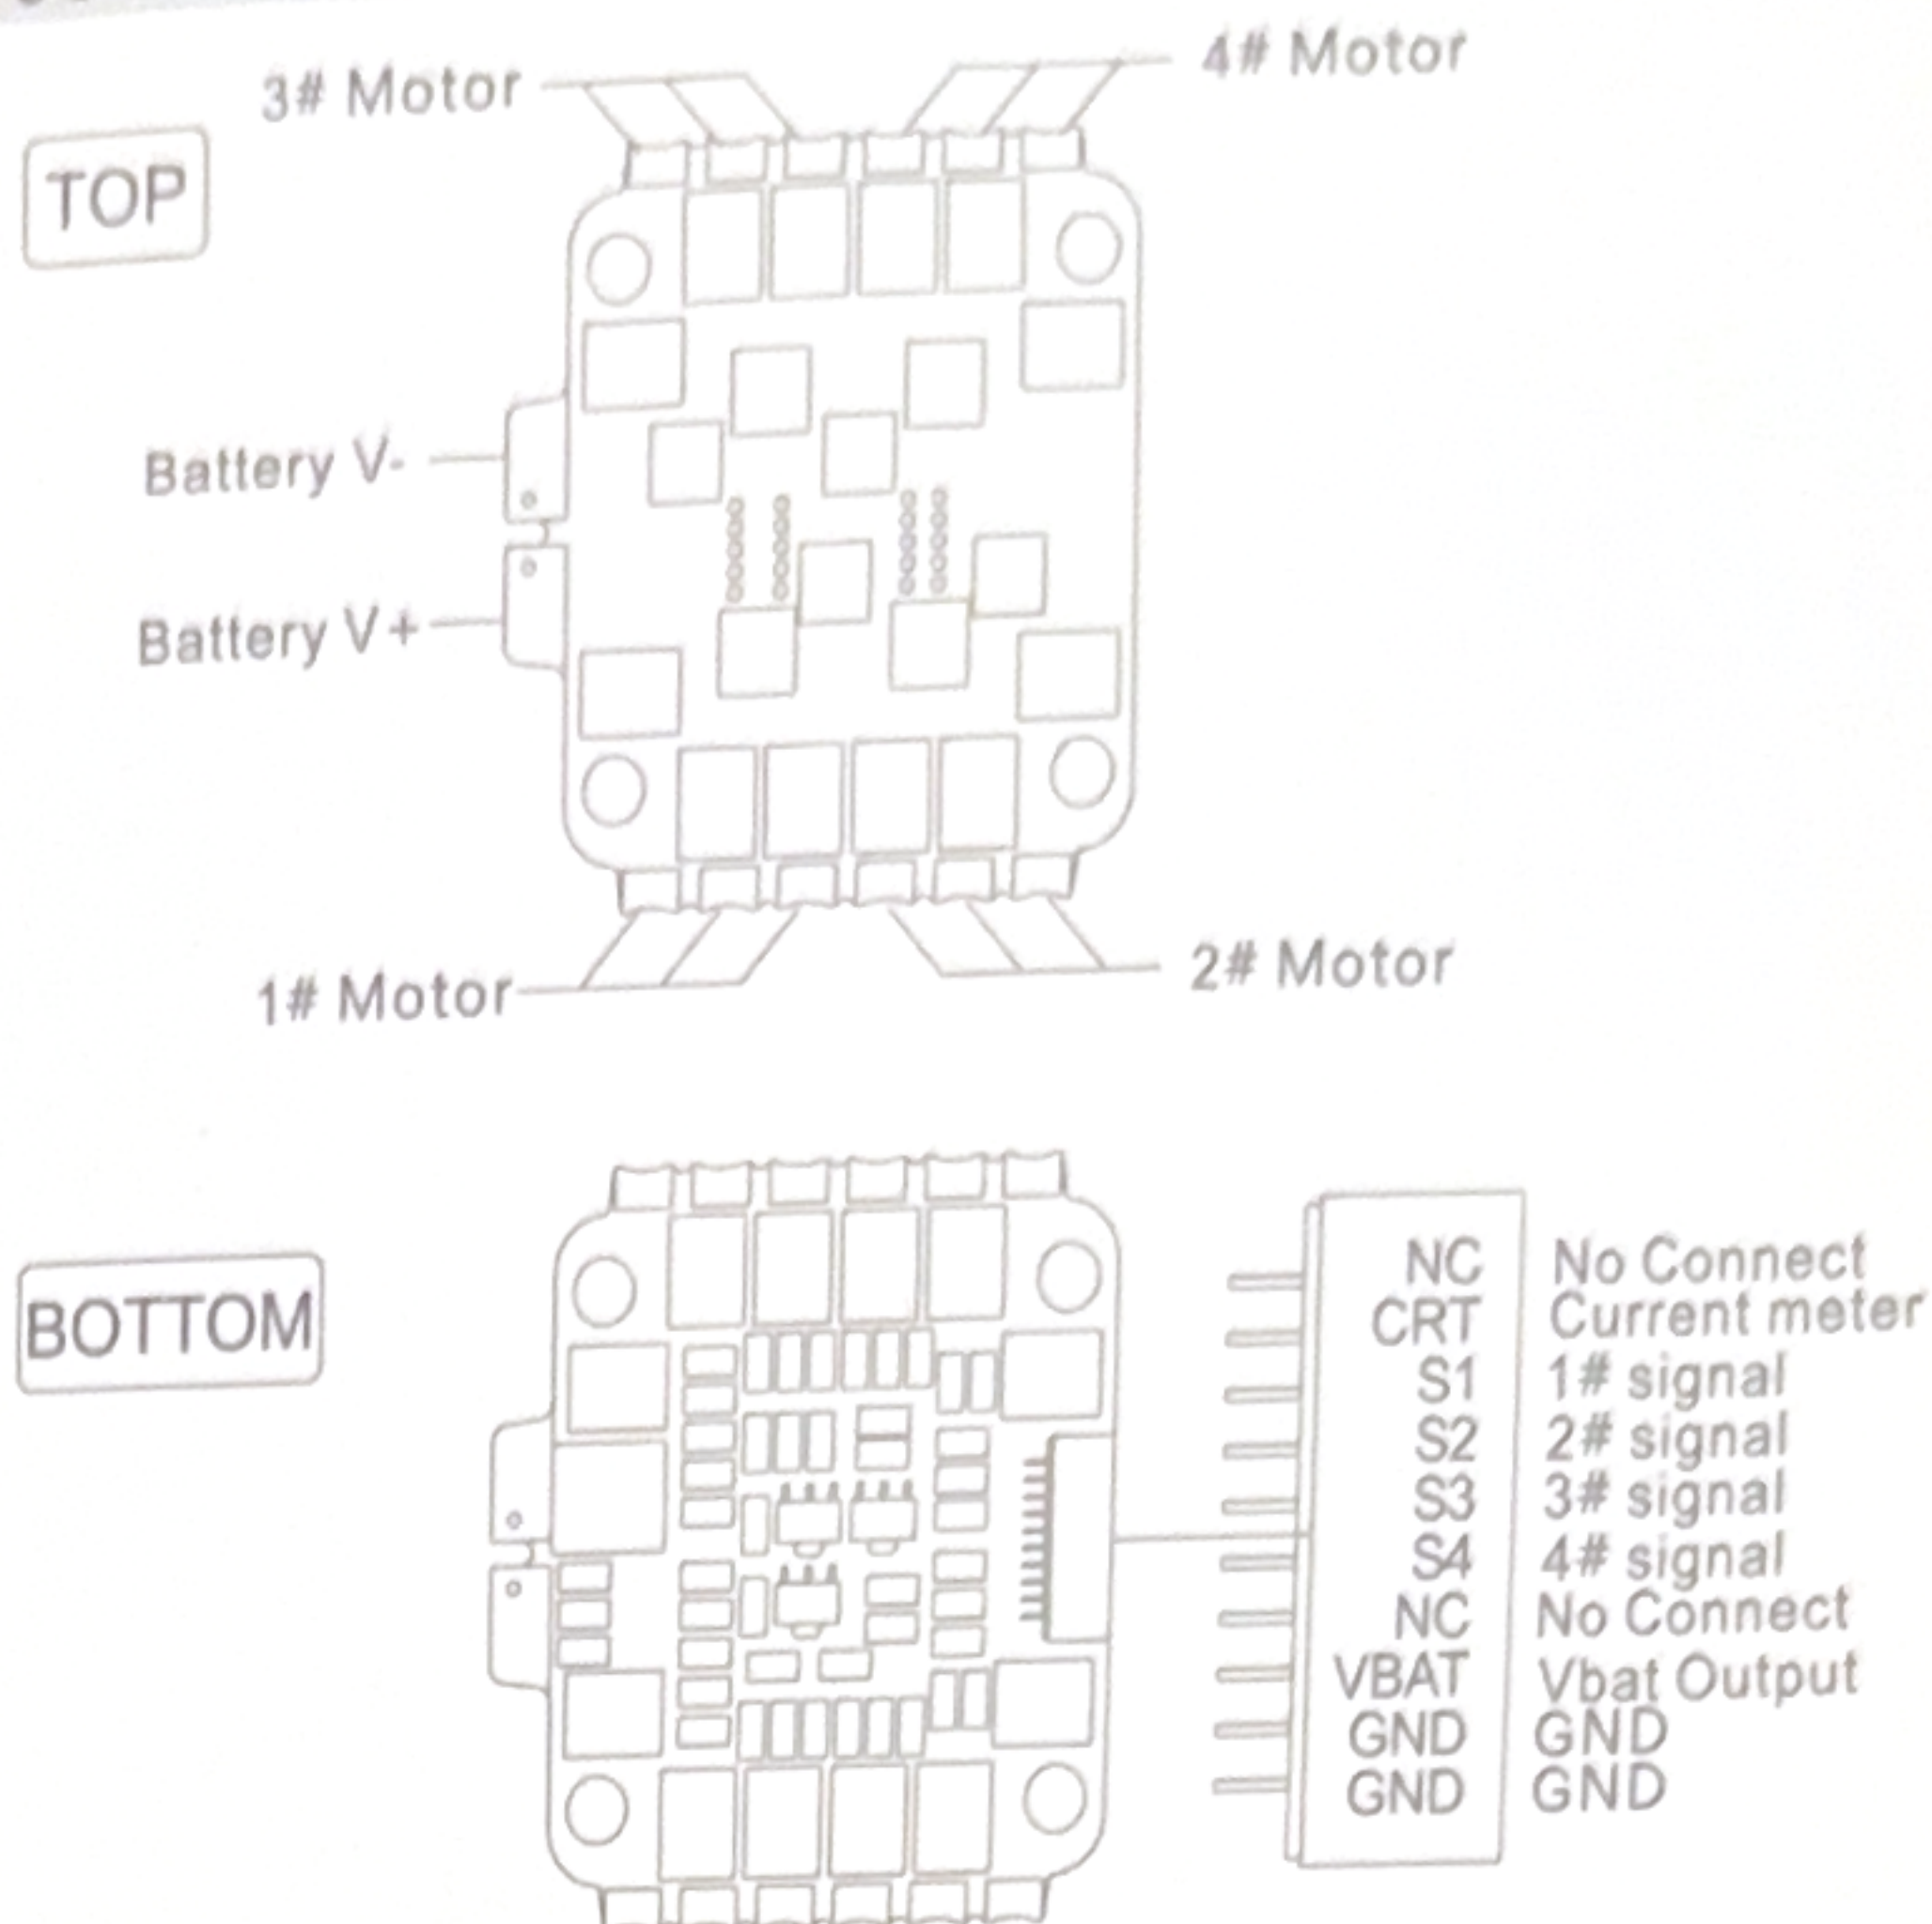

04 Part list

- Raptor BLS-04 4in1 1x
- Silicone vibration absorber 4x
- O-Ring 5x
- Power cable+XT60 1x
- FC/ESC connecting wire 1x
- Low ESR capacitor 1x

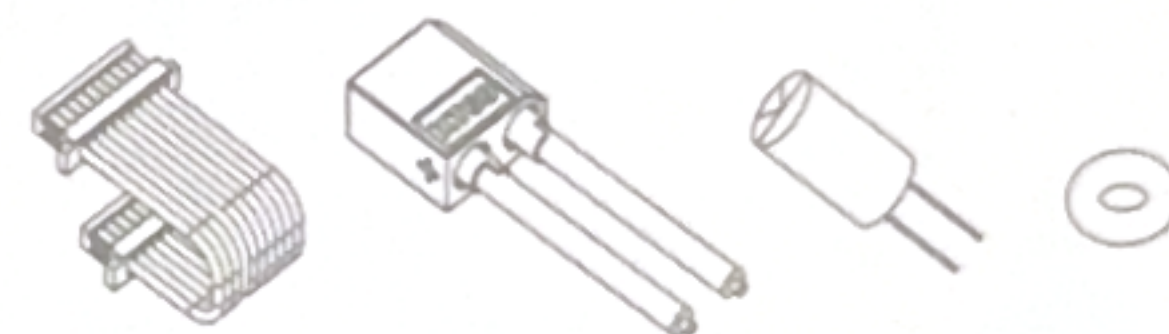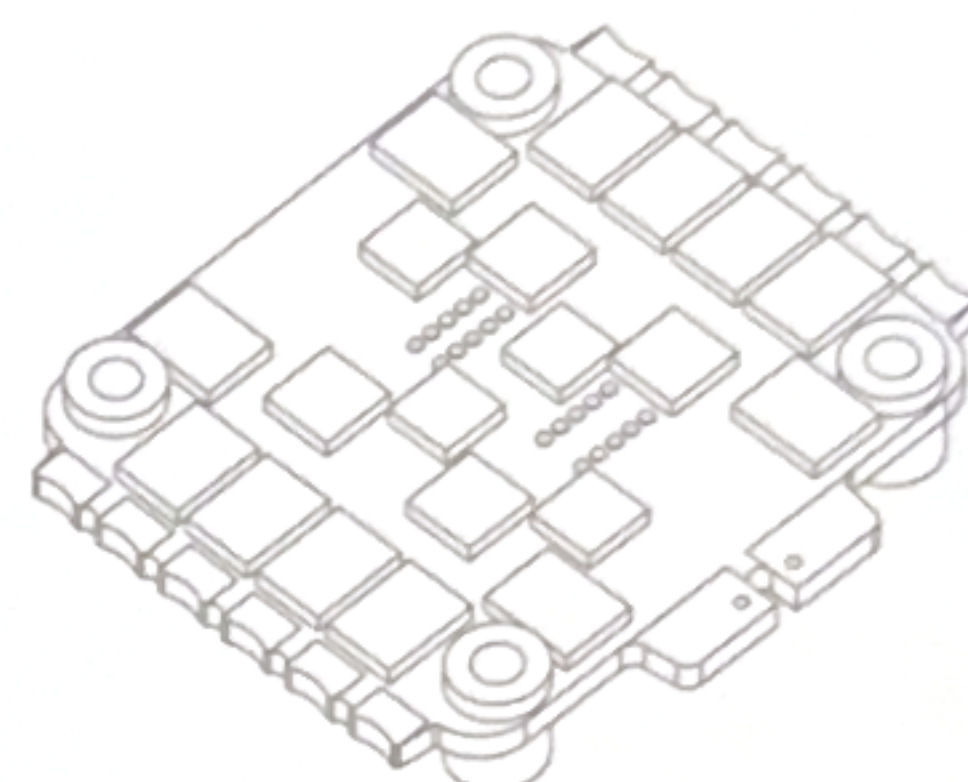

All pictures are for reference only

- Please use the parts supplied with the product for installation. Please ensure enough safety space between the ESC & Drone frames, as short circuit will damage the product.
- To enhance better filtering effect , please solder included capacitor to the positive and negative terminals on the ESC.
- Please use the wire supplied with the product for connecting. confirm the pinout and sequences between flight controller and ESC before applying power. Modify as necessary.

05 Attention

- ESC will automatically detect the input throttle signals every time as soon as it powered on, and then execute the corresponding signal-receiving mode.
- User need to calibrate the throttle range when starting to use a new ESC or another transmitter. When the input signal is Dshot, throttle calibration is disabled.
- Please don't flash any other firmware to avoid product damage..
- VBAT is battery output, make sure your device operating voltage is matched if you want to use VBAT.
- CRT.(Current)port can be connect to the port on F.C for current meter.
- Observe polarity at all times. Double check before applying power.
- Power off before unplugging ,plugging in or making any connections.
- Please do not exceed the current & voltage range.
- All welding requires good welding technology, short circuit between the element or the wire should be avoided at any time.
- Do everything you can to prevent vibrations.
- Please ensure that all wires and connecting parts are well insulated to avoid product damage due to short circuit.
- Never use this product in harsh environments such as humidity, high temperature, and so on to avoid product damage.
- Please contact sales or technical support for more information.



To view or change programmable items and parameter values, Please use BLHeliSuite or Bluejay configurator.