

ENRAGED RABBIT : CARROT FEEDER ASSEMBLY MANUAL

VERSION 2021.11.10

TABLE OF CONTENT

ASSEMBLY

Introduction	03
Filament Blocks	08
Gear Box	16
Bottom Block	36
Selector	42
Linear Axis	56
Final Assembly	64

SETUP AND TUNING

Toolhead sensor	74
Connections	86
Calibration	98
Installation on the printer	112
Final calibration step	116
General Guidelines	118
Slicer settings	122

INTRODUCTION

THE ENRAGED RABBIT PROJECT

This project aims to bring multimaterial capabilities to 3D printers using a single Direct Drive toolhead. While this project is mainly dedicated to be used on VORON printers, it can also be used (or adapted) on any 3D printer that runs Klipper, and potentially RRF.

Find all the project information on the Github page : <https://github.com/EtteGit/EnragedRabbitProject>

The project is composed of 4 different components :

- The Enraged Rabbit Carrot Feeder (ERCF). The Carrot Feeder allows to use a high number of different filaments (tested up to 9 tools so far) and feed them, one at a time, into the printer toolhead. The ERCF gear motion system (i.e. what is used to push and pull the filament) is based on the Voron Design M4 extruder.
- The Enraged Rabbit Carrot Patch (ERCP). It is a light spool-holder and buffer combo to help you deal with the filament management issue associated with multimaterial systems.
- The Enraged Rabbit King's Seat (ERKS). The King's Seat is a pellet-purge system to remove the need for a wipe-tower and make faster filament purges. This system is designed for VORON V2s only so far.
- The filament sensor : a filament sensor system located below the extruder gears to check proper loading and unloading of filament.

The ERCF was inspired by the Prusa MMU2 and the Smuff.

ACKNOWLEDGEMENTS

It is important for me to mention that while I started this project alone, many people have joined along the way and have participated (and still are) in this adventure, whether it is by providing feedback, developing a mod or simply expressing kind words. I would never been able to do all of that without this support, thanks a lot!

I would like to particularly thank Tircown (the master of sensors!), the Voron Dev team (special mention to Dunar), Benoit, Dustin Speed, Kageurufu and the HonHonHonBaguette people!

Ette // Romain

INTRODUCTION

STL FILE KEY

The STL file naming convention is the same as for VORON designs, namely :

PRIMARY COLOR	ACCENT COLOR	QUANTITY REQUIRED
Example Filament_Block_xN.stl These files will have nothing at the start of the filename.	Example [a]_Blocks_End_Feet.stl These files will have "[a]" to the front to mention that they are intended to be printed with an accent color.	Example Filament_Block_xN.stl If a file ends with "_x#", that is telling you the quantity of that part required to build this system. For the ERCF, "N" means the number of tools.

PRINT GUIDELINES

The print guidelines are also the same as for VORON designs, namely :

FDM MATERIAL The ERCF was tested only with ABS, so I recommend to use ABS to build the ERCF.	INFILL TYPE Grid, Gyroid, Honeycomb, Triangle or Cubic.
LAYER HEIGHT Recommended : 0.2mm	WALL COUNT Recommended : 4
EXTRUSION WIDTH Recommended : Forced 0.4mm	SOLID TOP/BOTTOM LAYERS Recommended : 5
INFILL PERCENTAGE Recommended : 40%	SUPPORTS REQUIRED None at all.

Beware that this project requires a well tuned printer and slicing profile, as there are many press fits and plastic on plastic mechanisms. You should first print the ERCF_Calibration_Tool.stl, test the part, as shown in the manual, tune your printer and profile if needed, and then only print the rest of the parts.

INTRODUCTION

HOW TO GET HELP

If you need assistance with your build you can head over the VORON Discord group and post your questions (typically in the « voronuser_mods » channel). It is the primary medium to help people with their ERCF build and tuning! You can also check the Github page for the latest releases.



<https://discord.gg/xgXWctB>



<https://github.com/EtteGit/EnragedRabbitProject>

FINAL THOUGHTS

Building and using a multi-filament system can be a daunting task. Take your time! Little issues in the assembly phase tend to stack up and cause you trouble later on. If at any point you get stuck or are just not sure about something, please ask on Discord. There are no stupid questions!


You already probably heard that multi-filament systems are quite often a pain to deal with, and that's quite true. While the goal for the Enraged Rabbit Project is to offer a cool, reliable and easy to use system, you'll probably face issues at one time or another. Check the documentation, the guides and, again, don't hesitate to come on the Discord and ask. There are plenty of possible issues, and there is a very high chance it's been seen and solved already.

Have fun building and using the ERCF!

CALIBRATION PART

CALIBRATION TOOL

Use this print to ensure your printer and slicing profile are properly tuned to have a pleasant ERCF assembly experience.

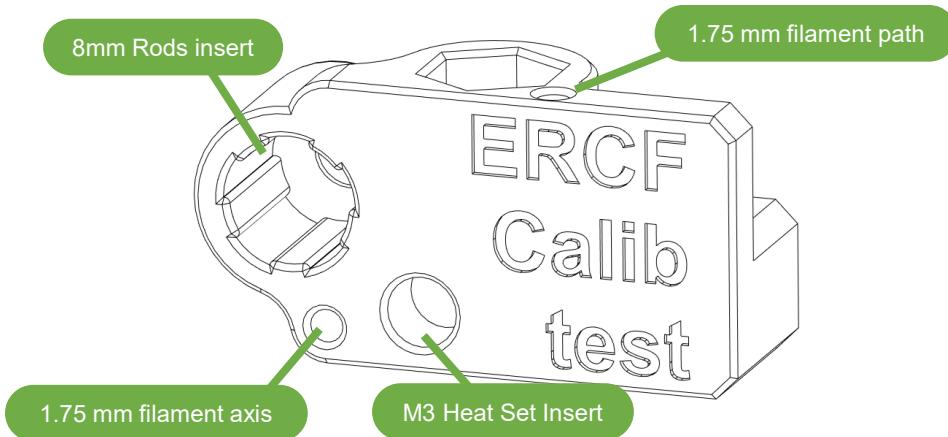

TESTS


Make sure you can insert the different hardwares in their dedicated slots.

There is also a « Filament path » so you can check that 1.75mm filament slides through without friction. The « Filament axis » should have friction.

For the Top Hat, insert the arm of the Top Hat into the slot. You'll have to find the proper orientation to have a smooth insertion, you should not force much.

Once inserted, the Top Hat should be able to move up and down easily.

To remove the Top Hat, pull it up while rotating it.

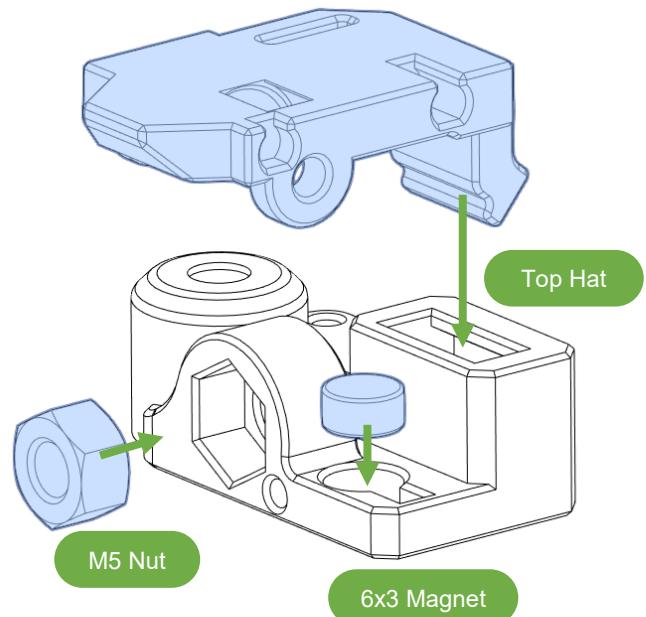

HEAT SET INSERTS

HEAT SET INSERTS

This design relies heavily on heat set inserts. If you've never worked with heat set inserts before, watch this guide :

<https://www.youtube.com/watch?v=cyof7fYFcQ>


Here is a list of all the pages of this manual where you need to insert those in the 3D printed parts, so you can do this step at once for the whole assembly :

- Page 20
- Page 22
- Page 23
- Page 39
- Page 45
- Page 49
- Page 59


FILAMENT BLOCKS



OVERVIEW

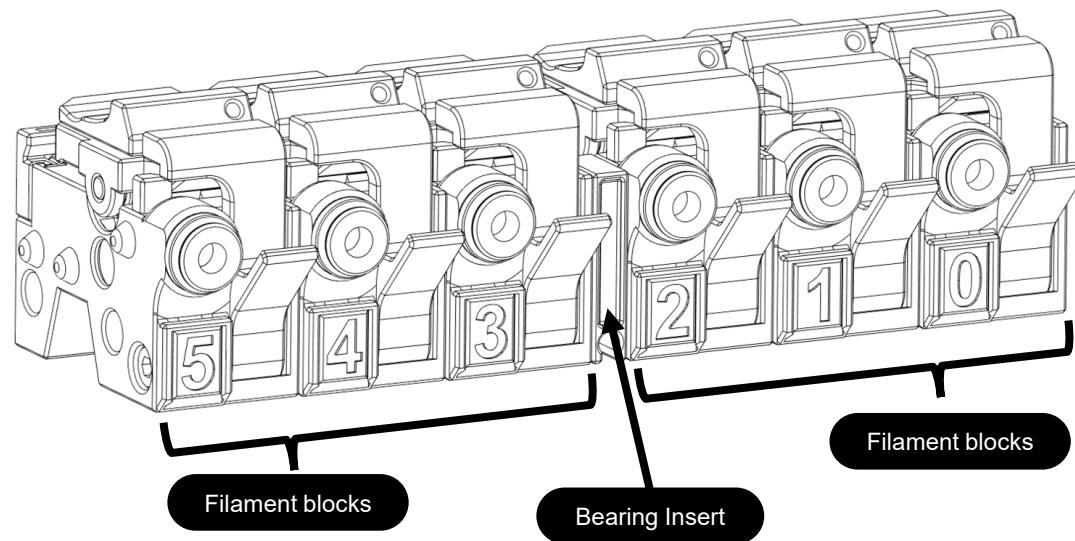

FILAMENT BLOCKS

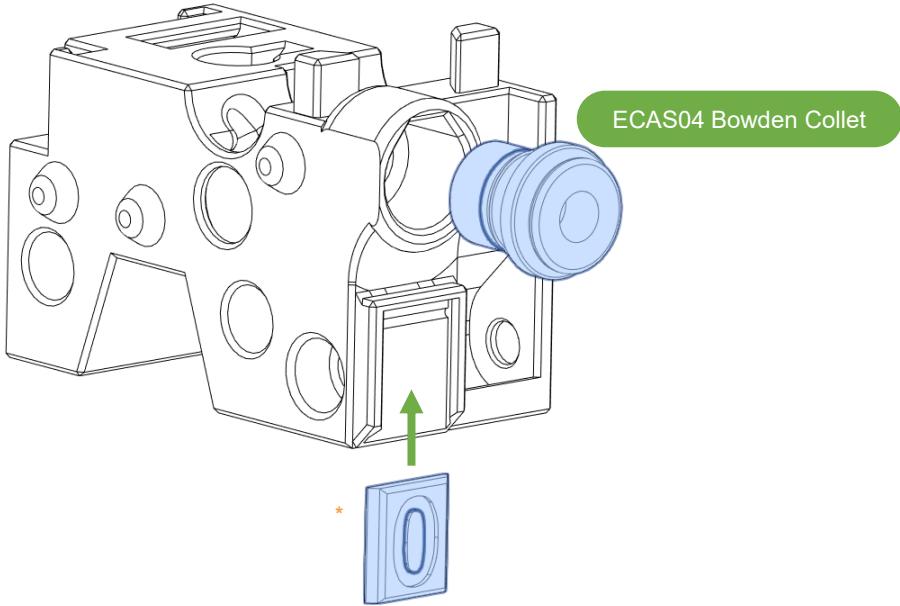


FILAMENT BLOCK NUMBERING

Use the different numbered plates to easily identify each of the ERCF tools.

MAGNET ORIENTATION



Install the top magnets with the same polarity for all filament blocks. Polarity for the front magnets does not matter.

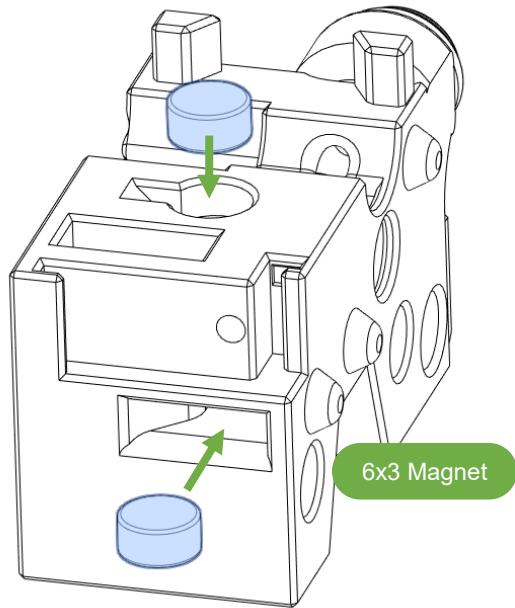

MAGNET HEIGHT

6x3 Magnets can have a very off-spec height and be much shorter than 3mm. In case you find the front magnet floating in its pocket, add a bit of CA glue to hold it in place.


FILAMENT BLOCKS

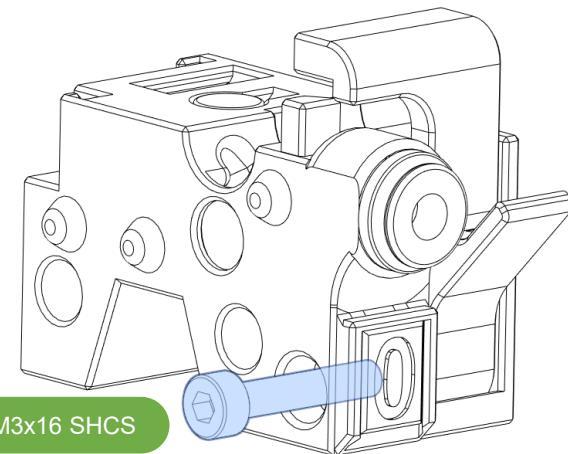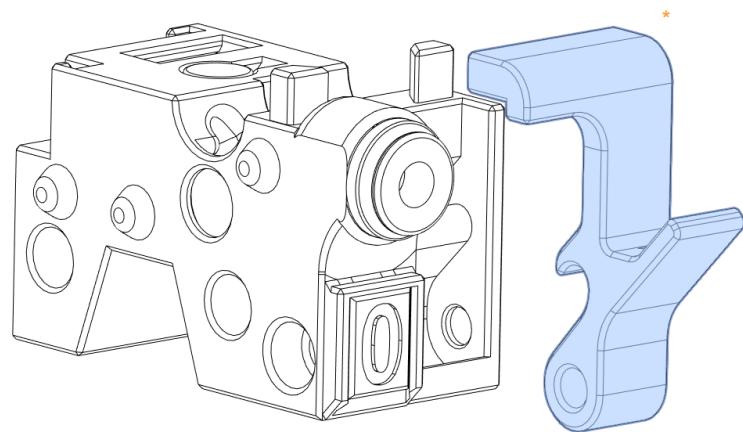

LATCH SCREW

The latch screw is screwed directly into the plastic. Don't over tighten it, it's just the latch rotation axis.

MAGNETIC GATES

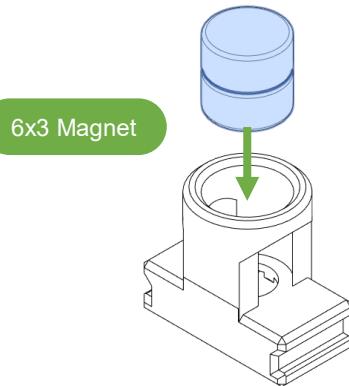

GATE KEY


Insert the two magnets into the Gate Key.

The Gate Key allows you to open Magnetic Gates when the selector is not in front of them, and also to secure the washers in the magnetic gates when you install or remove them.



WASHER INSERTION



First check that each washer has a flat surface for both sides (i.e. no residues from the stamping process). If not, use a file to fix that. Insert the washer from the bottom right (using picture orientation) and push it into its slot. It should move freely up and down.

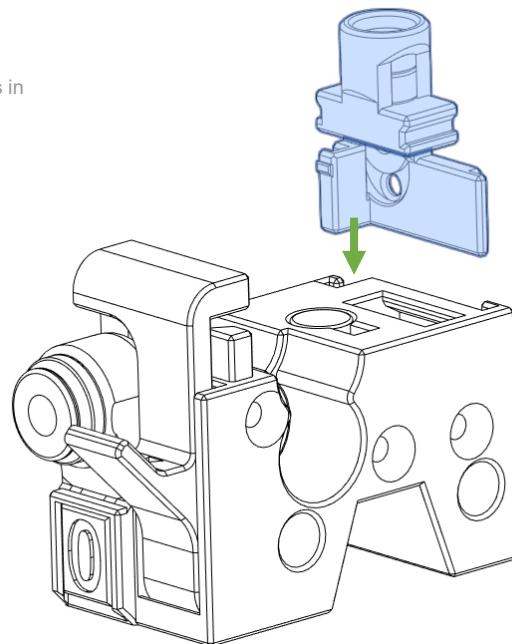

INSERTION


Use the Gate Key to keep the washer in place while you slide down the Magnetic Gate, then remove the Gate Key.

TOP HATS

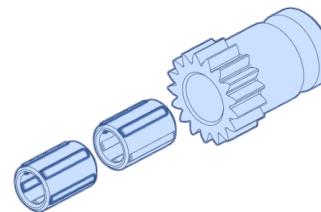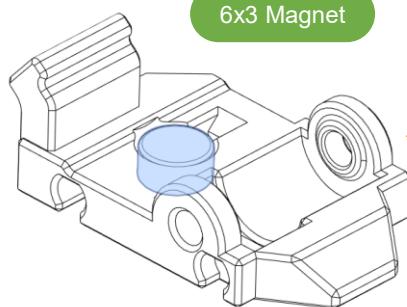

MAGNET ORIENTATION


Install the magnets so they will repel from the top magnets on the Filament Blocks.

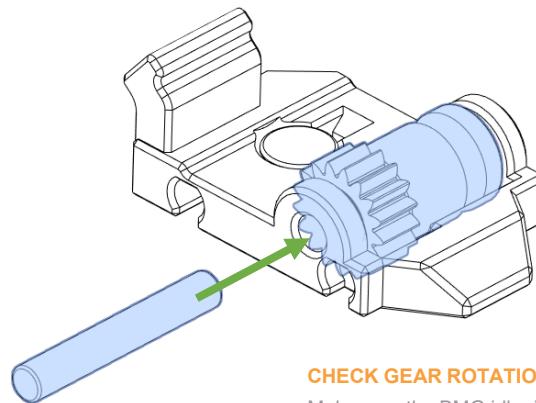

CHECK GEAR ROTATION

Make sure the BMG idler is spinning freely.

TOP HAT LOCKERS

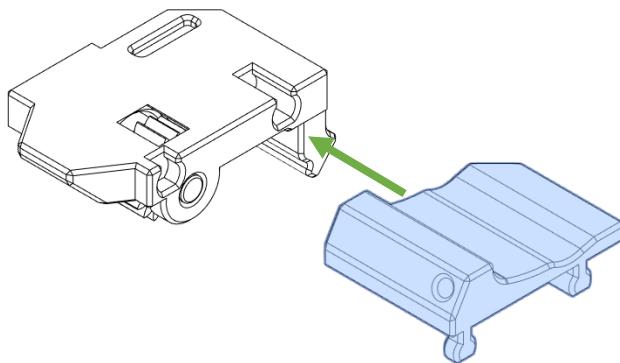


TOP HAT LOCKERS



Slide-in the Top Hat Locker for each Top Hat until you hear the « click ». Top Hat Lockers values (i.e. the number of dots on the front side) are used to adjust the pressure applied on the filament for each tool. The higher the number, the stronger the pressure on the filament. Start with all tools at « 1 », the values will be adjusted in the setup and tuning section of the ERCF.

Do not install the Top Hats on the Filament Blocks for now.

PRESSURE ON FILAMENT

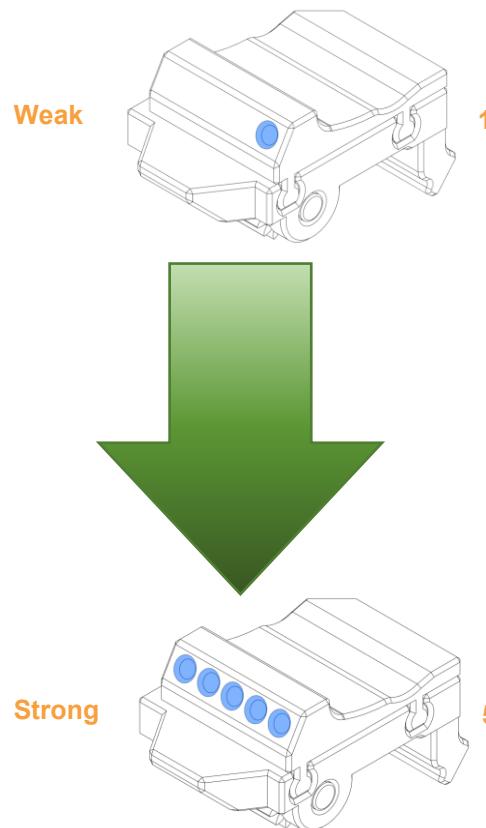


BEARING INSERTS

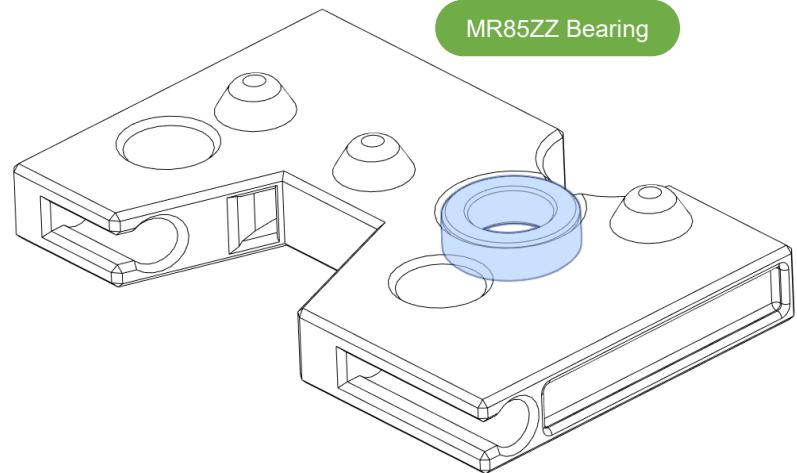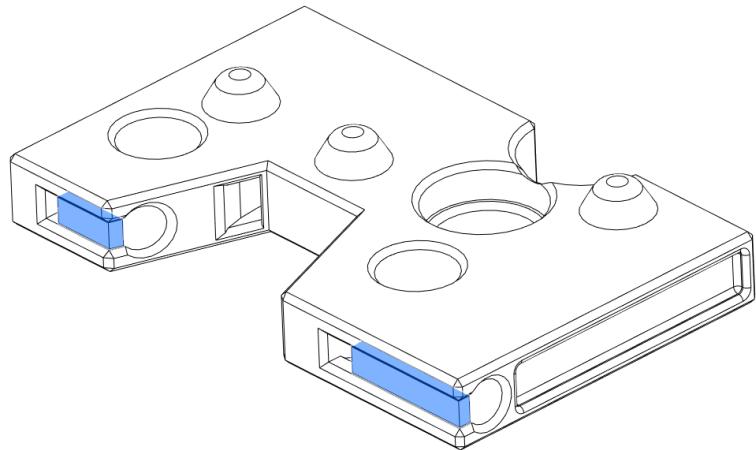


REMOVE BUILT-IN SUPPORTS

Use a small tool, like an allen key, to remove the two built-in supports.

GEAR BOX

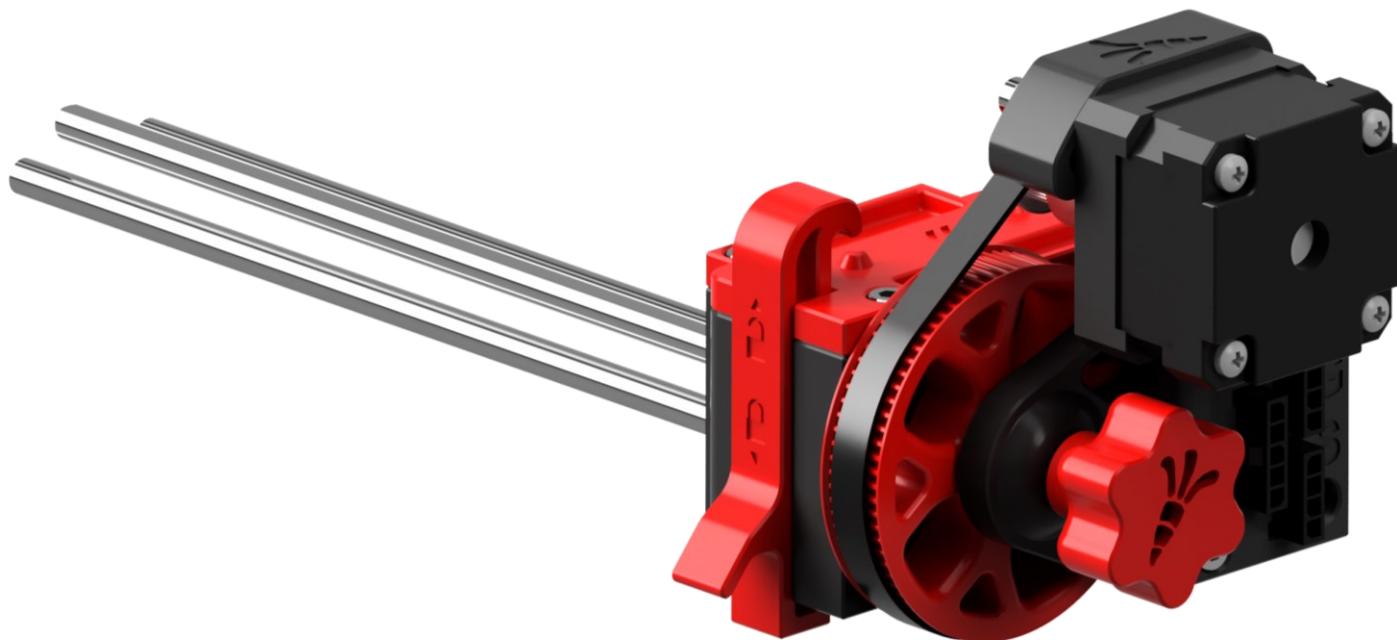

OVERVIEW

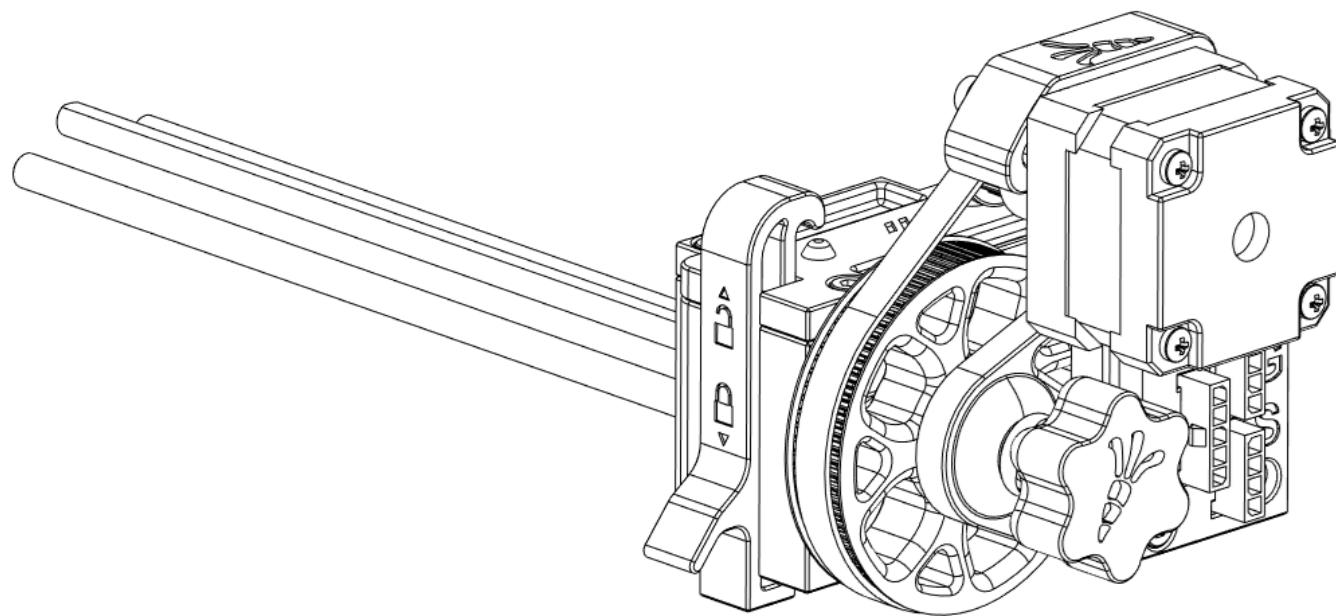

SELECTOR MOTOR WIRE

USE OF ERCF EASY BRD

For those using the custom dedicated control board (i.e. the ERCF EASY BRD), please :

- First take a look at page 92 to get an overview of the final wiring
- Skip the steps for the pages with the label on the right


USERS OF ERCF EASY BRD:

Skip this step – see page 92

PREPARING THE WIRES

For an easier installation, it is recommended to already prepare the wires. There are two wire looms to do :

- One that goes from the connector plate to the selector motor
- One that goes from the connector plate to all the other components, namely the endstop, the servo and the encoder

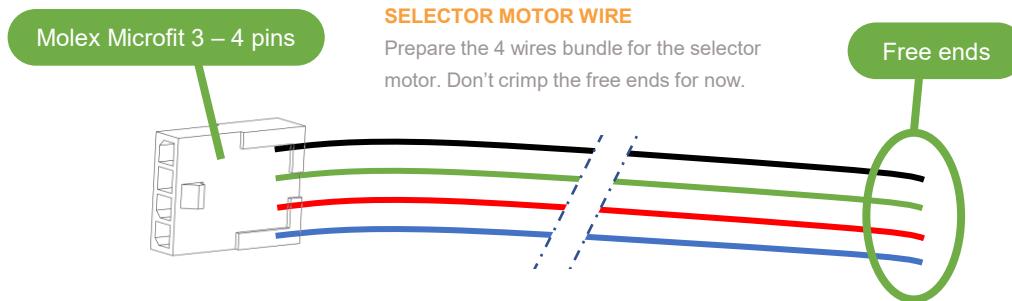

Typical wire length required for the selector motor wires

Chans.	Length (cm)
Selector motor	
3	25
6	33
9	40


VARIANT

For certain build size, the wires from the selector motor can be long enough to reach the connector plate. You can therefore crimp the Molex Microfit 3 connector directly on those if you want to.

CONNECTION ON THE SELECTOR MOTOR SIDE

It is recommended to deal with the selector motor connection later in the assembly, to ensure the crimps are done with the proper wire length.

SENSOR AND ENCODER WIRE

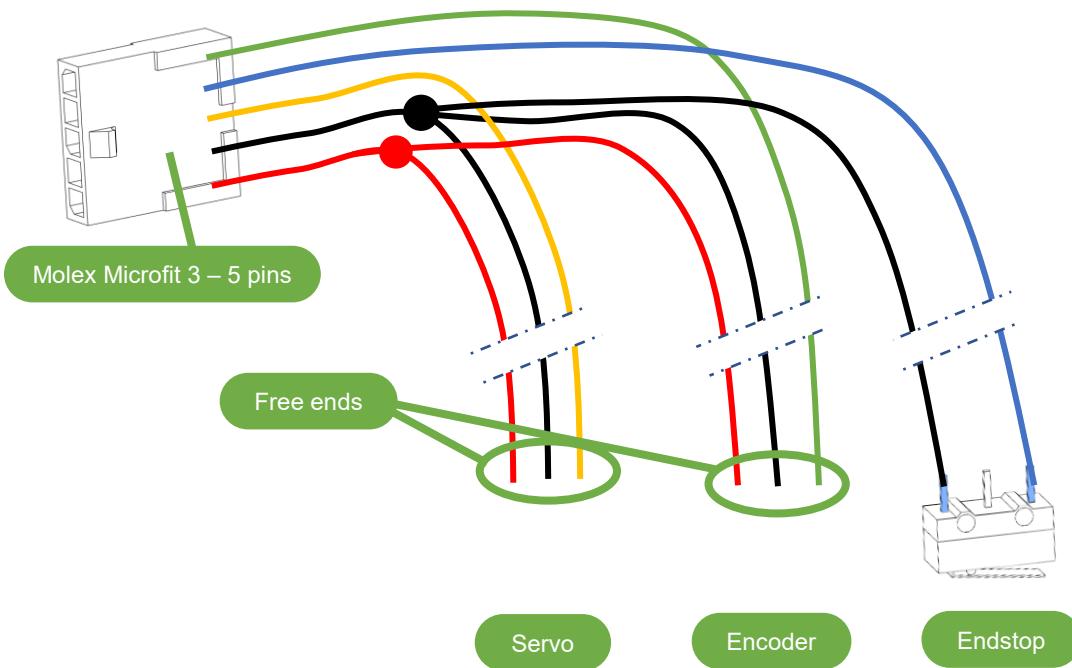

USERS OF ERCF EASY BRD:

Skip this step – see page 92

You still need to wire the endstop (free ends). Also wire lengths may be different

Typical wire length required for each component (with some room already)

Chans.	Length (cm)		
	Endstop	Servo	Encoder
3	6	50	60
6	6	65	75
9	6	80	90


GENERAL CONNECTOR WIRE

Prepare the 5 wires bundle for the ERCF. The GND is shared between the Servo, the Encoder and the Endstop. The +5V is shared between the Servo and the Encoder. **IF YOU ARE USING AN EASY BRD, DO NOT CONNECT THE SERVO AND ENCODER +5V LINE, REFER TO PAGE 92.**

To join the multiple GND//+5V lines, either crimp them together or make a splice prior to the crimp position.


Only the Endstop is directly connected to this wire bundle, typically by soldering the wires directly on the microswitch pins. It is recommended to do the crimps on the Servo and the Encoder sides later in the build, to ensure proper wire length.

GEAR BOX FRONT

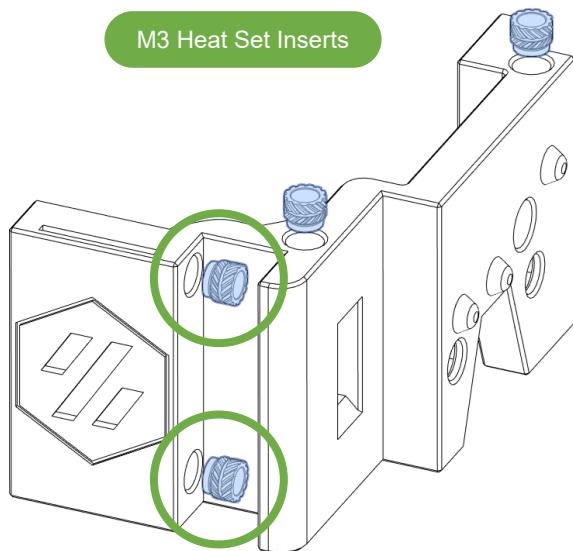


HEAT SET INSERTS TIP


Push those inserts using the soldering iron from the side and take your time to make them well flush with the surface and aligned with the screw path.

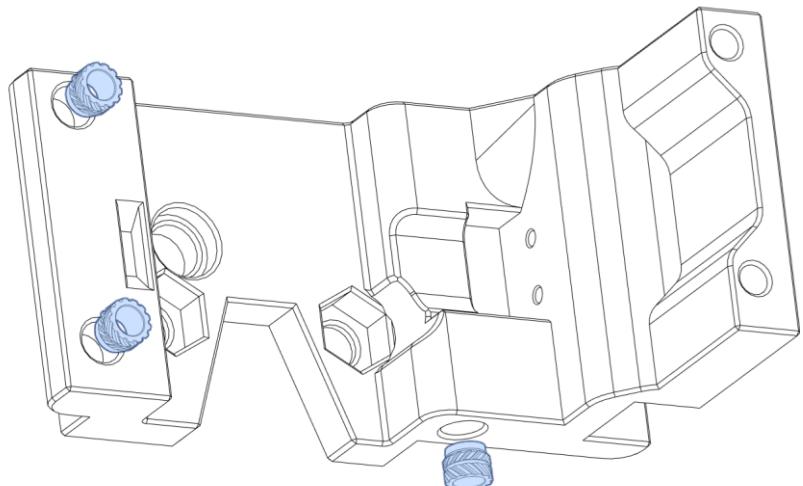

MR85ZZ Bearing

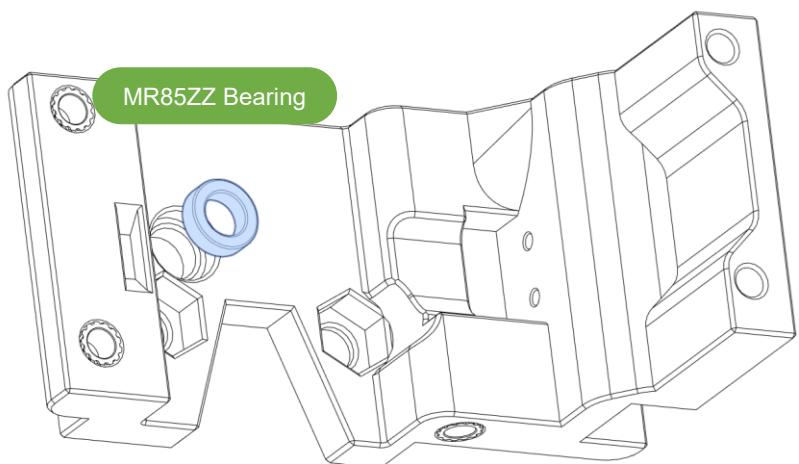


SELECTOR ENDSTOP

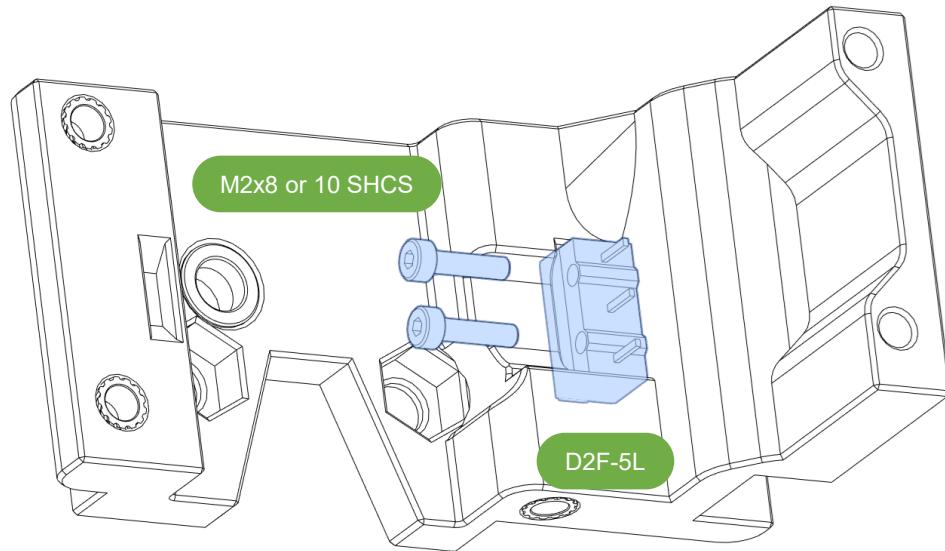


MICRO SWITCH ORIENTATION



If you are using a levered micro switch, install it as shown.
In case you are using a micro switch without a lever, install
it in the other direction, with the button on the bottom side.

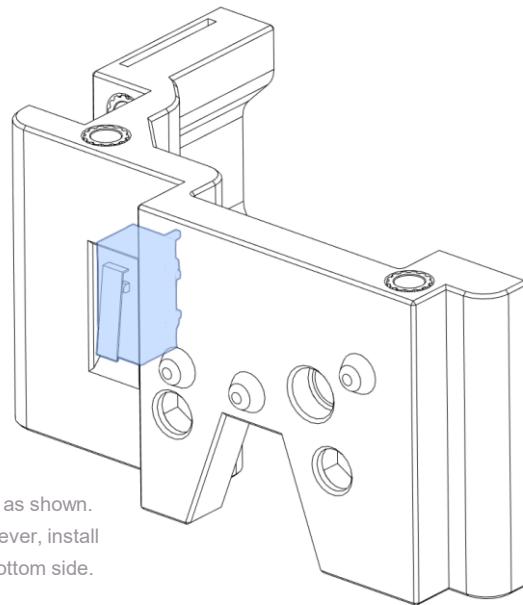

GEAR BOX BACK

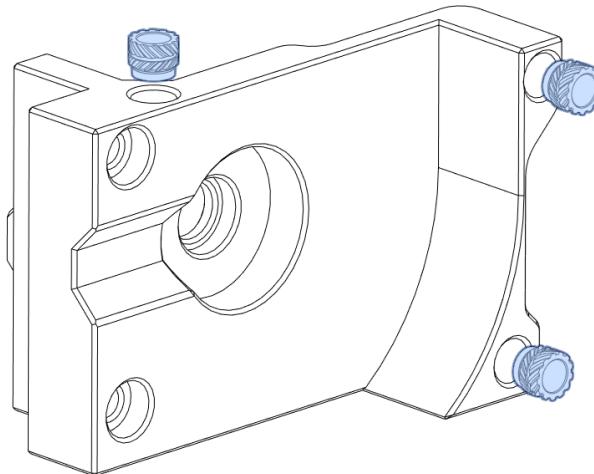


M3 Heat Set Inserts

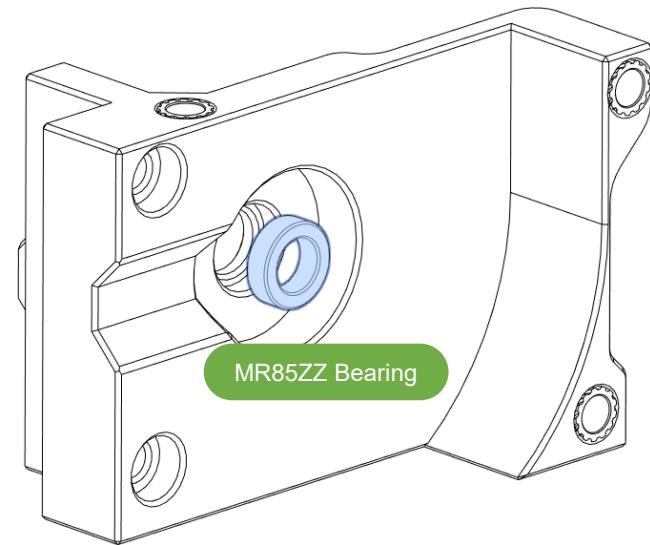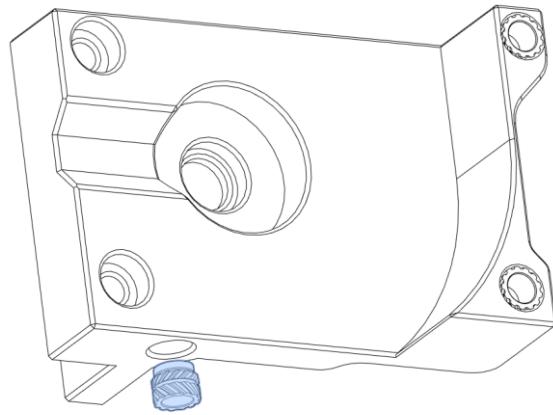

MR85ZZ Bearing


MOTOR ARM

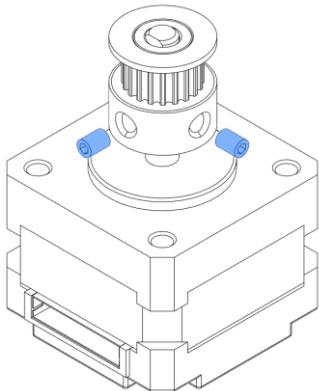

GRUB SCREWS


Insert both grub screws and use thread locker on them.

Use the pulley tool to install the pulley at the proper position on the motor shaft.

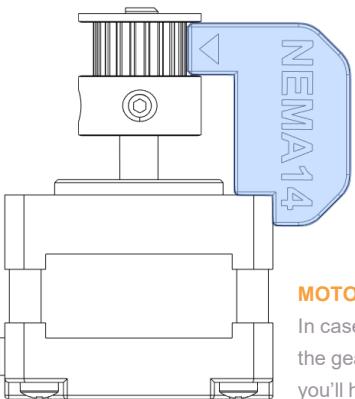




MOTOR SIZE

In case you are using a NEMA17 motor for the gear axis, assembly is the same, but you'll have to use the NEMA 17 pulley tool.

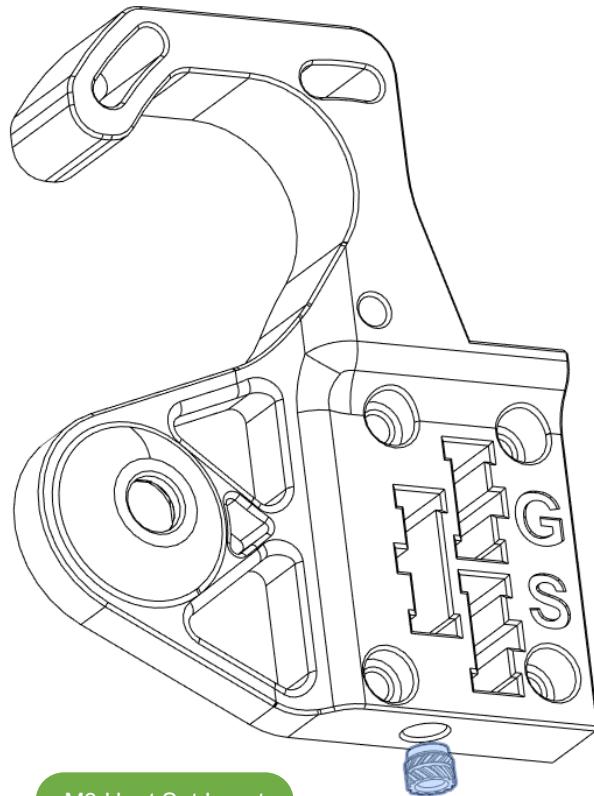

M3 Heat Set Insert


MOTOR ARM

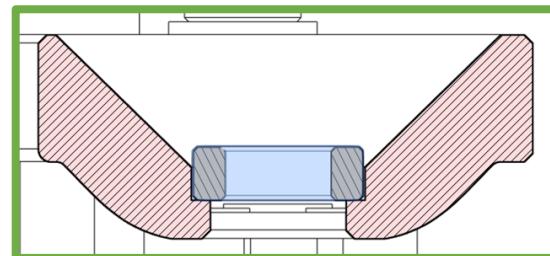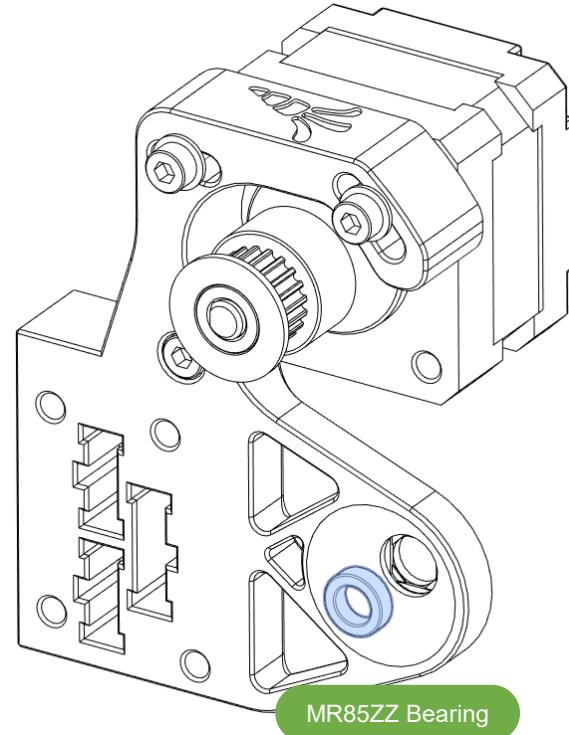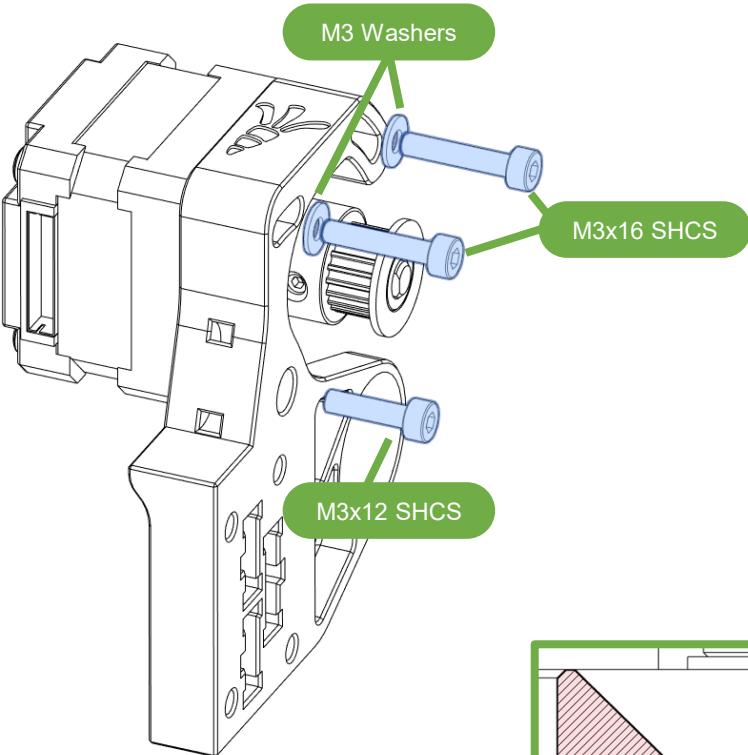

BEARING POSITION

Once installed, the bearing will not be flush and will stick out as shown.

MOTOR WIRING

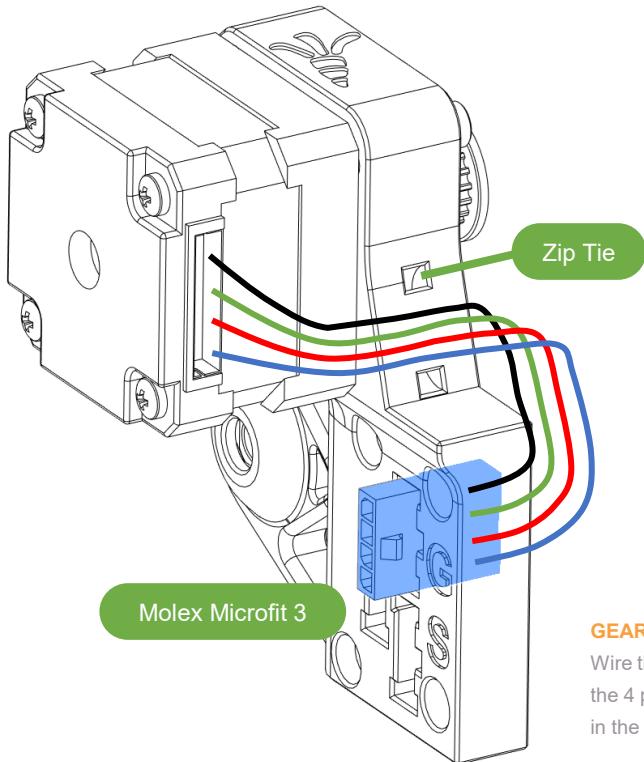


USERS OF ERCF EASY BRD:

Skip this step – see page 92

GEAR MOTOR WIRING


Wire the gear motor as shown. Push the 4 pins MicroFit3 female connector in the top left spot (« G »).

5MM THREADED RODS

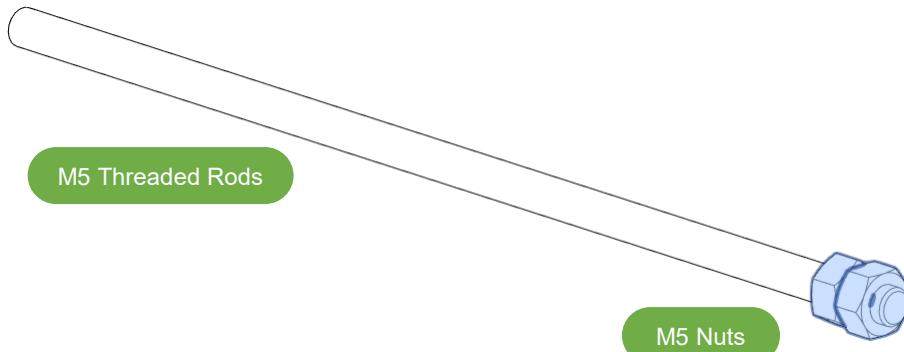

NUTS


Install the two M5 nuts tightened against each other (locking mechanism) at the end of each M5 threaded rod.

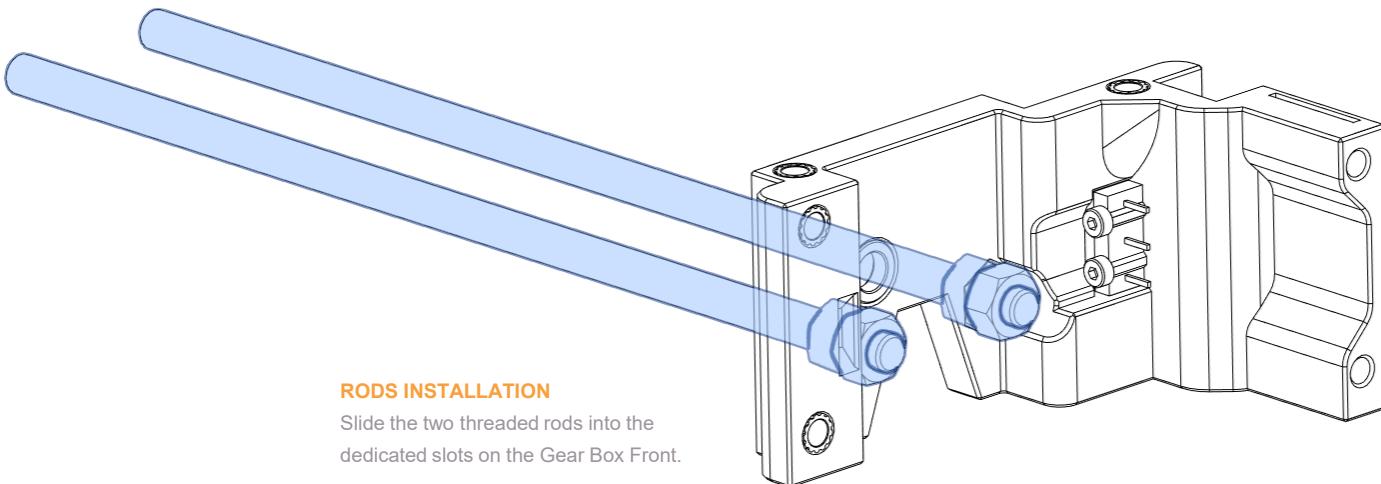

RODS INSTALLATION


Slide the two threaded rods into the dedicated slots on the Gear Box Front.

LATCHES PREPARATION

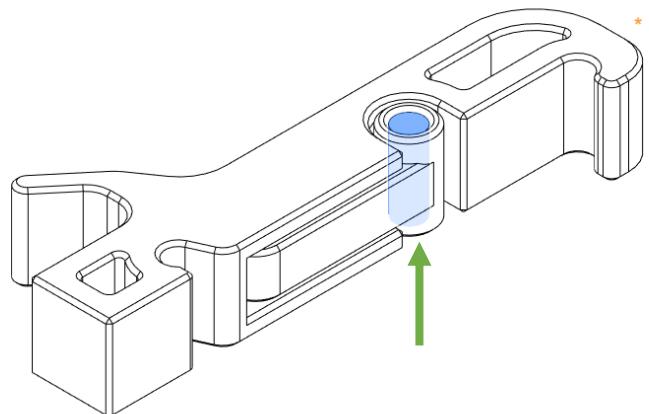


HINGE UNLOCK

Use a small tool (like an allen key) inserted into the hinge hole to free the print-in-place mechanism and ensure it rotates easily. Do that for both latches.

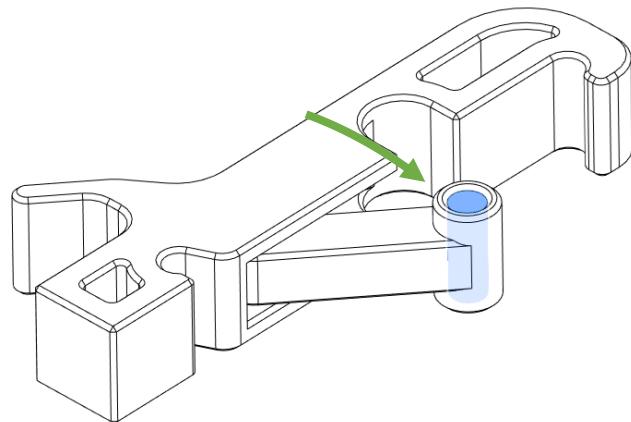

LEFT LATCH

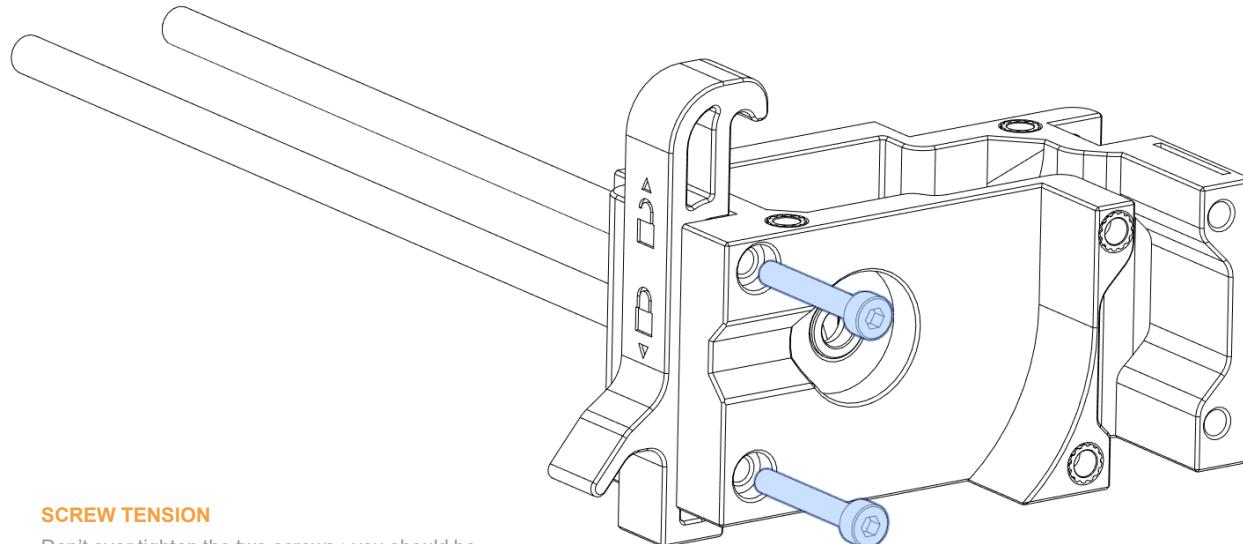



SCREW TENSION

Don't over tighten the two screws : you should be able to lock and unlock the latch without trouble.

M3x20 SHCS



M4 EXTRUDER 80T GEAR

GT2 20T Pulley

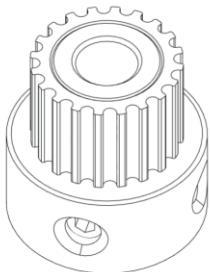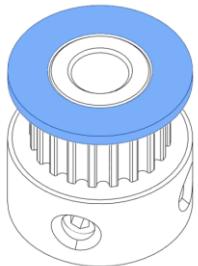


REMOVE FLANGE

Use some pliers to remove the top flange of the pulley.

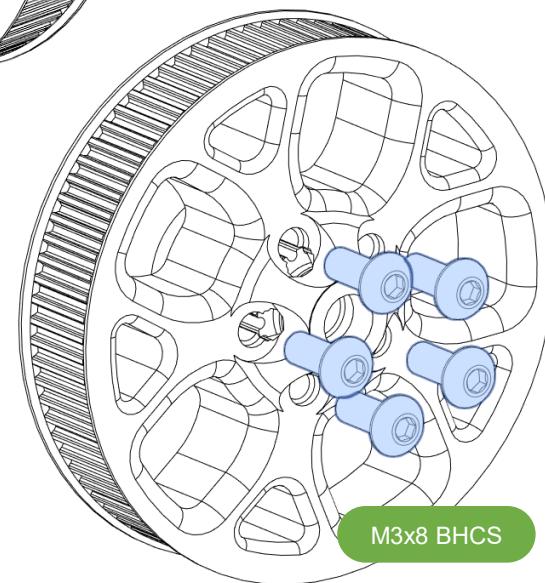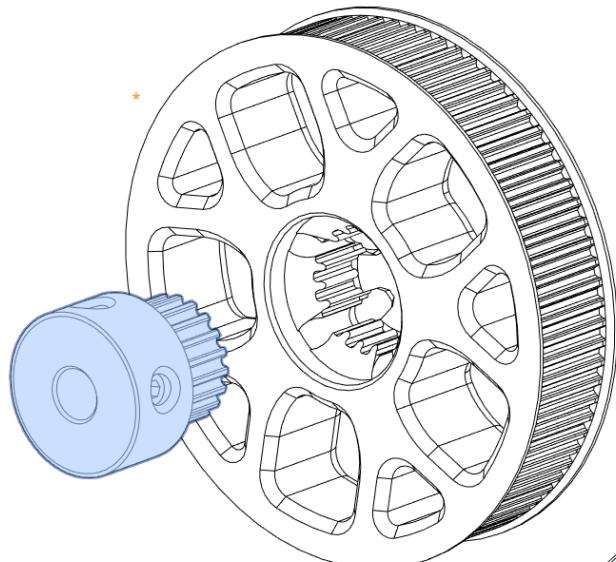


M3x8 BHCS

5MM D-CUT SHAFT

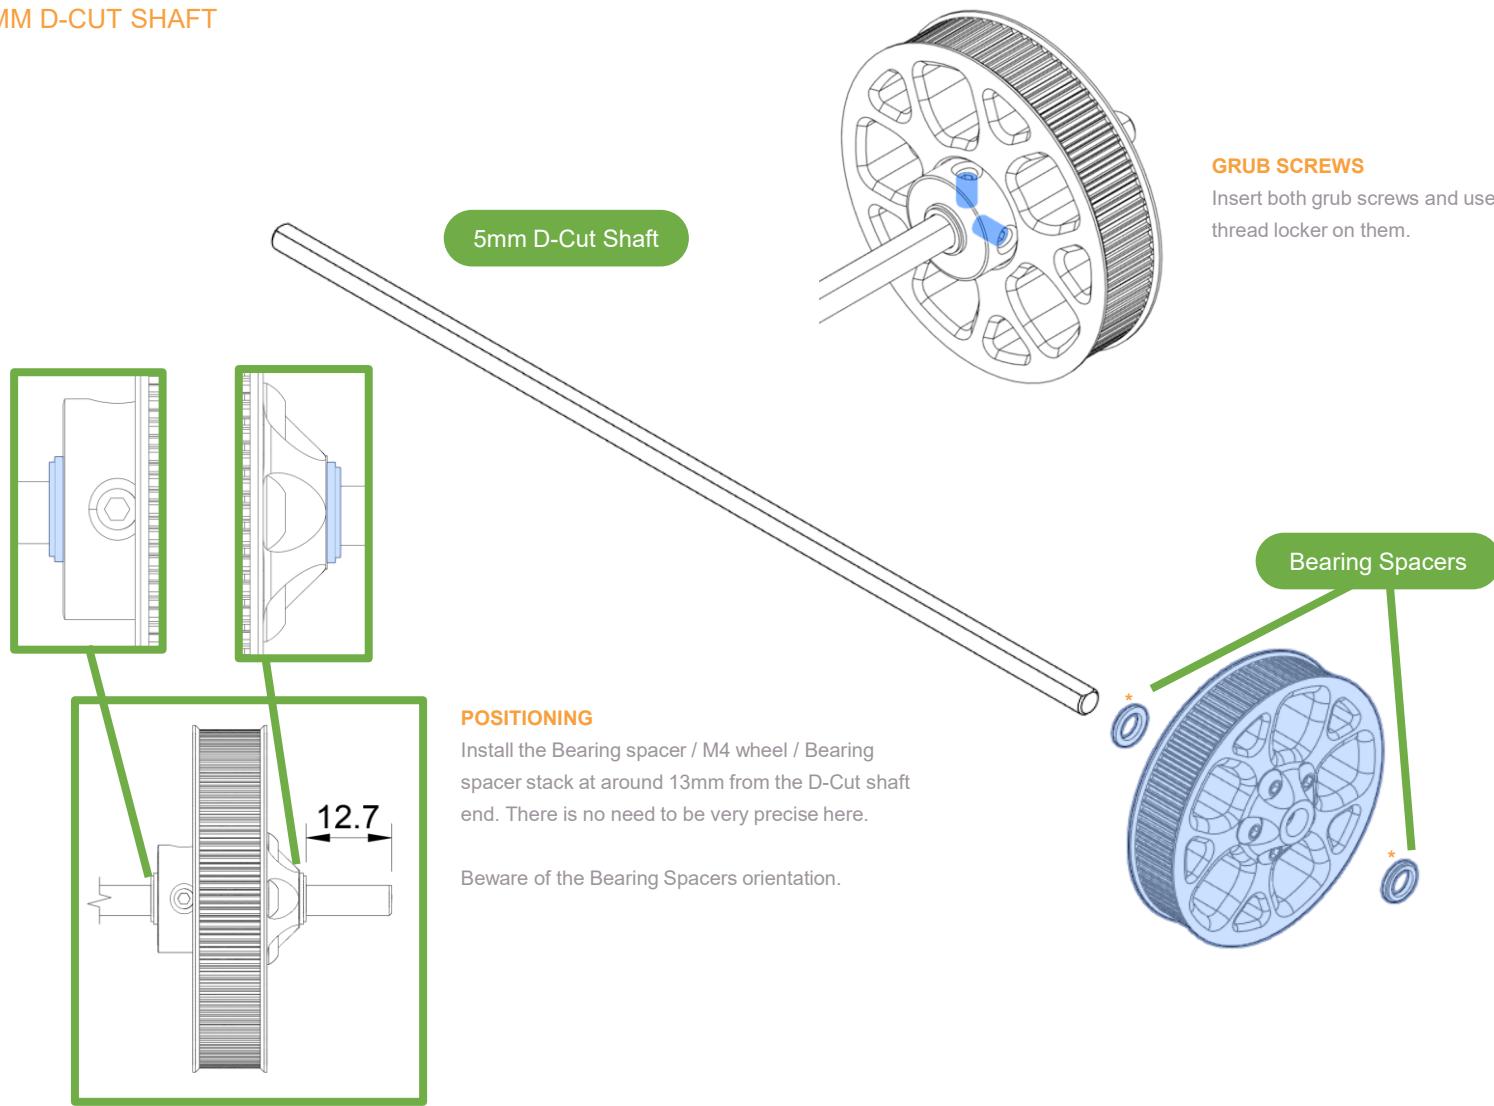


GEAR BOX

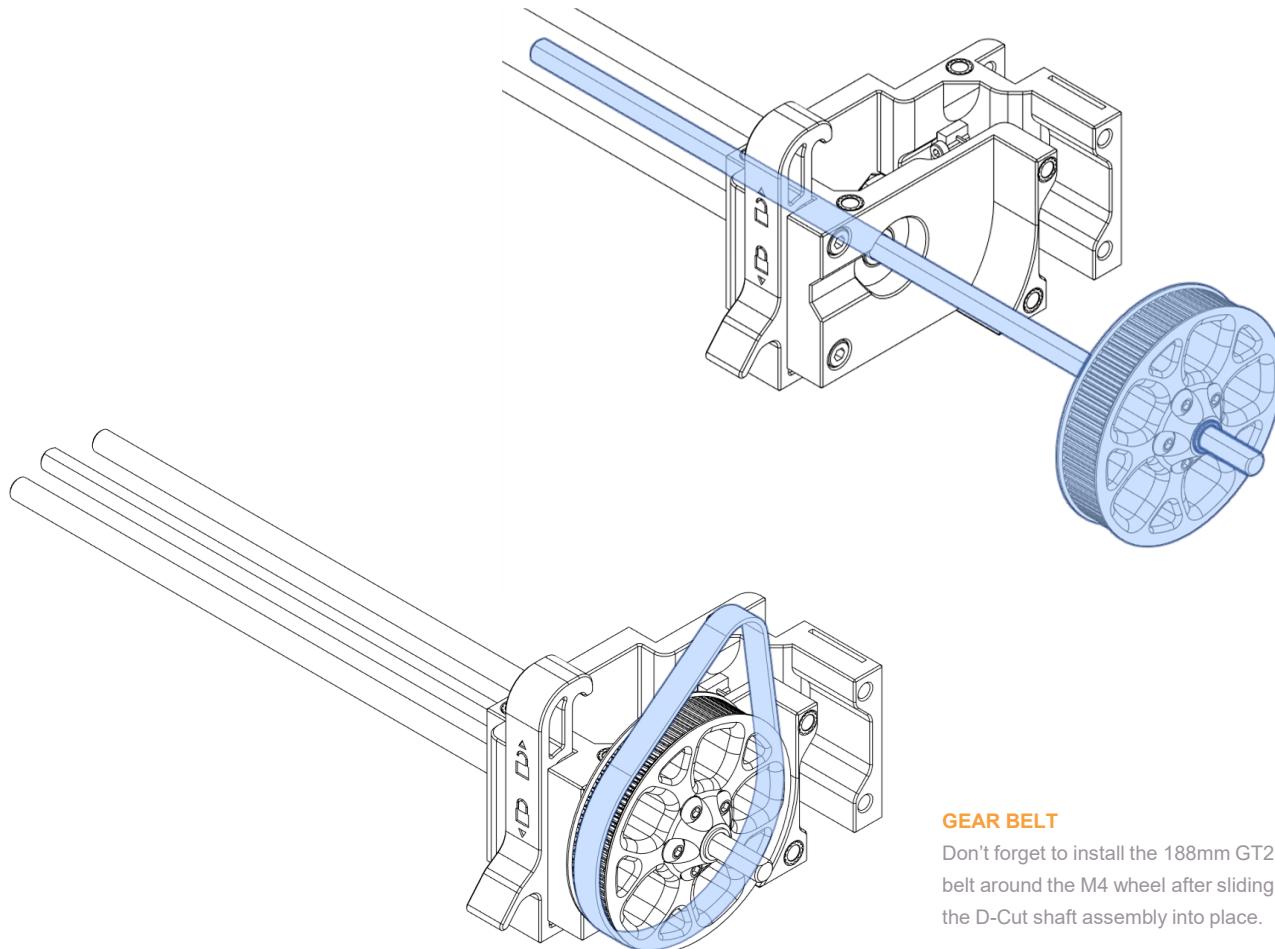

GEAR BELT

Don't forget to install the 188mm GT2 belt around the M4 wheel after sliding the D-Cut shaft assembly into place.

GEAR BOX

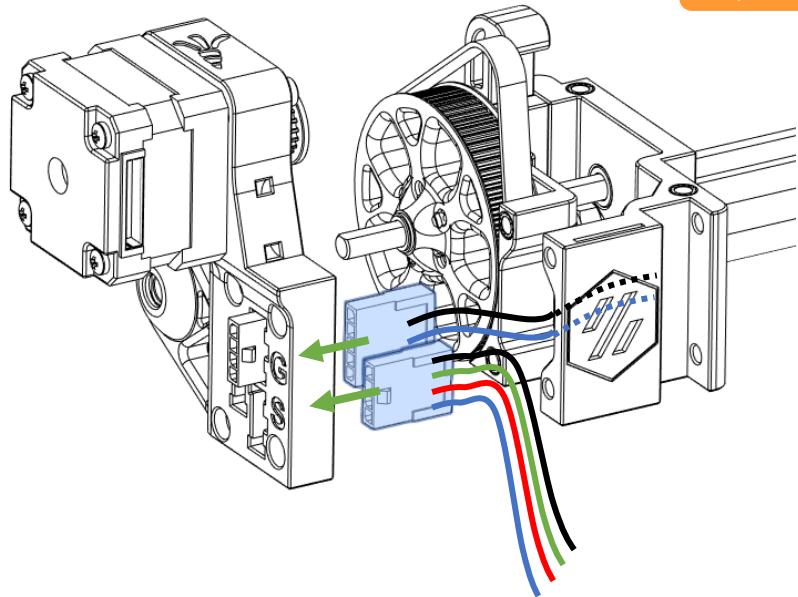


USERS OF ERCF EASY BRD:
Skip this wiring step – see page 92

INSERT THE MICROFIT CONNECTORS

Insert the two microfit connectors from the wire bundles into their dedicated holes in the Motor Arm.

For picture clarity, only the microswitch wires are shown for the 5pins connectors (but the others are assumed present).

Let all the free wires hang to the bottom.


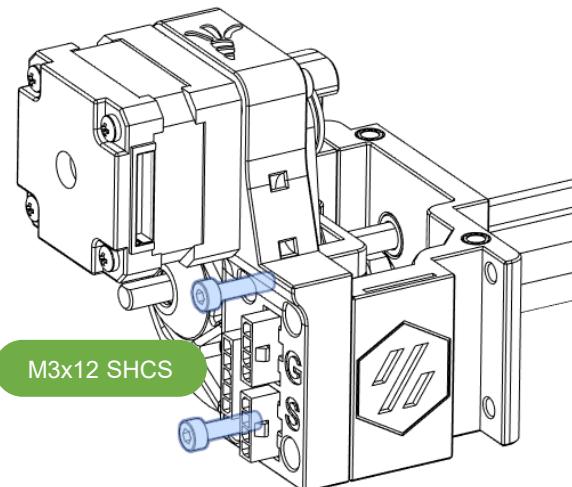


CLOSING THE GEAR BOX


Install the Motor Arm, pass the belt around the GT2 pulley of the Gear Motor, but don't tension it yet.

Make sure no wire is pinched between parts. All free wires should hang to the bottom.

GEAR BOX

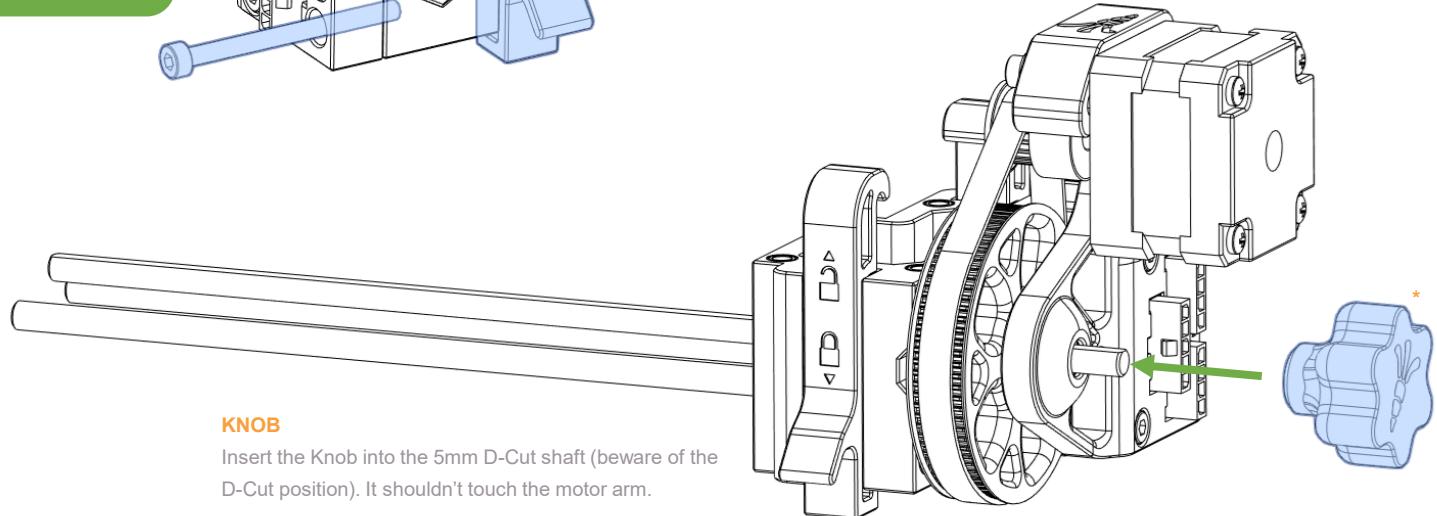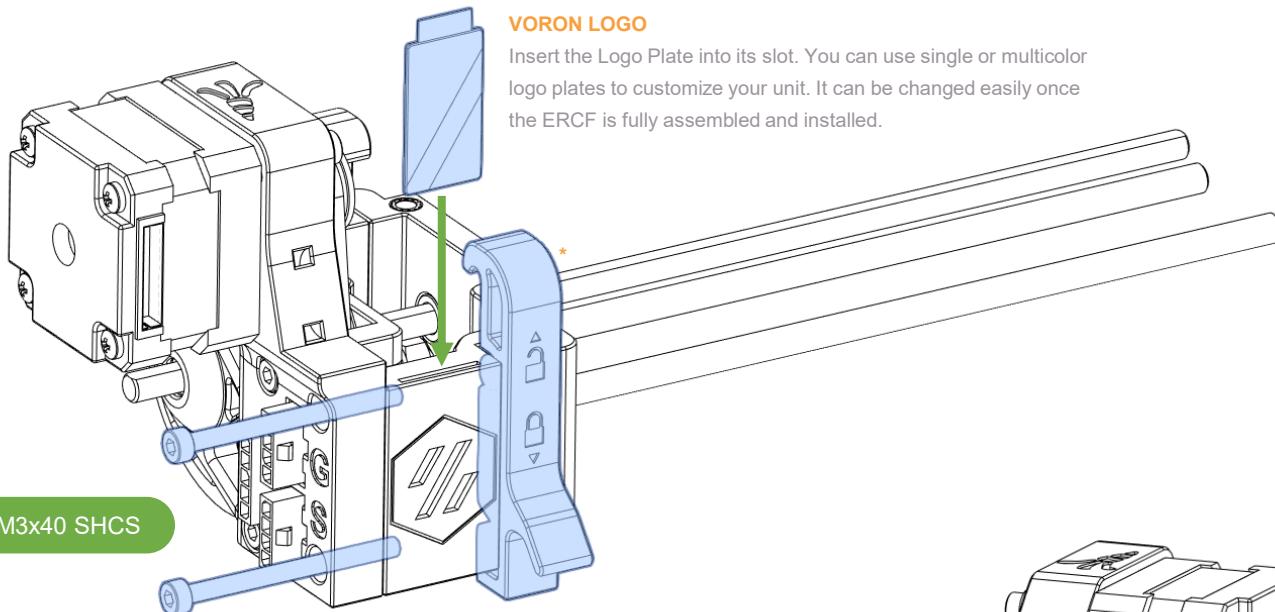

TOP PANEL

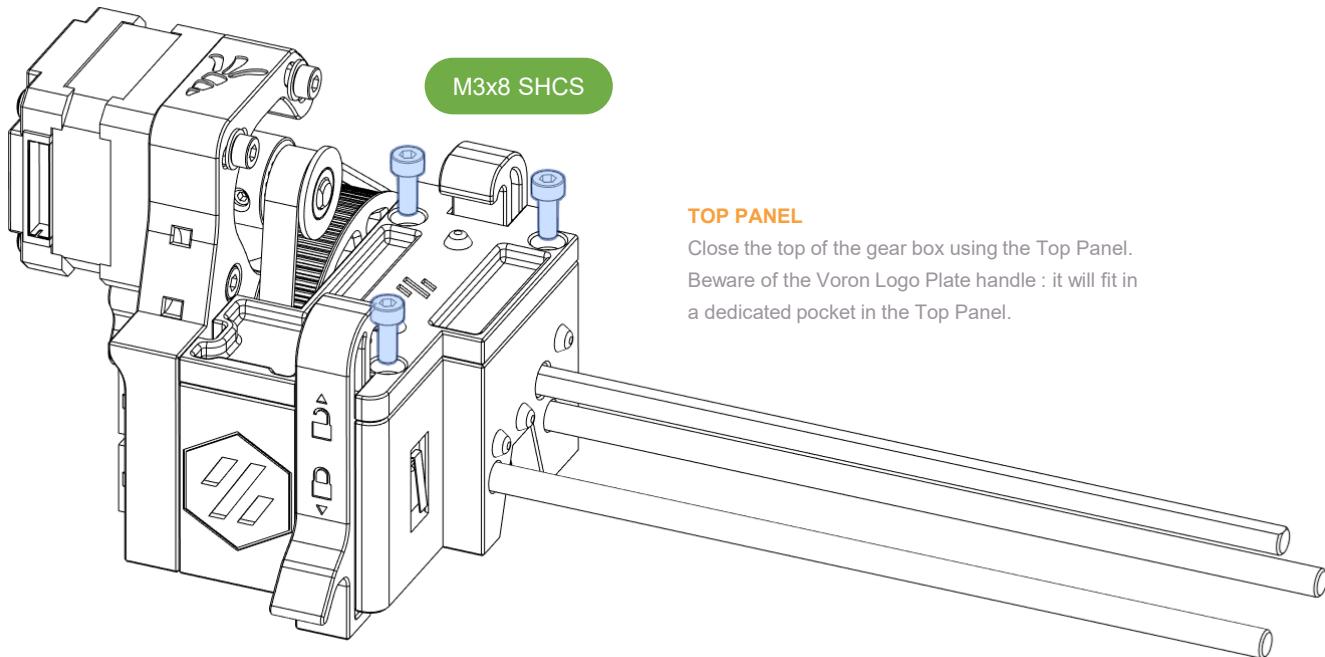


TOP PANEL


Close the top of the gear box using the Top Panel.
Beware of the Voron Logo Plate handle : it will fit in
a dedicated pocket in the Top Panel.

This page is left intentionnaly blank.


BOTTOM BLOCK

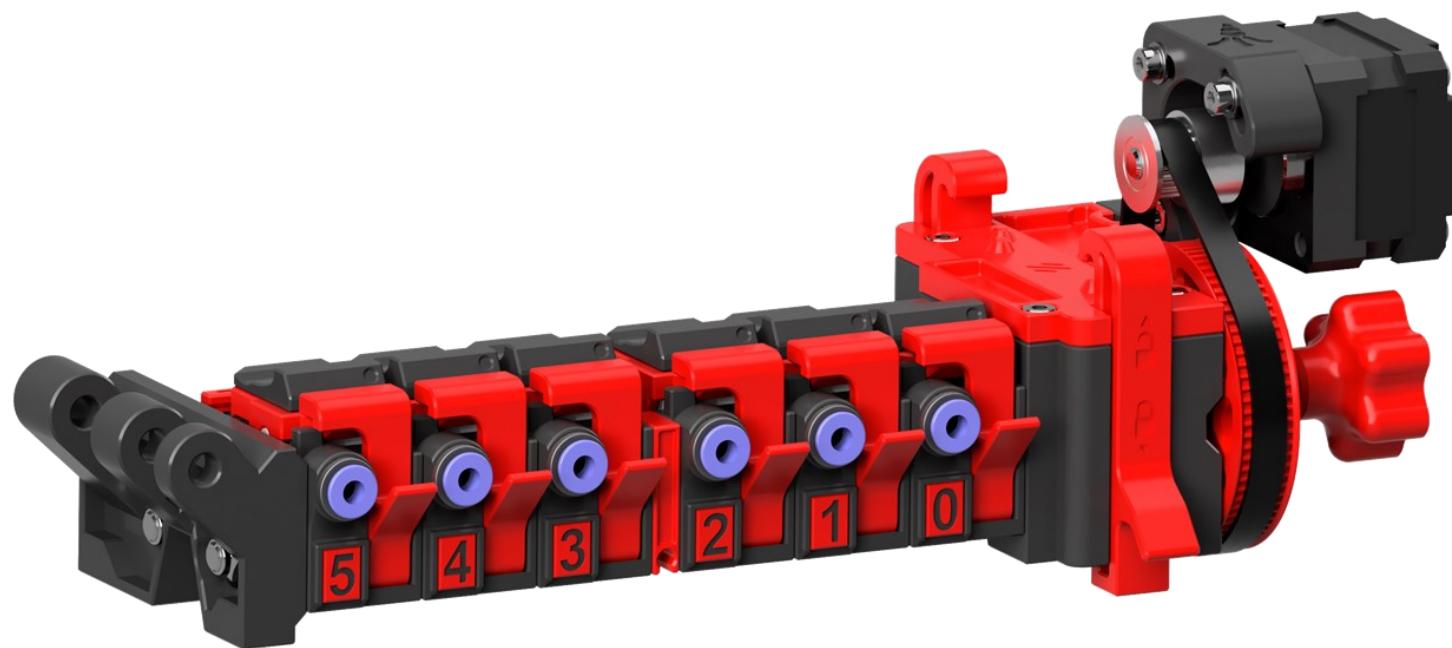

OVERVIEW

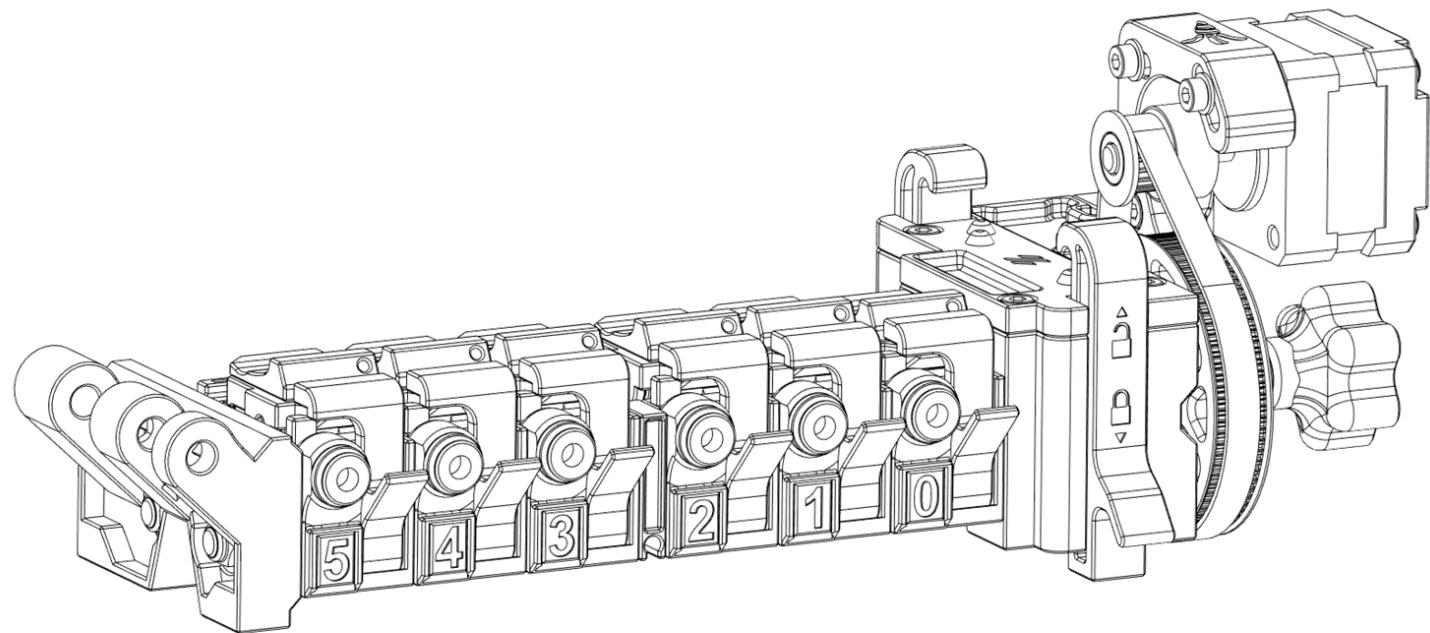


FULL BOTTOM BLOCK

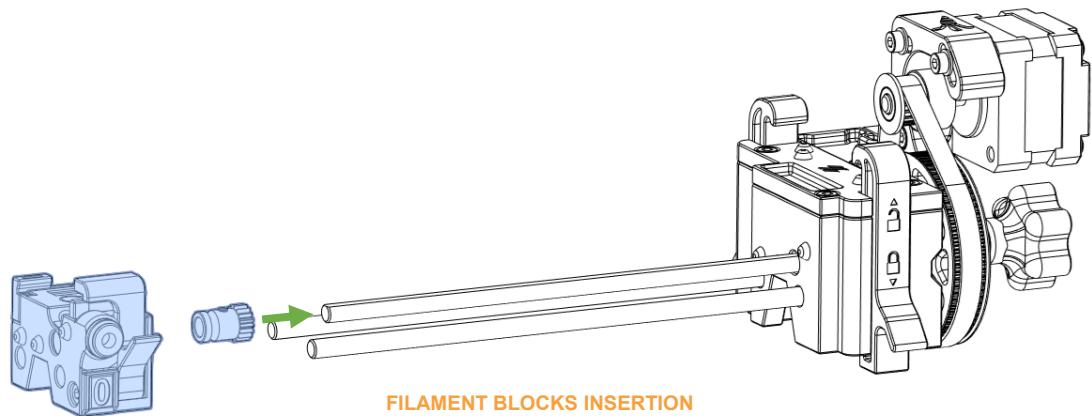


FILAMENT BLOCKS INSERTION

Slide a single Bondtech gear on the D-Cut shaft (beware of its orientation!) and only then slide the first filament block. Do not tighten the grub screws yet.

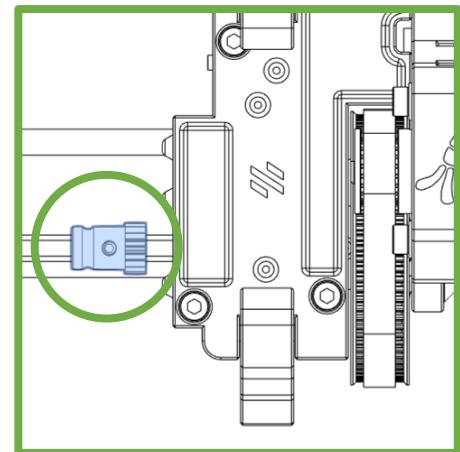


BEARING BLOCKS INSERTION


Every three filament blocks, insert a bearing block, except for the last filament block of your ERCF unit.

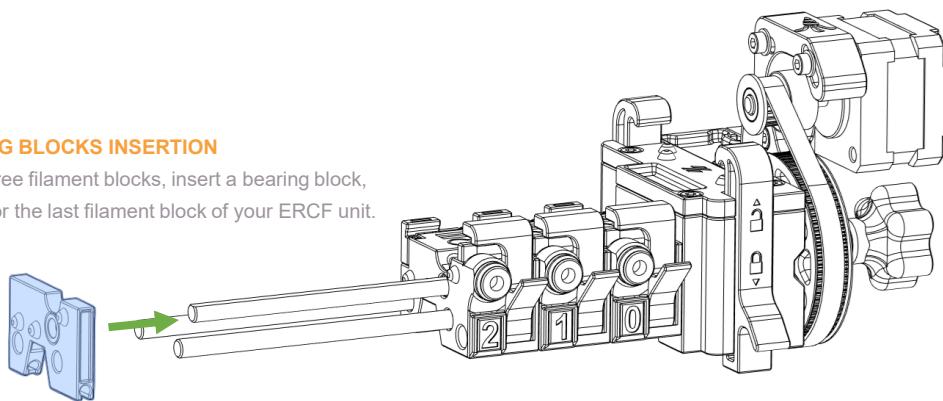

FILAMENT BLOCKS END

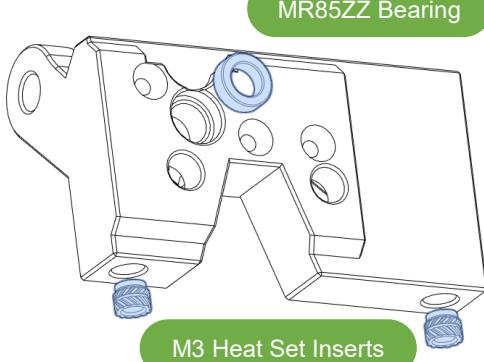


View from the bottom of the ERCF.

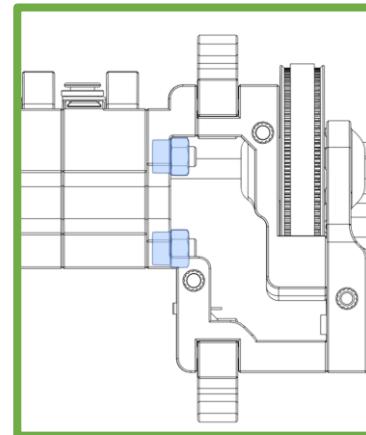

FILAMENT BLOCKS END

After all your Bondtechs gears, Filament Blocks and Bearing Blocks are slid in, insert the Filament Blocks End. Make sure that the M5 Threaded Rods are fully inserted in their slots in the Gear Box.

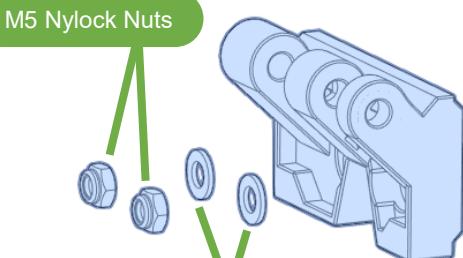


M5 NYLOCK NUTS

Do not over tighten those screws, as this will bend the unit and can cause issues later on. Whole assembly should not wobble but will still flex if you apply pressure on it, this is normal.

Do not turn the 5mm D-Cut shaft yet : no Bondtech gears grub screws are tightened at this stage.

BONDTECH GEARS ALIGNMENT

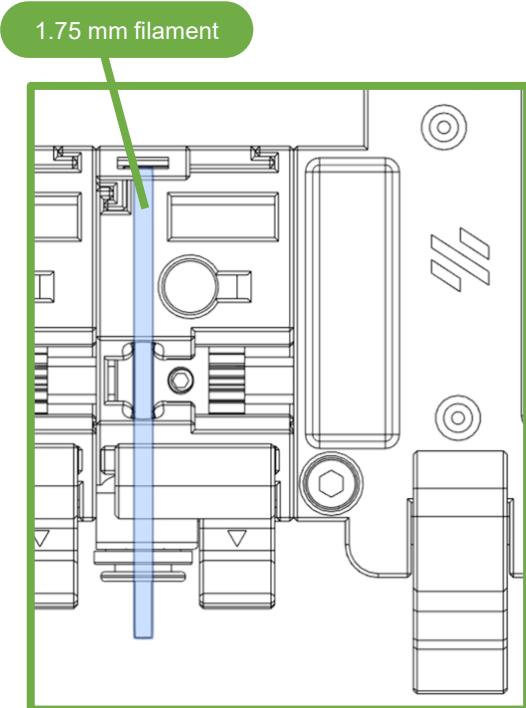


GEAR ALIGNMENT

Insert a small PTFE tube (few cms is enough) into the first tool ECAS and then insert some filament through the tool. Make sure the flat part of the D-Cut shaft is facing the Bondtech gear grub screw and use the filament to properly align the gear, then tighten the grub screw.

Don't forget to use thread locker on the grub screw.

Repeat this process for all tools.


TOP HATS

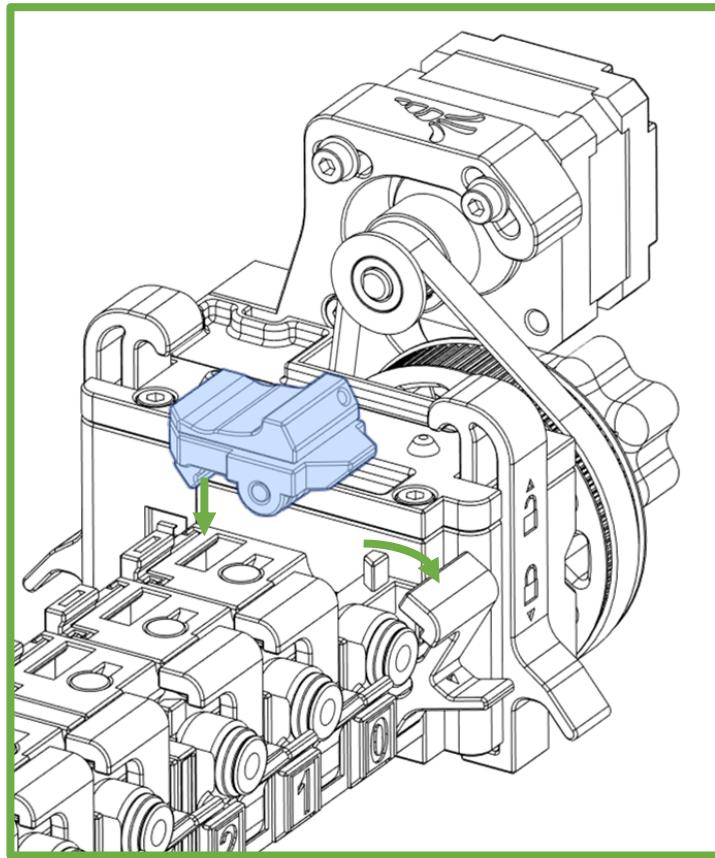

TOP HATS INSTALLATION

Open the latch of the first tool and slide the Top Hat arm into the Filament Block dedicated hole. You'll need to find the proper orientation to insert it, you should not force too much.


Once installed, close the latch, and repeat this process for all tools.

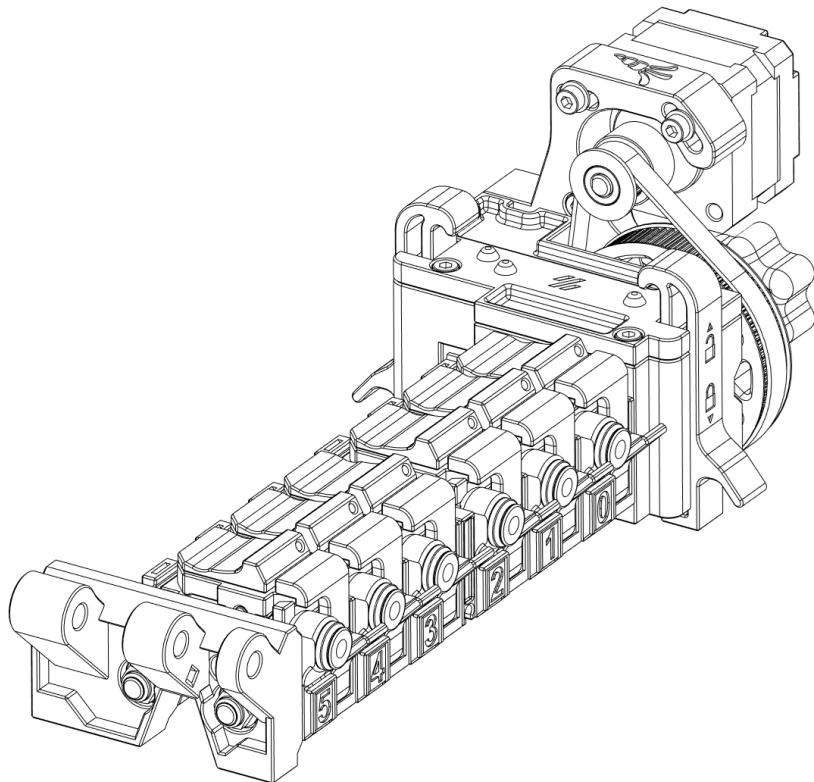


SELECTOR



OVERVIEW

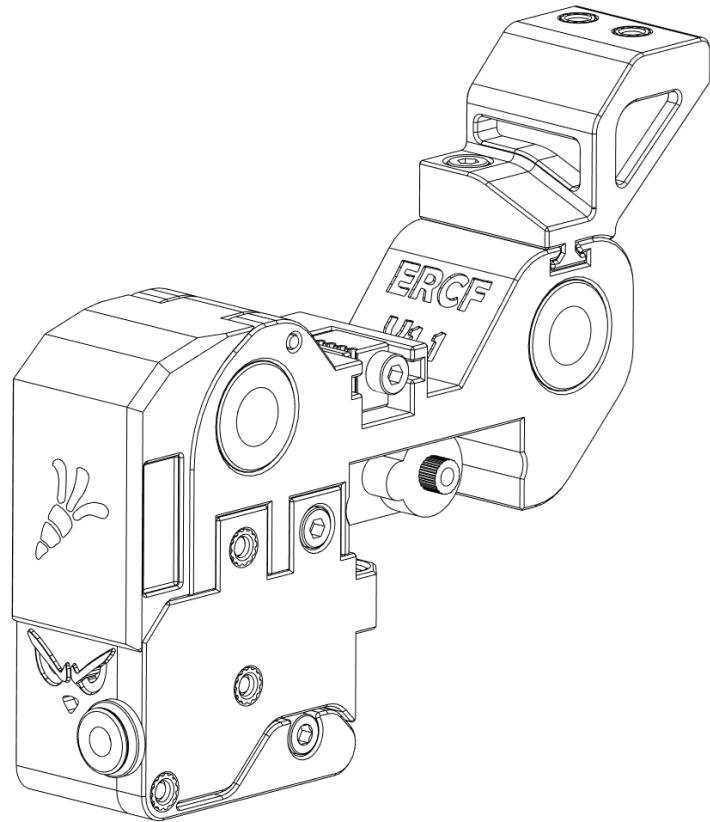


SELECTOR CART

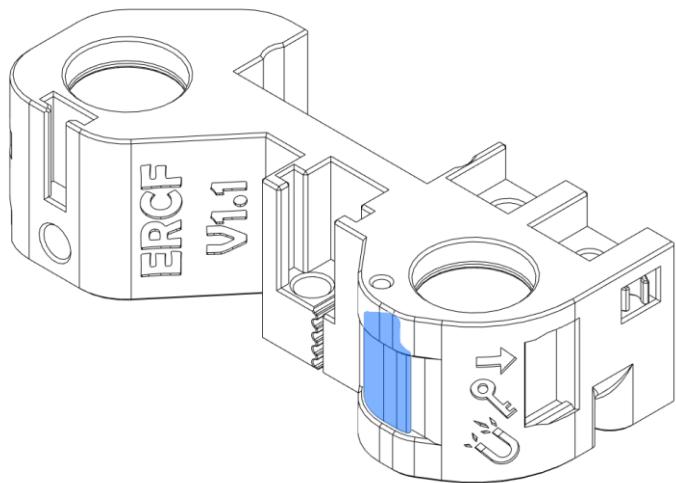

REMOVE BUILT-IN SUPPORT


Use a small tool, like a small flat screwdriver, to remove the built-in support.

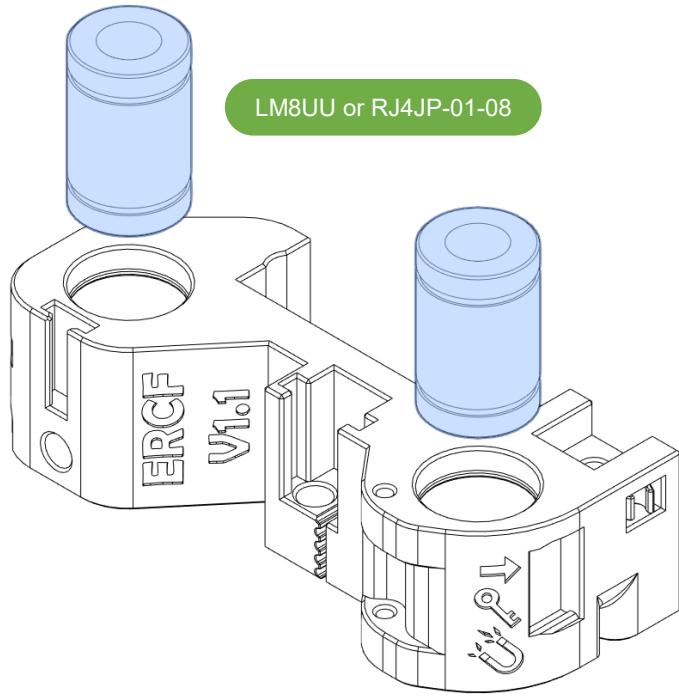



LM8UU INSERTION

Press-fit the LM8UU in their holes.


SELECTOR CART

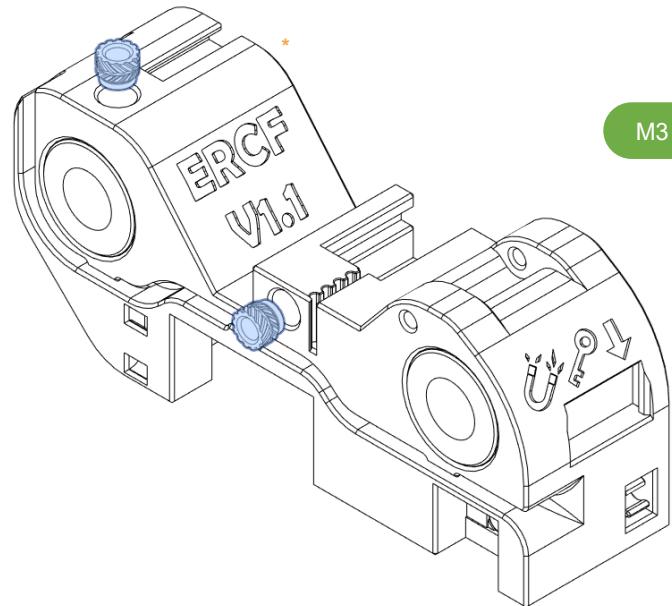


M3 Heat Set Inserts

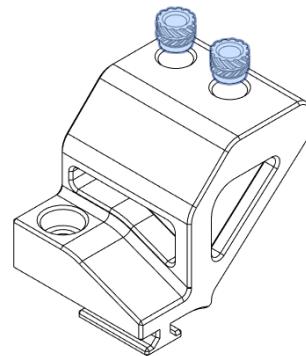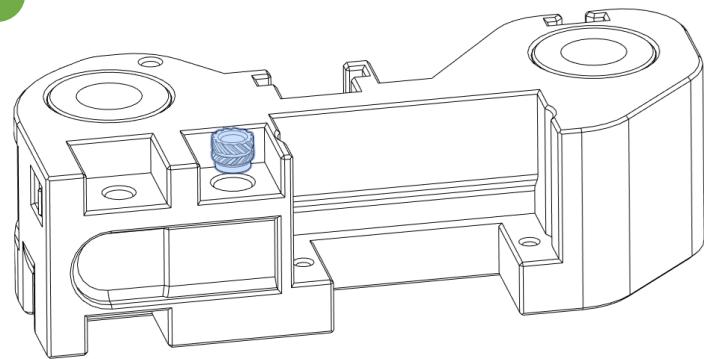

DRAG CHAIN ANCHOR

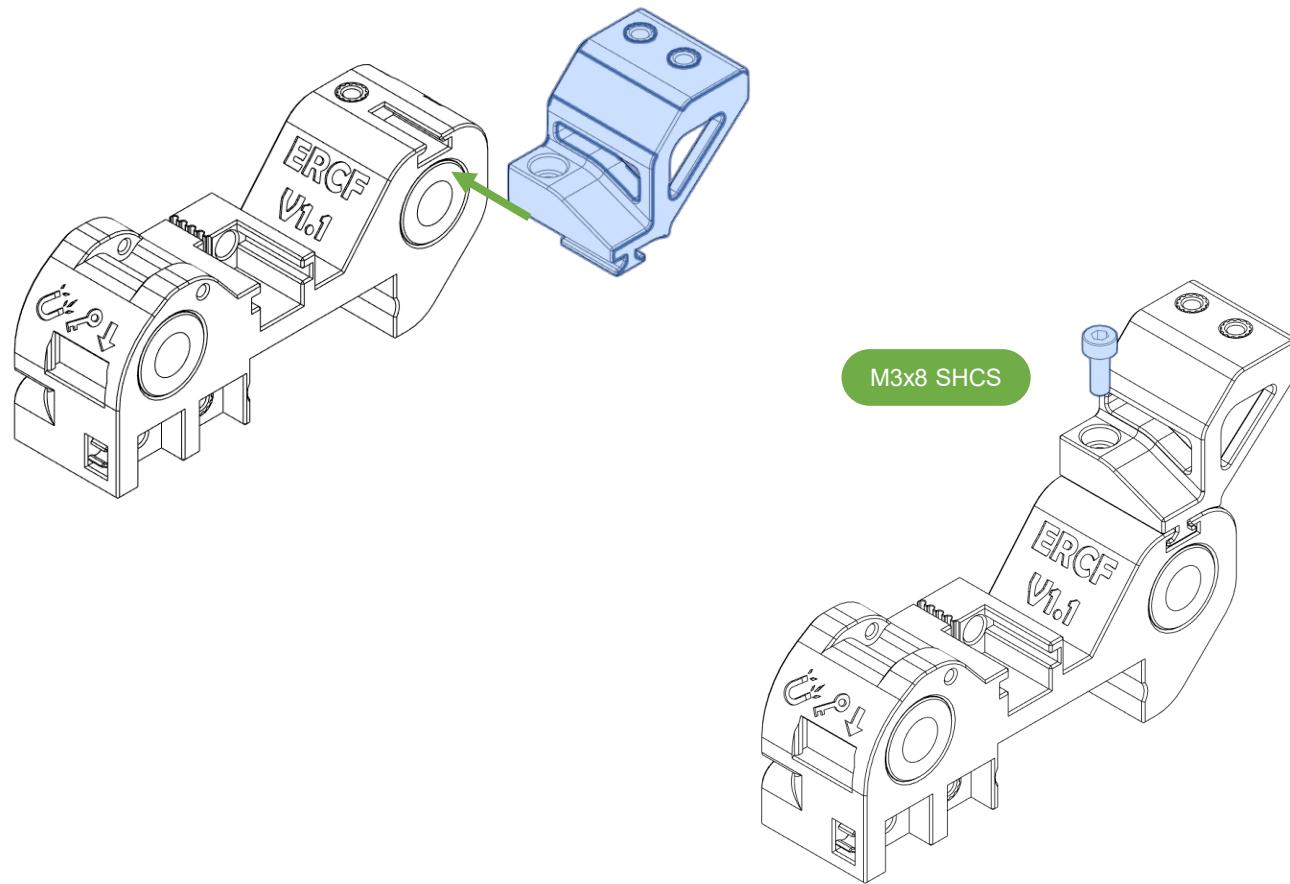


SERVO

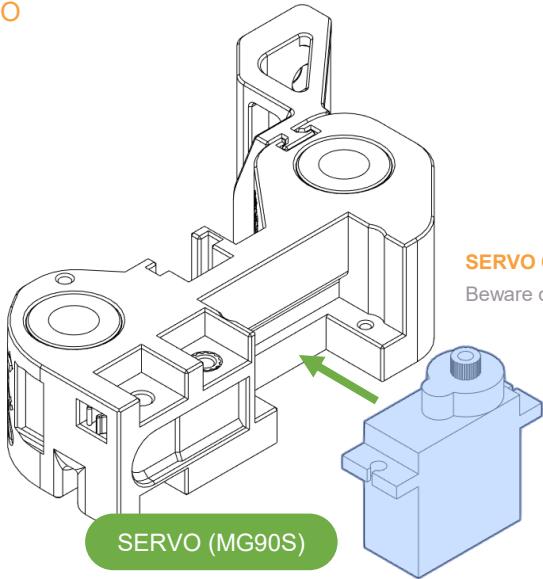

SERVO ORIENTATION

Beware of the servo orientation!


SERVO (MG90S)

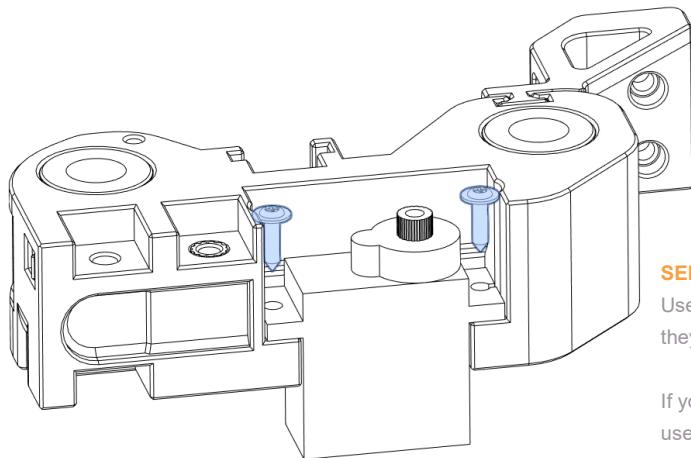

SERVO SCREWS

Use the screws from the servo kit you have, they'll tap directly into the selector cart plastic.


If you're using a SAVOX SH0255-MH servo, use two M2x10 SHCS.

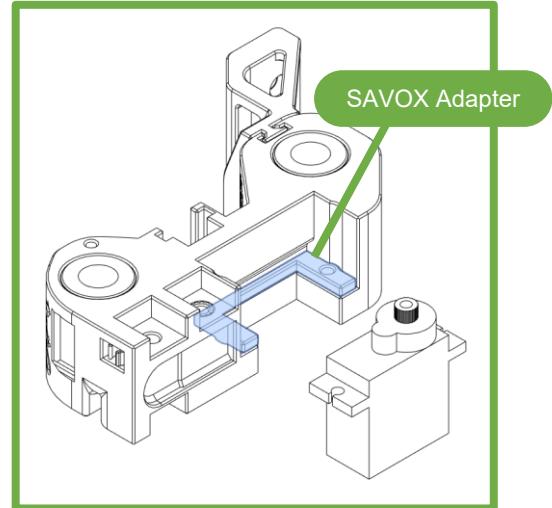

ERCF V1.0 SERVO COMPATIBILITY

In case you're using the SAVOX SH0255-MH servo, please use the Savox Adapter spacer before installing the servo.


SERVO WIRES

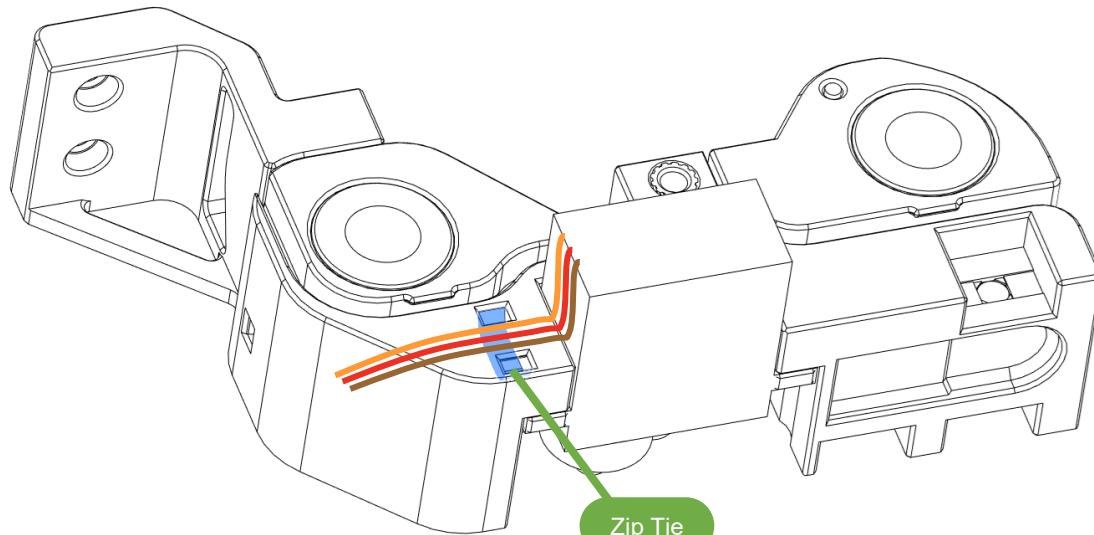

SERVO WIRES


Secure the servo wires using a zip tie. Make sure the wires are flat against the side of the servo, as shown.

ENCODER

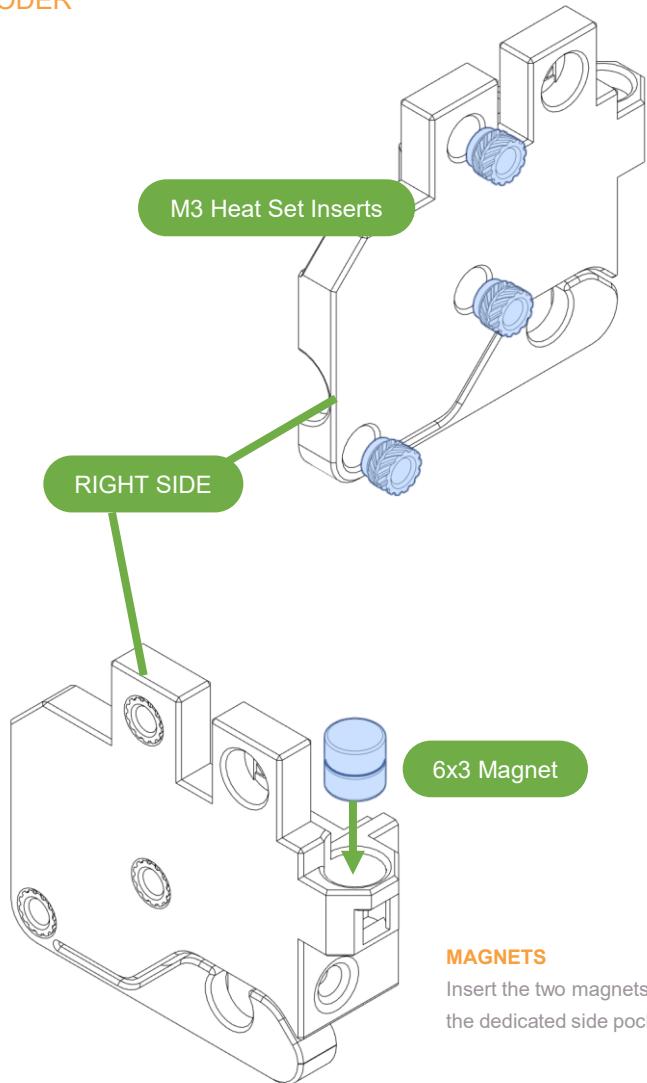


MAGNETS

Insert the two magnets in
the dedicated side pocket.

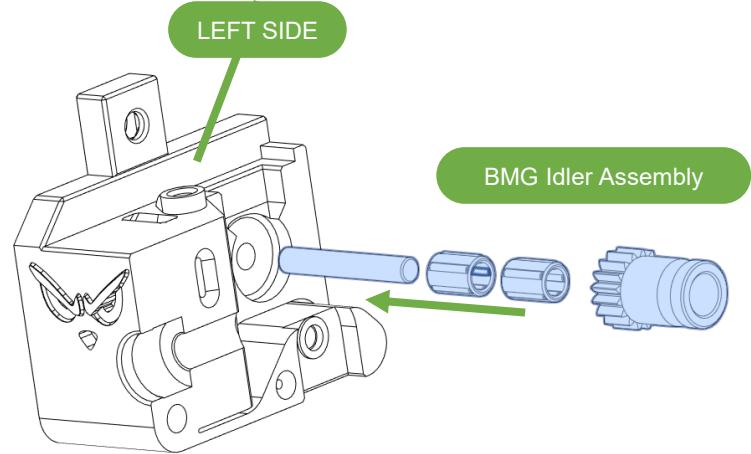


ENCODER

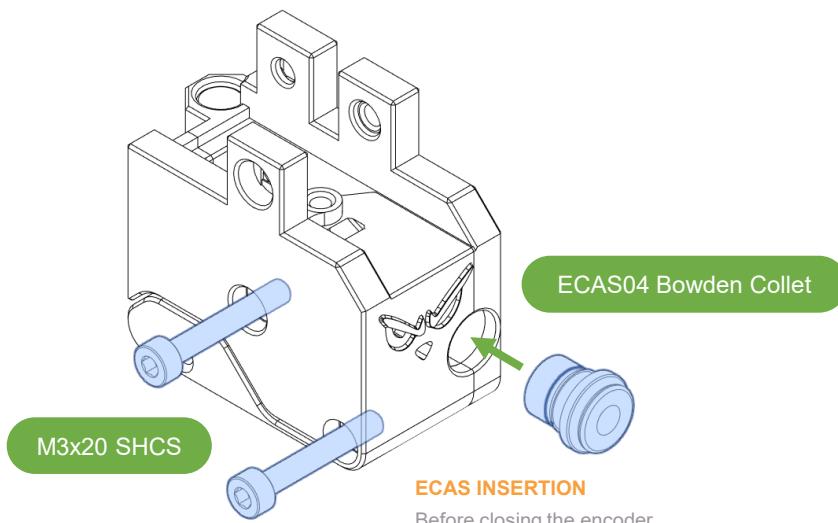

ECAS INSERTION


Before closing the encoder cart, insert the ECAS.

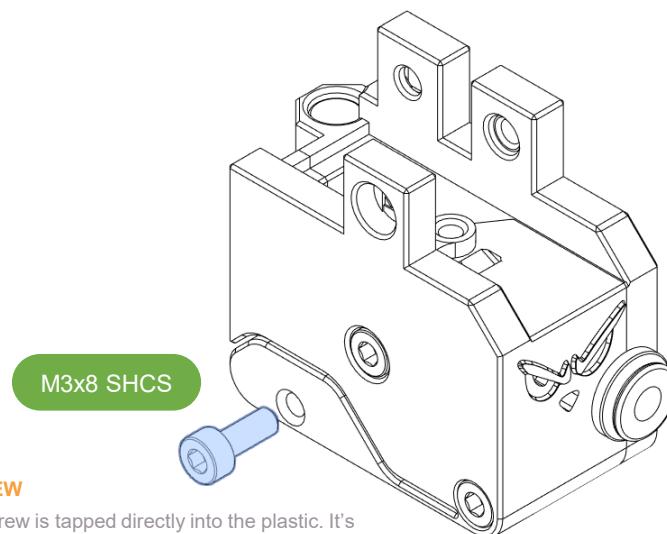

SIDE SCREW


The side screw is tapped directly into the plastic. It's used to make physical contact with the selector endstop.

ENCODER

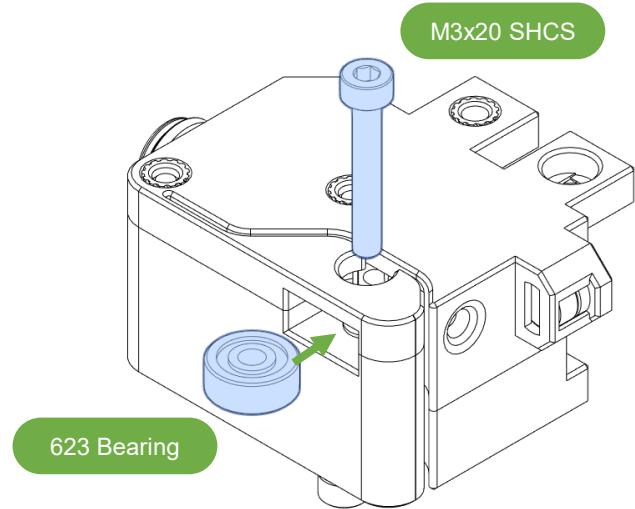


BMG GEAR ROTATION

Using some 1,75mm filament, check that the BMG gear spins well when you slide the filament in the encoder cart.

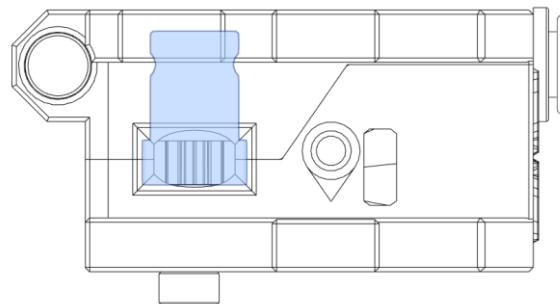


ENCODER SENSOR

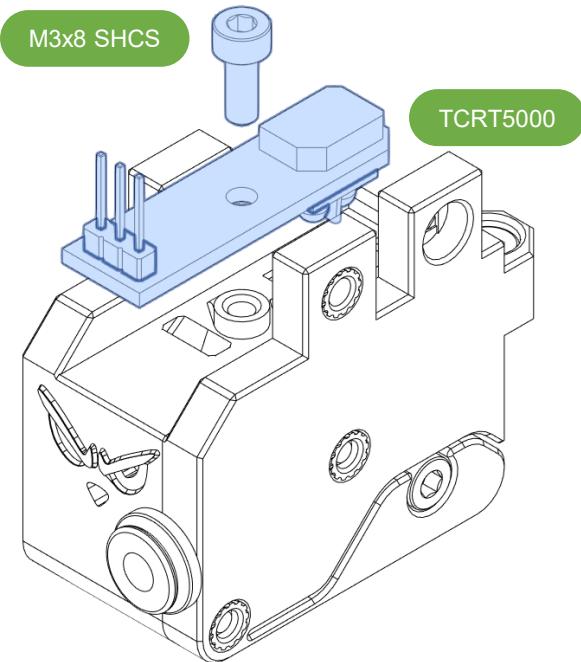

TCRT 5000 SENSOR


There are many different PCBs with TCRT 5000 sensor on them.

The one we want looks like this.


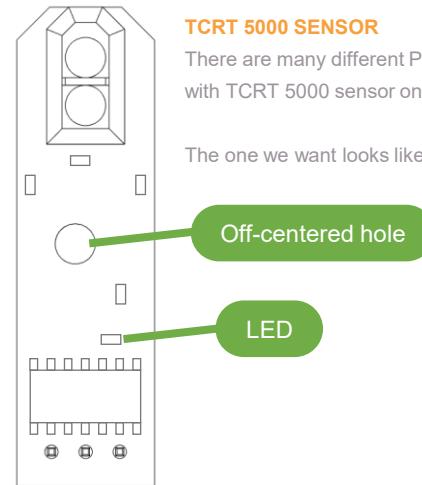


SENSOR PINS

Delicately straighten the sensor pins using pliers.

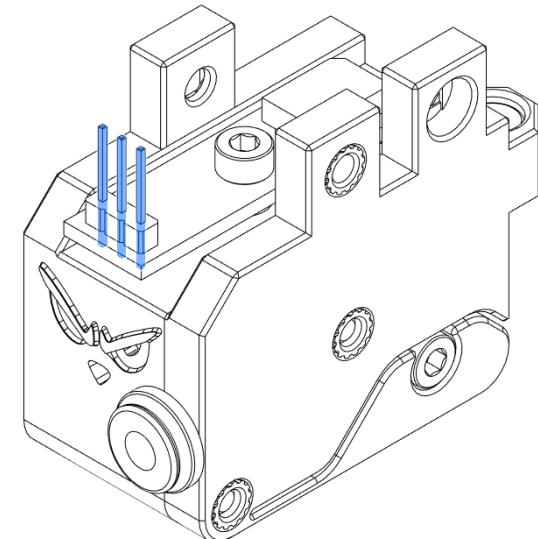


SELECTOR CART

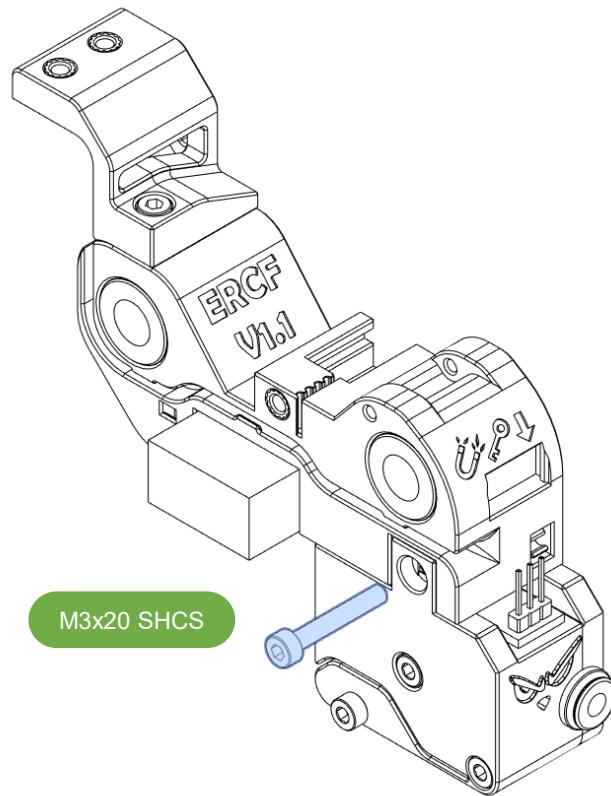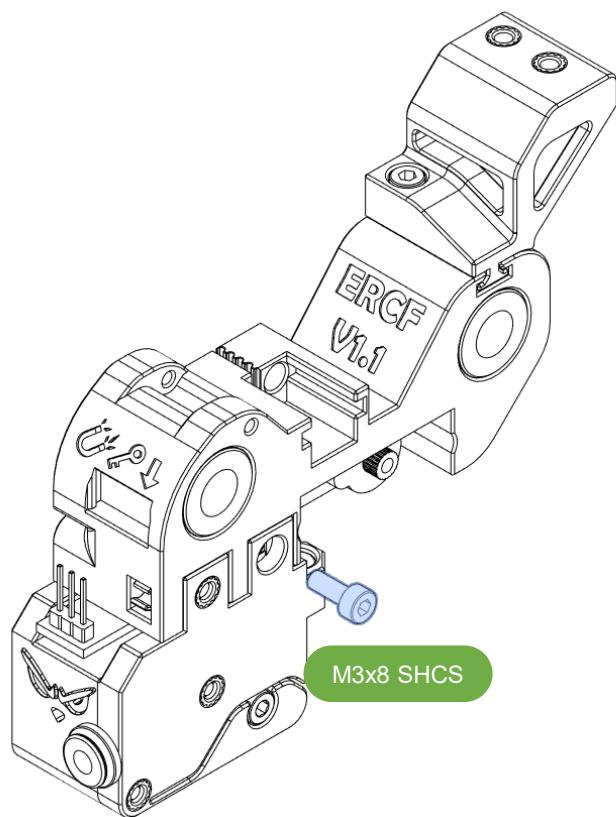

GATE KEY

GATE KEY


Install the Gate Key we assembled in the beginning in its dock.

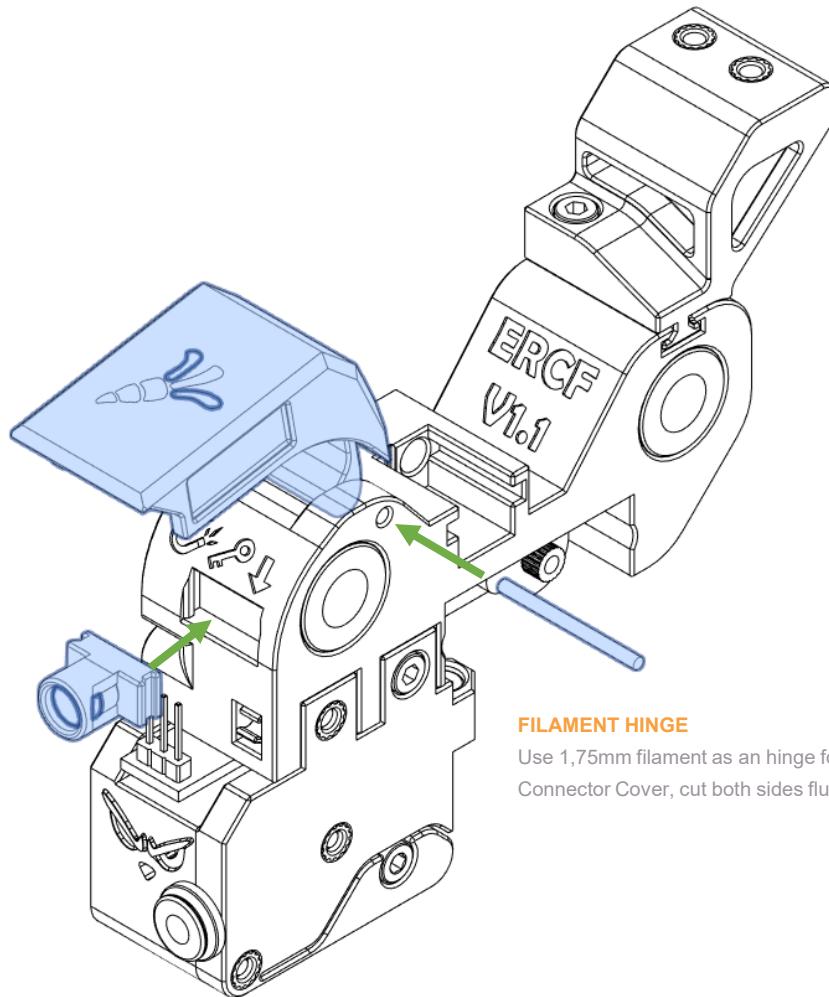

FILAMENT HINGE

Use 1,75mm filament as an hinge for the Connector Cover, cut both sides flush.

BELT TENSIONNER

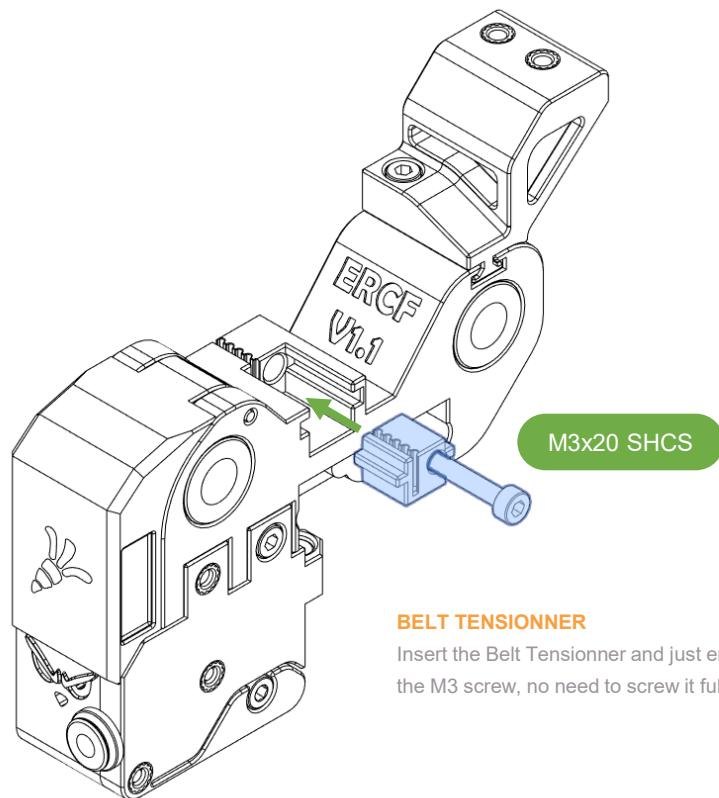


BELT TENSIONNER

Insert the Belt Tensionner and just engage the M3 screw, no need to screw it fully.



LINEAR AXIS




OVERVIEW

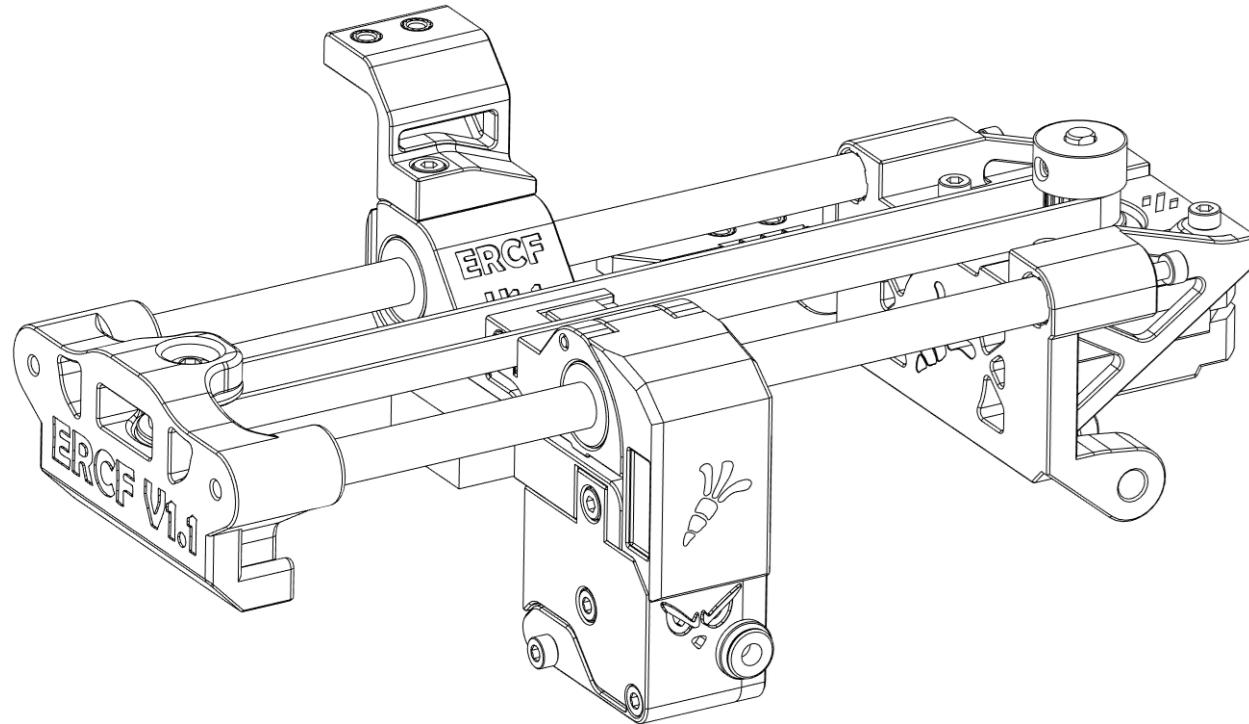



IDLER BLOCK

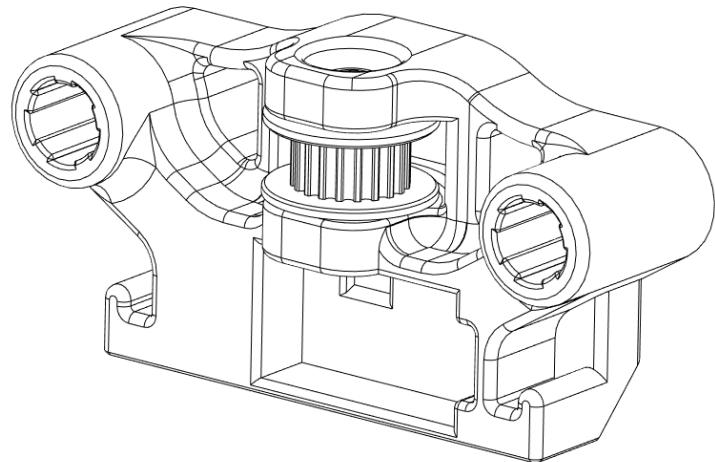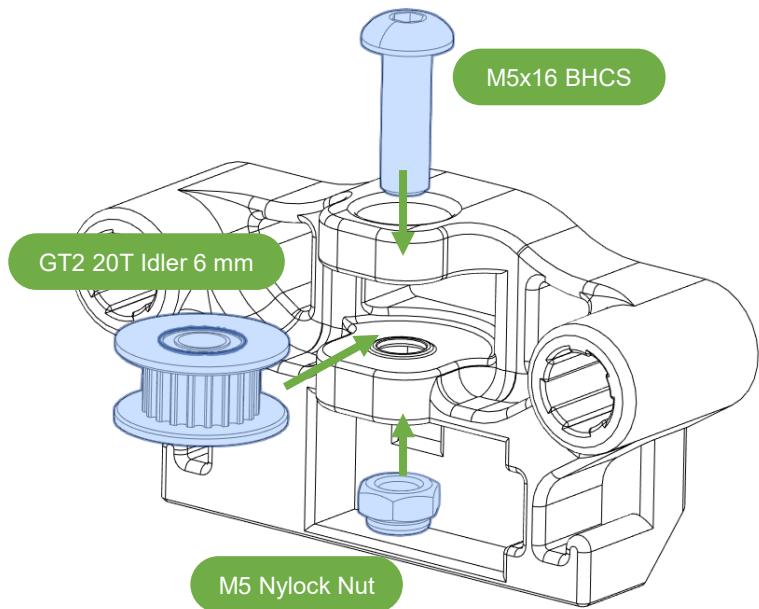

SELECTOR MOTOR SUPPORT

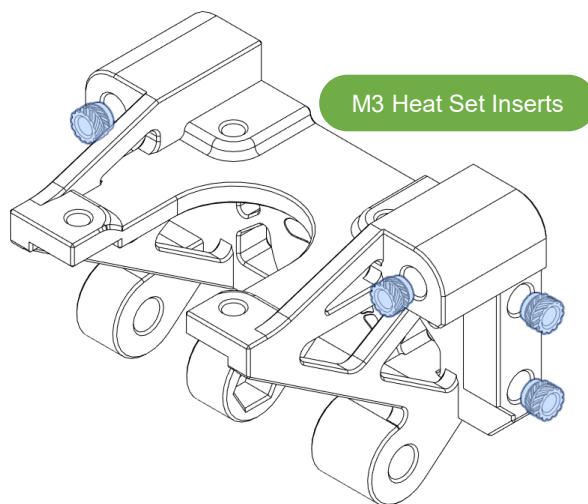


M3 Heat Set Inserts

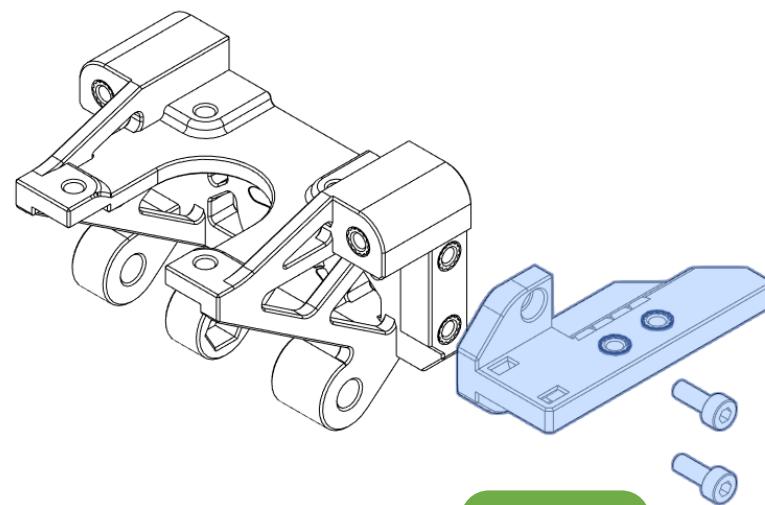
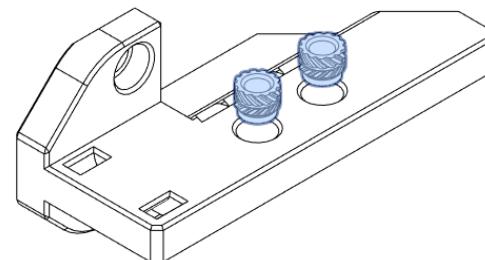


M3x8 SHCS

SELECTOR MOTOR SUPPORT

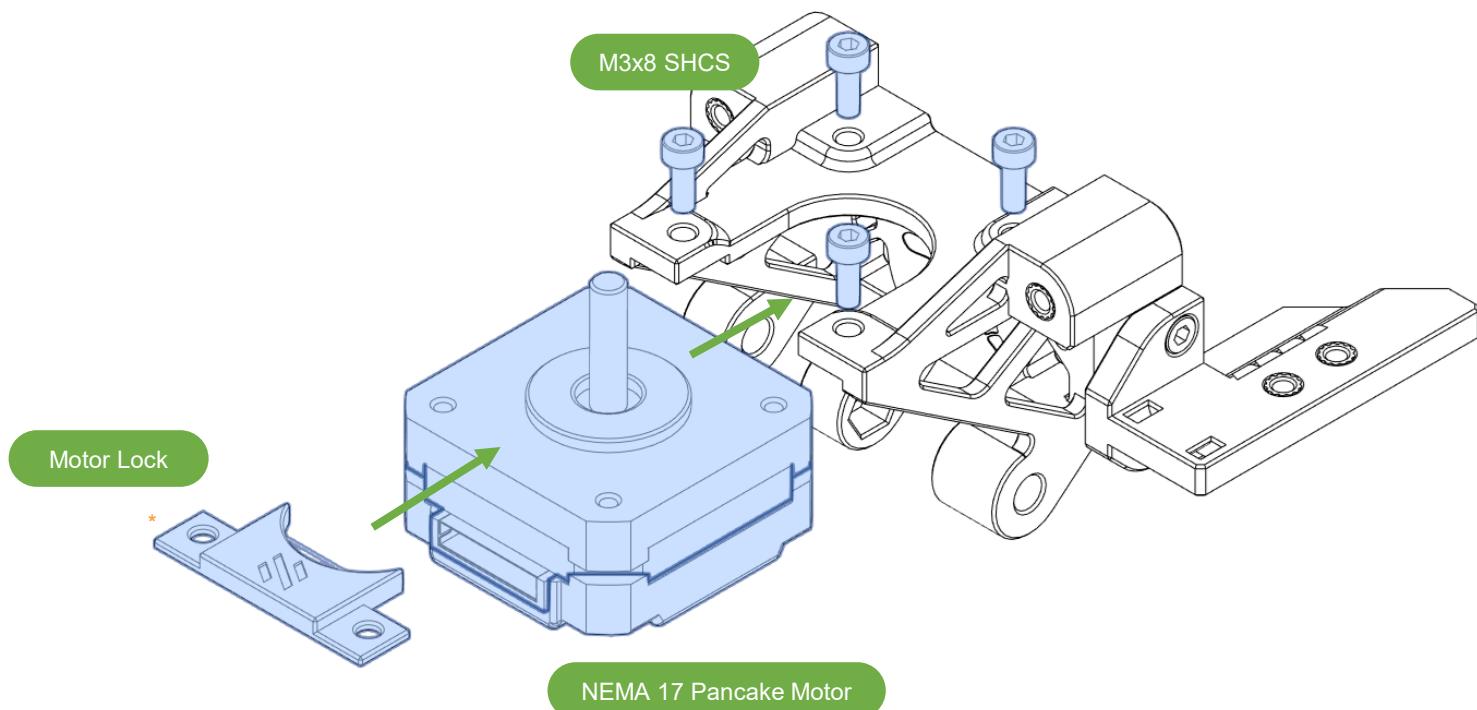


LINEAR AXIS

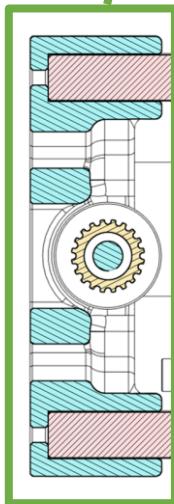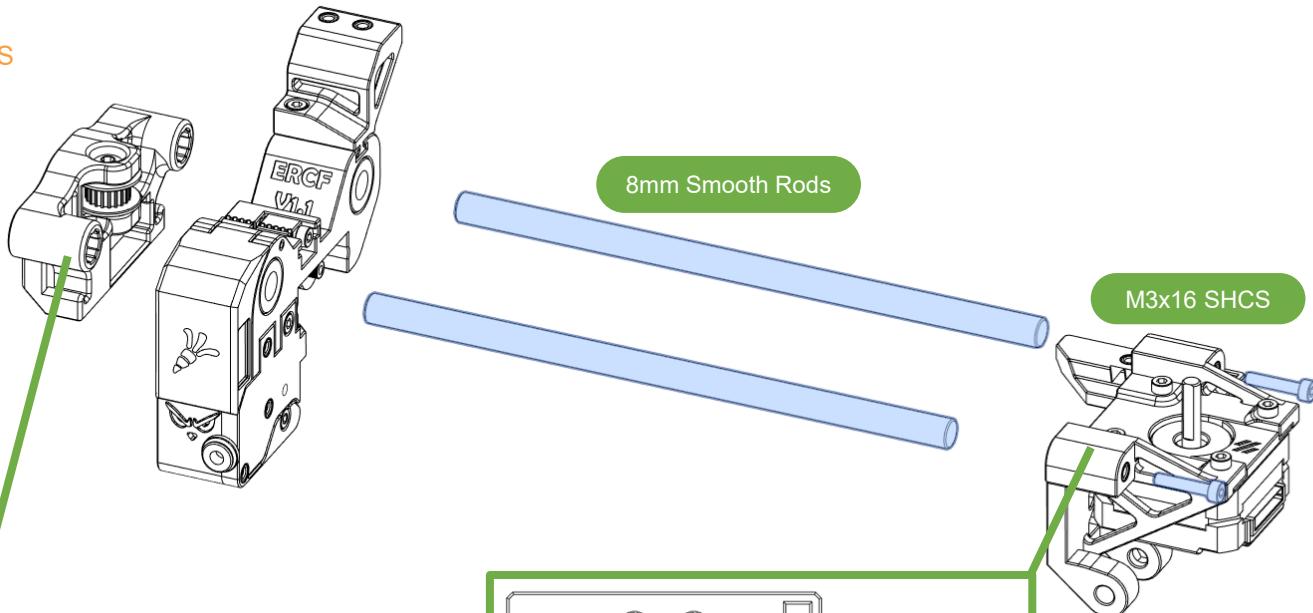

IDLER SIDE


Insert fully the 8mm Smooth Rods on the idler side. There are holes allowing you to check the rods are well in place.

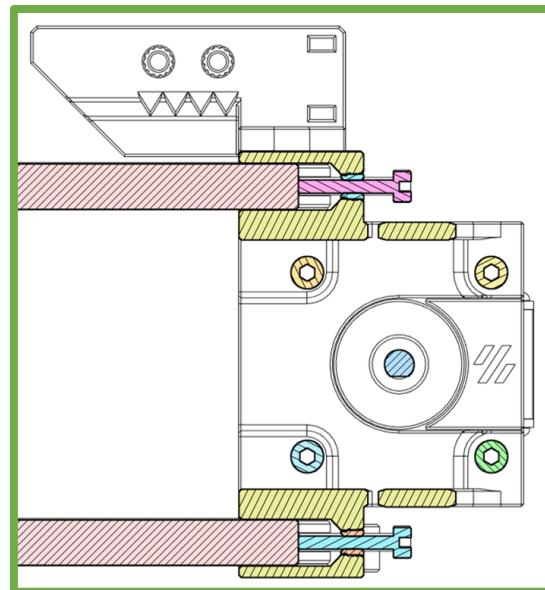

MOTOR SIDE

Don't fully insert the rods on the motor side for now, let them in a central position and just get the M3x16 SHCS screws to contact.

BELT

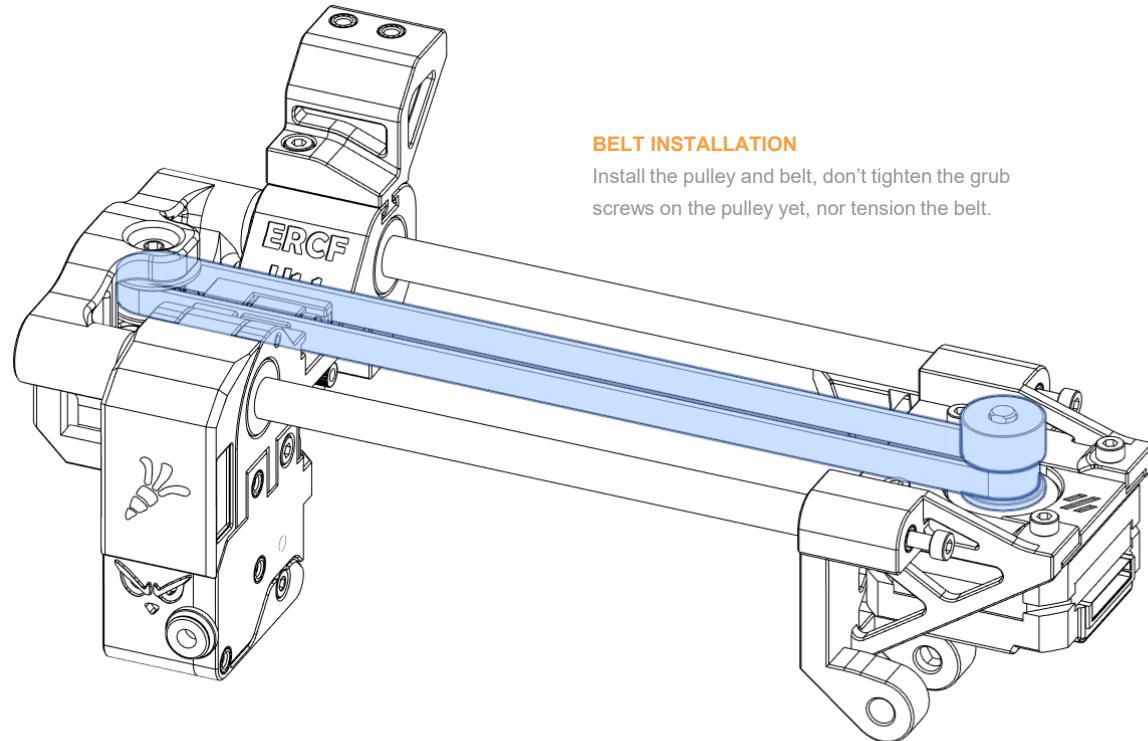

BELT INSTALLATION


Install the pulley and belt, don't tighten the grub screws on the pulley yet, nor tension the belt.

This page is left intentionnaly blank.


FINAL ASSEMBLY




OVERVIEW

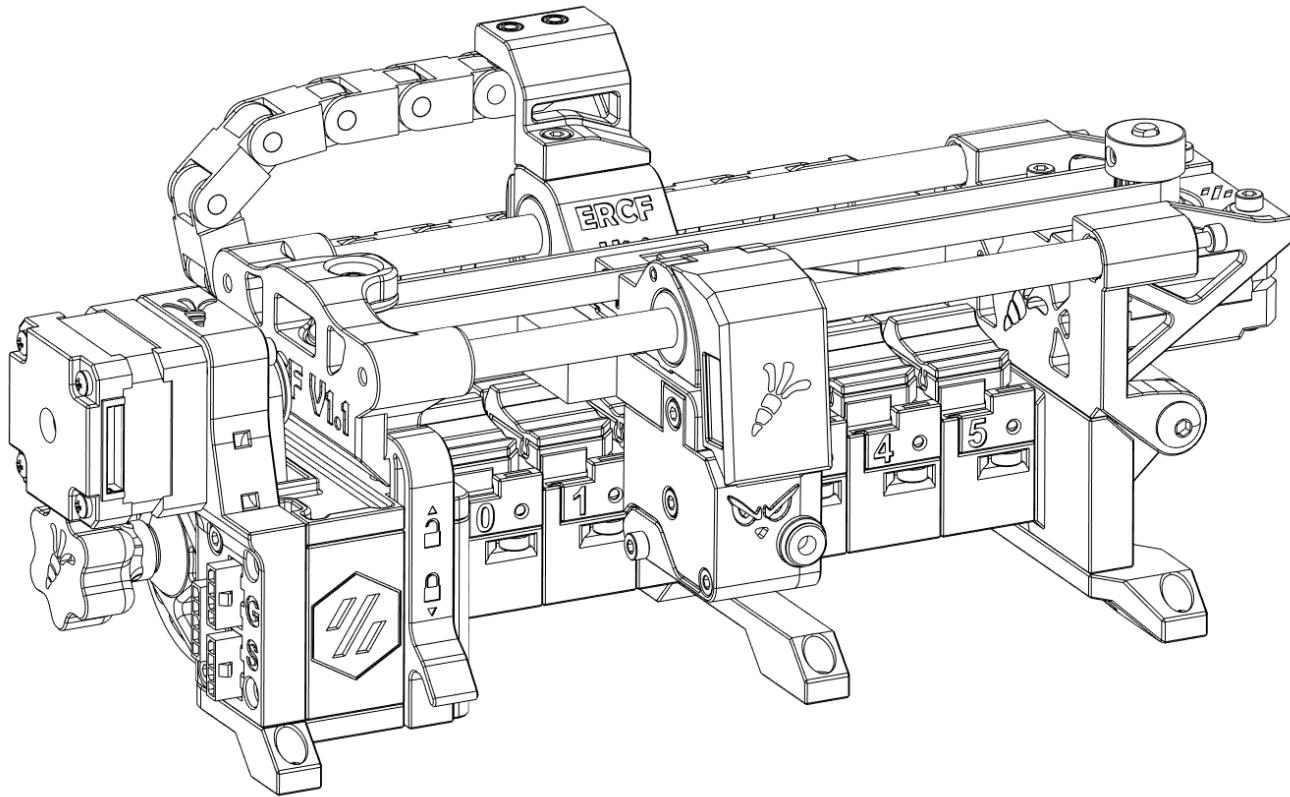

JOINING THE TWO BLOCKS

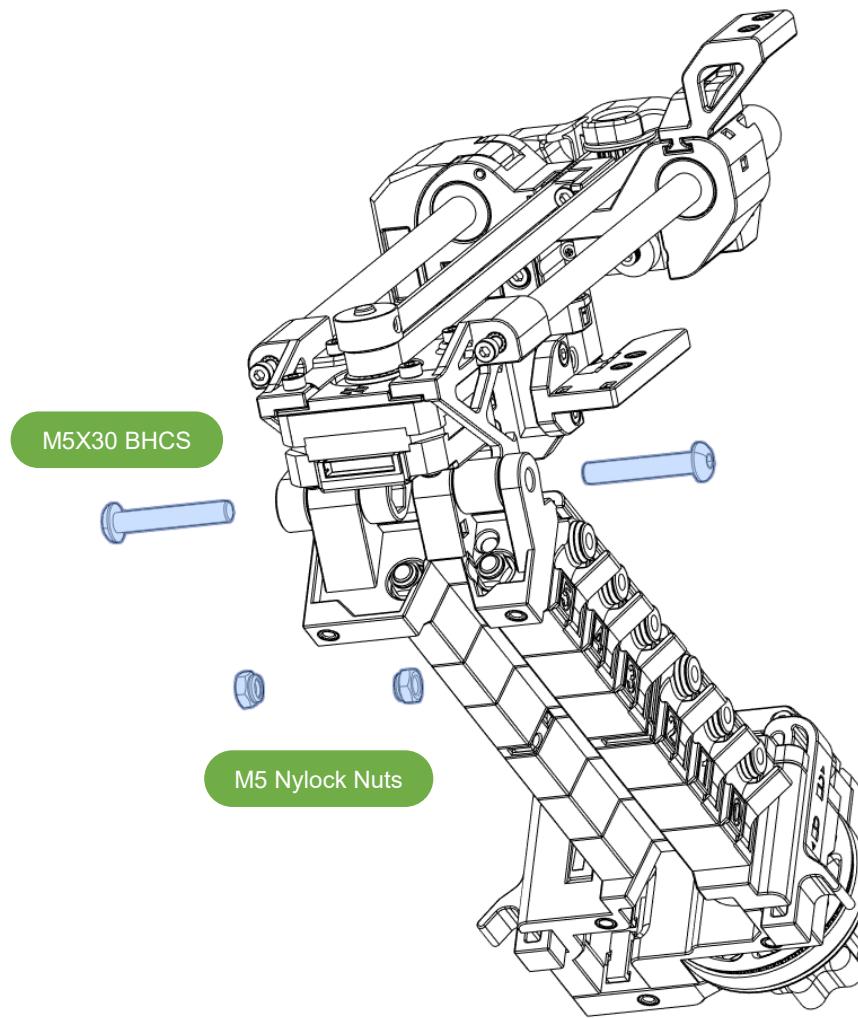

IDLER ADJUSTEMENT

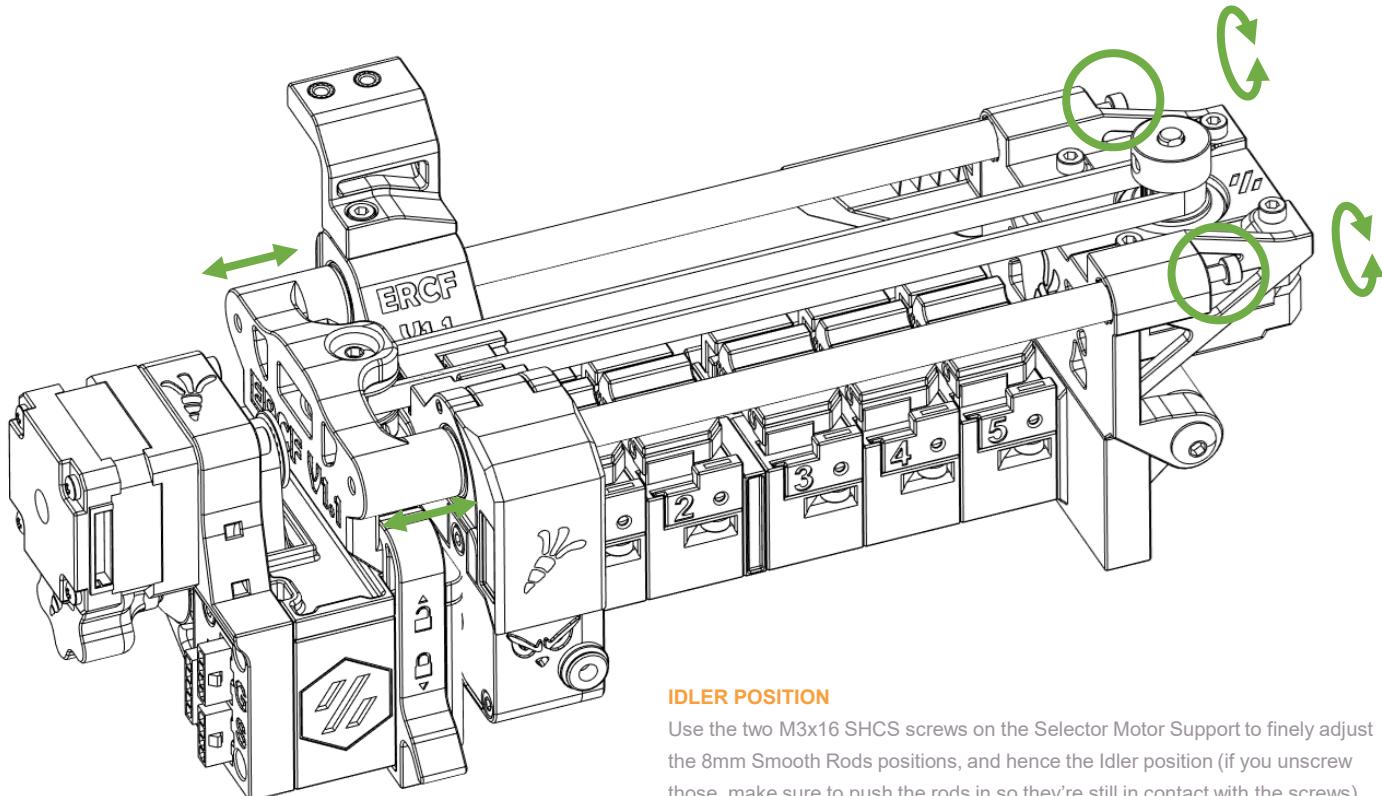

IDLER POSITION

Use the two M3x16 SHCS screws on the Selector Motor Support to finely adjust the 8mm Smooth Rods positions, and hence the Idler position (if you unscrew those, make sure to push the rods in so they're still in contact with the screws).

Make sure the 3 small slots on the Idler match the Gear Box Top Panel bumps.

Once the tuning is done, lock the linear axis using the two Gear Box Side Latches.


TENSIONING THE BELT

BELT TENSION

Adjust the belt tension.

GRUB SCREWS


Align the pulley with the belt and then use thread locker on the grub screws.

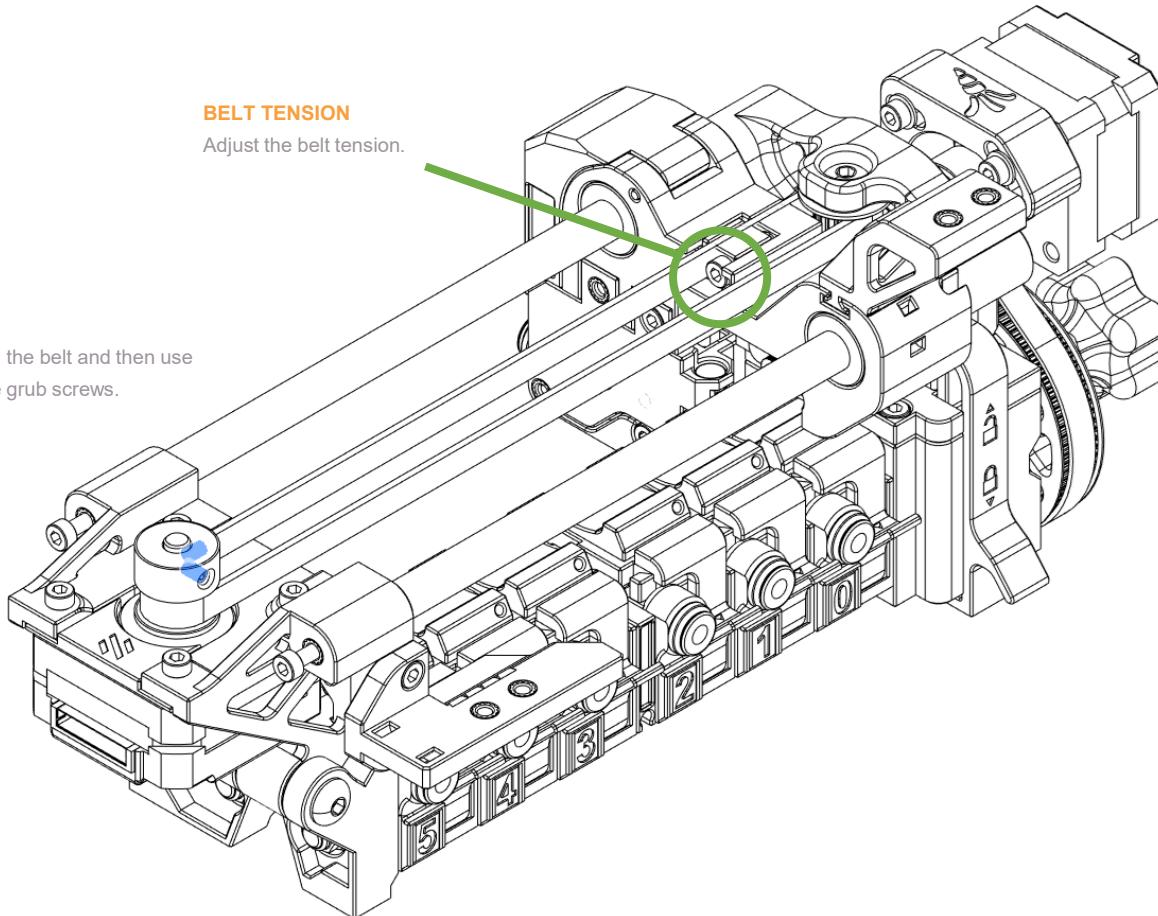

WIRE MANAGEMENT & FEET


USERS OF ERCF EASY BRD:

Skip this wiring step – see page 92

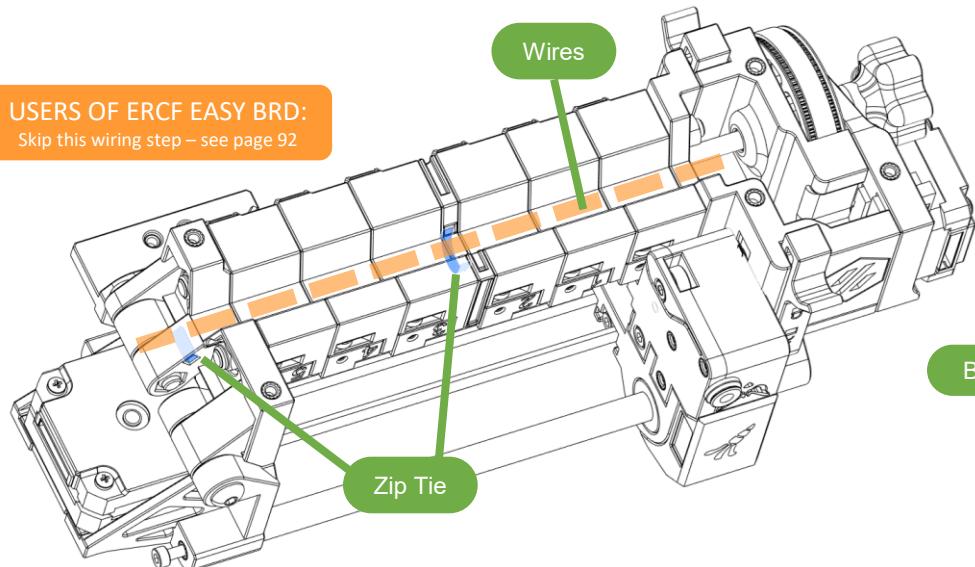

WIRING

Secure the Selector Motor, Servo and Encoder wires using zip ties. Keep a few cms of wires in the Gear Box, that will be helpful in case you have to disassemble//reassemble the ERCF.

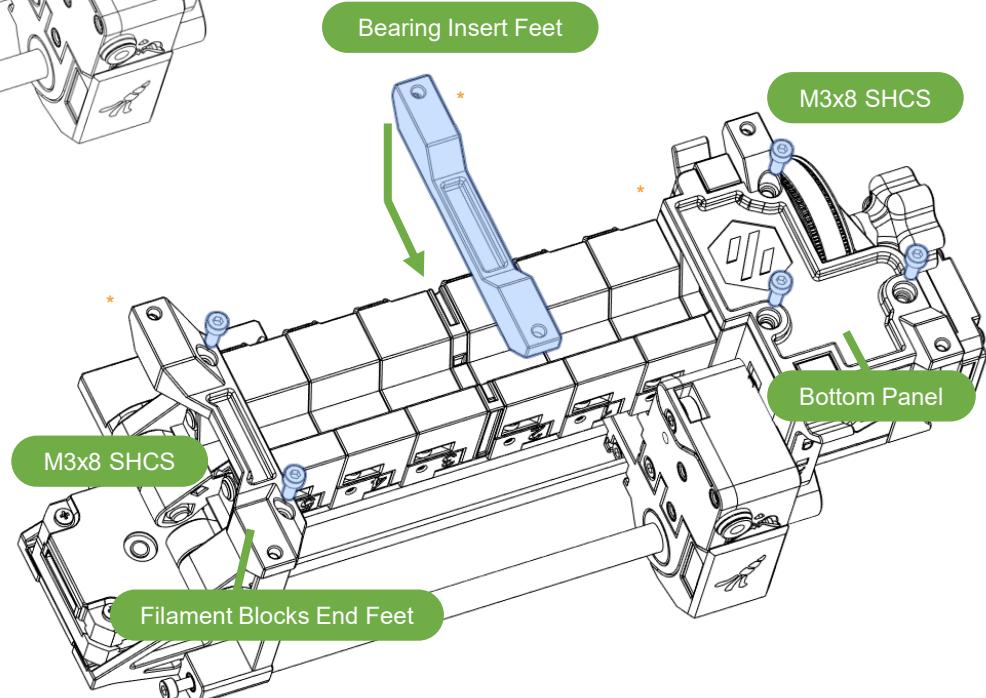


ERCF FEET

Install the Gear Box Bottom Panel and the other ERCF Feet.


The feet for the Bearing Inserts have built-in supports. Remove them before sliding the feet in the Bearing Inserts.

DRAG CHAIN

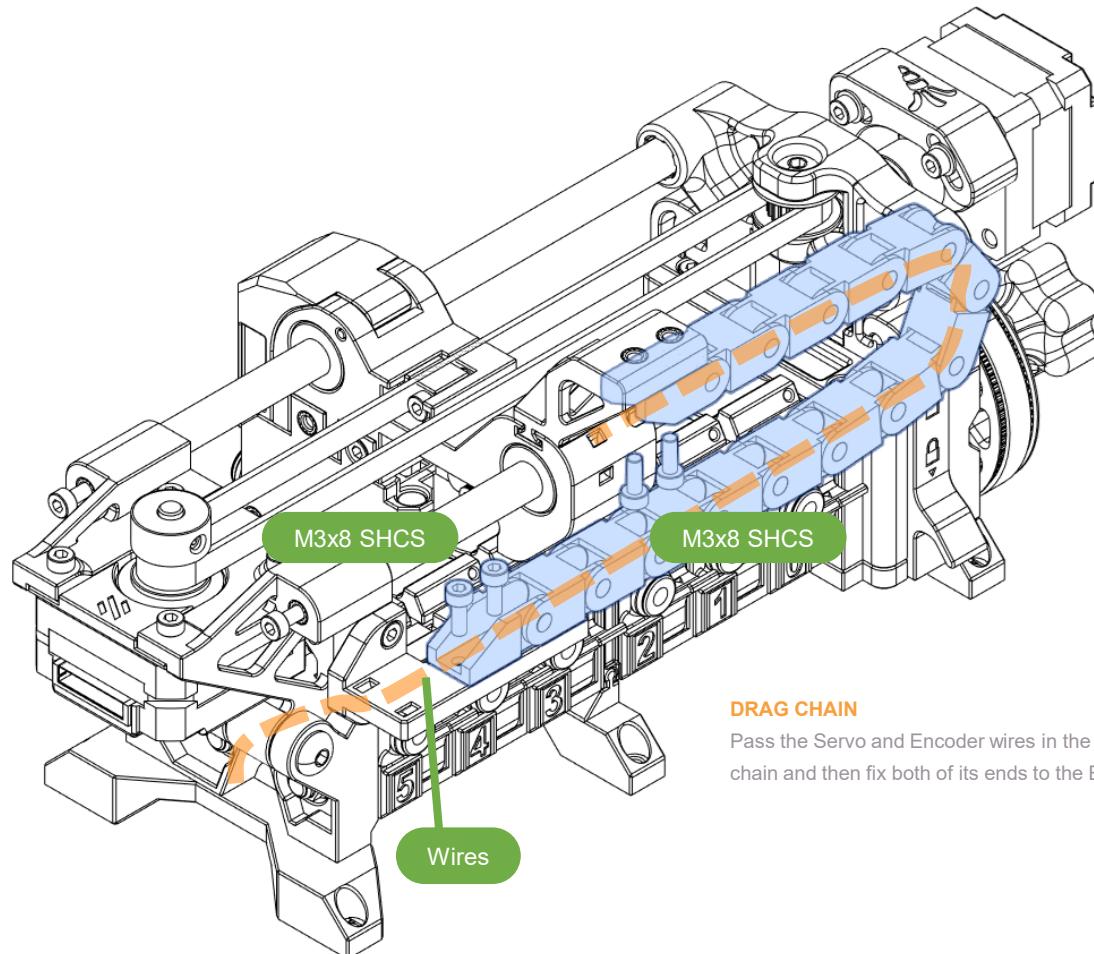

DRAG CHAIN

Pass the Servo and Encoder wires in the drag chain and then fix both of its ends to the ERCF.

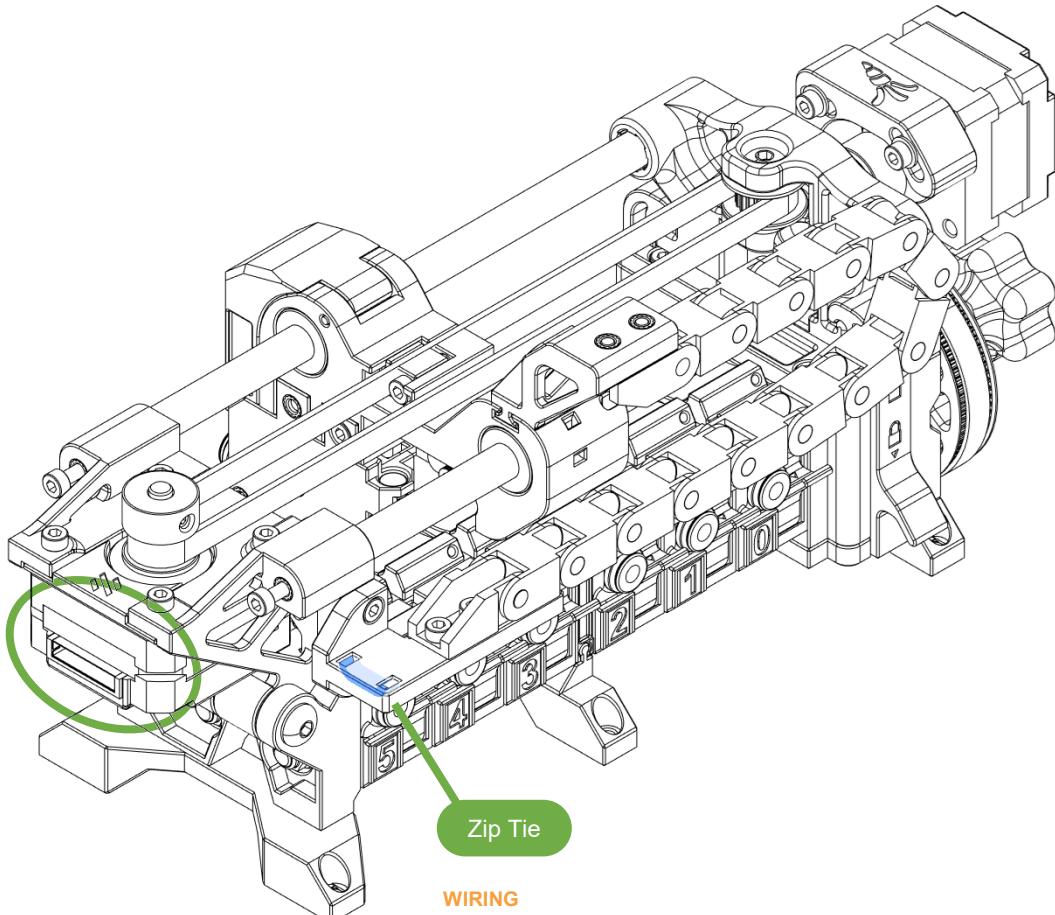
**SELECTOR MOTOR**

You can now do the crimps and connect the selector motor.

WIRING

Secure the drag chain wires using a zip tie.

FULL ERCF

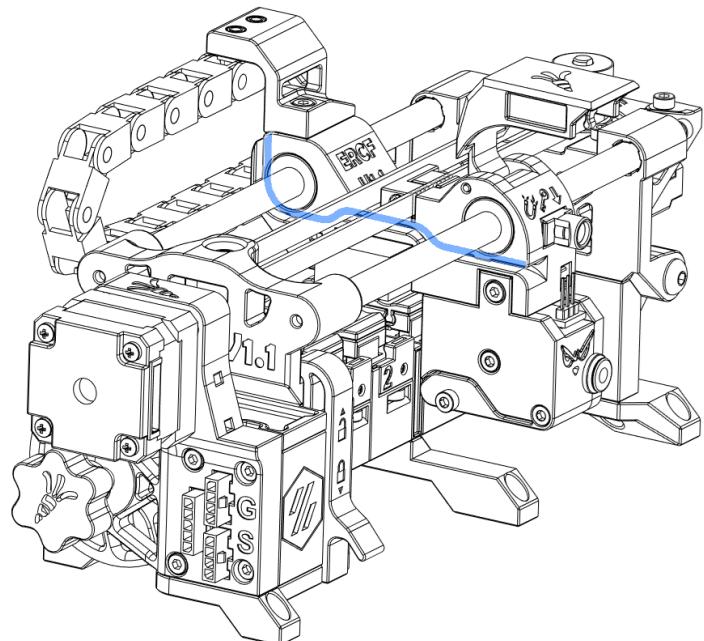


ENCODER WIRES

Pass one of the Encoder wires into the dedicated channel in the Selector Cart to define the wire length needed to plug into the Encoder.

Cut excess wire, remove the wire from the channel and do the crimps (Dupont or JST XH will work) for all wires.

Pass all the wires in the channel and then connect the Encoder and close the selector door.

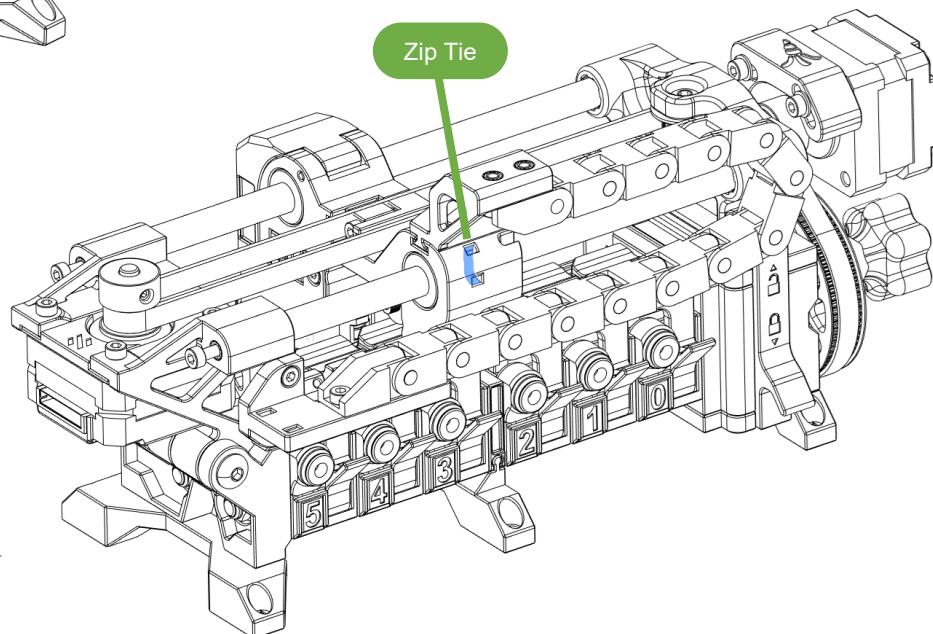


SERVO WIRES

Cut excess wires and connect the Servo (you can use a Dupont connector for example).

Secure both the Servo and Encoder wires using a zip tie.

THE END! ... OR ALMOST :D

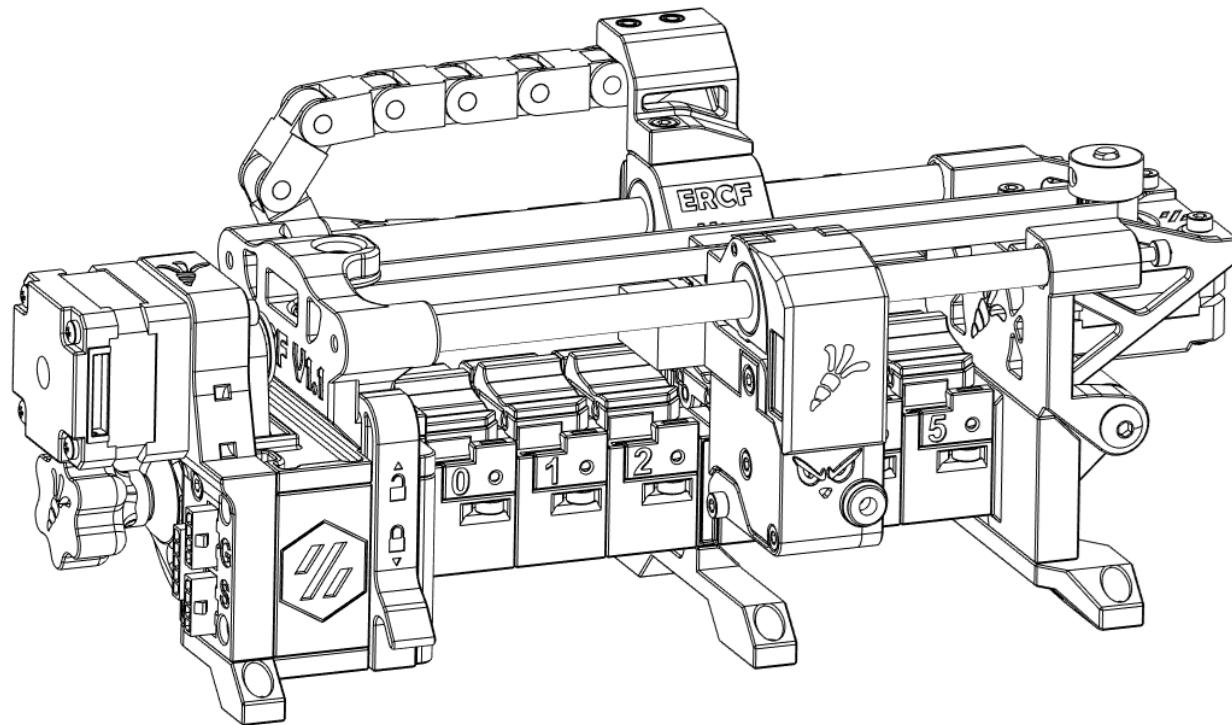

NEXT STEPS

The ERCF is now fully assembled, except, as you probably have noticed, for the Servo Arm!

Its installation on the ERCF will be done in the ERCF Setup section!

TOOLHEAD SENSOR

TOOLHEAD SENSOR


The ERCF relies on a filament sensor located below the toolhead extruder gears to maximize the load and unload sequence precision and reliability.

While any sensor (and any toolhead) can be used, this section will guide you through the assembly and installation of a filament sensor based on a design made by Tircown.

This sensor is available for the AfterBurner Clockwork, Galileo Clockwork and LGX on AfterBurner toolheads.

Only the parts that differ from the non-sensor versions of those toolheads are shown

AFTERBURNER CLOCKWORK TOOLHEAD SENSOR


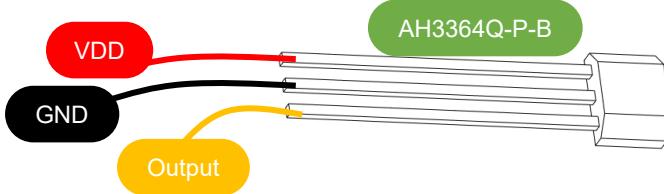


PREPARE THE HALL SENSOR

Typically, use about 15 cm of 24 AWG wire from the sensor to the connector of your choice.

Solder three wires to the sensor, at the very end of the sensor pins.

Insert a small heatshrink tube on the whole central pin and only on the solder joint for the two other pins.

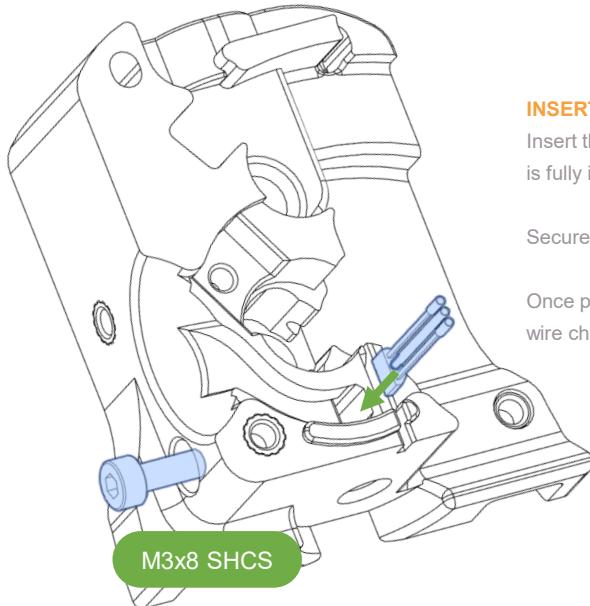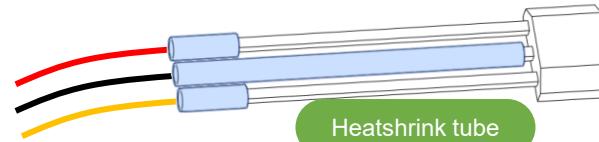


INSERT THE SENSOR

Insert the sensor in its dedicated pocket. Make sure it is fully inserted and beware of the sensor orientation.

Secure its position using a M3x8 screw.

Once properly fixed, bend the pins so they fit in the wire channel of the part.

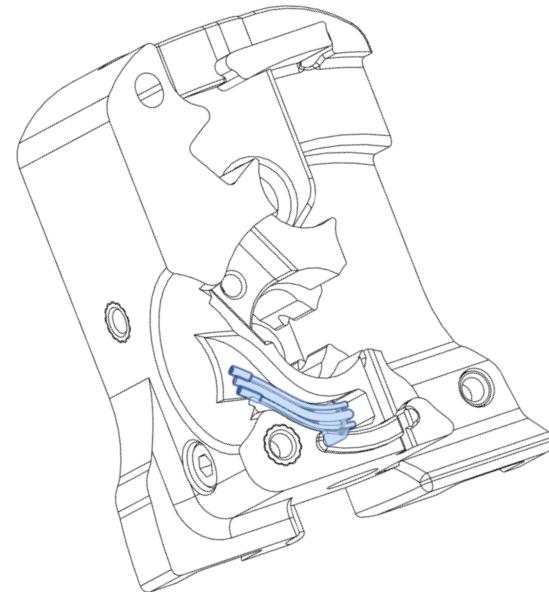


AFTERBURNER CLOCKWORK TOOLHEAD SENSOR

COVER PLATE


Install the cover plate on top of the wire channel.

Beware of the small insert to secure the position of the cover. The M3x8 screw is tapped directly in the plastic.

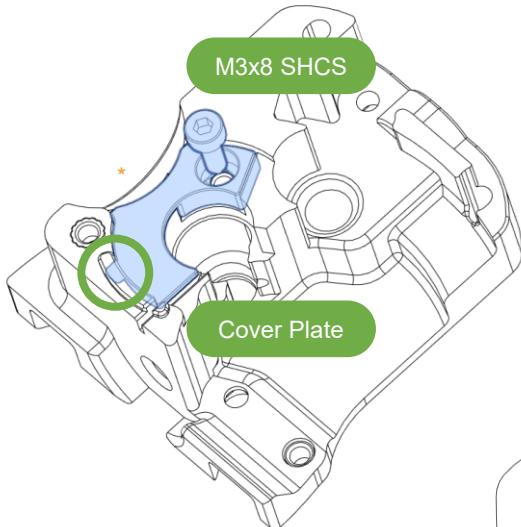

MAGNET POLARITY


The hall sensor used is sensible to the magnet polarity, hence the magnet orientation will impact the sensor behavior, see page 82.

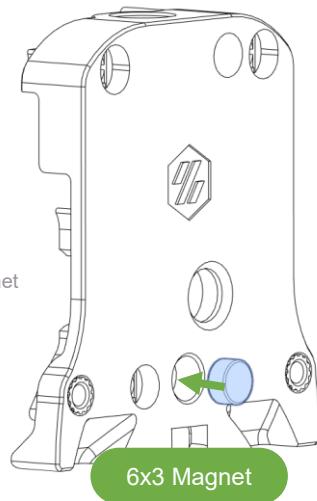

M3 STEEL WASHER

Make sure the washer you are using is steel (it has to be magnetic, so no plastic or stainless steel) and that its surface is smooth.

If the washer is stamped remove the burs using a file.

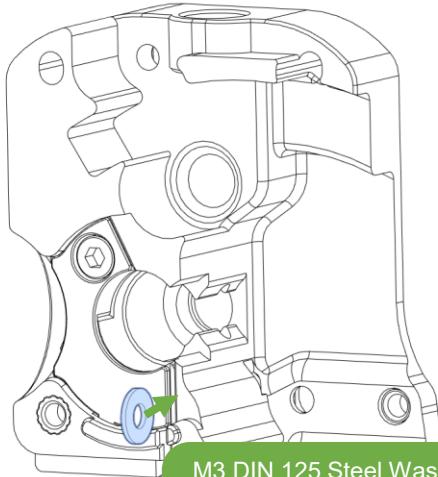

PTFE TO THE HOTEND

Beware that the PTFE tube that goes to the hotend is shorter than the regular AfterBurner Clockwork version.


TESTING THE SENSOR

Once the M3 steel washer and the magnet are inserted, do not assemble the whole toolhead nor install it. Go to page 82 to check that the sensor is working properly first.


GALILEO CLOCKWORK TOOLHEAD SENSOR

PREPARE THE HALL SENSOR

Insert a small heatshrink tube on the middle pin of the hall sensor to avoid any potential short-circuit between the pins

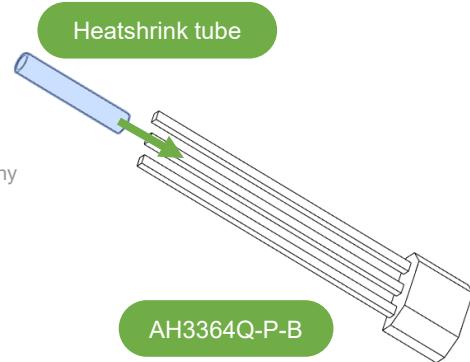


Galileo Toolhead Sensor Tool

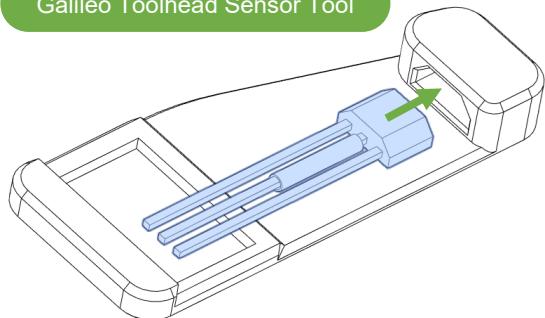


JST-XH CONNECTOR

Solder the pins of the hall effect sensor on the JST-XH connector

JST-XH Connector – 3 pins

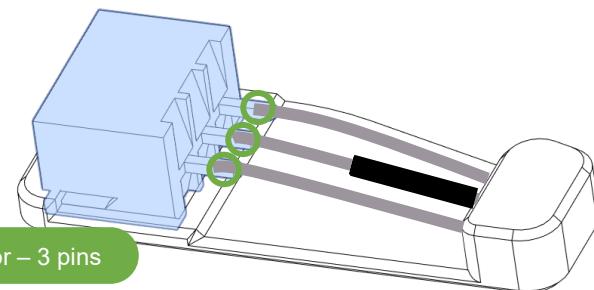



GALILEO CLOCKWORK TOOLHEAD SENSOR

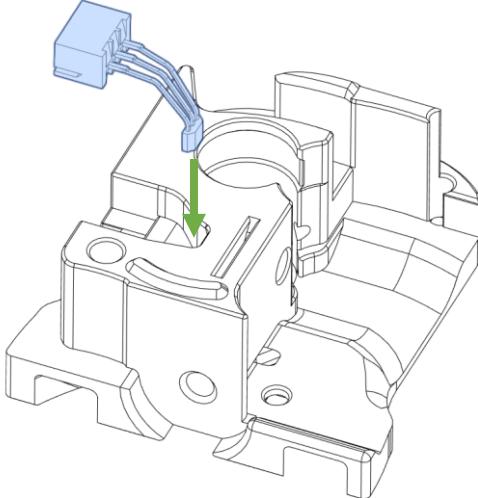

INSERT THE HALL SENSOR

Insert the sensor in its dedicated hole.
Beware of its orientation and check that
the sensor is fully inserted.


Secure the sensor position using an
M3x8 screwed directly into the plastic.

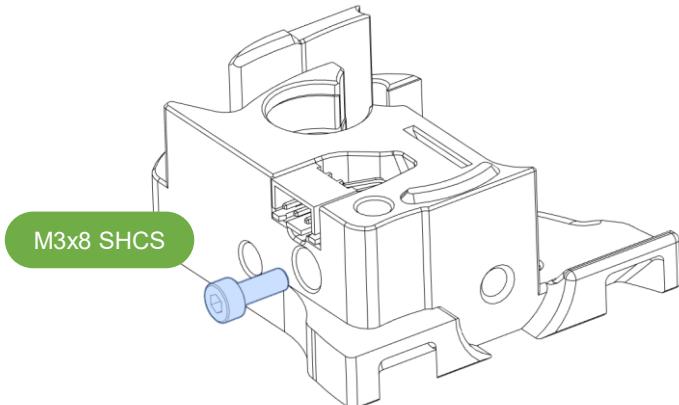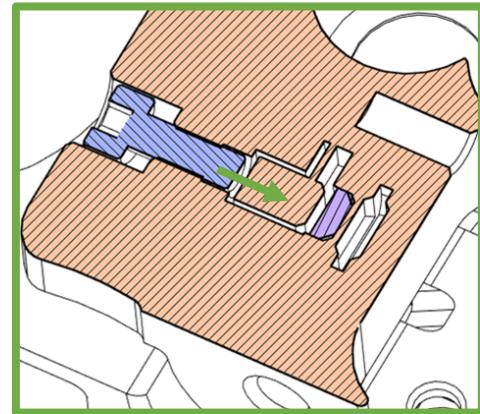

PTFE TO THE HOTEND

Beware that the PTFE tube that goes to the hotend is 15 mm
shorter for this version of the Galileo Clockwork (i.e. with the
filament sensor) compared to the regular Galileo Clockwork.

GALILEO CLOCKWORK TOOLHEAD SENSOR

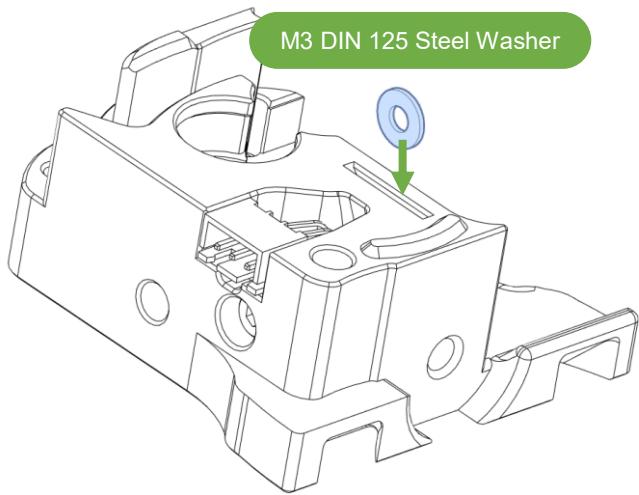

MAGNET POLARITY

The hall sensor used is sensible to the magnet polarity, hence the magnet orientation will impact the sensor behavior, see page 82.


TESTING THE SENSOR

Once the M3 steel washer and the magnet are inserted, do not assemble the whole toolhead nor install it. Go to page 82 to check that the sensor is working properly first.



M3 STEEL WASHER

Make sure the washer you are using is steel (it has to be magnetic, so no plastic or stainless steel) and that its surface is smooth.

If the washer is stamped remove the burs using a file.

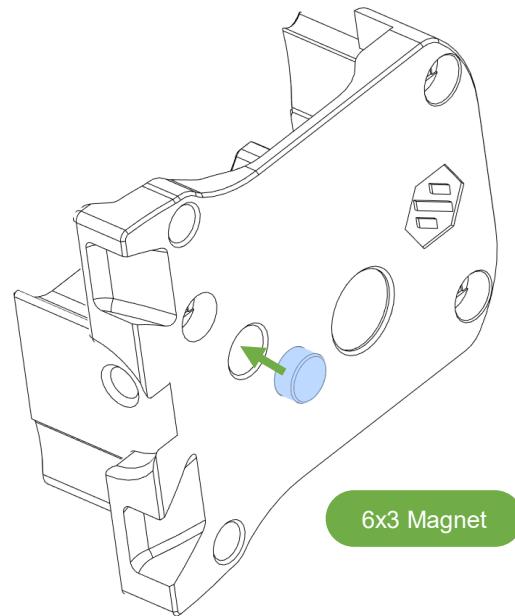

LGX ON AFTERBURNER TOOLHEAD SENSOR

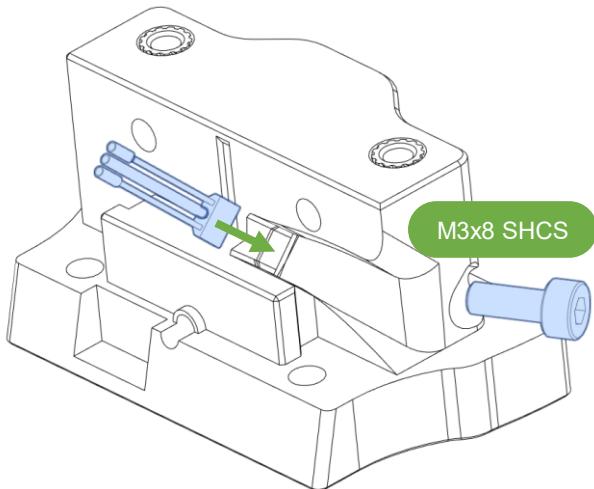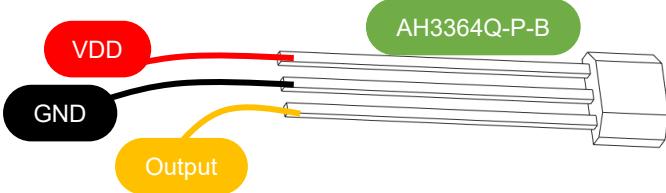

INSERT THE SENSOR

Insert the sensor in its dedicated pocket. Make sure it is fully inserted and beware of the sensor orientation.

Secure its position using a M3x8 screw.



Once properly fixed, bend the pins so they fit in the wire channel of the part.

PREPARE THE HALL SENSOR


Typically, use about 15 cm of 24 AWG wire from the sensor to the connector of your choice.

Solder three wires to the sensor, at the very end of the sensor pins.

Insert a small heatshrink tube on the whole central pin and only on the solder joint for the two other pins.

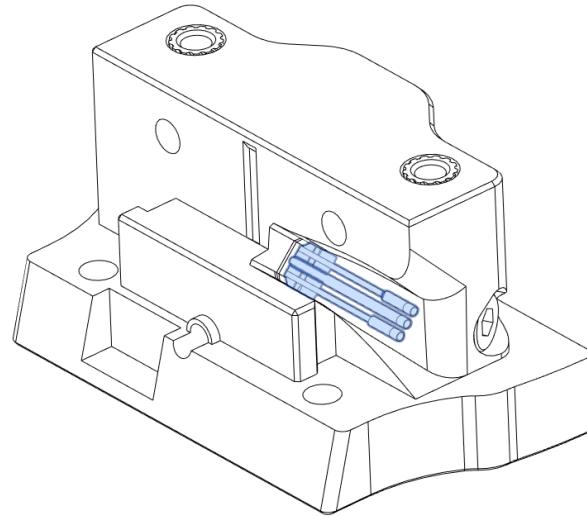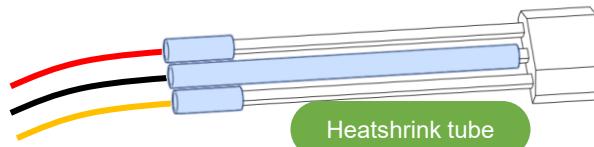

LGX ON AFTERBURNER TOOLHEAD SENSOR

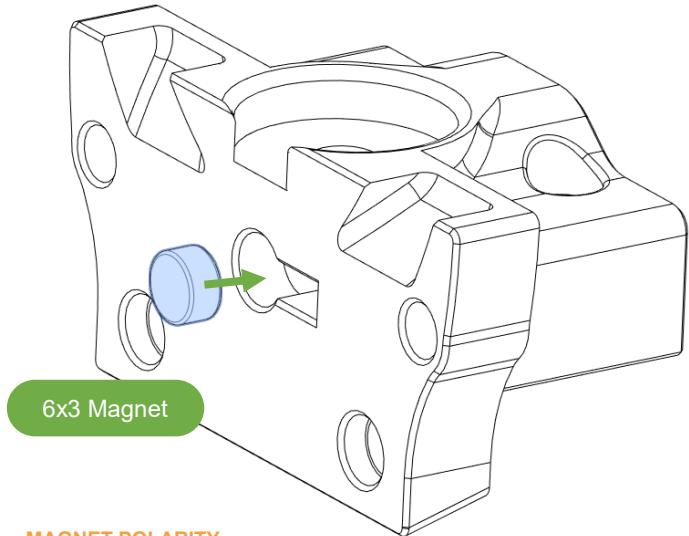

MAGNET POLARITY

The hall sensor used is sensible to the magnet polarity, hence the magnet orientation will impact the sensor behavior, see page 82.


PTFE TO THE HOTEND

Beware that the PTFE tube that goes to the hotend is shorter than the regular LGX on AfterBurner version.

M3 STEEL WASHER

Make sure the washer you are using is steel (it has to be magnetic, so no plastic or stainless steel) and that its surface is smooth.


If the washer is stamped remove the burs using a file.

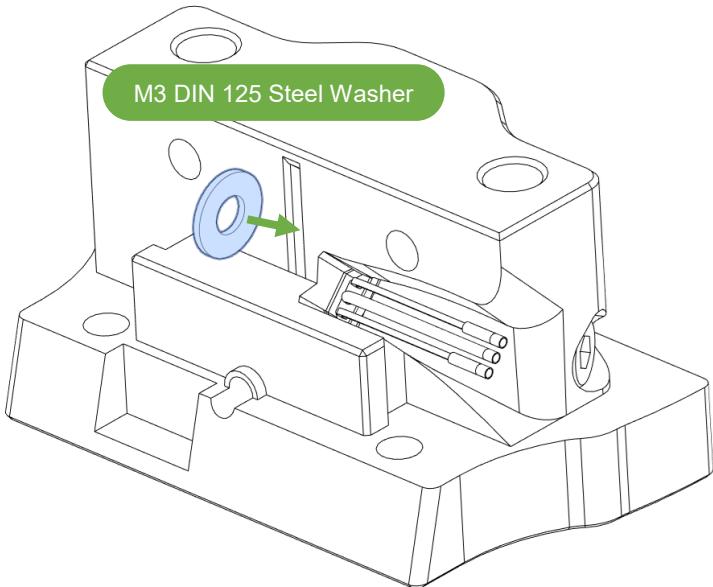

TESTING THE SENSOR

Once the M3 steel washer and the magnet are inserted, do not assemble the whole toolhead nor install it. Go to page 82 to check that the sensor is working properly first.

TESTING THE SENSOR

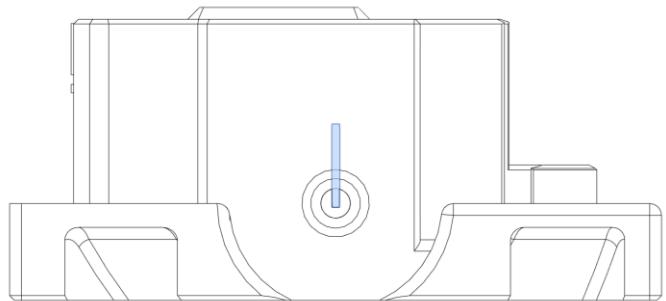

Example for the Galileo Clockwork



FILAMENT PATH

Make sure the washer is properly inserted into the filament path, as shown. Otherwise, you may have to clean the washer slot in the 3D printed part.

TESTING THE SENSOR

SENSOR CONNECTION

Ensure proper connection and plug in the sensor to your board.

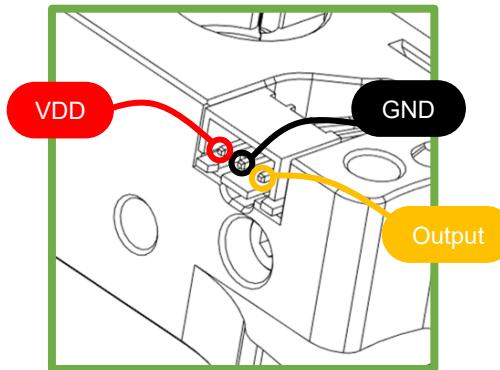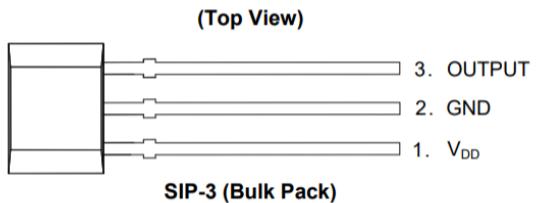

Example for the Galileo Clockwork with
the JST-XH connector

KLIPPER CONFIG

Make sure that the filament sensor pin on the klipper config has a pull-up (^).

```
[filament_switch_sensor toolhead_sensor]
pause_on_runout: False
switch_pin: ^P1.27
```

In the ercf_hw.cfg

TESTING THE SENSOR

SENSOR TEST

Use your default printer control frontend, like Mainsail or Fluidd, to check the sensor behavior.

Once connected and check that the sensor reports no filament when there is none in the filament path


Use 1.75 mm filament and insert it in the filament path, now the sensor should trigger

In case the filament sensor is always in an triggered state, this probably means the magnet is installed with the wrong polarity. In this case, invert the magnet orientation and check again.

Once you've checked several times that the sensor triggers properly on filament insertion and removal, you can shutdown your printer and install the complete toolhead.




Example of filament sensor state with
no filament inserted, on Fluidd

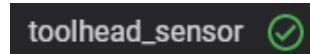

Example of filament sensor state with
filament inserted, on Fluidd

This page is left intentionnaly blank.


CONNECTING THE ERCF : NO CUSTOM CONTROLLER BOARD (i.e. PRINTER MAIN BOARD(S))

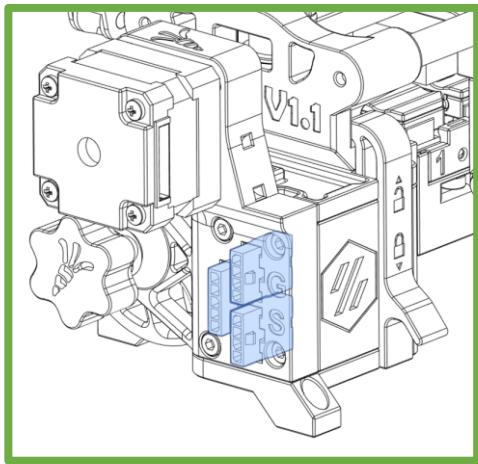

FIRST CONNECTION

You can keep the ERCF on a table or desk for all the incoming steps, you just need to be able to connect it to your printer.

Plug in the 3 connectors to the ERCF (5 pins general connector and the two 4 pins motors connectors) and the other ends on your printer main board(s).

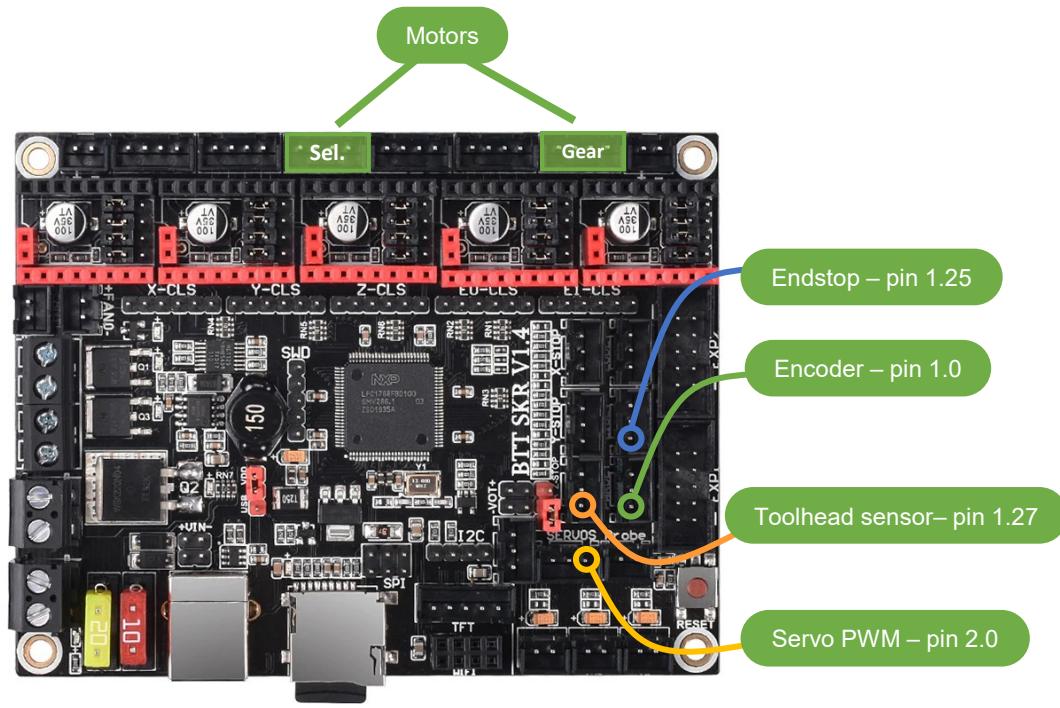


Example for an SKR 1.4 board.

This page is left intentionnaly blank.

CONNECTING THE ERCF : CUSTOM CONTROLLER BOARD



ERCF EASY BRD

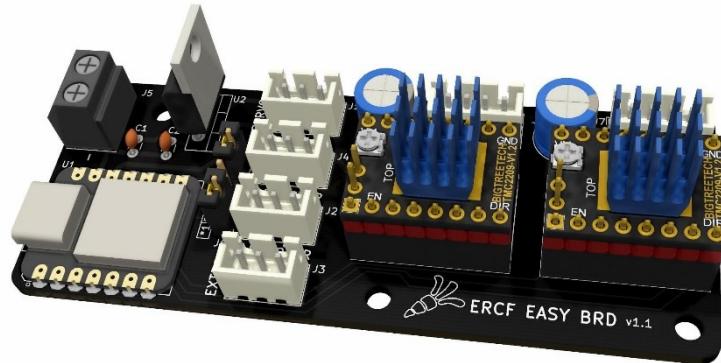

The ERCF EASY BRD is a dedicated controller board that contains all you need to run an ERCF unit.

The main purposes of this custom board are :

- Allowing the ERCF unit to be used on printers that run Klipper but do not have spare stepper drivers slots on the main board(s).
- Make it easier to add on an existing printer with minimal modifications in the electronic compartment, if not none at all.
- Minimize the amount of wiring between the printer and the ERCF unit.
- As easy as it gets to build for anyone with a basic soldering iron. All components are through-hole components and widely available from many sources.

The ERCF EASY BRD is intended to be placed under the ERCF unit, between the two aluminum profiles. But of course, you can place it anywhere you want.

By using this custom board, you can skip all steps of the ERCF manual that relate to wiring connectors and motors.


Find all the information about the ERCF EASY BRD and related stl files on the dedicated Github page:

<https://github.com/Tircown/ERCF-easy-brd>

For your information, the original name of this custom board was ERCF EZ BOARD, so you can still find pictures or products sold with this name on the PCB silkscreen. The name has been changed to avoid confusion with a product line up well known in the 3D printing community, which has absolutely nothing to do with this board.

Tircown // Fabrice

ERCF EASY BRD : JUMPERS AND STEPPER DRIVERS

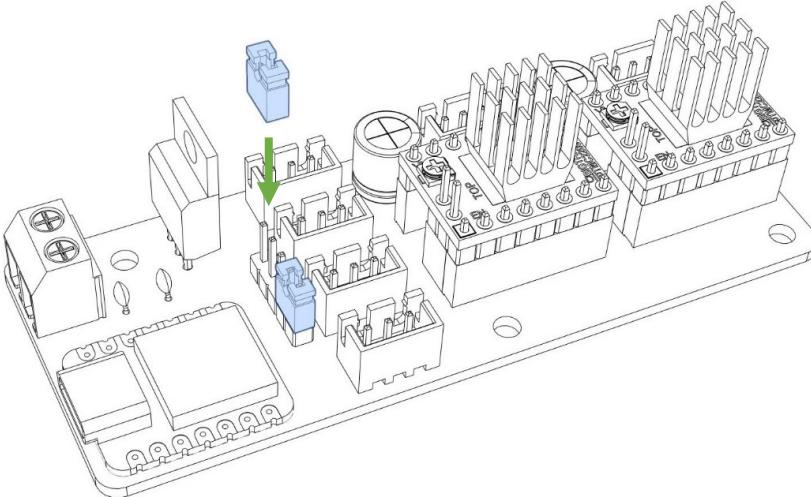

STEPPER DRIVERS

Install two TMC2209 with heatsinks. Only TMC2209 are compatible.
Be careful about the orientation.


JUMPERS

The jumpers are used to allow multiple configurations. The numbering goes from left to right when the screw terminal is on top. See the silkscreen on the PCB for more details.


[1 2] 3 [4 5] : The extra connector is wired to PA7 and the endstop to PB9. Sensorless homing is not used. This is the most common configuration.

1 [2 3] [4 5] : The sensorless homing of the selector is wired to PA7 and the endstop to PB9. The extra connector is not used.

[1 2] [3 4] 5 : The extra connector is wired to PA7 and the sensorless homing of the selector motor to PB9. The endstop is not used.

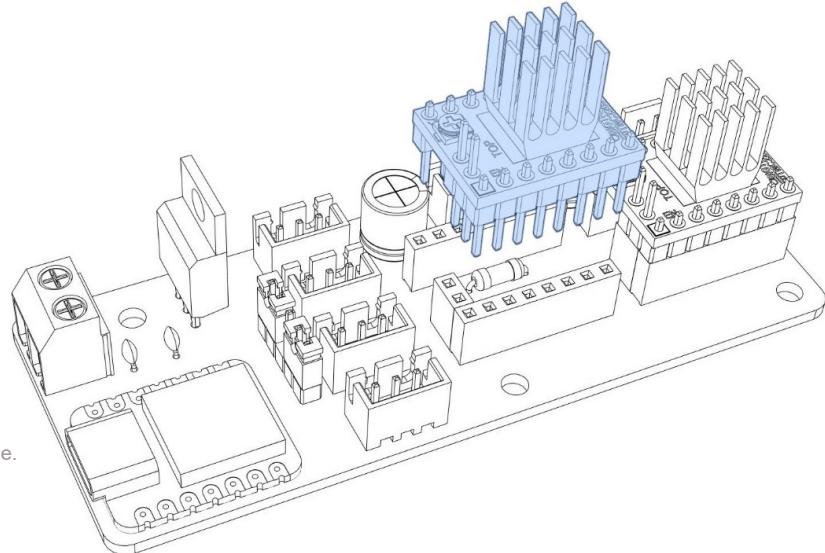

ERCF EASY BRD : VOLTAGE REGULATOR

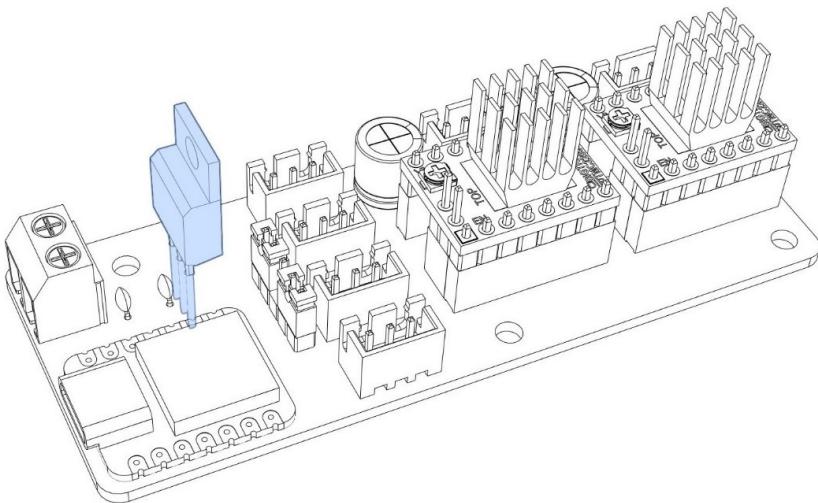


VOLTAGE REGULATOR

If you are using a 24V power supply, be sure to add a good sized heatsink. Standard TO-220 heatsinks are fine. You may need to bend or remove a fin near the jumpers and remove the middle pin.

If you are using a 12V power supply, an heatsink is mostly not required but it's a good idea to add one depending on where the board is located.

ERCF EASY BRD : BOARD INSTALLATION

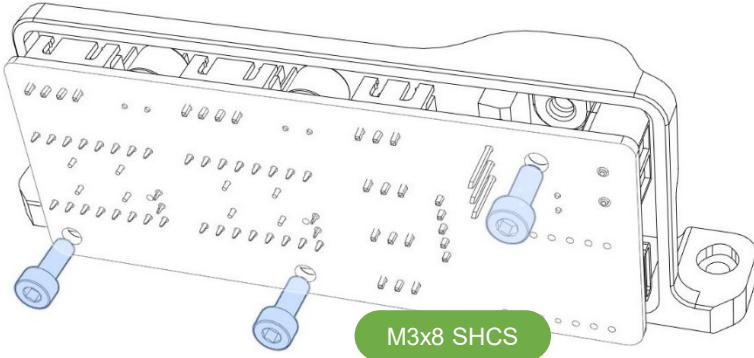

MOUNT ASSEMBLY


Remove the three built-in supports.

The three M3x8 screws are screwed into the plastic. Do not overtighten them otherwise the mount will bend.


POSITIONNING

Install the mount on the side of one aluminum profile.

Take care of the position relative to the ERCF unit so the Bearing Insert Feet doesn't interfer with the wiring.

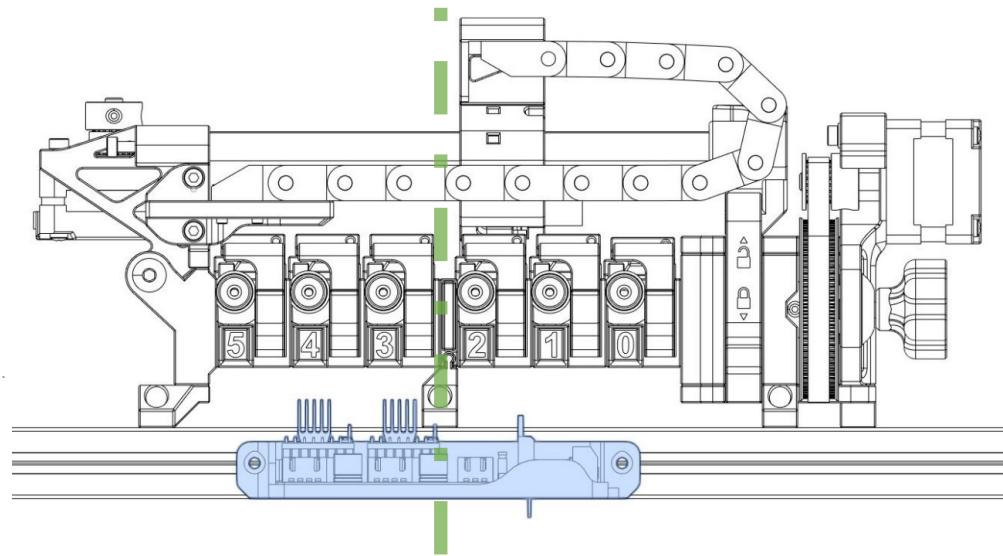

ERCF EASY BRD : WIRING OVERVIEW

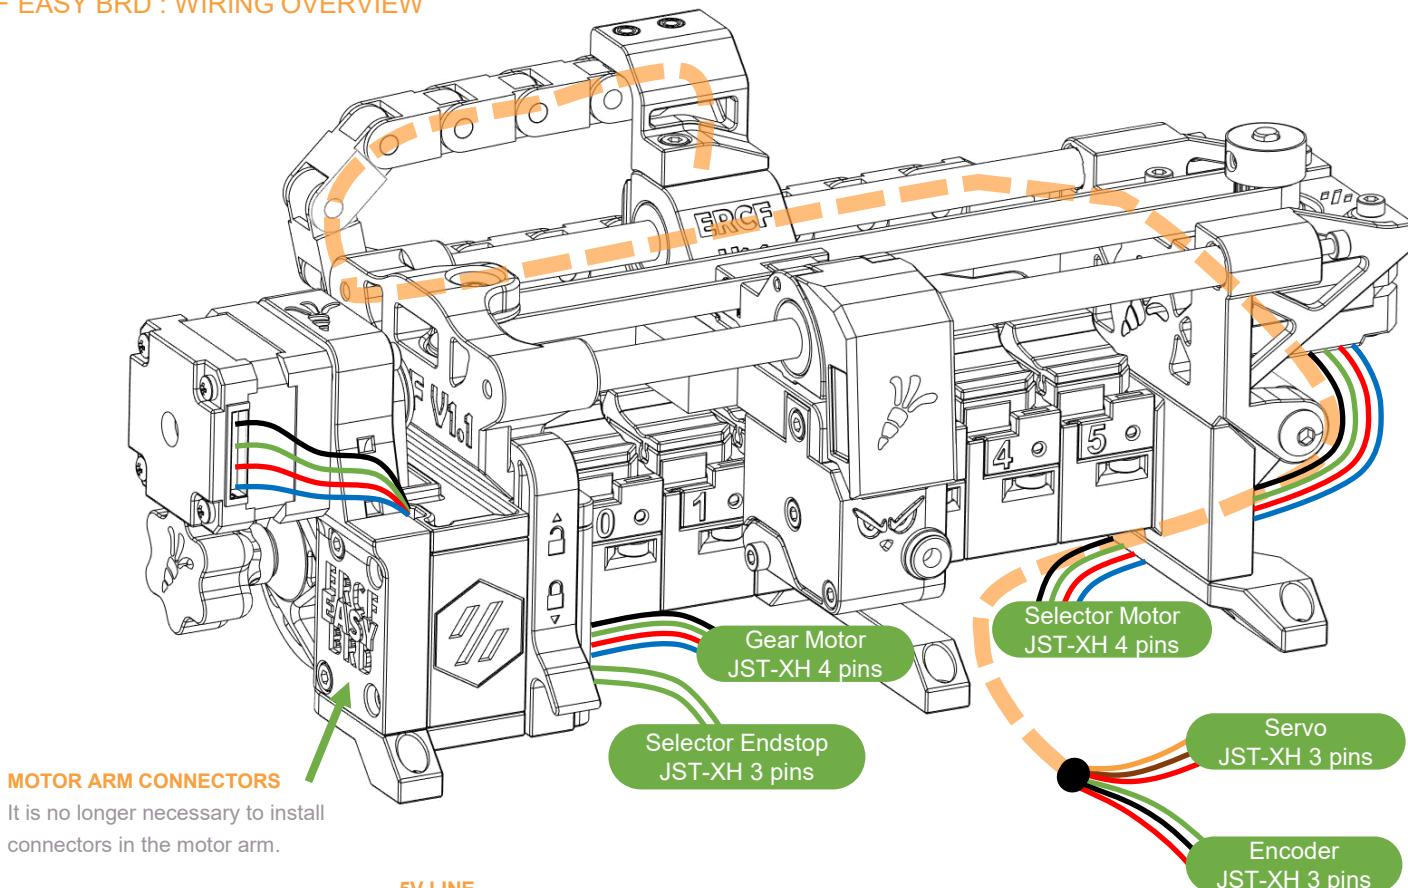

It is no longer necessary to install connectors in the motor arm.

5V LINE

Do not put any sensor or input device in the servo connector that would send +5V to the microcontroller. This would destroy your board since the Seeeduino XIAO is not 5V tolerant.

The servo connector is the only one that is powered by +5V.


Do not merge together the servo red wire and the encoder red wire!

ERCF EASY BRD : ACTUATORS WIRING

SERVO CONNECTOR

Do not put any sensor or input device in the servo connector that would send +5V to the microcontroller. This would destroy your board since the Seeeduino XIAO is not 5V tolerant.



The servo connector is the only one that is powered by +5V.

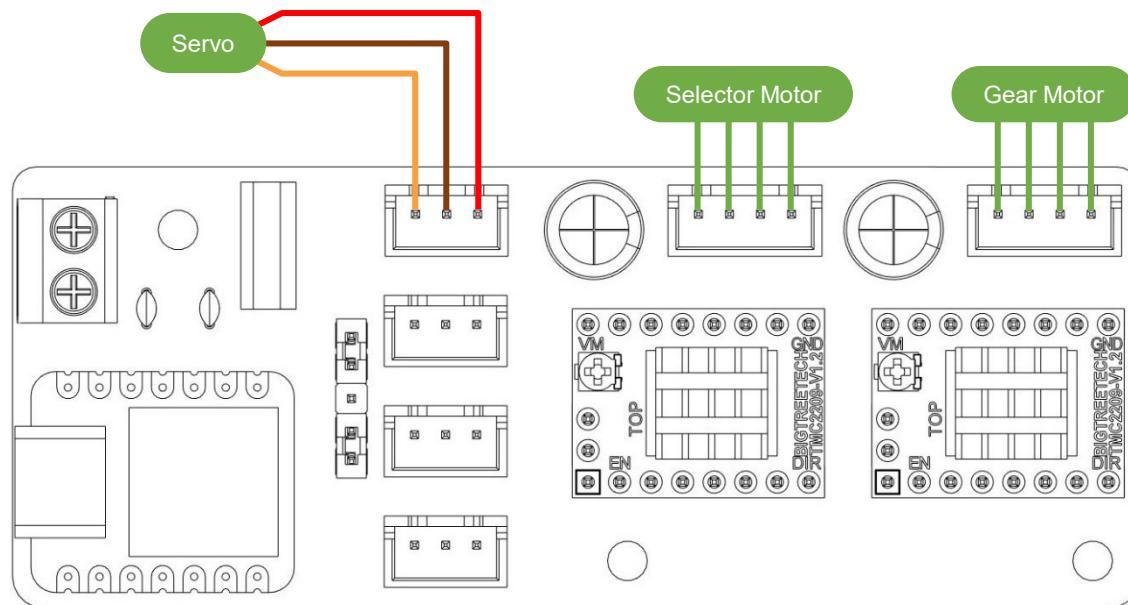

ERCF EASY BRD : SENSORS WIRING

EXTRA CONNECTOR

There is an "extra" connector available on the board. This one is not used in a classical configuration. One can use it for the toolhead sensor if the wiring seems easier.

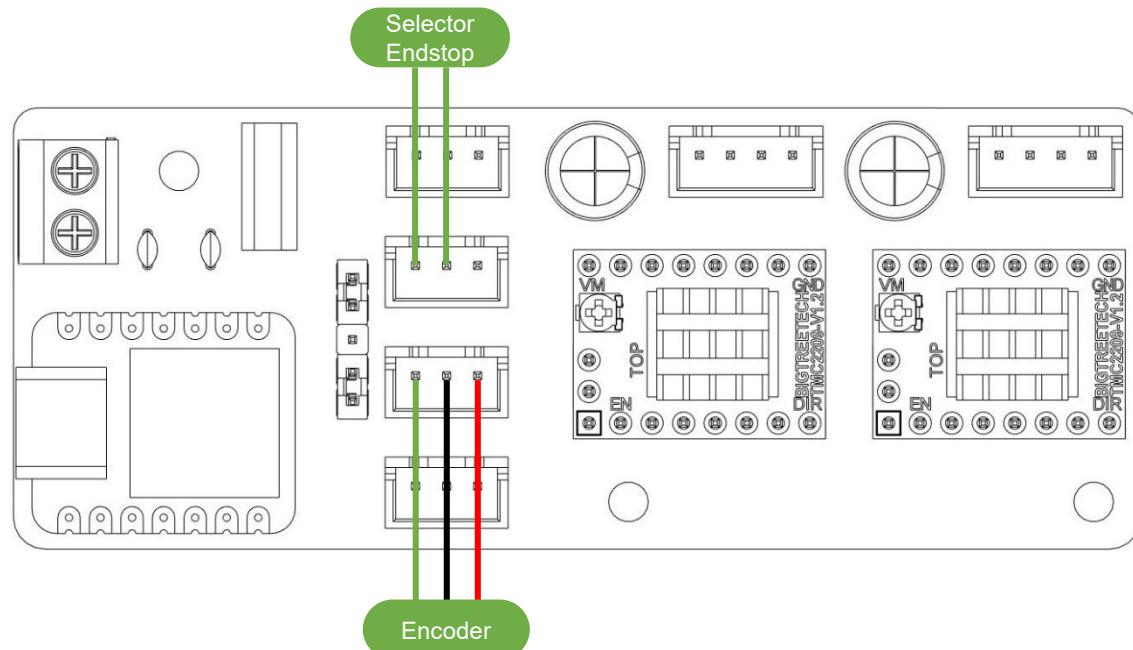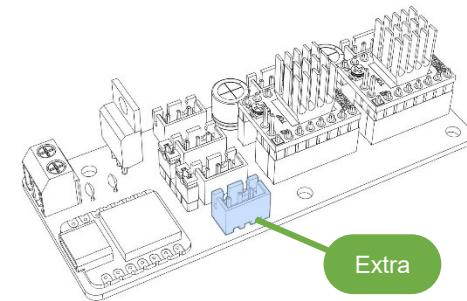


ERCF EASY BRD : GENERAL WIRING

POWER SUPPLY

The screw terminal is used to power the stepper motors and the voltage regulator which supplies 5V to the servo.
Be careful with the polarity of the wires in the screw terminal, there is no particular protection against polarity inversion.

One can use a cable with a built-in fuse to add a little protection.

The microcontroller and sensors are powered through the USB-C cable from the RaspberryPi USB port.

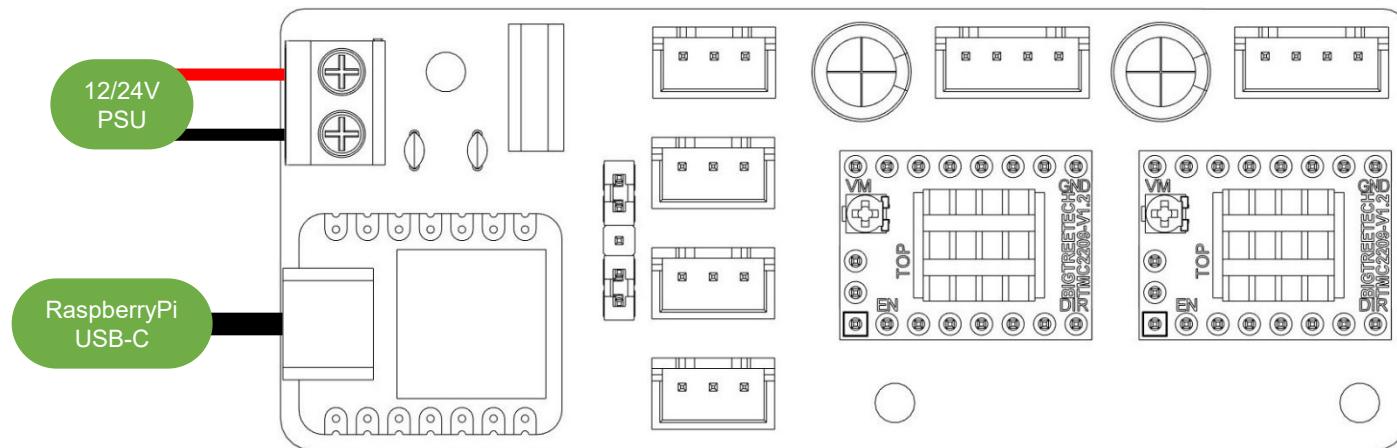

ERCF EASY BRD : MICROCONTROLLER

Many microcontrollers are compatible with the footprint on the PCB. Even though it was originally developed for the Seeeduino XIAO, one can use the Adafruit QT Py, the Seeeduino XIAO RP2040, the Adafruit QT Py RP2040, etc. The procedure for flashing each of them is different.

SEEEDUINO XIAO 1/2

Login to the Raspberry Pi via ssh


Run the following to install the lastest version of bossac (version ≥ 1.8 is required) :

```
sudo apt install libreadline-dev libwxgtk3.0-*  
git clone https://github.com/shumatech/BOSSA.git  
cd BOSSA  
make  
sudo cp bin/bossac /usr/local/bin
```

Run the following commands to prepare the firmware :

```
cd ~/klipper  
make clean  
make menuconfig
```

Select the options :

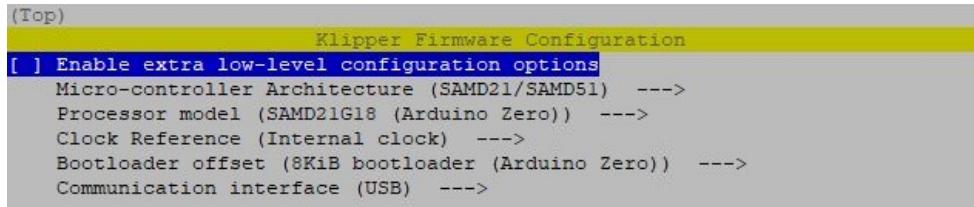

Once the configuration is selected, press q to exit, and "Yes" when asked to save the configuration.

Run the following command to build the firmware :

```
make
```

ERCF EASY BRD : MICROCONTROLLER

SEEEDUINO XIAO 2/2

Connect the board to the RaspberryPi if it's not already done.

Get the port of the XIAO by running the following command :

```
ls /dev/tty*
```

Prepare the following command in the terminal and replace the default /dev/ttyACM1 with the actual port :


```
sudo /usr/local/bin/bossac -i -d -p /dev/ttyACM1 -e -w -v -R --offset=0x2000 out/klipper.bin
```

Use tweezers or short lines to quickly short the RST pads twice.

The orange LED will light up and flicker. Then send in the next few seconds the prepared command.

More information on how to reset for flashing:

<https://wiki.seeedstudio.com/Seeeduino-XIAO/#enter-bootloader-mode>

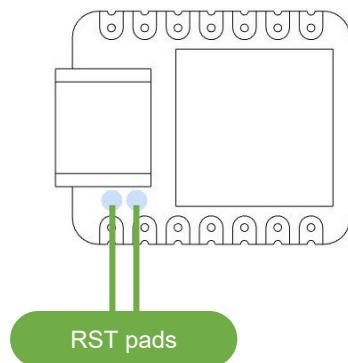

ERCF ON KLIPPER

STATUS

At this stage, it is assumed you have connected your ERCF to your printer (either using the printer main board(s) or the ERCF EASY BRD).

It is now time to configure Klipper.

In the printer.cfg

```
[pause_resume]
recover_velocity: 300.0

[include ./ercf.hardware.cfg]
[include ./ercf.software.cfg]
```

CFG & PY FILES

Add the ercf.hardware.cfg, ercf_vars.cfg and the ercf_software.cfg in your klipper configuration folder.

Add the ercf.py in the « klippy/extra » folder of your klipper installation.

Include both ercf.hardware.cfg and ercf_software.cfg files into your printer.cfg file and make sure you have a [pause_resume] section included.

EXTRUDER PARAMETERS

To allow proper operation of the ERCF, we need to increase the max_extrude_only_distance parameter of your extruder section to 200 and the max_extrude_cross_section to 50.0

In the extruder.cfg

```
[extruder]
max_extrude_only_distance: 200
max_extrude_cross_section: 50.0
```

ERCF ON KLIPPER

ERCF PARAMETERS

Define the « end_of_bowden_to_sensor » and the « sensor_to_nozzle » according to your extruder and toolhead//hotend. Values for typical setups are listed in comments, as shown below. You can see what those parameters represent in the scheme in page 127.

```
# === Toolhead specific values ===
#
# Distance between the end of the reverse bowden and the toolhead sensor. Value is toolhead specific.
# Tested values :
# Galileo Clockwork with ERCF V1.1 sensor (hall effect) : 27.0
# LGX on AfterBurner with ERCF V1.1 sensor (hall effect) : 44.0
# AfterBurner Clockwork with ERCF V1.1 sensor (hall effect) : 36.0
variable_end_of_bowden_to_sensor: 44.0
# Length from the sensor to the nozzle melt pool.
# Reduce this value if there are blobs of filament on each load, before the purge on the tower.
# Increase this value if there are big gaps on the purge tower (i.e. if it takes time for the filament to get pushed out after a swap)
# Tested values :
# Galileo Clockwork with ERCF 1.1 sensor (hall effect) & Dragon Normal Flow : 60.5
# LGX on AfterBurner with ERCF 1.1 sensor (hall effect) & Dragon Normal Flow : 55.6
# AfterBurner Clockwork with ERCF 1.1 sensor (hall effect) & Dragon Normal Flow : 54.0
variable_sensor_to_nozzle: 55.6
```

In the ercf_software.cfg

ERCF ON KLIPPER

In the ercf_software.cfg

```
# Servo angle for the Up position (i.e. channel disengaged).
# Default values:
# MG90S servo : 30
# SAVOX SH0255MG : 140
variable_servo_up_angle: 30
# Servo angle for the Down position (i.e. channel engaged).
# Default values:
# MG90S servo : 140
# SAVOX SH0255MG : 30
variable_servo_down_angle: 140
```

SERVO ANGLES DEFAULT VALUES

Depending on the servo model you're using, set both the up and down angle to their corresponding default values in the ercf_software.cfg.

Precise values will be tuned later.

REVERSE BOWDEN LENGTH

You have to specify the length of the reverse bowden tube of your setup. This is the PTFE tube that goes from the ERCF to your printer's toolhead.

Get a rough measurement of this tube length, and subtract a few cms to this value (typically 5cms). It doesn't need to be precise, it just needs to be lower than the real PTFE tube length.

```
# Base value for the Loading Length used by the auto-calibration macro
# Please use a value SMALLER than the real reverse bowden length (like 50mm less)
variable_min_bowden_length: 750.0
```

ERCF ON KLIPPER

PIN DEFINITION

Make sure the pin defined in the 3 positions shown on the pictures below are the same exact pin (namely the pin of the encoder signal)

Do not put the « ^ » on the duplicate_pin_override section but use them on the other two.

```
[duplicate_pin_override]
pins: P1.0
# Just there the pin used by the encoder and the filament_motion_sensor
# It has to be the same pin for those 3

[filament_motion_sensor encoder_sensor]
switch_pin: ^P1.0
pause_on_runout: True
detection_length: 3.0
extruder: extruder
runout_gcode: ERCF_ENCODER_MOTION_ISSUE
```

In the ercf_hardware.cfg

```
[ercf]
# Encoder
encoder_pin: ^P1.0
```

In the ercf_software.cfg

MISC MACROS

You will find in the client_macros.cfg examples of CANCEL_PRINT, PAUSE and RESUME macros that are compatible with the clog detection and endless spool mode of the ERCF. Please adapt those macros to your owns, the relevant part being the lines concerning the encoder_sensor.

RELOAD

Don't forget to reload your firmware so that all changes are accounted for.

FIRST CHECKS

ENDSTOP AND MOTORS

Use those GCodes to test that :


- The selector_motor endstop works as expected : TRIGGERED when you click it, open otherwise. Do not look for the gear_stepper endstop, it doesn't exist (it's a dummy pin)
- Both motors turn. Beware that those GCodes induce slow, almost silent moves

GCode : QUERY_ENDSTOPS

GCode : STEPPER_BUZZ STEPPER="manual_stepper gear_stepper"

GCode : STEPPER_BUZZ STEPPER="manual_stepper selector_stepper"

SERVO ARM

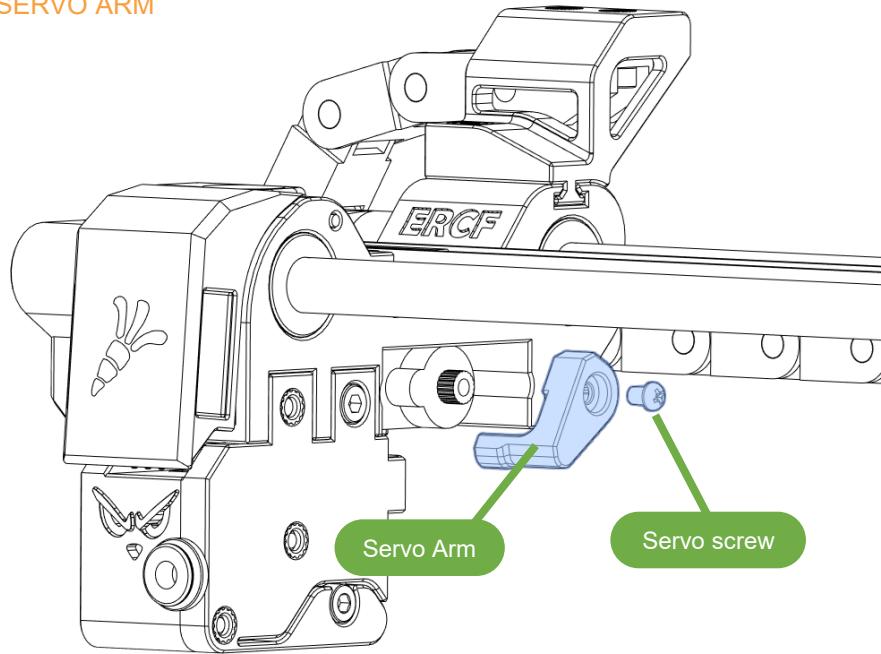


SERVO ARM

The servo only have a 180° range, hence the servo arm cannot be installed in a random position on the servo axis.

First, use **GCode : ERCF_SERVO_UP**

This will move the servo axis to the « up » position. Now install the servo arm on the servo axis so that arm « extension » almost touches the bottom of the servo, as shown below.

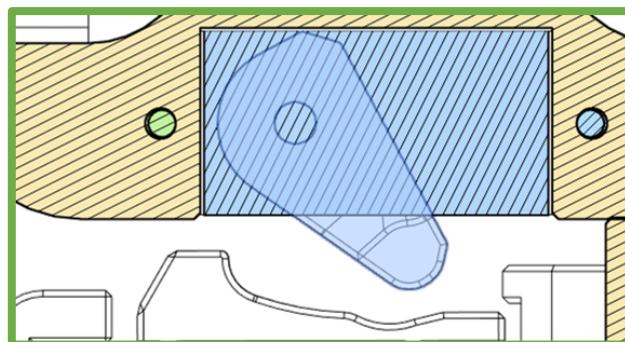

SERVO ARM ANGLES

TUNING THE SERVO ANGLES

Use


GCode : ERCF_TEST_SERVO VALUE=« ANGLE »

With « ANGLE » being the angle you want to test to finely tune the up and down positions of the servo. Alternate from one position to another (Up vs Down) to always have a « full swing » on the movement.

To get a reliable system, ensure that:


- For the up position, don't make the servo arm collide with the servo body. You want the servo arm to stop right at the servo body.
- For the down position, the servo arm needs to come in contact with the Top Hat Locker « wall ». Start from a smaller angle and increase the test value little by little (don't forget to go back to the servo up position in between each new test). The ERCF_SERVO_DOWN command will make the gear motor buzz to ensure a proper gear meshing. If you notice the servo arm « sliding back » a lot (i.e. roughly more than a millimeter) after the move is done, increase the angle a little more.

Servo down position, pressing on the gears

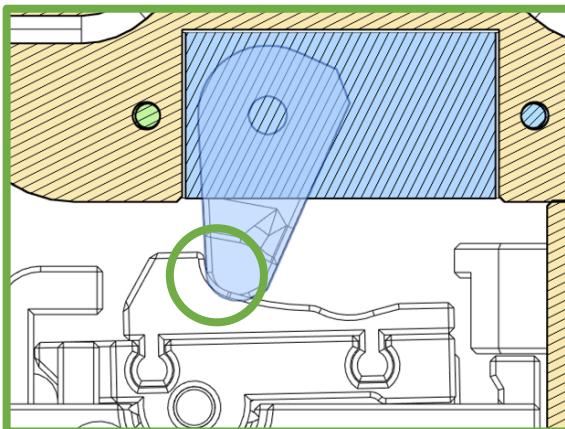

GCode : ERCF_SERVO_DOWN

Servo up position, releasing the gears

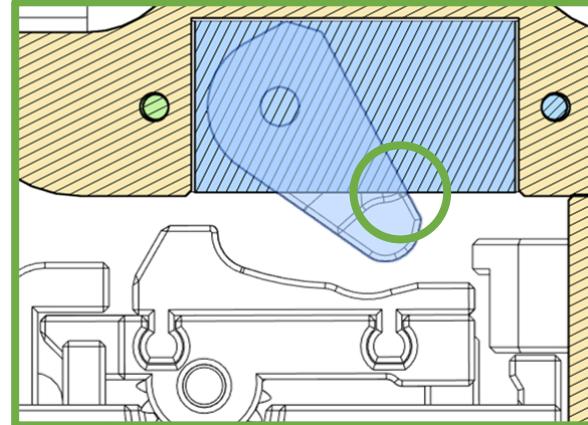


GCode : ERCF_SERVO_UP

RELOAD


Don't forget to set the final values in the ercf_software.cfg and reload your firmware so that all changes are accounted for.

SELECTOR CALIBRATION

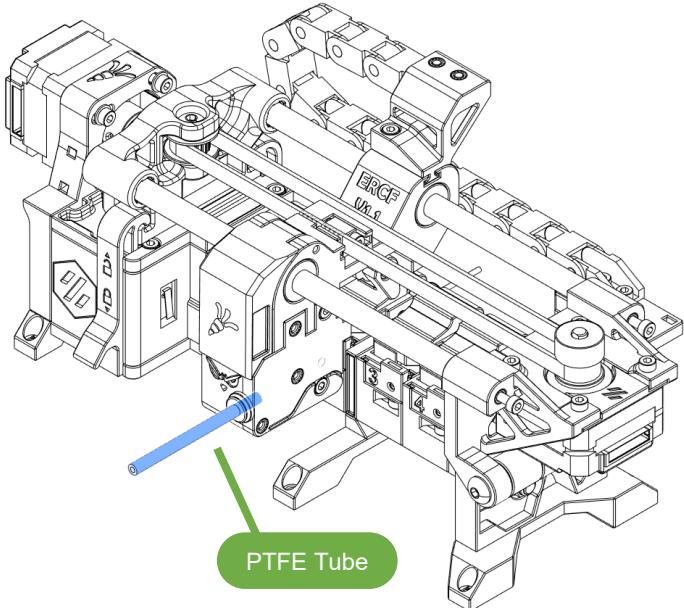

PTFE TUBE

Insert a small PTFE tube (like 5 cms or so) in the selector cart ECAS in order to ease filament insertion during this calibration phase.

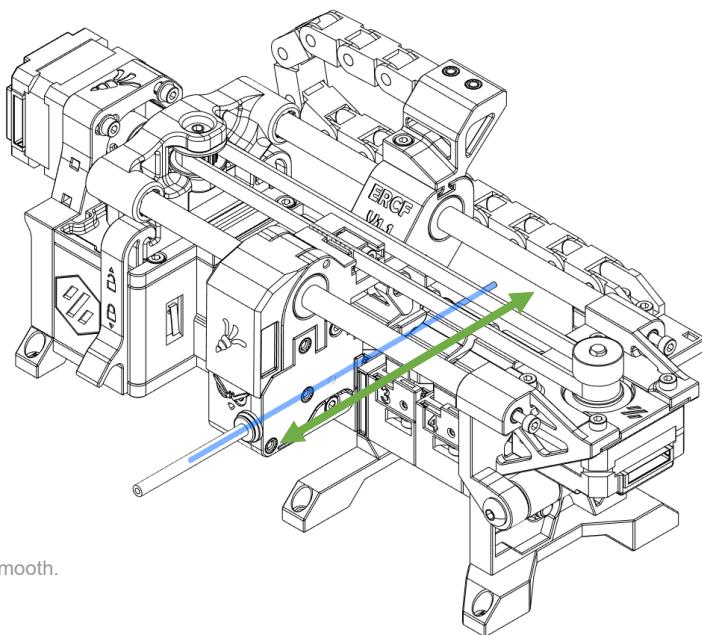

SELECTOR POSITION


Use **GCode : ERCF_MOTORS_OFF**

Then move, by hand, the selector in front of a tool (you can start from the first tool for example).

Push and pull some 1.75mm filament in the channel and use it to finely adjust the position of the selector. Insert the filament through the Filament Block and then the Selector should be rather smooth.

See next page before doing anything else.

SELECTOR CALIBRATION

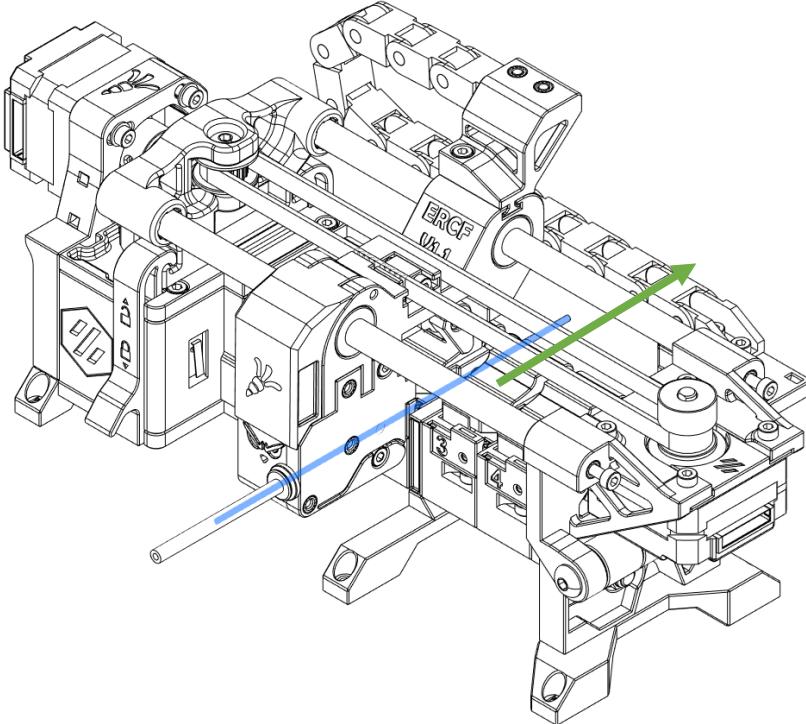

QUERY THE SELECTOR POSITION

Remove the filament from the channel.

Then use

GCode : ERCF_CALIB_SELECTOR TOOL=< N >

With « N » being the number of the tool you want to calibrate (first tool is « 0 »).

This will make a selector homing move, and then report on the console the resulting position for the corresponding tool.

Report manually this value in the « variable_colorselector » array in the ercf_software.cfg file.

Note that the Gcode command above will automatically turn the ERCF motors OFF once it is done.

Example of the colorselector array for a 9 tools ERCF

```
# Channel position for the selector. This has to be tuned manually. Please scale this array to the number of channels you have
variable_colorselector = [2.4, 24.0, 44.8, 71.2, 92.0, 113.6, 139.2, 160.8, 181.6]
```


Tool 0

Tool 8

REPEAT THEN RELOAD

Repeat this whole operation for each tool of the ERCF. Don't forget to set the final values in the ercf_software.cfg and reload your firmware so that all changes are accounted for.

ENCODER TEST

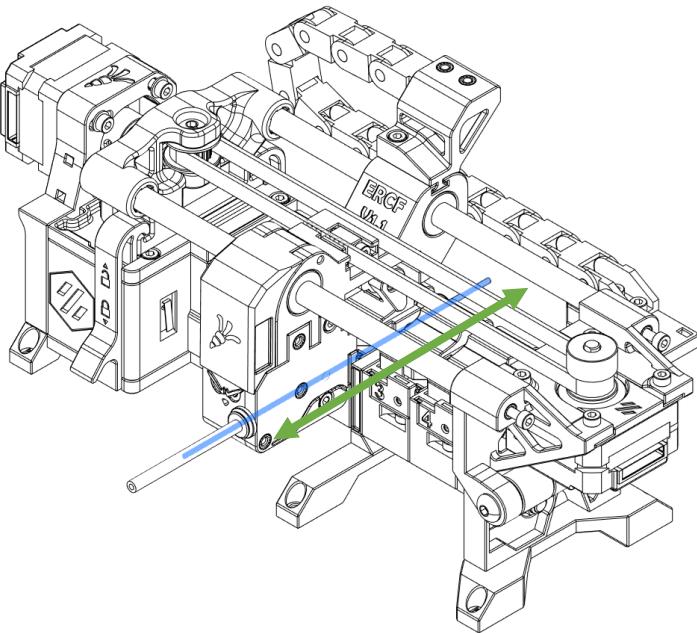

ENCODER BEHAVIOR

While the selector is in front of a tool, push some 1.75mm filament through it and look at the selector front. While you move the filament, the encoder LED should blink, making the eyes of the rabbit red.

Make sure that :

- The LED state stays the same when the filament doesn't move (either ON or OFF)
- When you move slowly the filament, the LED will turn ON and OFF, as a function of the filament position.



Note that moving the filament fast will just make the LED appear red (it's simply blinking really fast).

Use


GCode : ERCF_DISPLAY_ENCODER_POS

This will display the current encoder position. Make sure this value does increase when you move the filament. Note that : encoder is not yet calibrated and that the encoder cannot know the direction of the move. Hence moving the filament back and forth will keep increasing the encoder counts.

In case of issue, make sure that the BMG gear can rotate properly, and that the TCRT5000 sensor is properly connected. If you still have issues, dismount the encoder cart and check that the sensor « wall », between the two LEDs, is very close to the dual gear part of the BMG idler. They shouldn't touch, but they should be very close. If need be, you can gently file down the 3D printed part where the sensor rests (i.e. the screw « thread ») to get the sensor closer to the BMG idler.

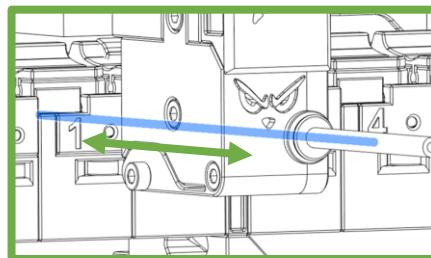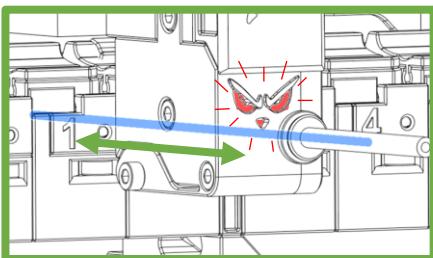

TOP HAT LOCKERS

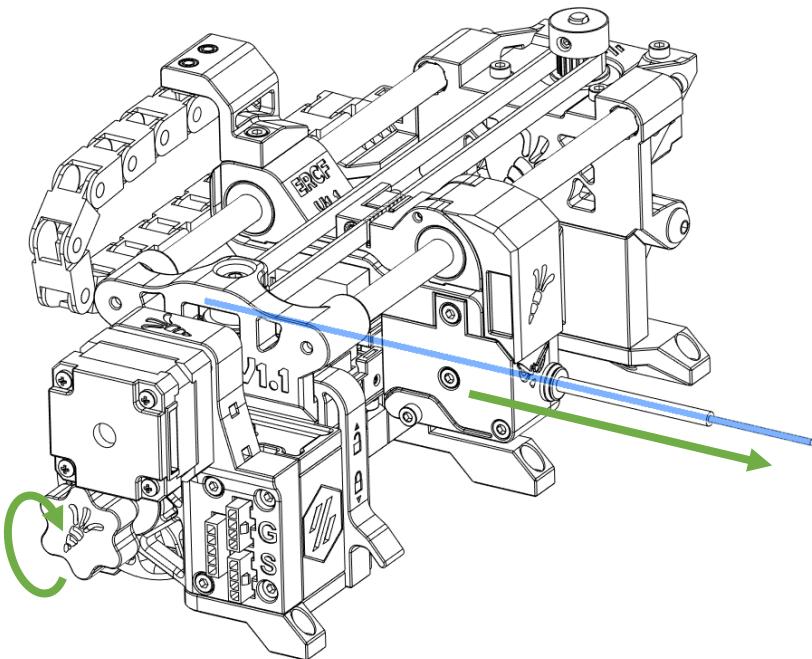

SWAPPING TOP HAT LOCKERS

In case the grip is not sufficient, open the Ercf and open the tool latch. Grab the Top Hat and gently pull it out from the filament block.

Remove the Top Hat Locker and replace it with one of a higher value (use a « 2 » Top Hat Locker if you had a « 1 » for example).

Check that the gears for this tool are not dirty because of the filament slippage, if so clean them.

Put back the Top Hat in the Filament Block, close the block latch and then close the Ercf. Check the grip again and repeat this process until you have a proper grip for all tools.

Not all tools will necessarily have the same Top Hat Lockers value.

CHECKING THE GRIP

We now have to tune the Top Hat Lockers for each tool.

Use

GCode : ERCF_MOTORS_OFF

Put the selector in front of the first tool and push some 1.75 mm filament through it, until the filament sticks out from the PTFE tube (you should be able to grab the filament).

Use

GCode : ERCF_TEST_GRIP

This will put the servo down (i.e. engage the gears) and turn the ERCF motors off.

Now, gently try to pull the filament. If the grip is good enough, this will make the motor gear turn, otherwise the filament will just slip on the BMG gears, indicating that the grip is not good enough.

Do not pull too fast the filament as this will send too much EMF back to the driver and potentially damage it.

Use

GCode : ERCF_SERVO_UP

This will disengage the gear so you can remove the filament.

ERCF HOMING

FIRST HOME

It is now time to load all the tools with some filament (using real spools). Whatever buffer or spool rewinder solution you are using, make sure that :

- Buffers are fully loaded (in case you use buffers)
- Spools are easy to pull from (in case you are using rewinders)

Put all the filaments in the ERCF filament blocks, make sure all filament tips are in the parking position (i.e. between the gears and the magnetic gate).

Use

GCode : ERCF_HOME

The ERCF will first engage whatever tool the selector is located at to check if the filament is already in the reverse bowden towards the toolhead (at this stage it shouldn't). Knowing the filament is not in the selector way, it will then home the selector, go to the very first tool, load it just a bit (a few centimeters after the encoder position), then unload it and disengage.

That's it, your ERCF is now homed ! Homing the ERCF allows it to know where the selector cart is. It has to be done every time the system is rebooted or if you move manually the selector.

GEAR MOTOR CALIBRATION

GEAR STEPS CALIBRATION

We now need to calibrate the gear motor steps. To do that, we'll use the tool 0 of the ERCF, this is MANDATORY.

Use **GCode : ERCF_SELECT_TOOL TOOL=0**

And then **GCode : ERCF_LOAD**

The filament in tool 0 should now be loaded by a few cms and stick out from the small PTFE tube inserted on the selector. In case it doesn't, either cut the PTFE tube a bit or use the knob to push the filament a bit. Make sure to use the ERCF_MOTORS_OFF in case you go for the knob.

Cut flush the filament at the PTFE end. This will be our reference point.

Now use **GCode : ERCF_TEST_MOVE_GEAR**

This will slowly push around 200mm of filament. Once done, measure precisely what was the real « extruded » length (either measure in place the filament or cut flush again at the PTFE exit and measure what you have).

Apply the following formula to get the proper step_distance for the ERCF gear motor :

$$\text{New step distance} = \text{Old step distance} \times \text{measurement [mm]} / 200$$

Update the value in the ercf_hw.cfg and reload the firmware.

You can use again **GCode : ERCF_TEST_MOVE_GEAR** directly after the reload to check that you now have precisely 200mm of filament.

ENCODER CALIBRATION

ENCODER CALIBRATION

It is assumed you still have the filament of tool 0 slightly loaded (i.e. a few cms after the encoder). If not, you can use ERCF_HOME, ERCF_SELECT_TOOL TOOL=0 and ERCF_LOAD to do so.

Now use

GCode : ERCF_CALIBRATE_ENCODER

This will push and then pull back 50 cms of filament, 5 times in a row, and measure for each move the number of increments measured by the encoder. Make sure you have those 50 cms of filament available for the ercf to push easily. In case you want to change the length of this test, use the DIST parameter.

Once done, the results will be printed on the Klipper console, as such :

Example of an encoder calibration routine

```
// Load direction: mean=727.60 stdev=0.89 min=726 max=728 range=2
// Unload direction: mean=731.40 stdev=0.55 min=731 max=732 range=1
// Before calibration measured length = 492.412500
// Resulting resolution for the encoder < 1.370802
// After calibration measured length = 500.000000
```

Encoder resolution

Write this new value for the encoder resolution in the ercf_software.cfg file, in the [ercf] section.

CALIBRATION RESULTS

You can have different values for the load and unload direction, up to around 5 counts. This is not an issue.

However, if you have very inconsistent results, either on the same direction (e.g. a standard deviation higher than 1.5) or between the two directions (e.g. a difference in the means higher than 7 counts), you probably have some issues with your encoder, and you should check it. It is important that the BMG gear facing the IR sensor are clean.

EJECT AND RELOAD

Use

GCode : ERCF_EJECT

and then reload your firmware so that all changes are accounted for.

ERCF INSTALLATION ON THE PRINTER

PTFE TUBE RECOMMENDATIONS

The Internal Diameter (ID) of the PTFE tubes used have a drastic impact on MMU systems, and therefore for the ERCF.

It is strongly encouraged to use 2.5mm ID PTFE (or even FEP) tubing between the ERCF and the printer toolhead (i.e. the reverse bowden), as well as between the ERCF and the filament spools. It is only recommended to use 2mm ID PTFE tubing between the ERCF and the filaments spools if your ERCF is installed vertically and that you notice that the parked filaments tend to fall down by themselves out of the ERCF gears.

3mm ID tubes can also be used, but they tend to be pinched very easily.

Make sure that the PTFE lines between your spools and the ERCF and between the ERCF and the toolhead don't have any sharp turns, as this will drastically increase the overall friction on the filament.

ERCF POSITION


The ERCF can be installed where you want, but it is recommended to minimize the reverse bowden length to get faster swaps and limit friction along the whole filament path.

Here are some examples of where the ERCF can be mounted on different VORON printers.


ERCF INSTALLATION ON A VORON V1 OR V2

VORON V1 OR V2

You can for instance mount the ERCF on the back or the top of the printer. A proposed solution is to use two 2020 Aluminum profiles, as shown here, and mount that on the existing V1 or V2 frame.

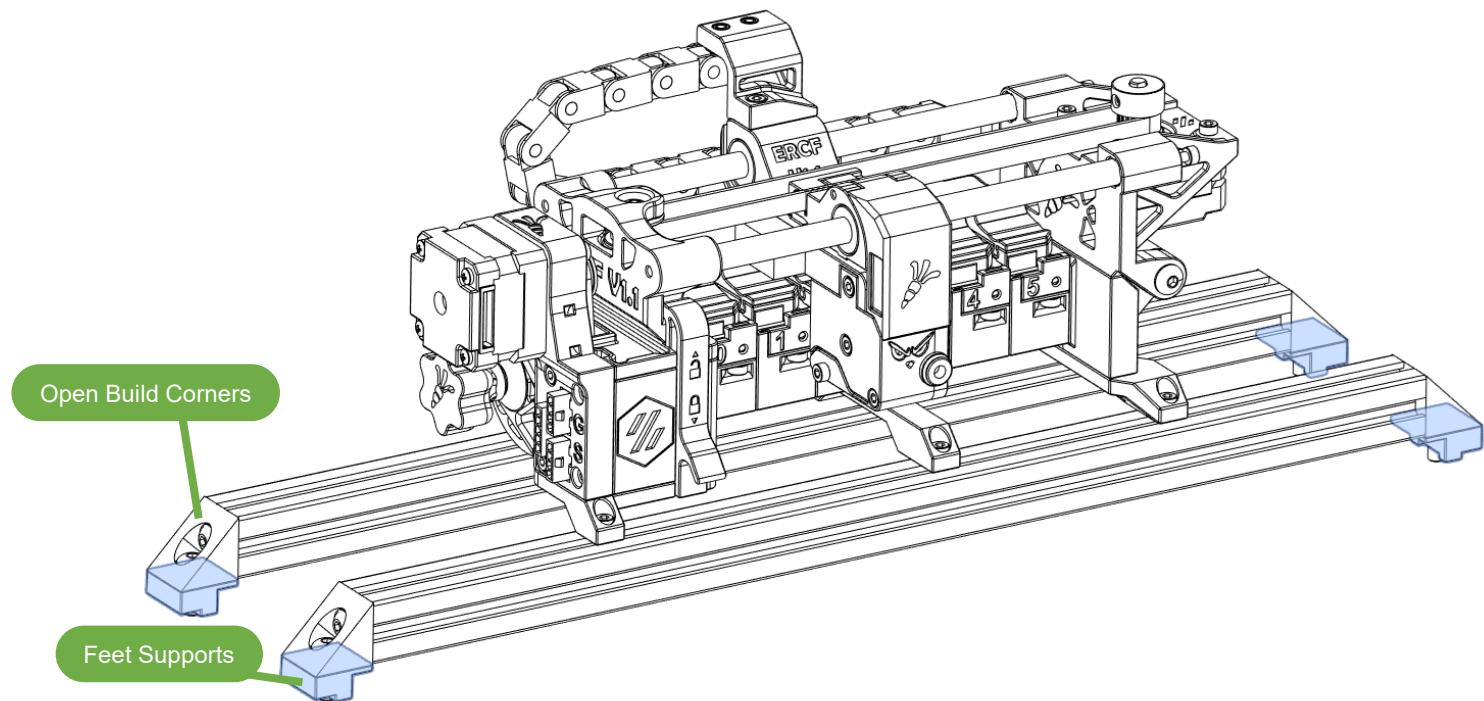



ERCF INSTALLATION ON A VORON SWITCHWIRE

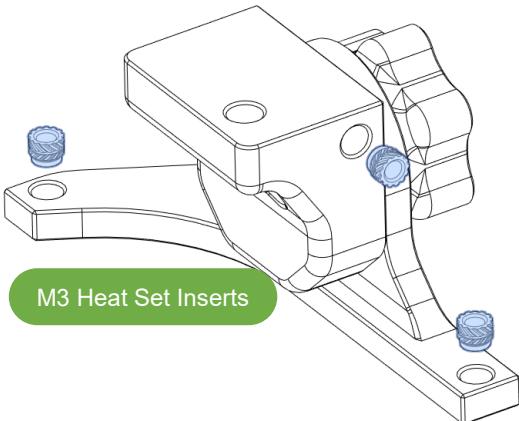


VORON SWITCHWIRE

For the VORON SwitchWire, you can install it at the top of the frame. The provided mount has an adjustable angle to match your spools positions.

There is also a version for non-enclosed SwitchWires and an optional Ercf Easy Brd mount (board mount original mod can be found here <https://github.com/Tircown/ERCF-easy-brd/tree/main/mods/Bottom%20bracket>).

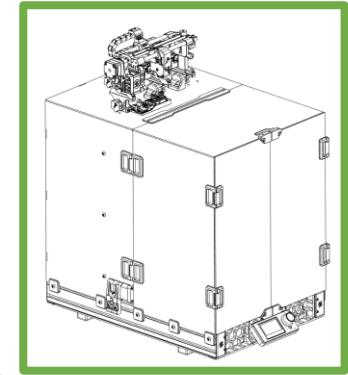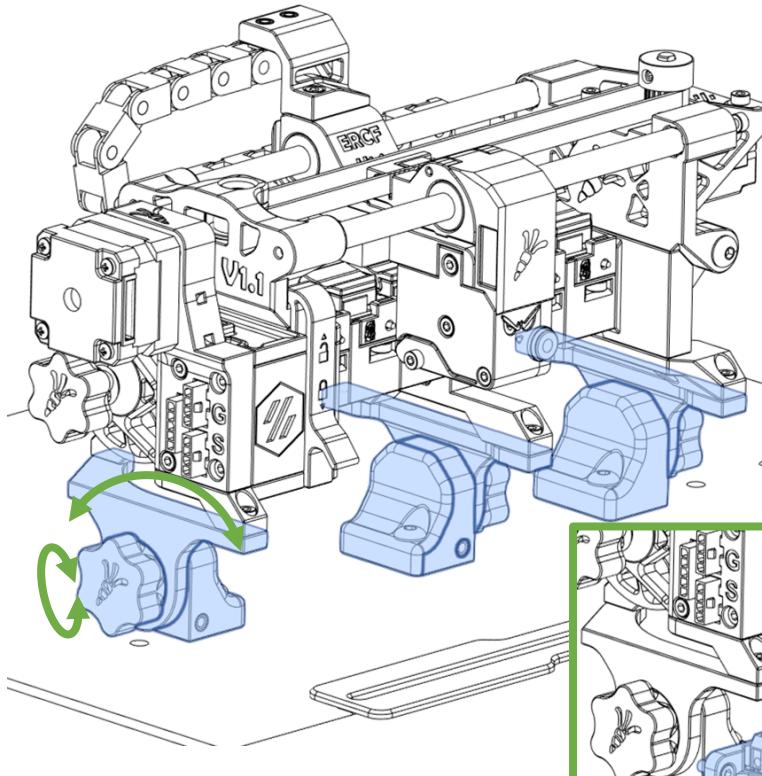

Optional Ercf Easy Brd mount

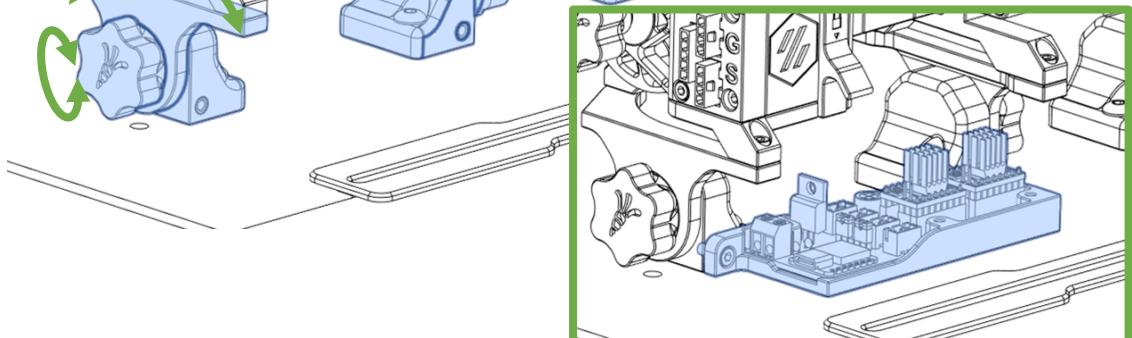

This page is left intentionnaly blank.

ERCF FINAL CALIBRATION

ERCF CALIBRATION

Once the ERCF is properly installed and the printer toolhead sensor installed and working, we can perform the very last calibration for the ERCF.

Use

GCode : ERCF_CALIBRATE

This will :

- Home the ERCF
- Load tool 0 to the toolhead and stop when the filament is detected by the toolhead sensor. This will be the reference loading length
- Unload the filament
- Load the next tool
- Perform a measurement with the encoder to determine the gear ratio to apply for this tool (filament will NOT go in the toolhead for this)
- Unload the filament
- Repeat the last 3 steps for all tools left

RELOAD

Don't forget to reload your firmware so that all changes are accounted for.

This is it, the ERCF is finally calibrated and ready to be used!

Please check the general guidelines before using the ERCF!

This page is left intentionnaly blank.

ERCF GUIDELINES

TESTING FILAMENT SWAPS

Before using the ERCF on multimaterial prints, it is important to check that the complete filament swap sequence works well. To do that, do several filament swaps, out of a print, as described below.

HOW TO SWAP FILAMENT OUT OF A PRINT

In the case you want to load a specific filament out of a print (i.e. when your printer is in idle or even during a pause),

Just use

GCode : T« N »

This will :

- Home the ERCF if it's not homed already
- Unload an already loaded filament if there is any
- Load the filament in tool « N » next to the nozzle melting pool

This won't :

- Purge the nozzle
- Do a ramming in case of unload (it will just try to get a decent filament tip without extruding anything)

The same T'N' macro will be called during an actual MM print, but with some small differences. The ERCF macros will automatically adapt in case your printer is in a print or not.

PREPARING A MULTIFILAMENT PRINT

To have successful multifilament prints, it is crucial to have properly tuned slicer profiles. A section dedicated to slicer settings can be found at page 122

ERCF GUIDELINES

WHAT TO DO IN CASE OF AN ERCF_PAUSE

During ERCF operation, the system will trigger « ERCF_PAUSE » if an issue is detected.

When this happens, the toolhead will be parked, waiting for the user to intervene. Here is what you have to do in such an event :

1. Use **GCode : ERCF_UNLOCK** to unlock ERCF operations and, if need be, heat back the hotend
2. Check what happened using the klipper console output and looking at the ERCF state
3. Load the proper filament :
 1. The filament that should be loaded is indicated in the printer status text : « Change Tool N », with N being the tool that needs to be loaded
 2. Once the ERCF is in a properly working state (i.e. all filament are parked in the filaments blocks, and the ERCF is homed),

use **GCode : T« N »**

3. Check that the filament has been properly loaded and hit **GCode : RESUME**

CLOG DETECTION MODE

The clog detection and endless spool modes are in Beta for now, use at your own risks (you may run into issues with the PAUSE States)
Also note that there might be issues using clog detection mode in multifilament prints, because of the gcode generated by the slicer.

CLOG DETECTION

The default configuration has the clog detection turned OFF. This feature relies on the filament_motion_sensor feature of Klipper (see https://github.com/Klipper3d/klipper/blob/master/docs/Config_Reference.md#filament_motion_sensor) and will allow to pause a on-going print in case the encoder measurement doesn't match the extruder (e.g. a clog).

To use this feature, un-comment this line and set the 'pause_on_runout' to 'True' :

```
[filament_motion_sensor encoder_sensor]
switch_pin: ^P1.0
pause_on_runout: False
detection_length: 3.0
extruder: extruder
# runout_gcode: ERCF_ENCODER_MOTION_ISSUE
```

In the ercf_hw.cfg
Clog detection OFF

```
[filament_motion_sensor encoder_sensor]
switch_pin: ^P1.0
pause_on_runout: True
detection_length: 3.0
extruder: extruder
runout_gcode: ERCF_ENCODER_MOTION_ISSUE
```

In the ercf_hw.cfg
Clog detection ON

And set the clog_detection option value to '1' :

```
# Options to use or not
# Beware that the clog detection and endless spool mode are in BETA mode for now
# Use at your own risk (beware of the involved macros and the pause(s) and resume ones)
# Put 0 to disable, 1 to enable
variable_clog_detection: 1
```

In the ercf_sw.cfg

Note that you should adapt your Print_Start macro to ensure that :

- The filament sensor is turn OFF at the very begining of your print start (i.e. " SET_FILAMENT_SENSOR SENSOR=encoder_sensor ENABLE=0 ")
- The filament sensor is turn ON just before the real print starts (i.e. " SET_FILAMENT_SENSOR SENSOR=encoder_sensor ENABLE=1 ")

You will have to make sure the sensor is properly turned ON or OFF at the proper moments by yourself

ENDLESS SPOOL MODE

The clog detection and endless spool modes are in Beta for now, use at your own risks (you may run into issues with the PAUSE States)

ENDLESS SPOOL MODE

The endless spool mode is an extension of the clog detection. In case a filament run-out is sensed and if the Endless Spool mode is ON, the ERCF will load the next tool (i.e. N+1) and resume the print all by itself. The endless spool mode will not work if the clog detection is not activated.

To activate the endless spool mode, set this parameter to « 1 » :

```
# Options to use or not
# Beware that the clog detection and endless spool mode are in BETA mode for now
# Use at your own risk (beware of the involved macros and the pause(s) and resume ones)
# Put 0 to disable, 1 to enable
variable_clog_detection: 1
variable_endless_spool_mode: 1
```

In the ercf_software.cfg


It is highly recommended to check the 'ERCF_CLOG_OR_RUNOUT' and 'ERCF_CHECK_IF_RESUME' macros in the ercf_software.cfg and to adapt it to your own setup, notably for the nozzle cleaning and possible purge part.

SLICER SETTINGS


SLICER SETTINGS

This part of the manual will guide you through setting up your slicer to work with the ERCF. This guide assumes you are using SuperSlicer v2.3.56.9 (<https://github.com/supermerill/SuperSlicer/releases/tag/2.3.56.9>), but it will most likely work the same with other SuperSlicer version and PrusaSlicer. Only the changes from a default (i.e. single extruder and single tool) profile will be discussed.

Cura and other slicers will not be covered.

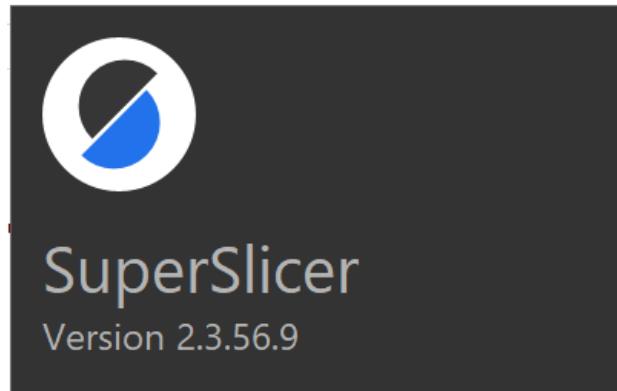

PRINTER SETTINGS TAB

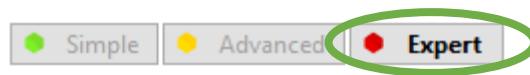

Make sure you have access to all fields


GENERAL

In the general section of the Printer Settings Tab, activate the 'Single Extruder Multi Material' option and set the proper number number of 'Extruders' (i.e. the number of channels on your ERCF)

The different extruders will then appears in the menu list

Capabilities

- Extruders: (with a lock icon)
- Single Extruder Multi Material:
- Milling cutters:

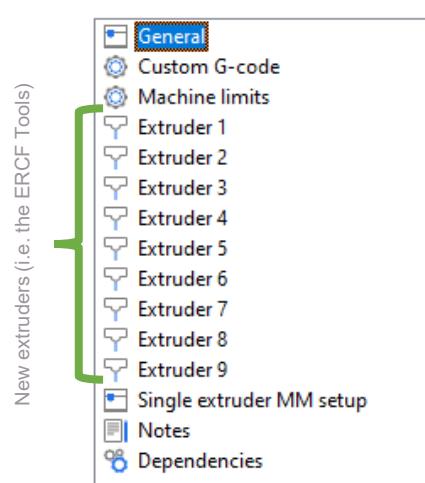

EXTRUDER N

For each of the Extruder in your list, make sure that the 'Tool name' is left blank

Name and Size

- Tool name: (with a lock icon)
- Nozzle diameter: mm (with a lock icon)

PRINTER SETTINGS TAB

CUSTOM G-CODE : TOOL CHANGE

Set the 'Tool change G-code' to 'T[next_extruder]', this will make the Gcode generate 'T0' Gcode to request a Tool Change for Tool 0 for example ('T1' for Tool 1 etc.)

Tool change G-code



T[next_extruder]



GLOBAL BEHAVIOR

The Start and End gcode showed below are designed for using the ERCF as the filament management solution, even for single color prints. This means that the proper filament will be loaded at the beginning of the print (right after the print_start macro has finished) and the filament will be unloaded at the end of the print. So, when your printer is not printing, no filament will be in the toolhead and the whole print_start gcode will be executed without any filament loaded, so adapt it accordingly (e.g. if you have any purge sequence in it, that will be useless)

CUSTOM G-CODE : PRINT START

For the 'Start G-code', insert '{if initial_extruder == 0}ERCF_CHANGE_TOOL_STANDALONE TOOL=0{else}ERCF_CHANGE_TOOL_STANDALONE TOOL={initial_extruder}{endif}' after your regular PRINT_START macro. This will load the first filament used for the print (whether it is a single or multi filament print). Don't forget to call some sort of purge after that (purge line or purge in a bucket, depending on your setup)

Start G-code

Use your own
'print_start'

Use your own
purge code

print_start EXTRUDER=[first_layer_temperature] BED=[first_layer_bed_temperature] SOAK=10
{if initial_extruder == 0}ERCF_CHANGE_TOOL_STANDALONE TOOL=0{else}ERCF_CHANGE_TOOL_STANDALONE TOOL={initial_extruder}{endif}
M109 S[first_layer_temperature]
BRUSH_TOOL_PURGE LENGTH=80.0 PARKMOVE=0

Mandatory AFTER
the print_start

```
graph LR; A[Start G-code] --> B[print_start EXTRUDER=[first_layer_temperature] BED=[first_layer_bed_temperature] SOAK=10]; B --> C["{if initial_extruder == 0}ERCF_CHANGE_TOOL_STANDALONE TOOL=0{else}ERCF_CHANGE_TOOL_STANDALONE TOOL={initial_extruder}{endif}"]; C --> D[M109 S[first_layer_temperature]]; D --> E[BRUSH_TOOL_PURGE LENGTH=80.0 PARKMOVE=0]; F[Mandatory AFTER the print_start] --> C
```

PRINTER SETTINGS TAB

CUSTOM G-CODE : PRINT END

I suggest to use a dedicated parameter to choose the option to unload at the end of a print or not. The print_end macro I'm using is shown below as an example.

Note that if you don't unload at the end of your print and start a new print with the incorrect filament inserted, the ERCF will eject it automatically and load the proper filament anyway. It is just simpler and cleaner to unload the filament anyway at the end of a print.

```
[gcode_macro PRINT_END]
#  Use PRINT_END for the slicer ending script - please customise for your slicer of choice
gcode:
    {%
        set unload = params.UNLOAD_AT_END|default(0)|int %
    }
    SET_FILAMENT_SENSOR SENSOR=encoder_sensor ENABLE=0
    M400                                ; wait for buffer to clear
    G92 E0                               ; zero the extruder
    G1 E-10.0 F3600                      ; retract filament
    G91                                  ; relative positioning
    G0 Z1.00 X20.0 Y20.0 F20000          ; move nozzle to remove stringing
    SET_FAN_SPEED FAN=nevermore_fan SPEED=1.0
    UPDATE_DELAYED_GCODE ID=nevermore_stop_delayed DURATION=900
    TURN_OFF_HEATERS
    G1 Z2 F3000                          ; move nozzle up 2mm
    G90                                  ; absolute positioning
    G0 X250 Y300 F3600                  ; park nozzle at rear
    {% if unload|int == 1%}
        ERCF_EJECT
    {% endif %}
    M107                                 ; turn off fan
    BED_MESH_CLEAR
```

ERCF Eject condition

End G-code



```
print_end UNLOAD_AT_END=1 ;end script from macro
```


Example of a print_end macro with the ERCF Eject as an option

PRINTER SETTINGS TAB

SINGLE EXTRUDER MM SETUP

In the 'Single Extruder MM Setup' section, the 'Single Extruder Multimaterial Parameters' have to be defined. They will change based on the hotend you are using. The example below is for a **Dragon Normal Flow**:

Some users have reported having better results (i.e. cleaner filament tips) using 35 and 15 mm respectively for the 'Cooling Tube Position' and 'Cooling Tube Length'.

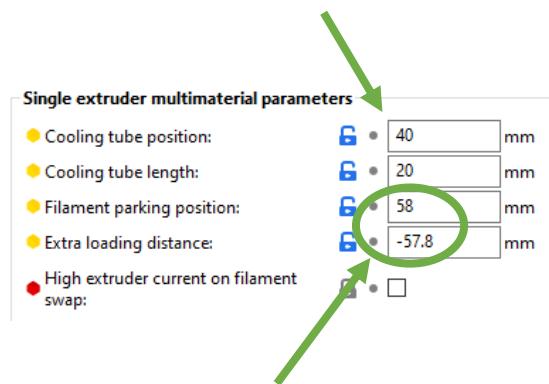

Hotend	Parameter	
	Cooling tube position	Cooling tube length
Dragon ST	35 or 40	15 or 20
Dragon HF	30	10
Mosquito	38	20

Typical values for toolheads

It is important that the 'Filament Parking Position' is a few mm smaller than the 'sensor_to_nozzle' variable in the ercf_software.cfg

Also make sure that the 'Extra Loading Distance' is the negative value of the 'Filament Parking Position' + 0.2 mm


ADVANCED WIPE TOWER PURGE VOLUME

This part of the setup will be discussed further in the guide, when discussing about the different purging options.

PRINTER SETTINGS TAB

TOOLHEAD SCHEMATICS


Position of the different elements and parameters on an AfterBurner Toolhead

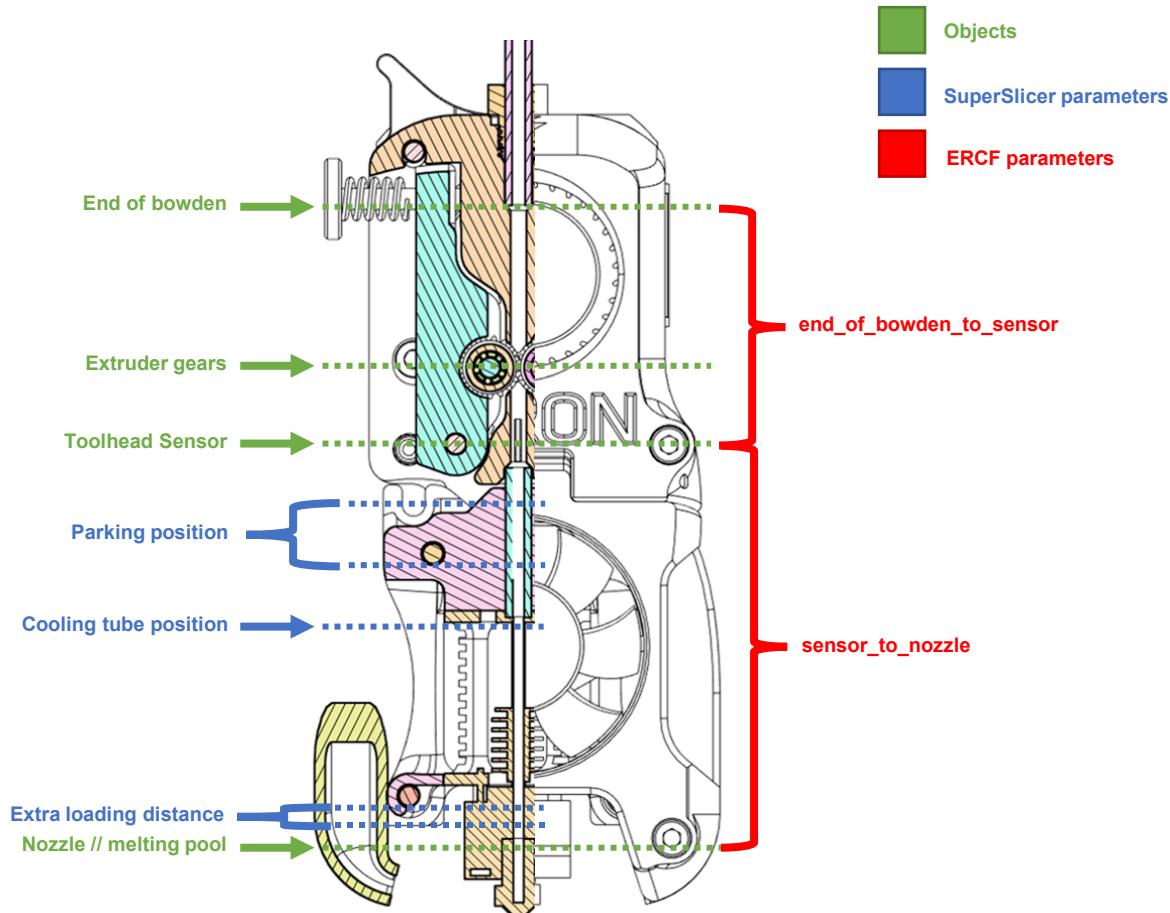

PRINT SETTINGS TAB

MULTIPLE EXTRUDERS


In the 'Multiple extruders' section, enable the Wipe Tower if you want to purge into it. You can also try the 'No sparse layers (EXPERIMENTAL)' option to avoid filing the Wipe Tower in case of no swap during a layer. Beware though that the toolhead will move up and down to reach the actual Wipe Tower height, so ensure the Wipe Tower is far enough from the print itself.

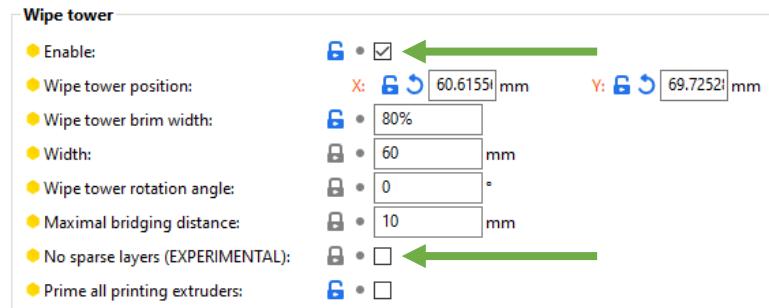

FILAMENT SETTINGS TAB

CUSTOM G-CODE

Remember to set your filament specific pressure advance value in the filament custom G-Code Start G-code

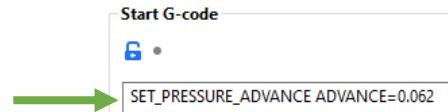

WIPE TOWER PARAMETERS

To speed up the purging process, increase the 'Max speed on the wipe tower' parameter to its maximum value (i.e. 200%)

Wipe tower parameters

- Minimal purge on wipe tower:
- Max speed on the wipe tower:

150	mm ³
200	%

A green arrow points to the '200' value in the second row of the table.

TUNING FILAMENT TIPS

The shape of filament tips is of crucial importance for a reliable system. The filament tips need to look like tiny spears, free of any blobs or long hairs. Here are some proper tips that won't cause any issue :

A complete guide for filament tip tuning will soon be added to this manual. In the mean time, use the default Prusa MMU2S profiles (filament wise) in SuperSlicer as a very reliable base for your filaments.

