




1. 先进入高级设置；在 PAG1 界面里的 error count:里按住 shift 键输入~~进入高级设置  
Go to Advanced Settings. Hold down shift and enter ~~ to enter advanced Settings in error count: on Page 1

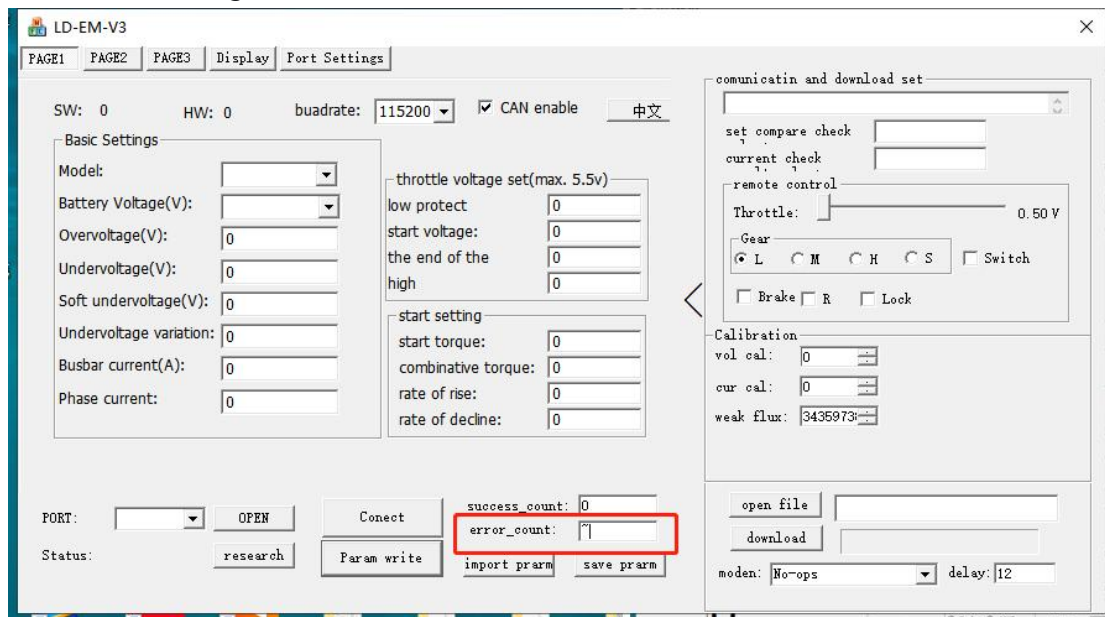

2. 点击到 Display 界面（按图示顺序操作）  
Click on the Display interface (operate in the order that picture shown)

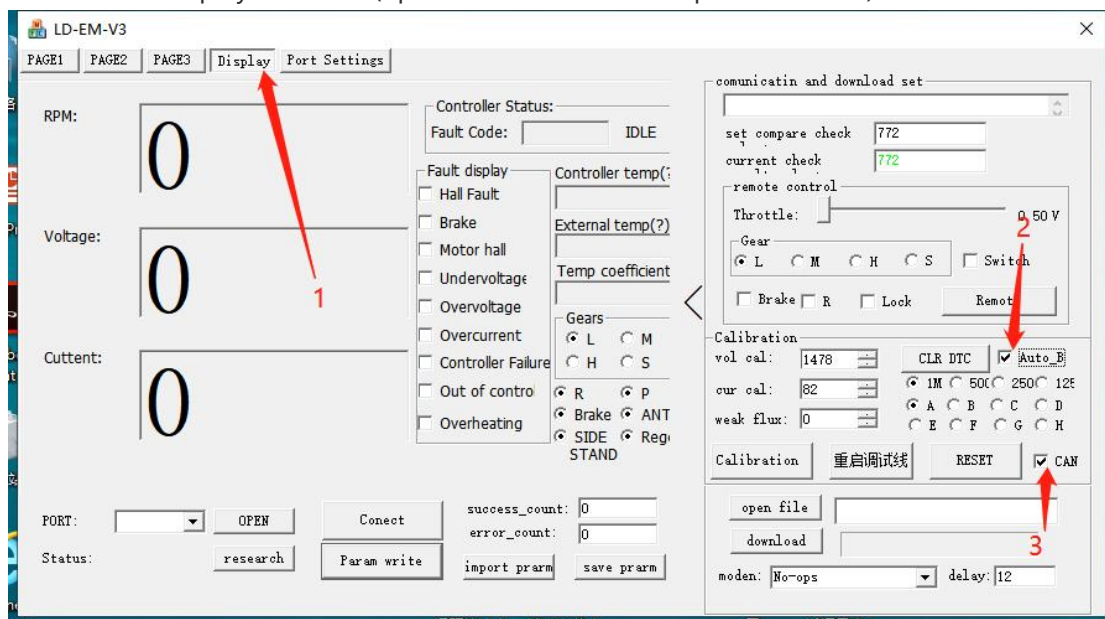

3. 再次点击到 PAGE3 界面（按图示顺序操作）  
Click the PAGE3 interface again (operate in the order that picture shown)

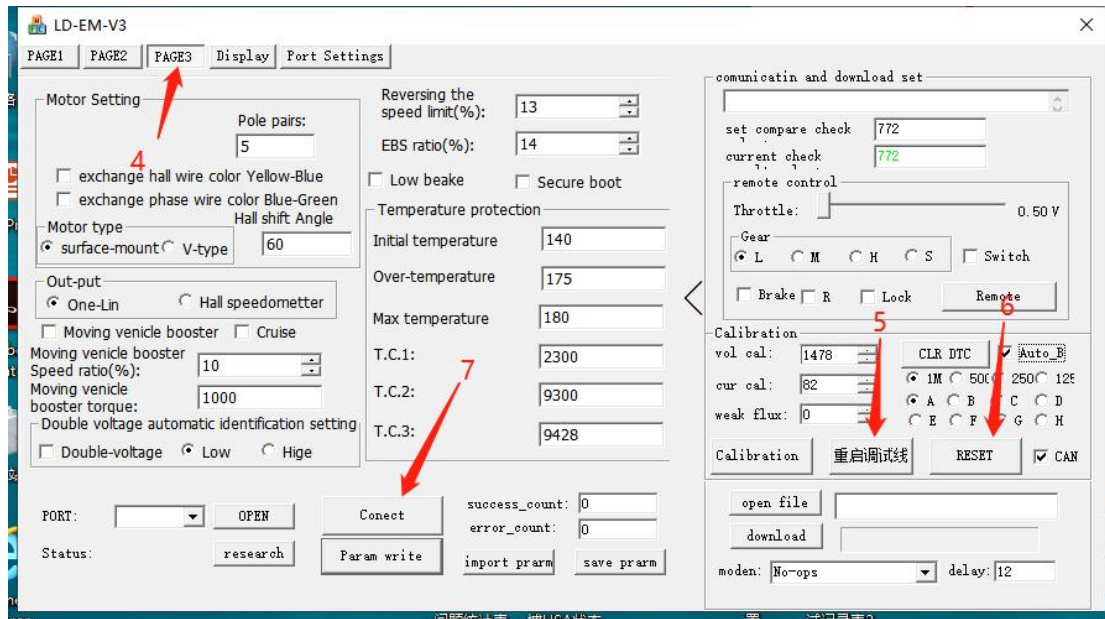

4. 连接成功后电压及电流;

Voltage and current will shown after successful connection;

