
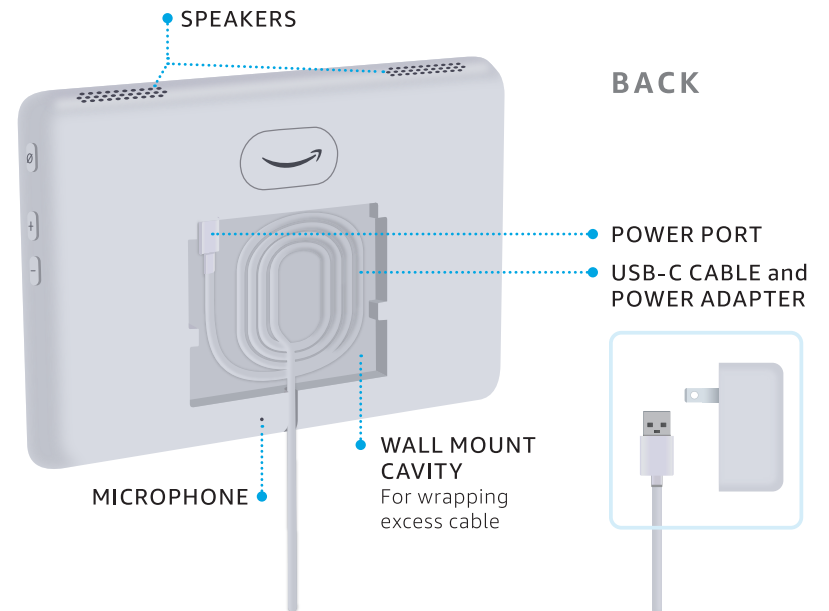



MEET YOUR ECHO HUB

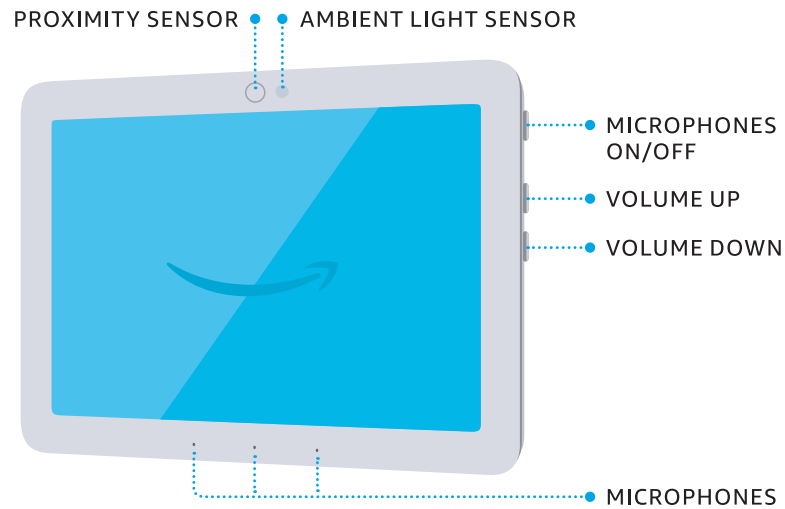

BEFORE MOUNTING YOUR DEVICE

INCLUDED FOR MOUNTING

Included screws and anchors are recommended for drywall, brick, concrete, or tile surfaces.

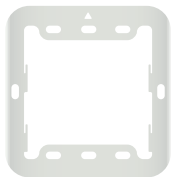


Wall mount



2x screws



2x anchors

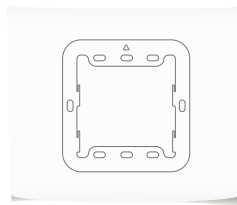

Mounting template
Sized to the device

TOOLS YOU'LL NEED

Not included in the box.



Electric drill
• 1/4" (6.5 mm) drill bit
• Phillips #2 driver bit



Hammer



Level or level app




Wall-safe tape

TIPS FOR MOUNTING ON THE WALL

- Consider the height of everyone using the device. We recommend placing the device at eye level.
- Don't drill holes over studs, electrical wiring, or piping.
- Before mounting, unplug the device from the power outlet and keep it away from water.

MOUNTING YOUR ECHO HUB ON YOUR WALL

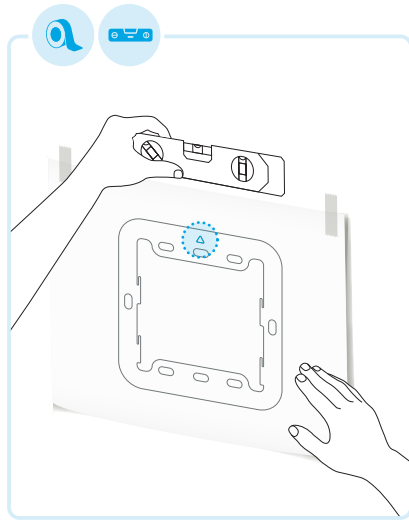


1 LEVEL AND TAPE TEMPLATE TO THE WALL

Use the mounting tips and the included mounting template to identify where to mount your device.

Place the template on the wall. Make sure the triangle is at the top.

Use a level or a level app on your phone to level the template.


Tape the template in place.

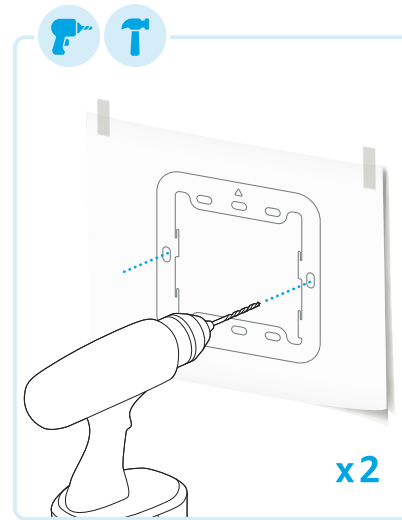

2 DRILL HOLES AND INSTALL ANCHORS

Using an electric drill, drill through the designated holes in the template. Remove template after drilling holes.


Slowly hammer each of the 2 anchors into the holes until they are flat against the wall.

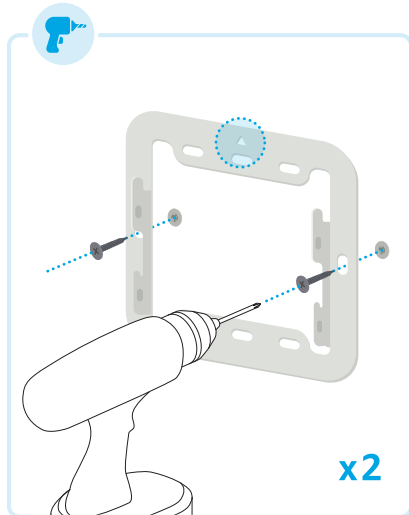

3 INSTALL WALL MOUNT

Place the wall mount against the wall with the triangle cutout on top, and line up the 2 holes with the installed anchors.

With the Phillips driver bit, drive the screws through the wall mount holes until they are flat against the wall mount.

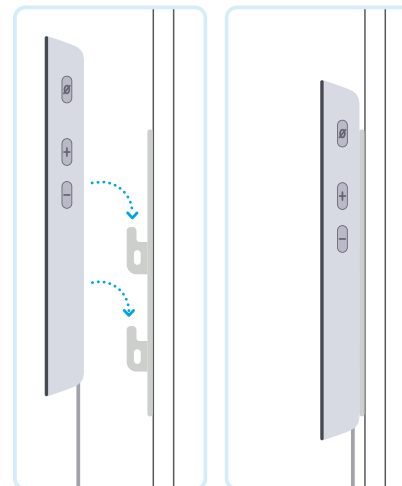

4 PLUG SUPPLIED POWER CORD INTO DEVICE AND SLIDE DEVICE ONTO MOUNT

Once the device is mounted on the wall, you won't be able to access its power port. **DO NOT** plug it into a power outlet yet.

Place the device flat over the top of the wall mount and slide it down, ensuring that all 4 hooks in the wall mount are engaged with the device. Make sure the device is placed with the buttons on the right.

SET UP YOUR ECHO HUB



1. HAVE YOUR WIFI AND AMAZON PASSWORDS READY

During setup, you will connect to the internet and sign in to your Amazon account.



2. PLUG ECHO HUB INTO A POWER OUTLET

Use the included power adapter. In about a minute, the display will turn on and Alexa will greet you.



3. FOLLOW THE ON-SCREEN SETUP

Log in with an existing Amazon account username and password or create a new account.



4. DOWNLOAD ALEXA APP FROM APP STORE

Installing the app on your phone or tablet helps you get more out of your Echo Hub. It's where you can set up routines and manage music, lists, settings, and news.



OPTIONAL: SET UP COMPATIBLE SMART HOME DEVICES

You can easily connect and control compatible devices with the built-in smart home hub.

When ready to get started, open the Alexa app to add your device, or say, "Alexa, discover my devices."

THINGS TO TRY WITH ALEXA



CONTROL YOUR SMART HOME

"Alexa, show me my cameras."
"Alexa, dim the lights."



MANAGE YOUR DAY

"Alexa, what's on the calendar today?"
"Alexa, show me the weather."

Discover and learn what Alexa can do at amazon.com/alexa or amazon.ca/meetalexa.

Some features may require customization in the Alexa app, a separate subscription, or an additional compatible smart home device. You can find more examples and tips in the Alexa app.

PRIVACY AND SUPPORT



PRIVACY CONTROLS

Turn the microphones off by pressing the microphones on/off button.



MANAGE YOUR VOICE HISTORY

You can view, hear, and delete the voice recordings associated with your account in the Alexa app at any time.



CUSTOMER SUPPORT

For help and troubleshooting, go to Help & Feedback in the Alexa app or visit amazon.com/devicesupport.

You have control over your Alexa experience.

Explore more at amazon.com/alexaprivacy or amazon.ca/alexaprivacy.