

UAP-6-3 angle of attack and overload indicator simulator


GENERAL DESCRIPTION:

The device simulator is designed to simulate the operation of the original device (UAP-6-3). The device simulator is not intended for installation on aircraft.


PINOUT INFO:

PIN N	SIGNAL TYPE	VALUES		NOTE
		MIN	MAX	
1	NC	-	-	
2	GND	-	-	Common ground
3	VCC	7 V	36 V	Common power supply
4	GND	-	-	Common ground
5	VCC	7 V	36 V	Common power supply
6	A1	0 V	+ 5 V	Analog signal
7	A0	0 V	+ 5 V	Analog Signal
8	Rezerved			
9				

Reference:

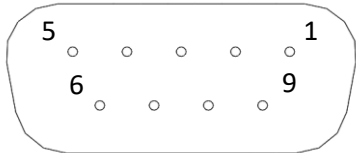

MEASURES AND TOLERANCES:

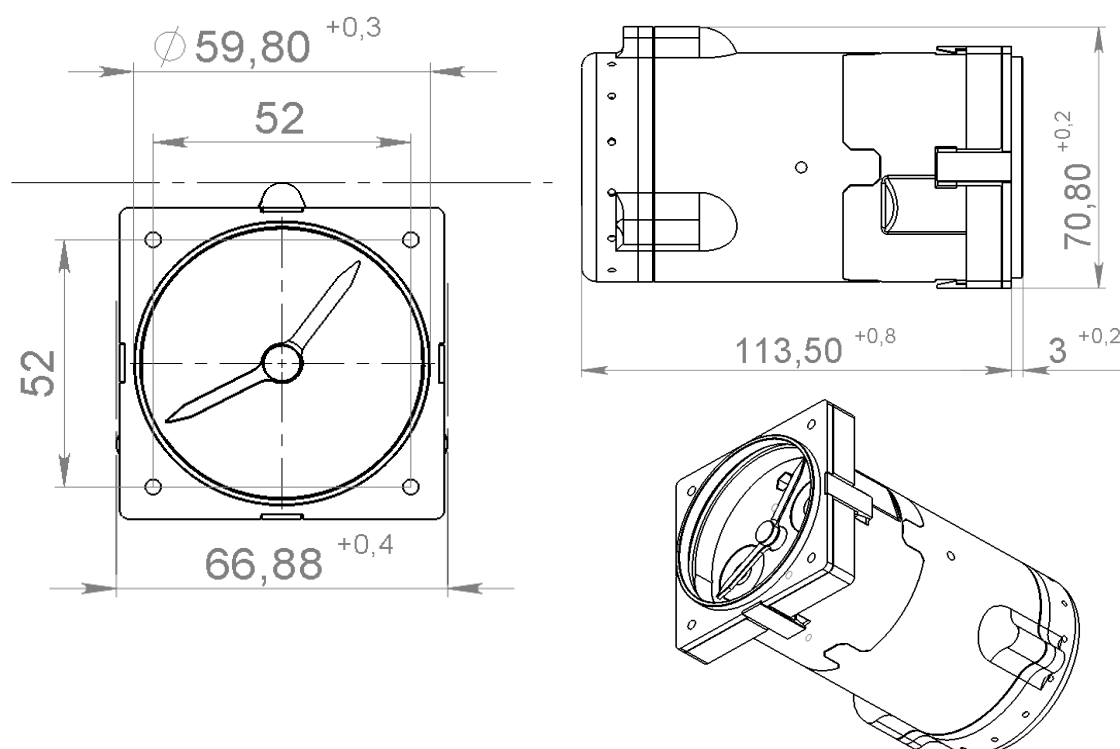

GENERAL OPERATING CONDITIONS:

Storage temperature range	-20C - +60C
Operating temperature range	+10C - +40C
Operating humidity range	0% - 60 %
Maximum number of working cycles	100 000
Bust-proof and wash-down capable	IP 30
Indication tolerance	$\pm 3^{\circ}$
	$\pm 0,5 \text{ g}$

EXPLOITATION NOTES:

- 1) After connection power supply both arrows will move through available range.
- 2) The device do not have any overvoltage protection. Please check power supply before turn on.
- 3) Device do not have reverse polarity protection.
- 4) The device do not have any overheating protection. Use device only in acceptable ambient temperature range.
- 5) Use stable power supply. Unstable voltage can cause incorrect device operation.

POSSIBLE PROBLEMS:

- 1) Arrows are in incorrect position after turning on the device.

recommendations:

- Dismount the device.
- Remove glass frame.
- Remove glass.
- Move arrows to correct start position (Upper arrow [Ny] vertical upperside direction, down arrow [alpha] vertical downside direction.
- Assembly and mount device

If problem appear more then five times please contact with producer and prepare device to shipment for diagnostic and fixing.

- 2) Arrows move after turning on the device [diagnostic movement] but device do not operate or operate incorrect.

recommendations:

- Check connection of wire harness.
- Check wire harness connecor.
- Check signal levels on pins 6 & 7 of connectors.

If problem were not detected throuhg this checking please contact with producer.

- 3) Arrows do not move after turning on the device.

recommendations:

- Check connection of wire harness.
- Check voltage on pins 3& 5.

If problem were not detected throuhg this checking please contact with producer.