


[Skip to main content](#)

- [Shop](#)
- [Learn](#)
- [Blog](#)
- [Forums](#)
- [LIVE!](#)
- [AdaBox](#)
- [IO](#)

[toggle menu](#)

0

- [Sign In | Create Account](#)
- [Playground](#)
- [New Guides](#)
- [Series](#)
- [Wishlists](#)

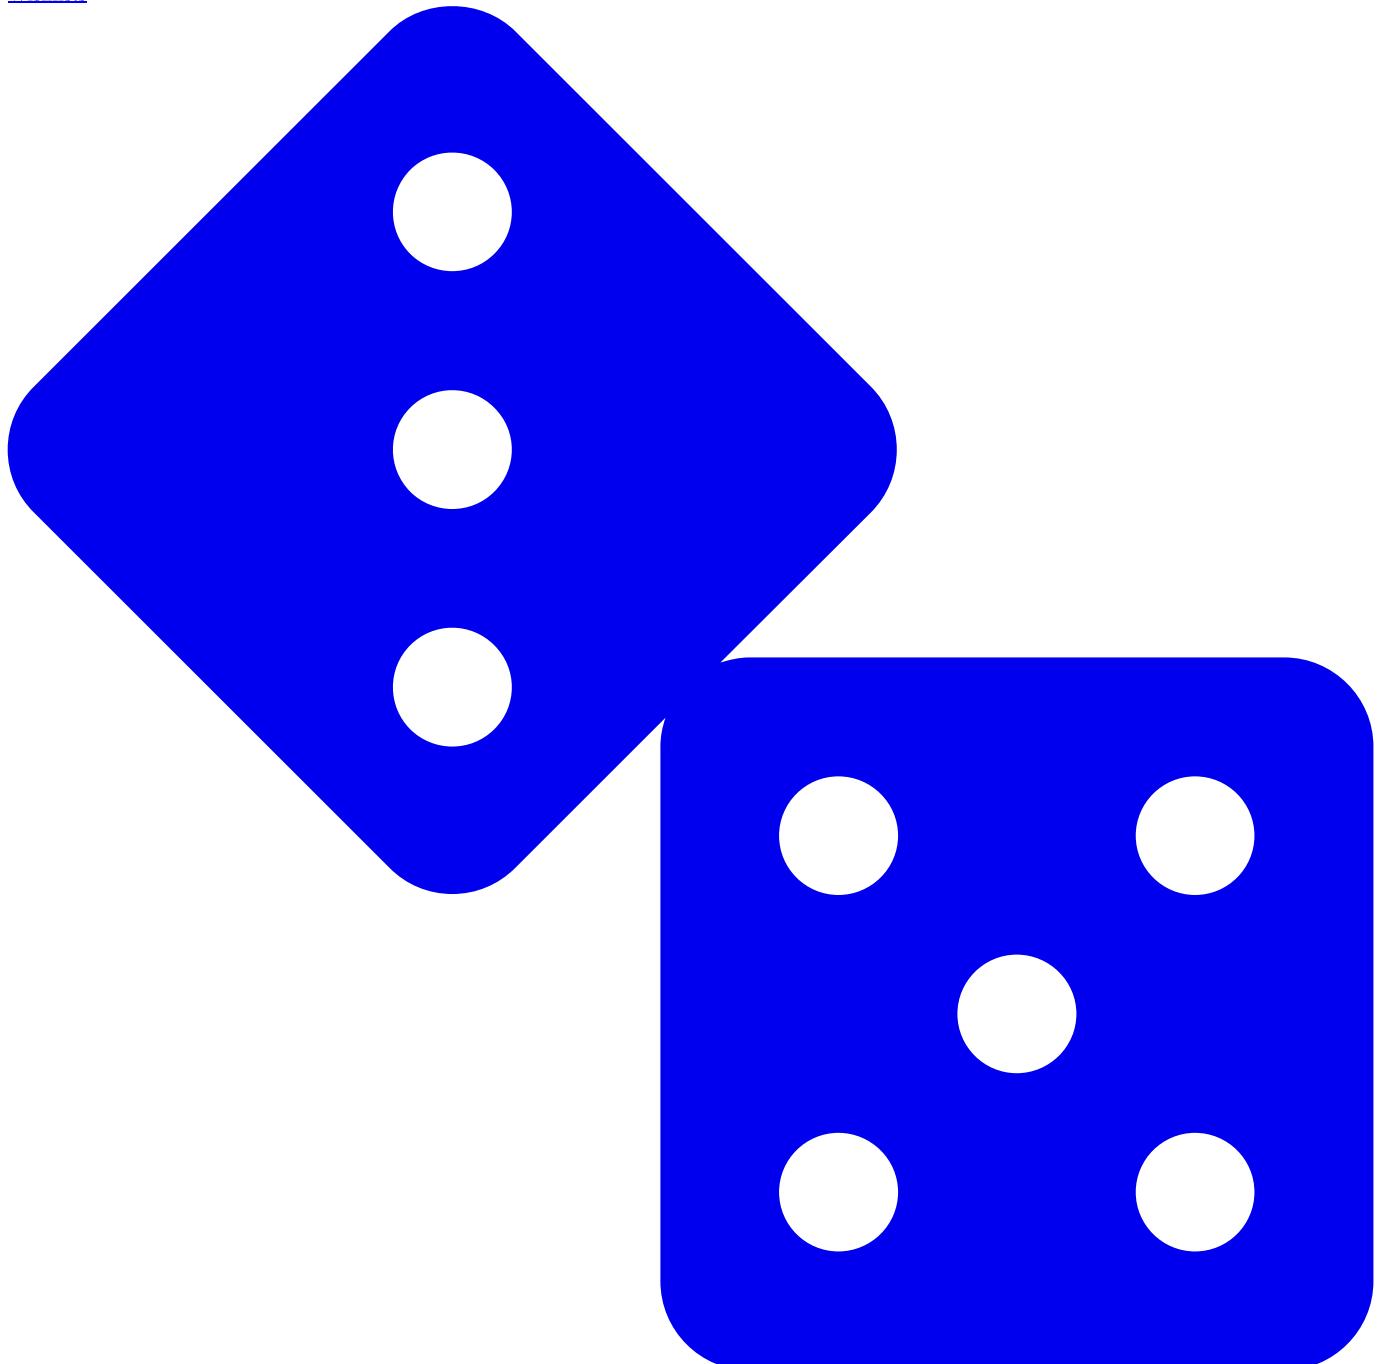


- [Shop](#)
- [Learn](#)
- [Blog](#)
- [Forums](#)
- [LIVE!](#)
- [AdaBox](#)

- [IO](#)
- [Sign In](#)
- 0

- [Explore & Learn](#)

Learn Categories

- [3D Printing](#)
- [AdaBox](#)
- [Adafruit Products](#)
- [Arduino Compatibles](#)
- [Breakout Boards](#)
- [Circuit Playground](#)
- [CircuitPython](#)
- [CLUE](#)
- [Community Support](#)
- [Components](#)
- [Crickit](#)
- [Customer & Partner Projects](#)
- [Development Boards](#)
- [Educators](#)
- [EL Wire/Tape/Panel](#)
- [Feather](#)
- [Gaming](#)
- [Hacks](#)
- [Internet of Things - IOT](#)
- [LCDs & Displays](#)
- [LEDs](#)
- [Machine Learning](#)
- [MakeCode](#)
- [Maker Business](#)
- [micro:bit](#)
- [Microcontrollers](#)
- [Programming](#)
- [Raspberry Pi](#)
- [Robotics & CNC](#)
- [Sensors](#)
- [STEMMA](#)
- [Tools](#)
- [Trellis](#)
- [Wearables](#)

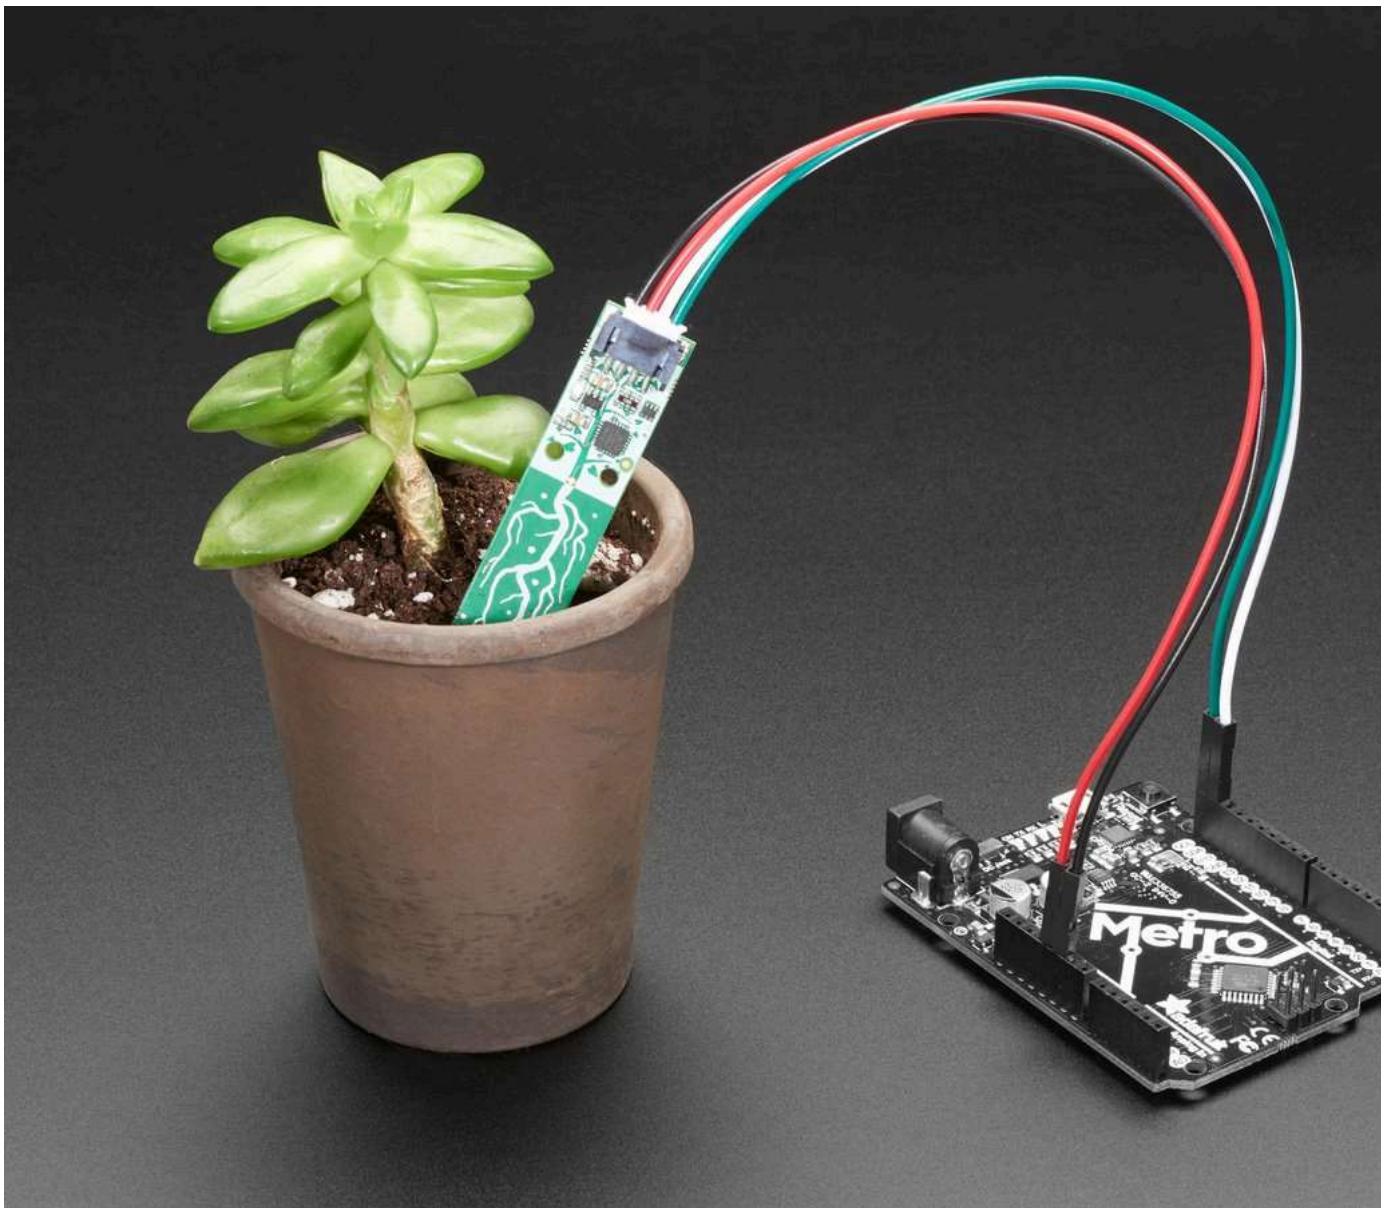


Explore


Groups to get your gears turning

[Explore Groups](#)

- [New Guides](#)
- [Playground](#)

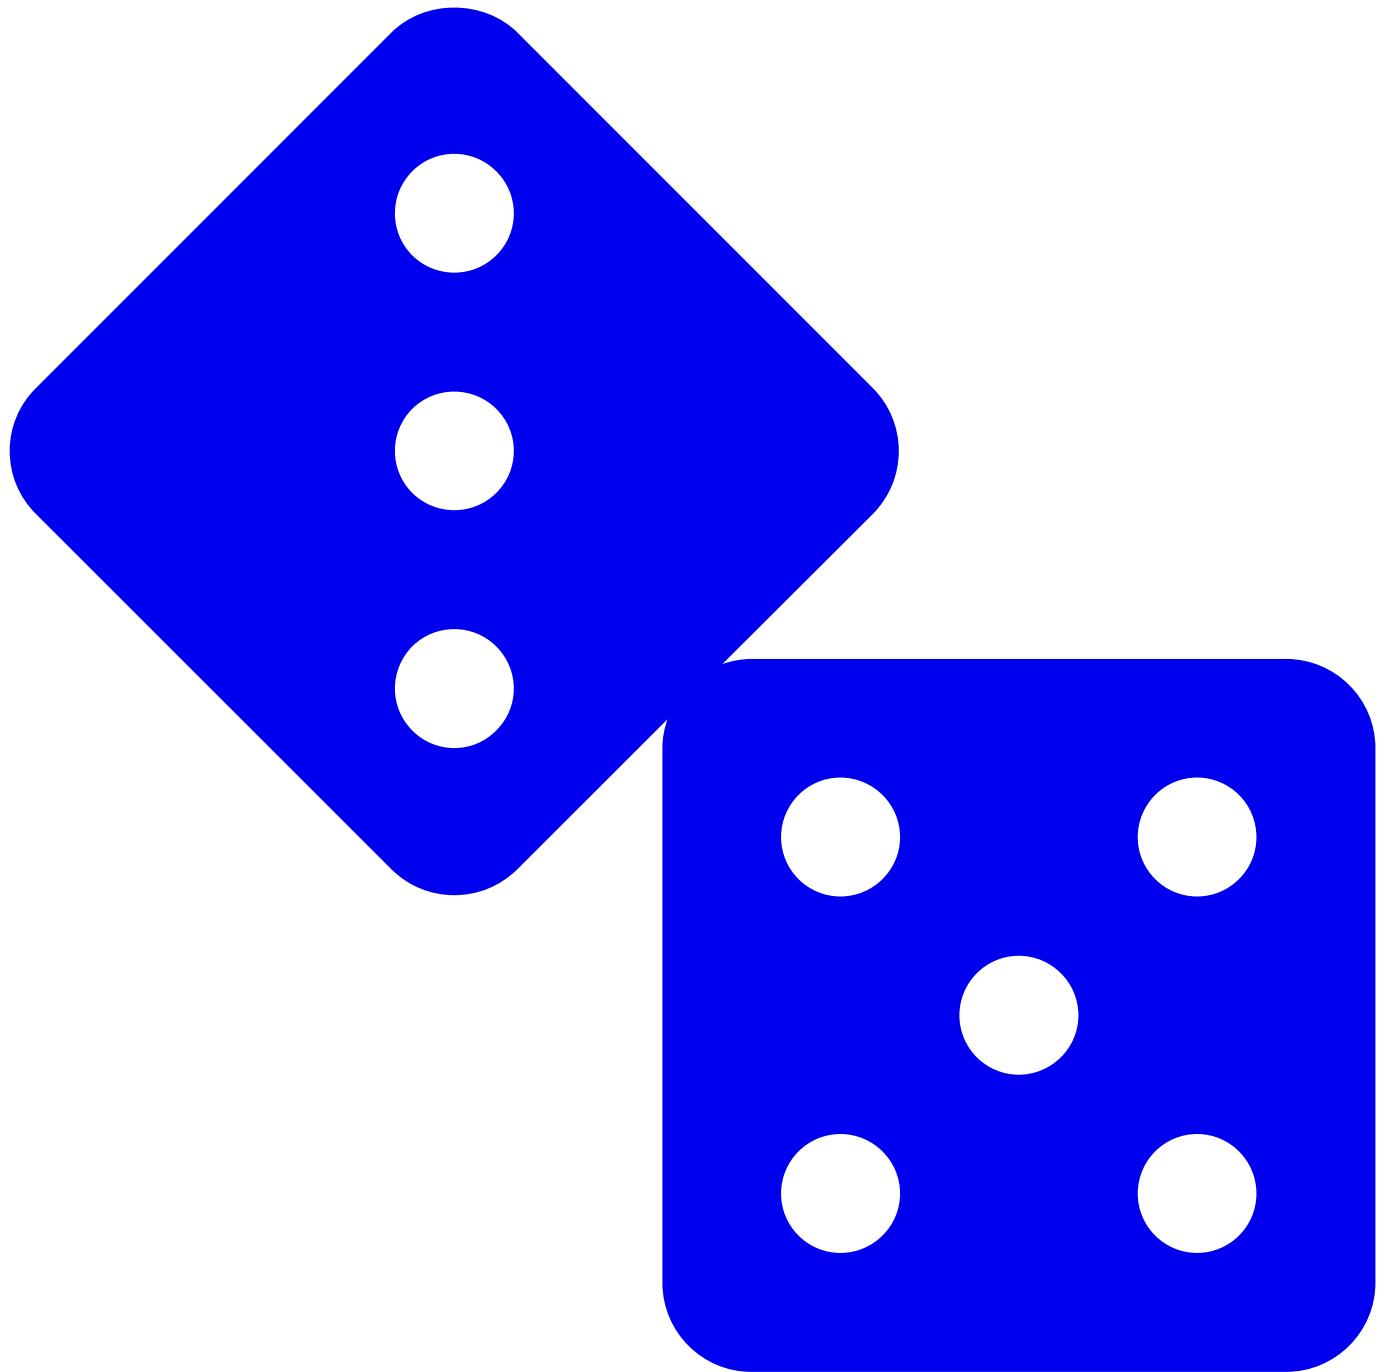

Adafruit PCA9685 16-Channel Servo Driver

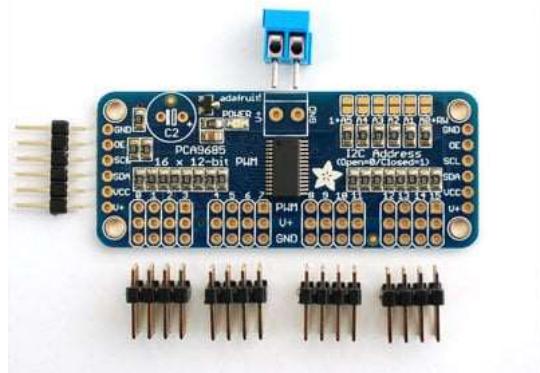

Adafruit PCA9685 16-Channel Servo Driver

By [Bill Earl](#)

- [Overview](#)
- [Pinouts](#)
- [Assembly](#)
- [Hooking it Up](#)
- [Chaining Drivers](#)
- [Using the Adafruit Library](#)

- [Library Reference](#)
 - [Arduino Library Docs](#)
 - [Python & CircuitPython](#)
 - [Python Docs](#)
 - [Python Docs: ServoKit](#)
 - [Downloads](#)
 - [FAQ](#)
 - [Featured Products](#)
 - [Multiple pages](#)
 - [Download PDF](#)
- [Feedback? Corrections?](#)

Overview

[Save](#) [Subscribe](#)




New Subscription

Please [sign in](#) to subscribe to this guide.


You will be redirected back to this guide once you [sign in](#), and can then subscribe to this guide.

[Close](#)

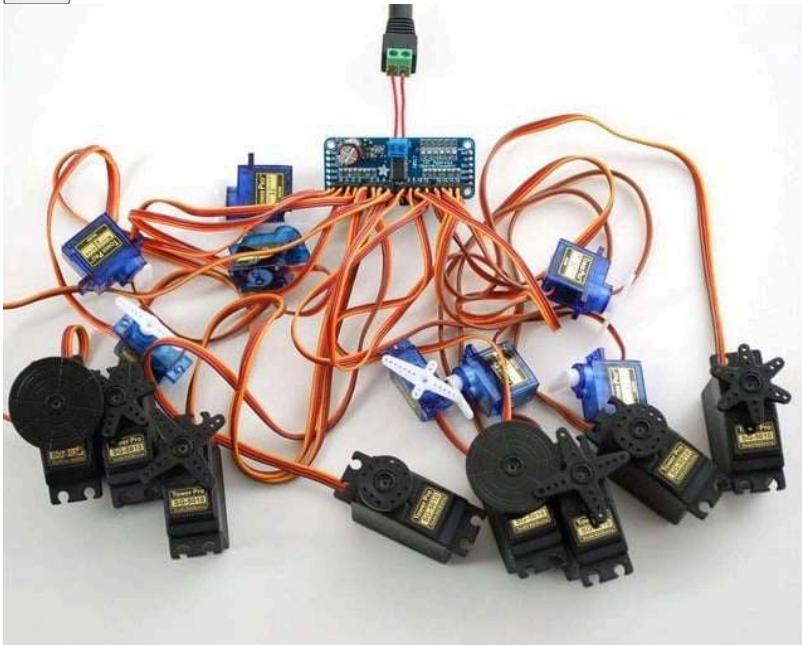


Driving servo motors with the Arduino Servo library is pretty easy, but each one consumes a precious pin - not to mention some Arduino processing power. The Adafruit 16-Channel 12-bit PWM/Servo Driver will drive up to 16 servos over I2C with only 2 pins. The on-board PWM controller will drive all 16 channels simultaneously with no additional Arduino processing overhead. What's more, you can chain up to 62 of them to control up to 992 servos - all with the same 2 pins!

The Adafruit PWM/Servo Driver is the perfect solution for any project that requires a lot of servos.

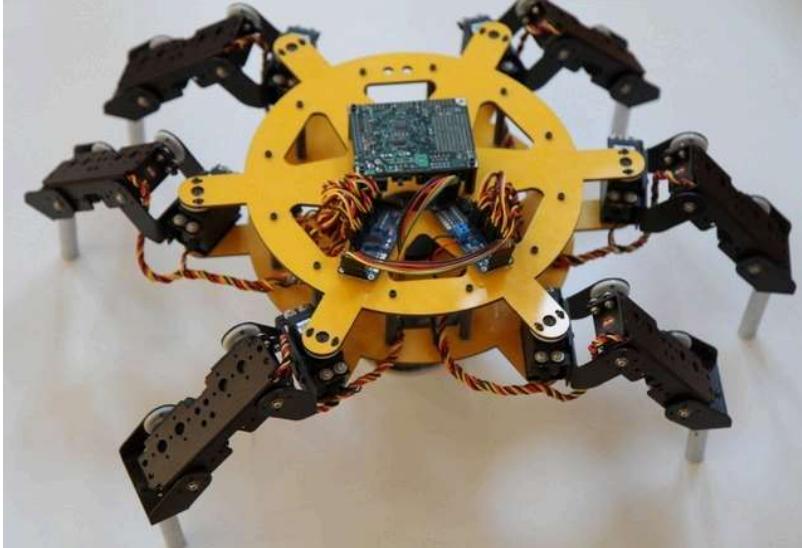

Pinouts

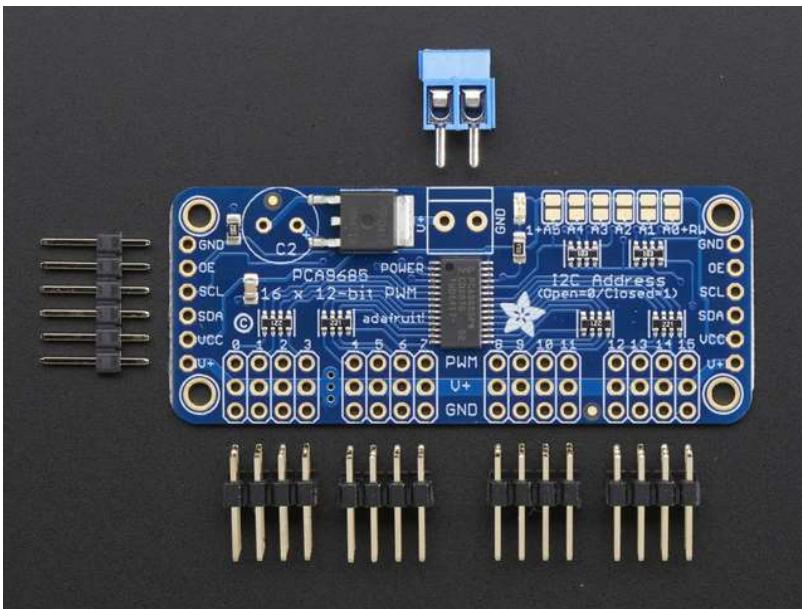

There are two sets of control input pins on either side. **Both sides of the pins are identical!** Use whichever side you like, you can also easily chain by connecting up two side-by-side

Power Pins

- **GND** - This is the power and signal ground pin, must be connected
- **VCC** - This is the **logic** power pin, connect this to the logic level you want to use for the PCA9685 output, should be 3 - 5V max! It's also used for the 10K pullups on SCL/SDA so unless you have your own pullups, have it match the microcontroller's logic level too!
- **V+** - This is an *optional* power pin that will supply distributed power to the servos. If you are not using for servos you can leave disconnected. It is not used at all by the chip. You can also inject power from the 2-pin terminal block at the top of the board. You should provide 5-6VDC if you are using servos. If you have to, you can go higher to 12VDC, but if you mess up and connect VCC to V+ you could damage your board!

Control Pins

- **SCL** - I2C clock pin, connect to your microcontrollers I2C clock line. Can use 3V or 5V logic, and has a weak pullup to **VCC**
- **SDA** - I2C data pin, connect to your microcontrollers I2C data line. Can use 3V or 5V logic, and has a weak pullup to **VCC**
- **OE** - Output enable. Can be used to quickly disable all outputs. When this pin is *low* all pins are *enabled*. When the pin is *high* the outputs are *disabled*. Pulled low by default so it's an optional pin!

Output Ports

There are 16 output ports. Each port has 3 pins: V+, GND and the PWM output. Each PWM runs completely independently *but* they must all have the same PWM frequency. That is, for LEDs you probably want 1.0 KHz but servos need 60 Hz - so you cannot use half for LEDs @ 1.0 KHz and half @ 60 Hz.

They're set up for servos but you can use them for LEDs! Max current per pin is 25mA.


There are 220 ohm resistors in series with all PWM Pins and the output logic is the same as **VCC** so keep that in mind if using LEDs.

Assembly




Install the Servo Headers

Install 4 3x4 pin male headers into the marked positions along the edge of the board.

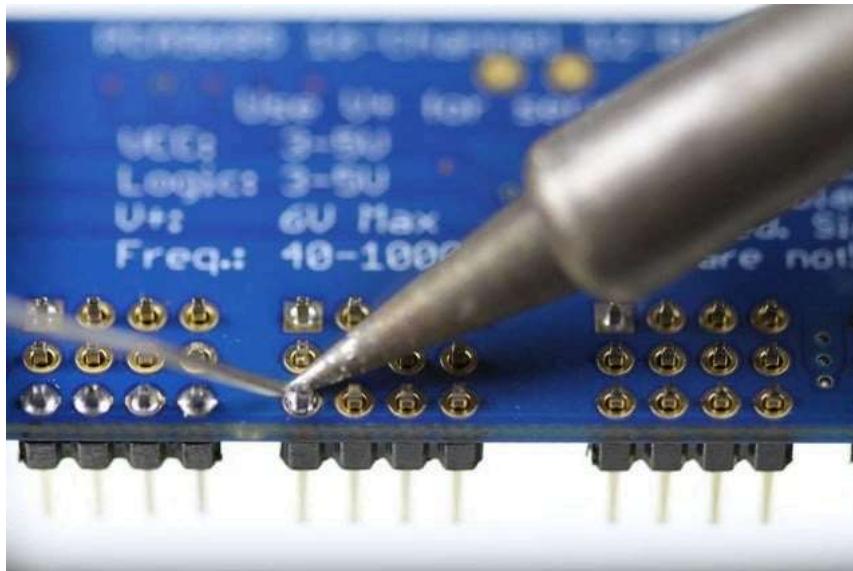

Solder all pins

There are a lot of them!

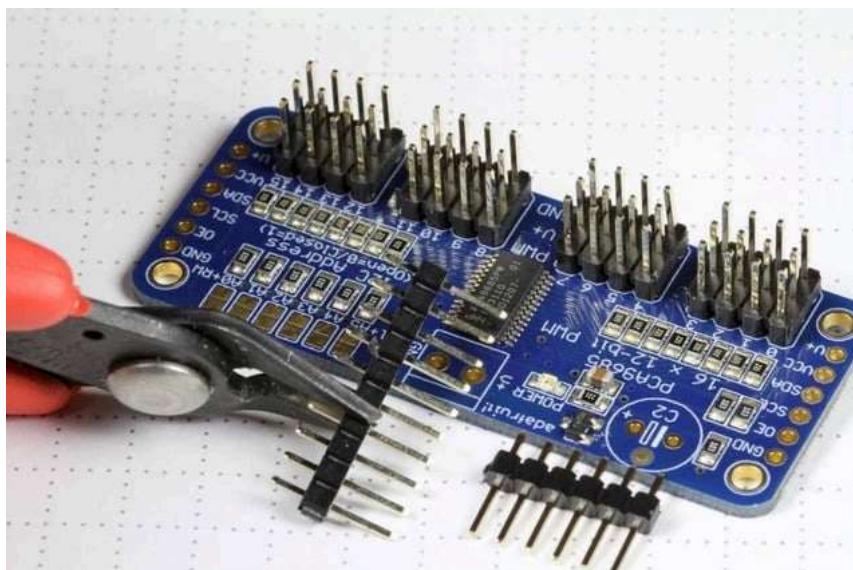


Add Headers for Control

A strip of male header is included. Where you want to install headers and on what side depends a little on use:

- For [breadboard](#) use, install headers on the bottom of the board.
- For use with [jumper wires](#), install the headers on top of the board.
- For use with our [6-pin cable](#), install the headers on top of the board.

If you are chaining multiple driver boards, you will want headers on both ends.

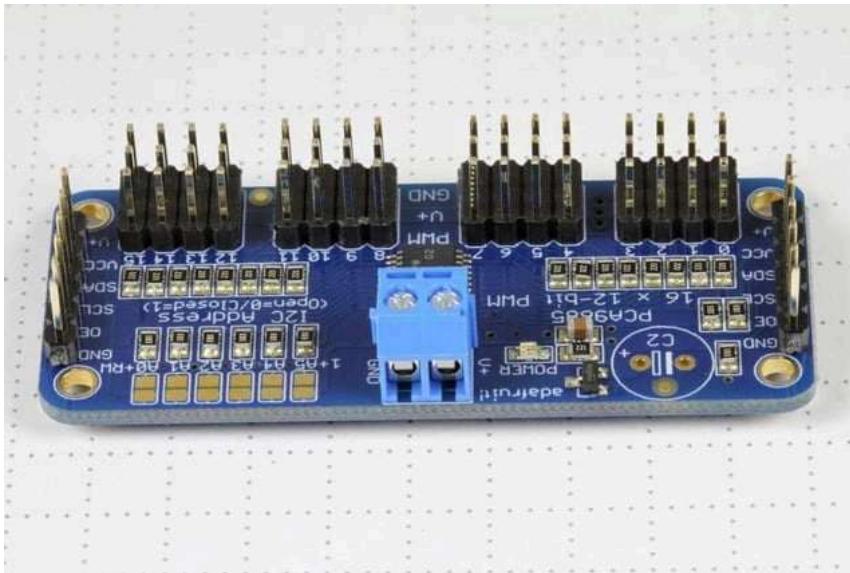

Install Power Terminals

If you are chaining multiple driver boards, you only need a power terminal on the first one.

Hooking it Up

Connecting to the Arduino

The PWM/Servo Driver uses I2C so it takes only 4 wires to connect to your Arduino:

"Classic" Arduino wiring:

- +5v -> VCC (this is power for the BREAKOUT only, NOT the servo power!)
- GND -> GND
- Analog 4 -> SDA
- Analog 5 -> SCL


Older Mega wiring:

- +5v -> VCC (this is power for the BREAKOUT only, NOT the servo power!)
- GND -> GND
- Digital 20 -> SDA
- Digital 21 -> SCL

R3 and later Arduino wiring (Uno, Mega & Leonardo):

(These boards have dedicated SDA & SCL pins on the header nearest the USB connector)

- +5v -> VCC (this is power for the BREAKOUT only, NOT the servo power!)
- GND -> GND
- SDA -> SDA
- SCL -> SCL

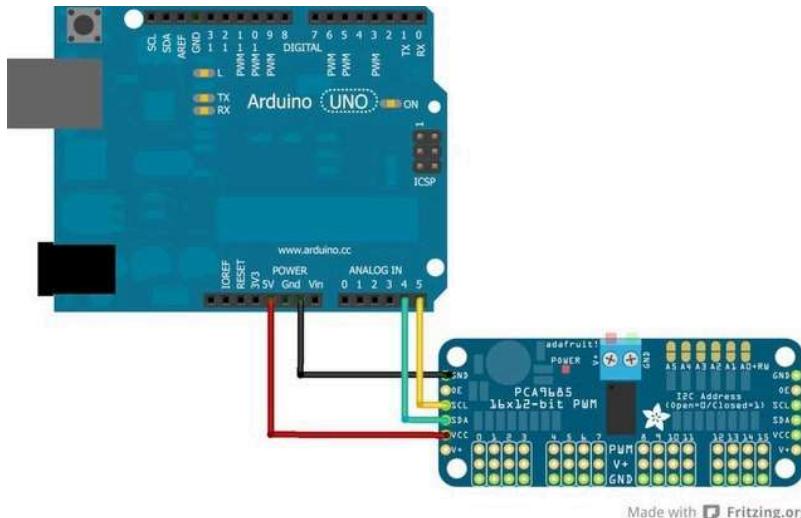

The VCC pin is just power for the chip itself. If you want to connect servos or LEDs that use the V+ pins, you MUST connect the V+ pin as well. The V+ pin can be as high as 6V even if VCC is 3.3V (the chip is 5V safe). We suggest connecting power through the blue terminal block since it is polarity protected.


Power for the Servos

Most servos are designed to run on about 5 or 6v. Keep in mind that a lot of servos moving at the same time (particularly large powerful ones) will need a lot of current. Even micro servos will draw several hundred mA when moving. Some High-torque servos will draw more than 1A each under load.

Good power choices are:

- [5v 2A switching power supply](#)
- [5v 10A switching power supply](#)
- [4xAA Battery Holder](#) - 6v with Alkaline cells. 4.8v with NiMH rechargeable cells.
- 4.8 or 6v Rechargeable RC battery packs from a hobby store.

It is not a good idea to use the Arduino 5v pin to power your servos. Electrical noise and 'brownouts' from excess current draw can cause your Arduino to act erratically, reset and/or overheat.

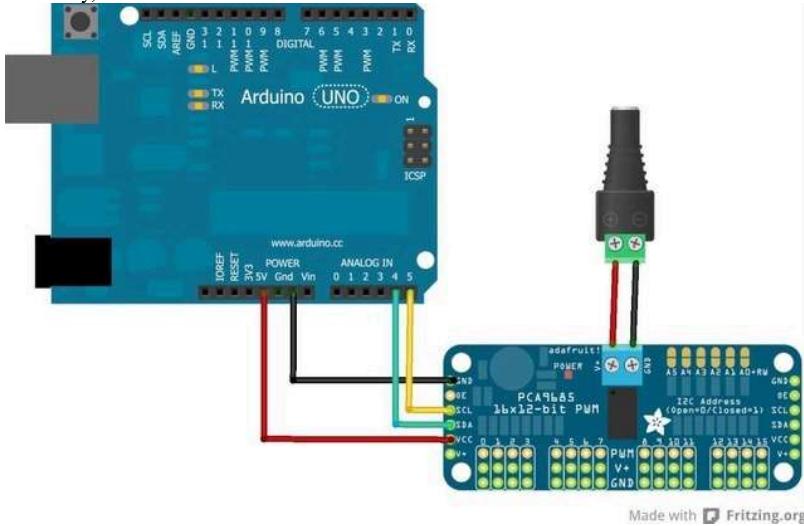


Adding a Capacitor to the thru-hole capacitor slot

We have a spot on the PCB for soldering in an electrolytic capacitor. Based on your usage, you may or may not need a capacitor. If you are driving a lot of servos from a power supply that dips a lot when the servos move, $n * 100\mu F$ where n is the number of servos is a good place to start - eg $470\mu F$ or more for 5 servos. Since it's so dependent on servo current draw, the torque on each motor, and what power supply, there is no "one magic capacitor value" we can suggest which is why we don't include a capacitor in the kit.


Connecting a Servo

Most servos come with a standard 3-pin female connector that will plug directly into the headers on the Servo Driver. Be sure to align the plug with the ground wire (usually black or brown) with the bottom row and the signal wire (usually yellow or white) on the top.

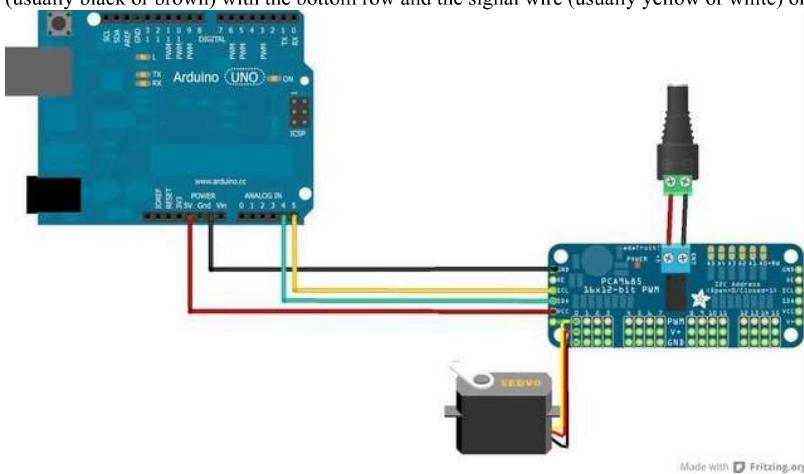


Adding More Servos

Up to 16 servos can be attached to one board. If you need to control more than 16 servos, additional boards can be chained as described on the next page.

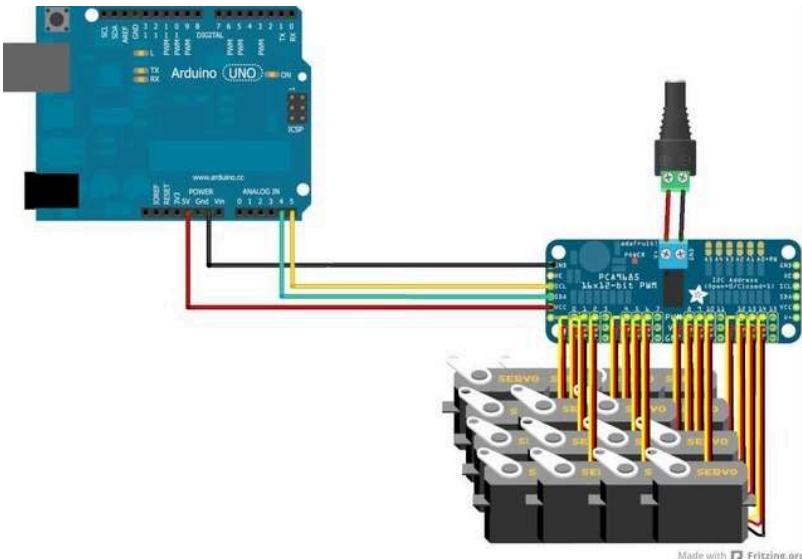

Chaining Drivers


Multiple Drivers (up to 62) can be chained to control still more servos. With headers at both ends of the board, the wiring is as simple as connecting a [6-pin parallel cable](#) from one board to the next.

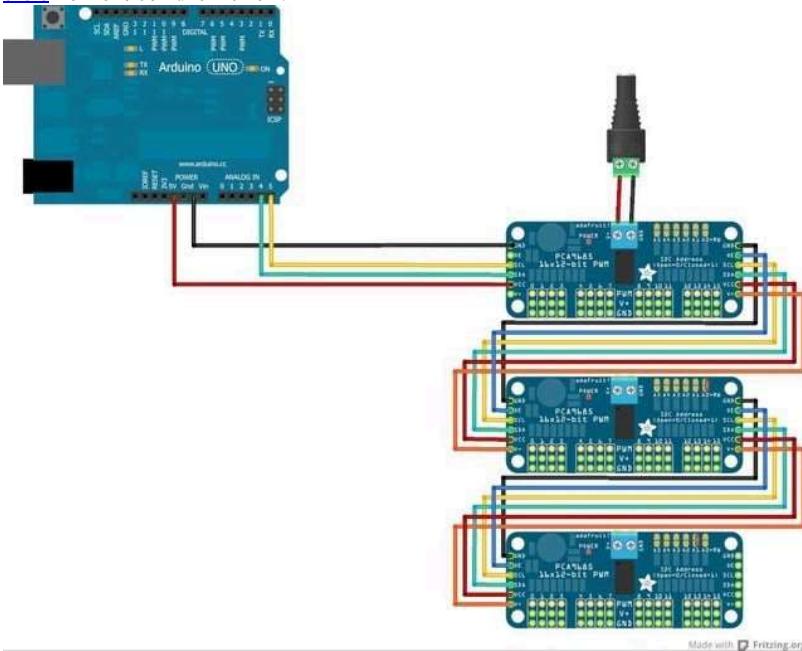

Addressing the Boards

Each board in the chain must be assigned a unique address. This is done with the address jumpers on the upper right edge of the board. The I2C base address for each board is 0x40. The binary address that you program with the address jumpers is added to the base I2C address.

To program the address offset, use a drop of solder to bridge the corresponding address jumper for each binary '1' in the address.

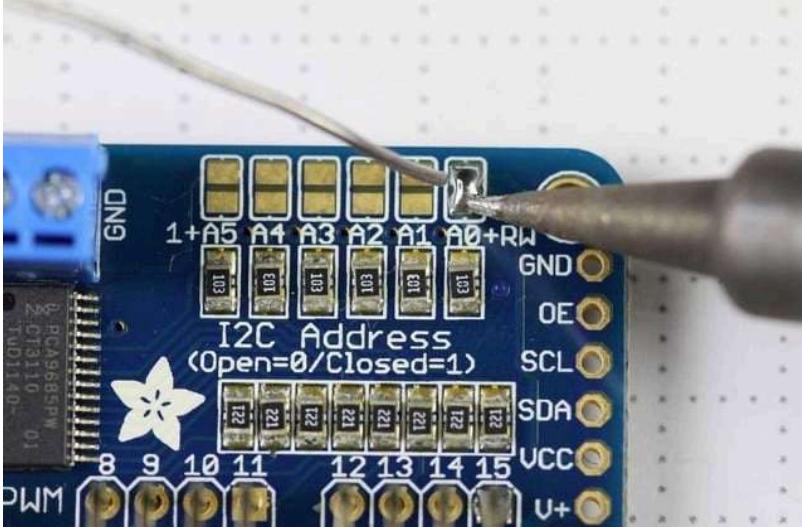

Board 0: Address = 0x40 Offset = binary 00000 (no jumpers required)
 Board 1: Address = 0x41 Offset = binary 00001 (bridge A0 as in the photo above)
 Board 2: Address = 0x42 Offset = binary 00010 (bridge A1)
 Board 3: Address = 0x43 Offset = binary 00011 (bridge A0 & A1)
 Board 4: Address = 0x44 Offset = binary 00100 (bridge A2)

etc.

In your sketch, you'll need to declare a separate pobject for each board. Call begin on each object, and control each servo through the object it's attached to. For example:

[Download File](#)

[Copy Code](#)

```
#include <Wire.h>
#include <Adafruit_PWMServoDriver.h>

Adafruit_PWMServoDriver pwm1 = Adafruit_PWMServoDriver(0x40);
Adafruit_PWMServoDriver pwm2 = Adafruit_PWMServoDriver(0x41);

void setup() {
  Serial.begin(9600);
  Serial.println("16 channel PWM test!");

  pwm1.begin();
  pwm1.setPWMFreq(1600); // This is the maximum PWM frequency

  pwm2.begin();
  pwm2.setPWMFreq(1600); // This is the maximum PWM frequency
}
```


Using the Adafruit Library

Since the PWM Servo Driver is controlled over I2C, its super easy to use with any microcontroller or microcomputer. In this demo we'll show using it with the Arduino IDE but the C++ code can be ported easily

Install Adafruit PCA9685 library

To begin reading sensor data, you will need to [install the Adafruit_PWM library \(code on our github repository\)](#). It is available from the Arduino library manager so we recommend using that.

From the IDE open up the library manager...

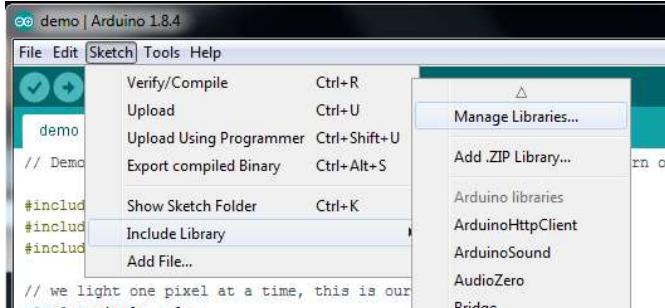

And type in **adafruit pwm** to locate the library. Click **Install**




We also have a great tutorial on Arduino library installation at:
<http://learn.adafruit.com/adafruit-all-about-arduino-libraries-install-use>

Test with the Example Code:

First make sure all copies of the Arduino IDE are closed.

Next open the Arduino IDE and select **File->Examples->Adafruit_PWMservoDriver->Servo**. This will open the example file in an IDE window.

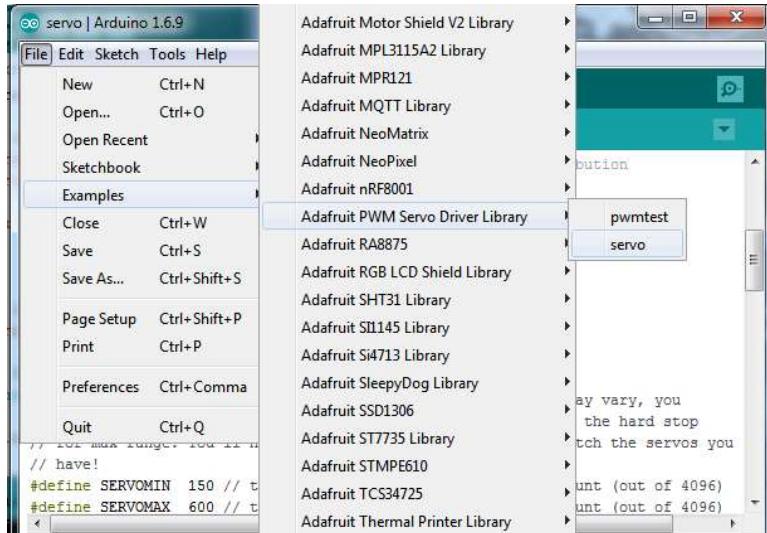

If using a Breakout:

Connect the driver board and servo as shown on the previous page. Don't forget to provide power to both **Vin** (3-5V logic level) and **V+** (5V servo power). **Check the green LED is lit!**

If using a Shield:

Plug the shield into your Arduino. Don't forget you will also have to provide 5V to the V+ terminal block. **Both red and green LEDs must be lit.**

If using a FeatherWing:

Plug the FeatherWing into your Feather. Don't forget you will also have to provide 5V to the V+ terminal block. **Check the green LED is lit!**

Connect a Servo

A single servo should be plugged into the **PWM #0** port, the first port. You should see the servo sweep back and forth over approximately 180 degrees.

Calibrating your Servos

Servo pulse timing varies between different brands and models. Since it is an analog control circuit, there is often some variation between samples of the same brand and model. For precise position control, you will want to calibrate the minimum and maximum pulse-widths in your code to match known positions of the servo.

Find the Minimum:

Using the example code, edit SERVOMIN until the low-point of the sweep reaches the minimum range of travel. It is best to approach this gradually and stop before the physical limit of travel is reached.

Find the Maximum:

Again using the example code, edit SERVOMAX until the high-point of the sweep reaches the maximum range of travel. Again, is best to approach this gradually and stop before the physical limit of travel is reached.

Use caution when adjusting SERVOMIN and SERVOMAX. Hitting the physical limits of travel can strip the gears and permanently damage your servo.

Converting from Degrees to Pulse Length

The [Arduino "map\(\)" function](#) is an easy way to convert between degrees of rotation and your calibrated SERVOMIN and SERVOMAX pulse lengths. Assuming a typical servo with 180 degrees of rotation; once you have calibrated SERVOMIN to the 0-degree position and SERVOMAX to the 180 degree position, you can convert any angle between 0 and 180 degrees to the corresponding pulse length with the following line of code:

[Download File](#)

[Copy Code](#)

```
pulseLength = map(degrees, 0, 180, SERVOMIN, SERVOMAX);
```

Library Reference

setPWMFreq(freq)

Description

This function can be used to adjust the PWM frequency, which determines how many full 'pulses' per second are generated by the IC. Stated differently, the frequency determines how 'long' each pulse is in duration from start to finish, taking into account both the high and low segments of the pulse.

Frequency is important in PWM, since setting the frequency too high with a very small duty cycle can cause problems, since the 'rise time' of the signal (the time it takes to go from 0V to VCC) may be longer than the time the signal is active, and the PWM output will appear smoothed out and may not even reach VCC, potentially causing a number of problems.

Arguments

- **freq:** A number representing the frequency in Hz, between 40 and 1600

Example

The following code will set the PWM frequency to 1000Hz:

[Download File](#)

[Copy Code](#)

```
pwm.setPWMFreq(1000)
```

setPWM(channel, on, off)

Description

This function sets the start (on) and end (off) of the high segment of the PWM pulse on a specific channel. You specify the 'tick' value between 0..4095 when the signal will turn on, and when it will turn off. Channel indicates which of the 16 PWM outputs should be updated with the new values.

Arguments

- **channel:** The channel that should be updated with the new values (0..15)
- **on:** The tick (between 0..4095) when the signal should transition from low to high
- **off:** the tick (between 0..4095) when the signal should transition from high to low

Example

The following example will cause channel 15 to start low, go high around 25% into the pulse (tick 1024 out of 4096), transition back to low 75% into the pulse (tick 3072), and remain low for the last 25% of the pulse:

[Download File](#)

[Copy Code](#)

```
pwm.setPWM(15, 1024, 3072)
```

Using as GPIO

There's also some special settings for turning the pins fully on or fully off

You can set the pin to be fully on with

```
pwm.setPWM(pin, 4096, 0);
```

You can set the pin to be fully off with

```
pwm.setPWM(pin, 0, 4096);
```


Python & CircuitPython

It's easy to use the PCA9685 driver with Python or CircuitPython and the [Adafruit CircuitPython PCA9685](#) module. This module allows you to easily write Python code that control servos and PWM with this breakout.

You can use this driver board with any CircuitPython microcontroller board or with a computer that has GPIO and Python [thanks to Adafruit_Blinka, our CircuitPython-for-Python compatibility library](#).

CircuitPython Microcontroller Wiring

First wire up a PCA9685 to your board exactly as shown on the previous pages for Arduino. Here's an example of wiring a Feather M0 to the driver board with I2C:

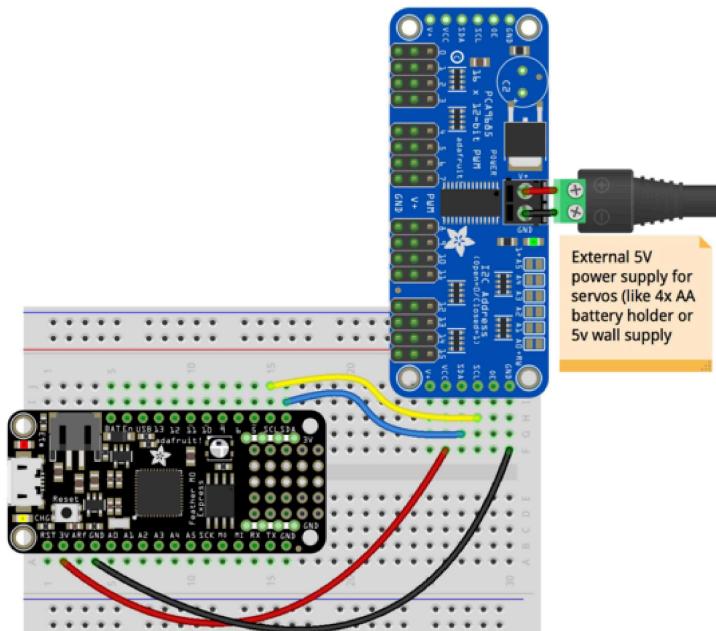


- **Board 3V to driver VCC**
- **Board GND to driver GND**
- **Board SCL to driver SCL**

- Board SDA to driver SDA

Python Computer Wiring

Since there's *dozens* of Linux computers/boards you can use we will show wiring for Raspberry Pi. For other platforms, [please visit the guide for CircuitPython on Linux to see whether your platform is supported](#).

Here's the Raspberry Pi wired with I2C:

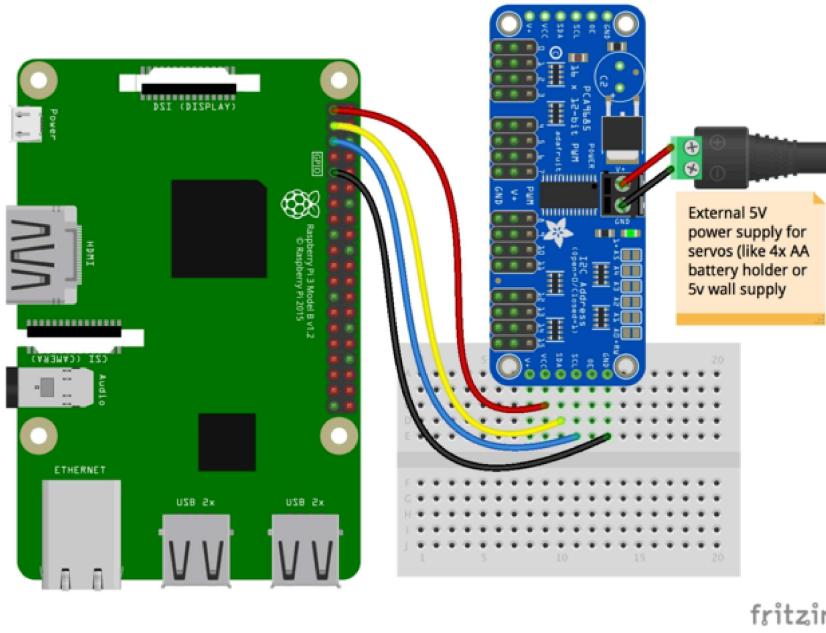

fritzing

-

- Pi 3V3 to driver VCC
- Pi GND to driver GND
- Pi SCL to driver SCL
- Pi SDA to driver SDA

Don't try to power your servos from the RasPi or Linux board's 5V power, you can easily cause a power supply brown-out and mess up your Pi! Use a separate 5v 2A or 4A adapter



[5V 2A \(2000mA\) switching power supply - UL Listed](#)

This is an FCC/CE certified and UL listed power supply. Need a lot of 5V power? This switching supply gives a clean regulated 5V output at up to 2000mA. 110 or 240 input, so it works...

\$7.95

In Stock

[Add to Cart](#)



[5V 4A \(4000mA\) switching power supply - UL Listed](#)

Need a lot of 5V power? This switching supply gives a clean regulated 5V output at up to 4 Amps (4000mA). 110 or 240 input, so it works in any country. The plugs are "US..."

\$14.95

In Stock

[Add to Cart](#)

CircuitPython Installation of PCA9685 and ServoKit Libraries

You'll need to install the [Adafruit CircuitPython PCA9685](#) library on your CircuitPython board.

First make sure you are running the [latest version of Adafruit CircuitPython](#) for your board.

Next you'll need to install the necessary libraries to use the hardware--carefully follow the steps to find and install these libraries from [Adafruit's CircuitPython library bundle](#). Our CircuitPython starter guide has [a great page on how to install the library bundle](#).

For non-express boards like the Trinket M0 or Gemma M0, you'll need to manually install the necessary libraries from the bundle:

- `adafruit_pca9685.mpy`
- `adafruit_bus_device`
- `adafruit_register`
- `adafruit_motor`
- `adafruit_servokit.mpy`

Before continuing make sure your board's lib folder or root filesystem has the `adafruit_pca9685.mpy`, `adafruit_register`, `adafruit_servokit.mpy`, `adafruit_motor` and `adafruit_bus_device` files and folders copied over.

Next [connect to the board's serial REPL](#) so you are at the CircuitPython >>> prompt.

Python Installation of PCA9685 and ServoKit Libraries

You'll need to install the Adafruit_Blinka library that provides the CircuitPython support in Python. This may also require enabling I2C on your platform and verifying you are running Python 3. [Since each platform is a little different, and Linux changes often, please visit the CircuitPython on Linux guide to get your computer ready!](#)

Once that's done, from your command line run the following commands:

- `sudo pip3 install adafruit-circuitpython-pca9685`
- `sudo pip3 install adafruit-circuitpython-servokit`

If your default Python is version 3 you may need to run 'pip' instead. Just make sure you aren't trying to use CircuitPython on Python 2.x, it isn't supported!

CircuitPython & Python Usage

The following section will show how to control the PCA9685 from the board's Python prompt / REPL. You'll learn how to interactively control servos and dim LEDs by typing in the code below.

Dimming LEDs


Run the following code to import the necessary modules and initialize the I2C connection with the driver board:

[Download File](#)
[Copy Code](#)

```
import board
import busio
import adafruit_pca9685
i2c = busio.I2C(board.SCL, board.SDA)
pca = adafruit_pca9685.PCA9685(i2c)
```

Each channel of the PCA9685 can be used to control the brightness of an LED. The PCA9685 generates a high-speed PWM signal which turns the LED on and off very quickly. If the LED is turned on longer than turned off it will appear brighter to your eyes.

First wire a LED to the board as follows. Note you don't need to use a resistor to limit current through the LED as the PCA9685 will limit the current to around 10mA:

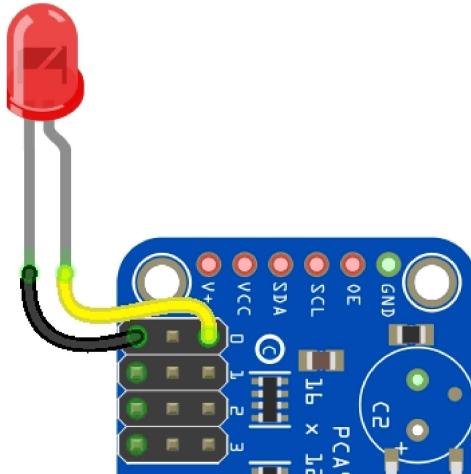

- LED cathode / shorter leg to PCA9685 channel GND / ground.
- LED anode / longer leg to PCA9685 channel PWM.

The PCA9685 class provides control of the PWM frequency and each channel's duty cycle. Check out the [PCA9685 class documentation](#) for more details.

For dimming LEDs you typically don't need to use a fast PWM signal frequency and can set the board's PWM frequency to 60hz by setting the **frequency** attribute:

[Download File](#)
[Copy Code](#)

```
pca.frequency = 60
```

The PCA9685 supports 16 separate channels that share a frequency but can have independent duty cycles. That way you could dim 16 LEDs separately!

The PCA9685 object has a **channels** attribute which has an object for each channel that can control the duty cycle. To get the individual channel use the [] to index into **channels**.

[Download File](#)
[Copy Code](#)

```
led_channel = pca.channels[0]
```

Now control the LED brightness by controlling the duty cycle of the channel connected to the LED. The duty cycle value should be a 16-bit value, i.e. 0 to 0xffff, which represents what percent of the time the signal is on vs. off. A value of 0xffff is 100% brightness, 0 is 0% brightness, and in-between values go from 0% to 100% brightness.

For example set the LED completely on with a duty cycle of 0xffff:

[Download File](#)
[Copy Code](#)

```
led_channel.duty_cycle = 0xffff
```

After running the command above you should see the LED light up at full brightness!

Now turn the LED off with a duty cycle of 0:

[Download File](#)
[Copy Code](#)

```
led_channel.duty_cycle = 0
```

Try an in-between value like 1000:

[Download File](#)
[Copy Code](#)

```
led_channel.duty_cycle = 1000
```

You should see the LED dimly lit. Try experimenting with other duty cycle values to see how the LED changes brightness!

For example make the LED glow on and off by setting **duty_cycle** in a loop:

[Download File](#)
[Copy Code](#)

```
# Increase brightness:  
for i in range(0xffff):  
    led_channel.duty_cycle = i  
  
# Decrease brightness:  
for i in range(0xffff, 0, -1):  
    led_channel.duty_cycle = i
```

These for loops take a while because 16-bits is a lot of numbers. **CTRL-C** to stop the loop from running and return to the REPL.

Full Example Code[Download Project Bundle](#)[Copy Code](#)

```
# SPDX-FileCopyrightText: 2021 ladyada for Adafruit Industries
# SPDX-License-Identifier: MIT

# Outputs a 50% duty cycle PWM single on the 0th channel.
# Connect an LED and resistor in series to the pin
# to visualize duty cycle changes and its impact on brightness.

import board
from adafruit_pca9685 import PCA9685

# Create the I2C bus interface.
i2c = board.I2C() # uses board.SCL and board.SDA
# i2c = busio.I2C(board.GP1, board.GP0) # Pi Pico RP2040

# Create a simple PCA9685 class instance.
pca = PCA9685(i2c)

# Set the PWM frequency to 60hz.
pca.frequency = 60

# Set the PWM duty cycle for channel zero to 50%. duty_cycle is 16 bits to match other PWM objects
# but the PCA9685 will only actually give 12 bits of resolution.
pca.channels[0].duty_cycle = 0x7FFF
```


[View on GitHub](#)**Controlling Servos**

We've written a handy CircuitPython library for the various PWM/Servo kits called [Adafruit CircuitPython ServoKit](#) that handles all the complicated setup for you. All you need to do is import the appropriate class from the library, and then all the features of that class are available for use.

We're going to show you how to import the `ServoKit` class and use it to control servo motors with the Adafruit 16-channel breakout.

If you aren't familiar with servos be sure to first read this [intro to servos page](#) and this [in-depth servo guide page](#).

First connect the servo to channel 0 on the PCA9685. Here is an example of a servo connected to channel 0:

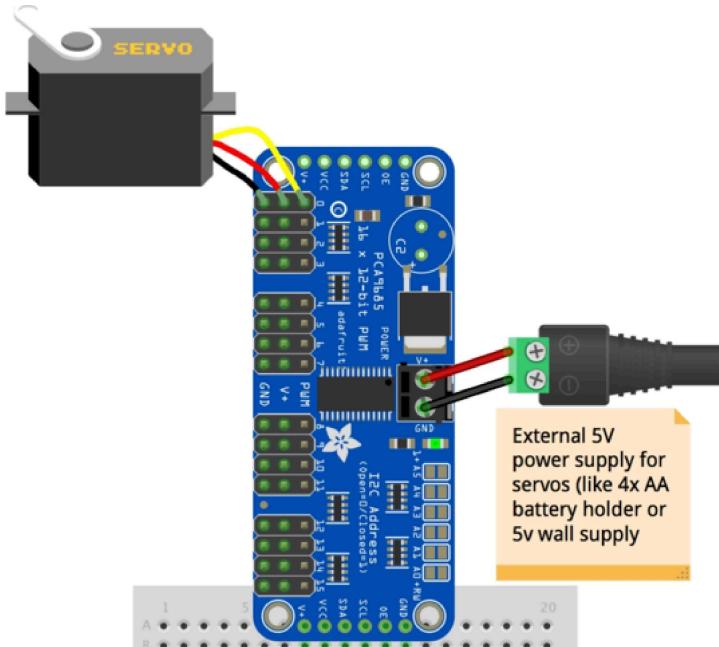

- Servo orange wire to breakout PWM on channel 0
- Servo red wire to breakout V+ on channel 0
- Servo brown wire to breakout Gnd on channel 0

Check your servo data sheet to verify how to connect it!

Be sure you've turned on or plugged in the external 5V power supply to the PCA9685 board too!

First you'll need to import and initialize the `ServoKit` class. You must specify the number of channels available on your board. The breakout has 16 channels, so when you create the class object, you will specify 16.

[Download File](#)[Copy Code](#)

```
from adafruit_servokit import ServoKit
kit = ServoKit(channels=16)
```

Now you're ready to control both standard and continuous rotation servos.

Standard Servos

To control a standard servo, you need to specify the channel the servo is connected to. You can then control movement by setting `angle` to the number of degrees.

By default the Servo class will use actuation range, minimum pulse-width, and maximum pulse-width values that should work for most servos. However [check the Servo class documentation](#) for more details on extra parameters to customize the signal generated for your servos.

[Download File](#)
[Copy Code](#)

```
import adafruit_motor.servo
servo = adafruit_motor.servo.Servo(servo_channel)
```

With Servo, you specify a position as an angle. The angle will always be between 0 and the actuation range given when Servo was created. The default is 180 degrees but your servo might have a smaller sweep--change the total angle by specifying the `actuation_angle` parameter in the Servo class initializer above.

Now set the angle to 180, one extreme of the range:

[Download File](#)
[Copy Code](#)

```
kit.servo[0].angle = 180
```

To return the servo to 0 degrees:

[Download File](#)
[Copy Code](#)

```
kit.servo[0].angle = 0
```

With a standard servo, you specify the position as an angle. The angle will always be between 0 and the actuation range. The default is 180 degrees but your servo may have a smaller sweep. You can change the total angle by setting `actuation_range`.

For example, to set the actuation range to 160 degrees:

[Download File](#)
[Copy Code](#)

```
servokit.servo[0].actuation_range = 160
```

Often the range an individual servo recognises varies a bit from other servos. If the servo didn't sweep the full expected range, then try adjusting the minimum and maximum pulse widths using `set_pulse_width_range(min_pulse, max_pulse)`.

To set the pulse width range to a minimum of 1000 and a maximum of 2000:

[Download File](#)
[Copy Code](#)

```
kit.servo[0].set_pulse_width_range(1000, 2000)
```

That's all there is to controlling standard servos with the PCA9685 breakout, Python and ServoKit!

Continuous Rotation Servos

To control a continuous rotation servo, you must specify the channel the servo is on. Then you can control movement using `throttle`.

For example, to start the continuous rotation servo connected to channel 1 to full throttle forwards:

[Download File](#)
[Copy Code](#)

```
kit.continuous_servo[1].throttle = 1
```

To start the continuous rotation servo connected to channel 1 to full reverse throttle:

[Download File](#)
[Copy Code](#)

```
kit.continuous_servo[1].throttle = -1
```

To set half throttle, use a decimal:

[Download File](#)
[Copy Code](#)

```
kit.continuous_servo[1].throttle = 0.5
```

And, to stop continuous rotation servo movement set `throttle` to 0:

[Download File](#)
[Copy Code](#)

```
kit.continuous_servo[1].throttle = 0
```

That's all there is to controlling continuous rotation servos with the PCA9685 16-channel breakout, Python and ServoKit!

Full Example Code

[Download Project Bundle](#)
[Copy Code](#)

```
# SPDX-FileCopyrightText: 2021 ladyada for Adafruit Industries
# SPDX-License-Identifier: MIT

"""Simple test for a standard servo on channel 0 and a continuous rotation servo on channel 1."""


```

```

import time
from adafruit_servokit import ServoKit

# Set channels to the number of servo channels on your kit.
# 8 for FeatherWing, 16 for Shield/HAT/Bonnet.
kit = ServoKit(channels=8)

kit.servo[0].angle = 180
kit.continuous_servo[1].throttle = 1
time.sleep(1)
kit.continuous_servo[1].throttle = -1
time.sleep(1)
kit.servo[0].angle = 0
kit.continuous_servo[1].throttle = 0

```


[View on GitHub](#)

Downloads


Files

- [PCA9685 datasheet](#)
- [Arduino driver library](#)
- [EagleCAD PCB files on GitHub](#)
- [3D models on GitHub](#)
- [Fritzing object in the Adafruit Fritzing library](#)

Schematic & Fabrication Print

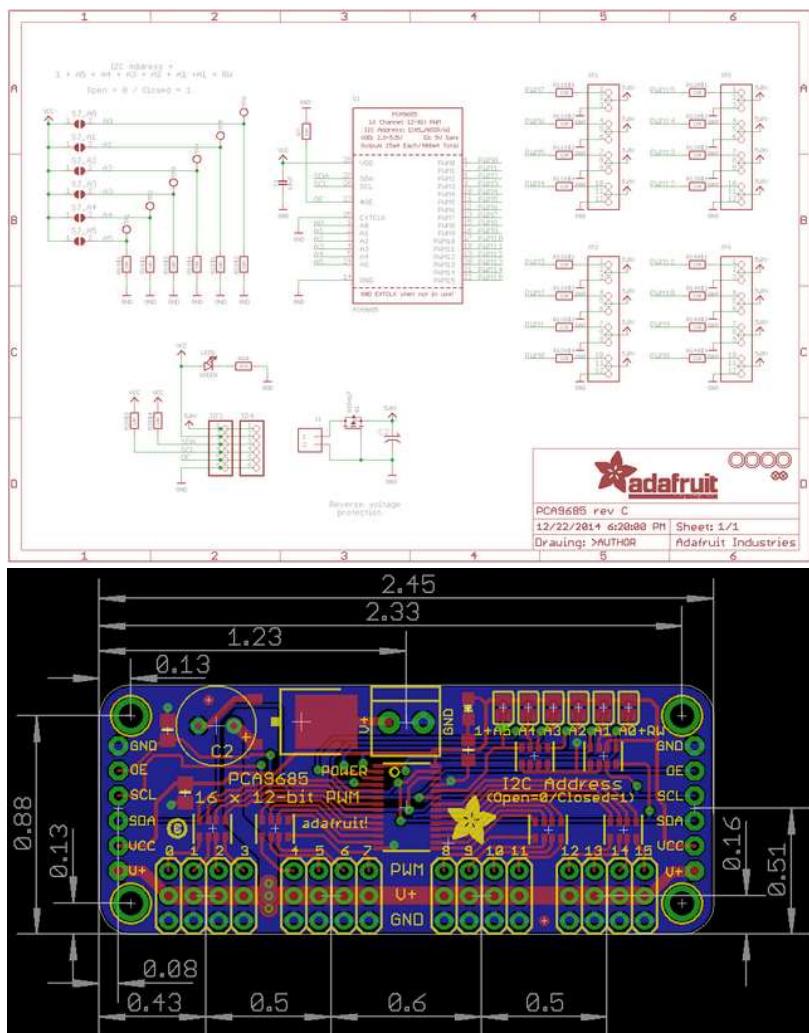

Holes are 2.5mm diameter

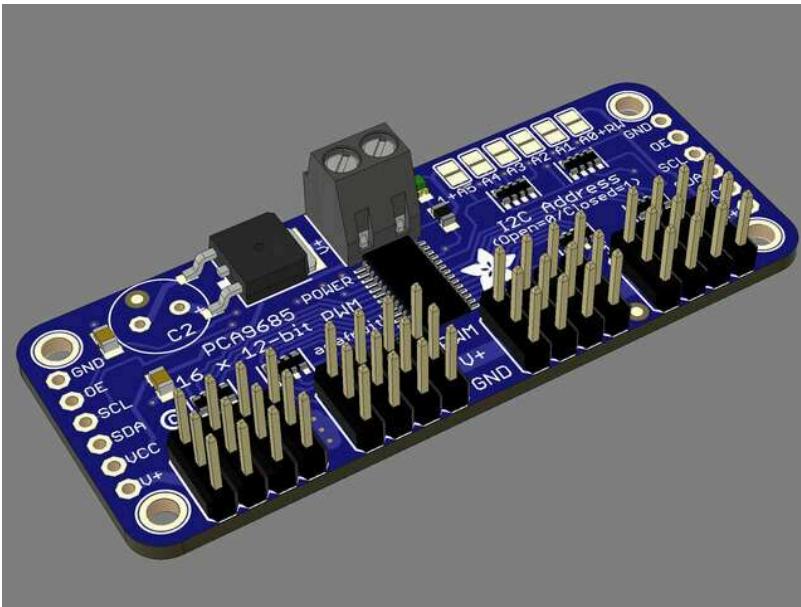

FAQ

Can this board be used for LEDs or just servos?

It can be used for LEDs as well as any other PWM-able device!

I am having strange problems when combining this shield with the Adafruit LED Matrix/7Seg Backpacks

The PCA9865 chip has an "All Call" address of 0x70. This is in addition to the configured address. Set the backpacks to address 0x71 or anything other than the default 0x70 to make the issue go away.

With LEDs, how come I cant get the LEDs to turn completely off?

If you want to turn the LEDs totally off use (in Arduino) `setPWM(pin, 0, 4096);` not `setPWM(pin, 0, 4095);`

This guide was first published on Oct 16, 2012. It was last updated on Aug 15, 2024.

Difficulty: Beginner

Guide Type: Product

Products:

Contributors: [Bill Earl](#), [ladyada](#), [Kattni Rembor](#)

Categories: [Adafruit Products](#)

[Robotics & CNC](#)

[Breakout Boards](#)

146 Saves

Featured Products




[Micro servo](#)

\$5.95


[Add to Cart](#)

[Standard servo - TowerPro SG-5010](#)

\$12.00

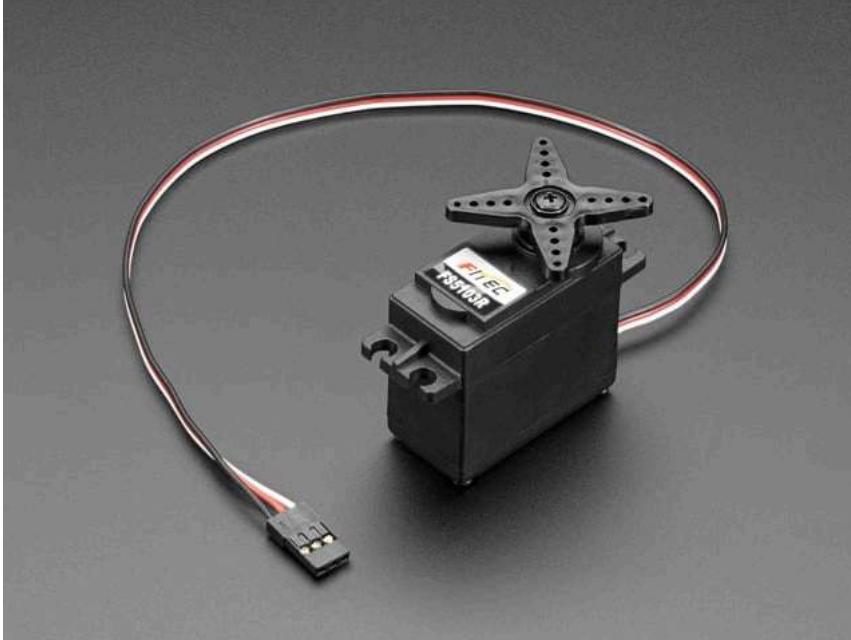
[Add to Cart](#)[Continuous Rotation Servo](#)

\$11.95

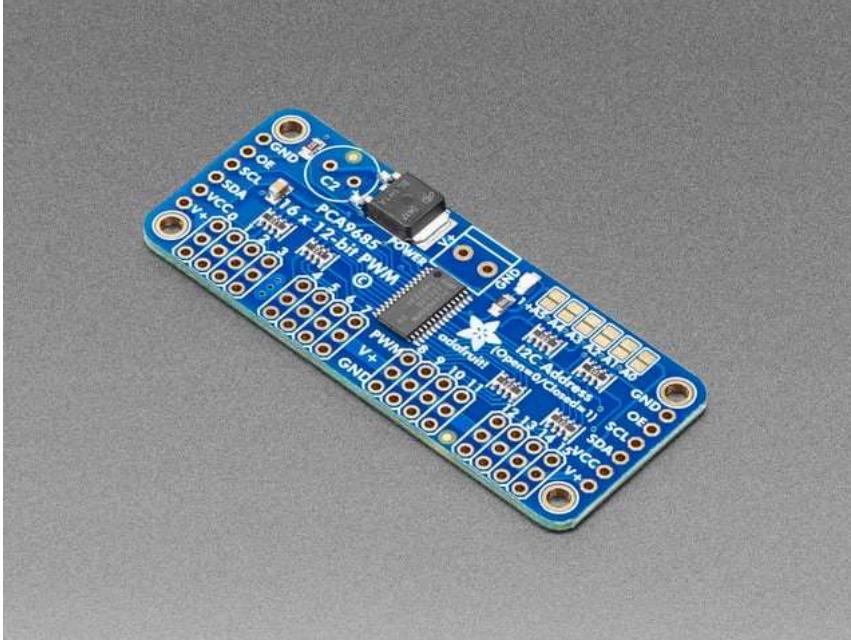[Add to Cart](#)

[Adafruit 16-Channel 12-bit PWM/Servo Driver - I2C interface](#)

\$14.95

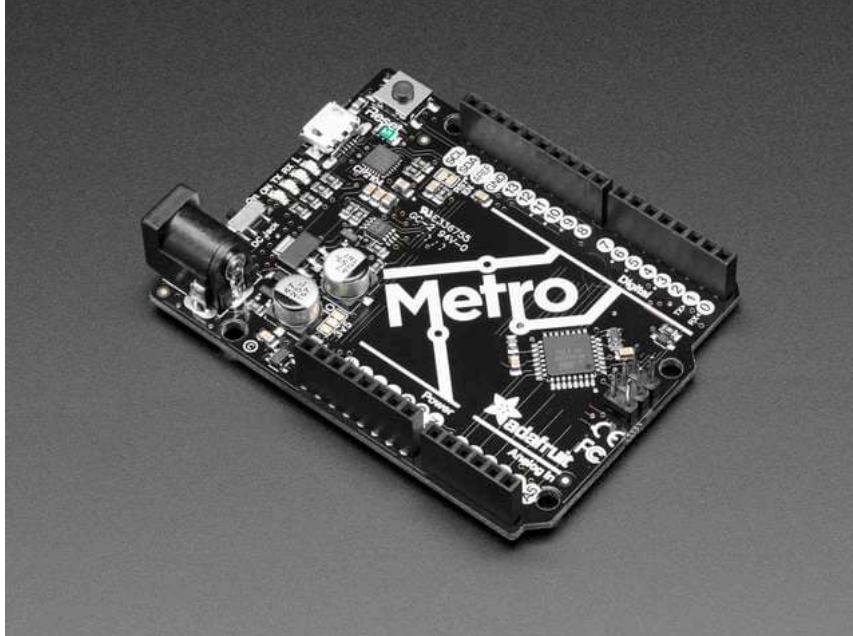
[Add to Cart](#)[Adafruit METRO 328 Fully Assembled - Arduino IDE compatible](#)

Out of Stock

Related Guides

Temperature

Last updated a few seconds ago

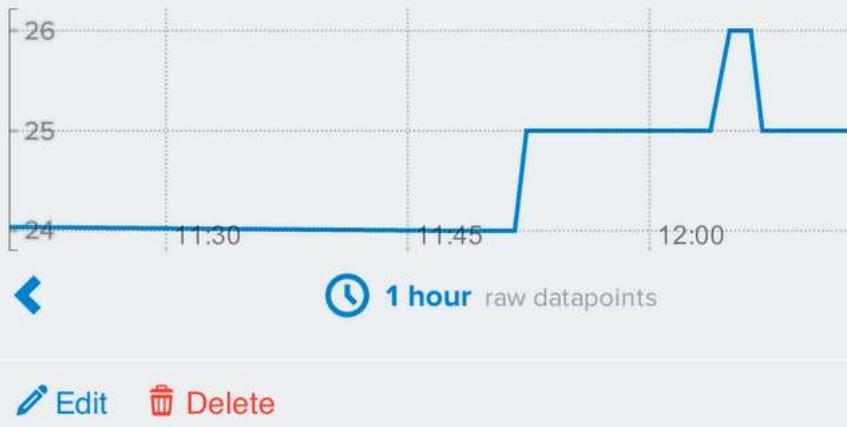[Adafruit CC3000 WiFi and Xively](#)By [M. Schwartz](#)

3

Beginner

[Smart Cocktail Shaker](#)By [Tony DiCola](#)


19

Beginner

[Arduino Lesson 11. LCD Displays - Part 1](#)By [Simon Monk](#)


61

Beginner

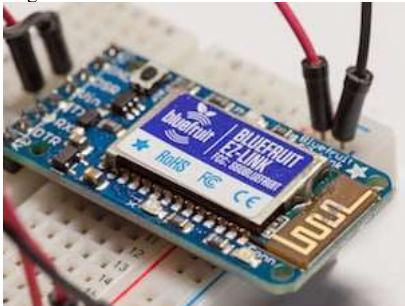[Bluetooth Temperature & Humidity Sensor](#)By [M. Schwartz](#)

34

Intermediate

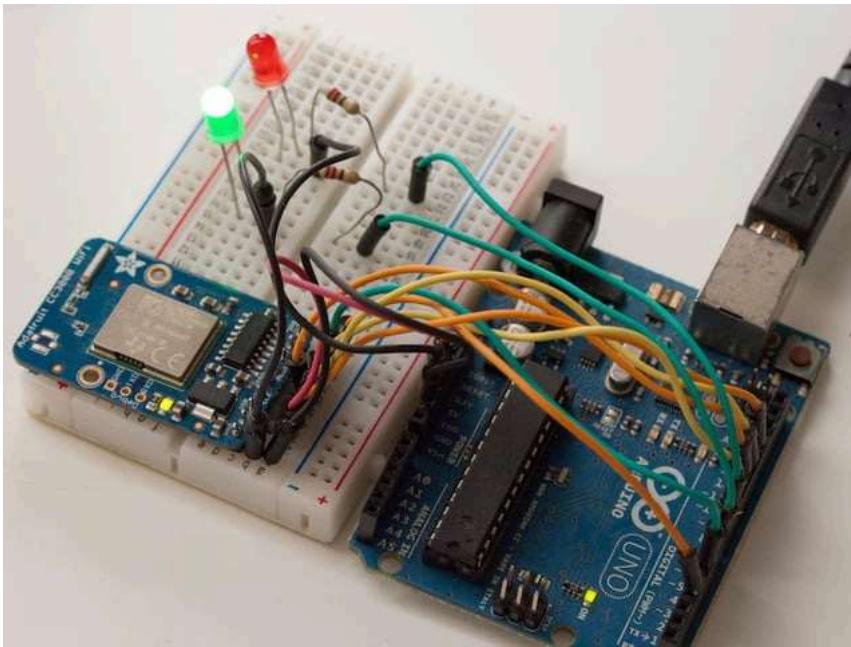


[A REST API for Arduino & the CC3000 WiFi Chip](#)

By [M. Schwartz](#)

24

Beginner

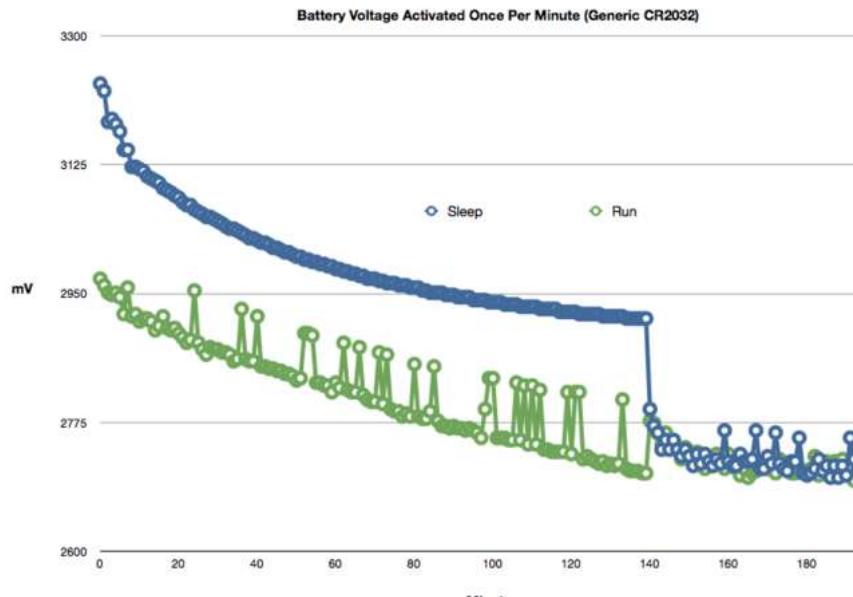

[Low Power Coin Cell Voltage Logger](#)

By [Phillip Burgess](#)

17

Beginner

A 0.96" mini Color OLED breakout board with color bars on the display.

[0.96" mini Color OLED](#)

By [ladyada](#)

22

Beginner

Adafruit 1.27" and 1.5" Color OLED Breakout Board

[Adafruit 1.27" and 1.5" Color OLED Breakout Board](#)

By [Bill Earl](#)

36

Beginner

Updated

top angle view of the ftdi friend

[FTDI Friend](#)

By [ladyada](#)

47

Beginner

[Adafruit 4-Channel ADC Breakouts](#)

By [Liz Clark](#)

80

Beginner

Updated

A 8x2 LCD Shield display on an Arduino Uno size shield proto board

[DIY 8x2 LCD Shield](#)

By [ladyada](#)

8

Beginner



Trellis 3D Printed Enclosure

[Trellis 3D Printed Enclosure](#)

By Ruiz Brothers

22

Beginner

[RGB LED Matrix Basics](#)

By Phillip Burgess

146

Beginner

[DS1307 Real Time Clock Breakout Board Kit](#)

By Tyler Cooper

47

Intermediate

[Arduino Lesson 4. Eight LEDs and a Shift Register](#)

By Simon Monk

97

Beginner

OUT OF STOCK NOTIFICATIONYOUR NAME YOUR EMAIL [NOTIFY ME](#)

Search

Search

Categories

No results for query

- «
- <
- 1
- >
- »

- [Contact Us](#)
- [Tech Support Forums](#)
- [FAQs](#)
- [Shipping & Returns](#)
- [Freebies](#)
- [Terms of Service](#)
- [Privacy & Legal](#)
- [Website Accessibility](#)

- [About Us](#)
- [Press](#)
- [Educators](#)
- [Distributors](#)
- [Jobs](#)
- [Gift Cards](#)

"This is not the age of pamphleteers. It is the age of engineers. The spark-gap is mightier than the pen"

[Lancelot Hogben](#)