


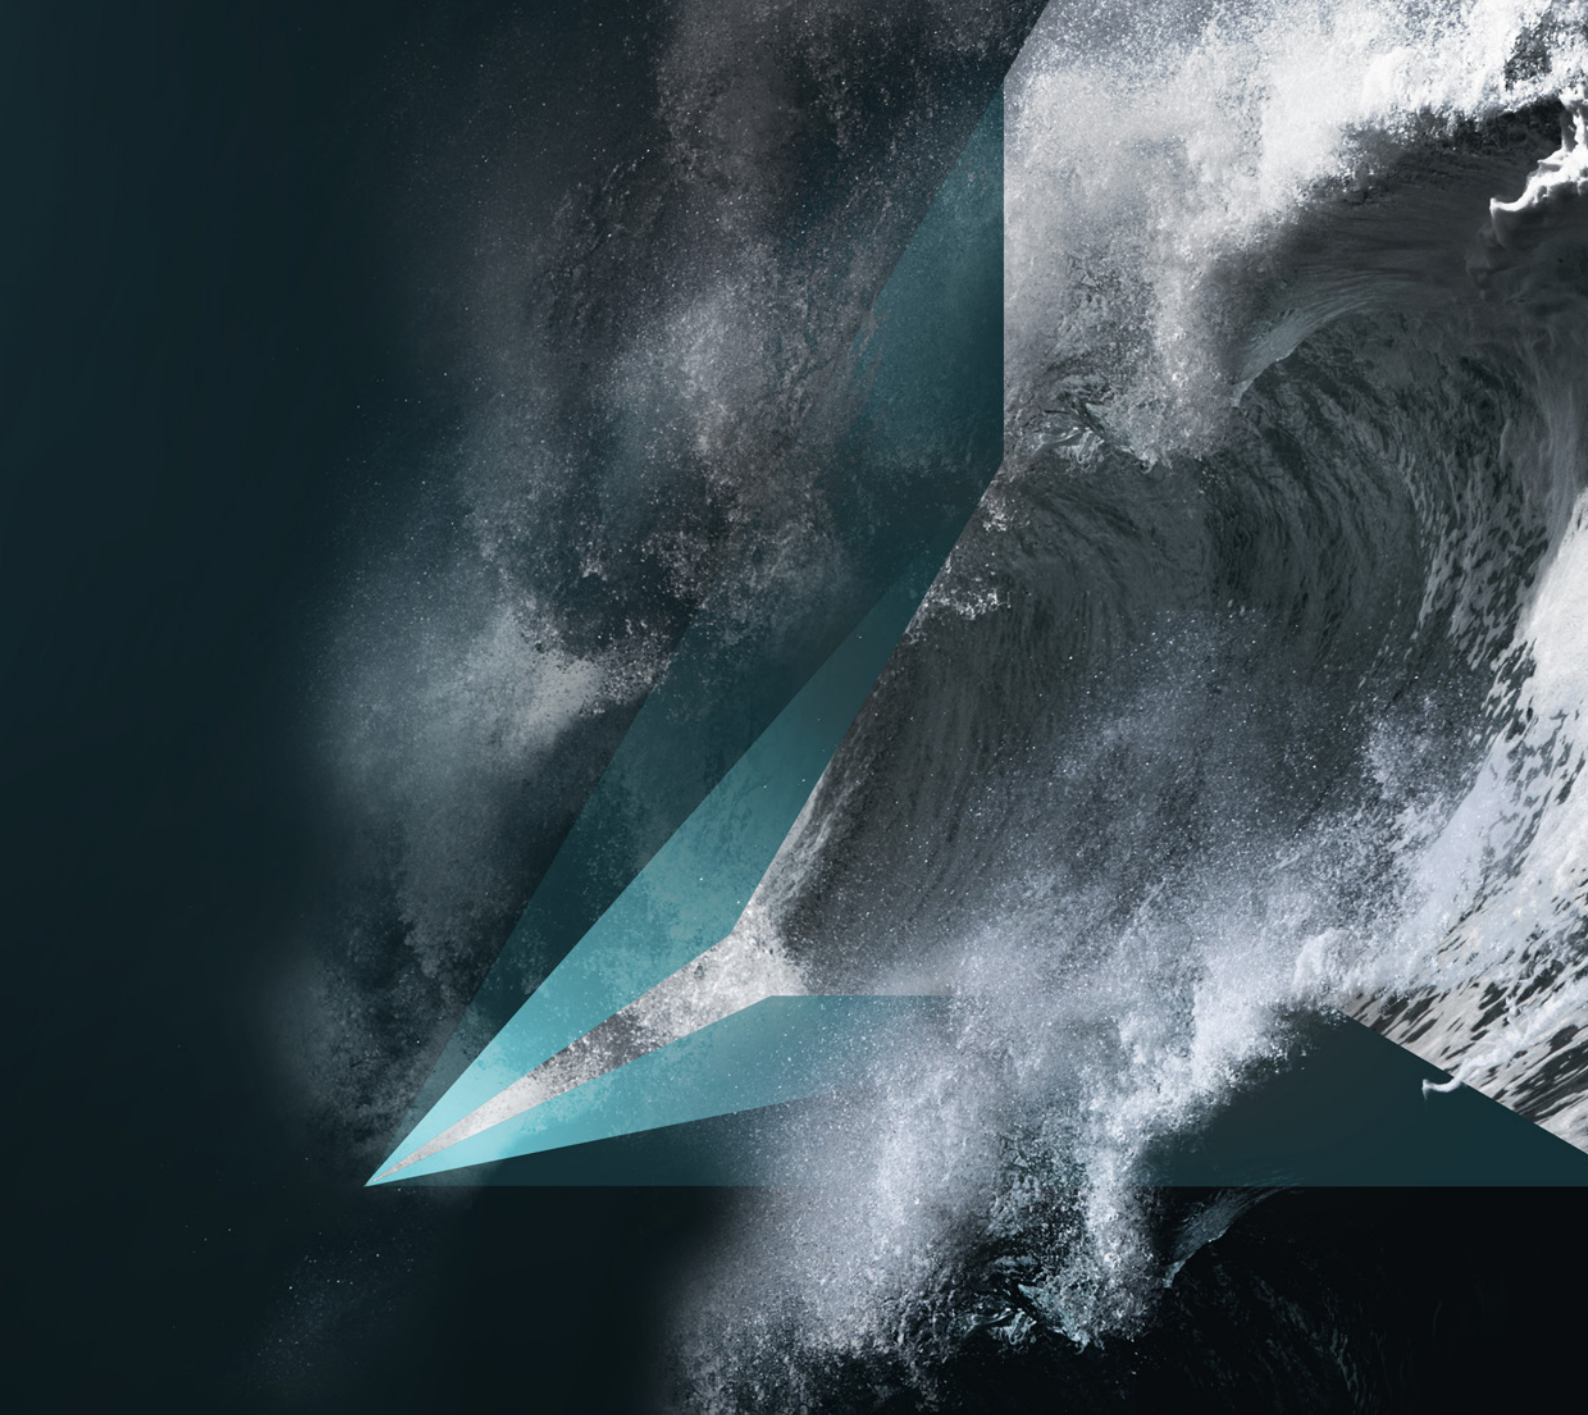

SWIFT SURVIVOR RECOVERY SYSTEM

Operators Maintenance Manual

Document number PN/SWI/003-00

Version 1.0

ZEIM

MANAGEMENT CONTROL

DATE	DOCUMENT REFERENCE	VER NO.
16/03/26	SWIFT Operators Maintenance Manual PN/SWI/003-00	1.0

	NAME	POSITION	COMPANY	DATE	SIGNED
AUTHOR	P. O'Mara	Principal Support Engineer	Zelim	16/03/26	
REVIEWER	D. Green	Engineering Operations Manager	Zelim	16/03/26	
APPROVER	S. Gregory	COO	Zelim	16/03/26	

PERMANENT REVISION LIST

Revisions or amendments embodied in this manual, that are certified by an approved organisation, other than that applicable to this initial certification must be recorded on separate record sheets.

DATE	COMMENT	BY	VER NO.

LIST OF SERVICE BULLETINS

On receipt of a Service Bulletin (SB) that is associated with this manual, maintenance personnel may hand amend this list to record the receipt of the SB. Once the contents of the SB are incorporated into the manual it will be permanently added to this list.

SB NO.	DATE	COMMENT	INCORPORATED	
			ISSUE	DATE

LIST OF SERVICE NEWSLETTERS

On receipt of a Service Newsletter (SN) that is associated with this manual, maintenance personnel may hand amend this list to record the receipt of the SN. Once the contents of the SN are incorporated into the manual it will be permanently added to this list.

SN NO.	DATE	COMMENT	INCORPORATED	
			ISSUE	DATE

CONTENTS

1	Introduction	7	5	Inspection and maintenance procedures	17
1.1	General	7	5.1	Before-use inspection	17
1.2	Structure of the manual	8	5.2	Monthly maintenance	18
1.3	Warnings, cautions and notes	8	5.3	Unscheduled maintenance	20
1.4	Health and safety	8			
1.5	Acronyms and abbreviations	9			
1.6	List of changes	9			
2	Leading particulars	10	6	Testing	22
2.1	SWIFT reference views	10	6.1	Functional testing	22
2.2	SWIFT technical particulars	11	6.2	Abnormal findings	23
2.3	Manual winch particulars	12			
3	Maintenance schedule	13	Appendices		24
3.1	Maintenance matrix	13	A	Monthly maintenance record	25
			B	Unscheduled maintenance record	28
4	Cleaning	14			
4.1	Equipment	14			
4.2	Post-use and monthly cleaning	14			
4.3	Component level cleaning	15			

1 INTRODUCTION

This chapter defines the purpose and structure of the SWIFT Operators Maintenance Manual.

1.1 General

- A** This manual contains instructions for operator-level maintenance of the SWIFT Survivor Recovery System when installed on a marine vessel.
- B** This manual shall be used by vessel personnel responsible for carrying out routine cleaning, inspection, and basic maintenance activities intended to preserve the condition and operational readiness of the SWIFT in a marine environment.
- C** The maintenance activities described in this manual are limited to operator-level tasks. These activities do not replace scheduled annual or 30-month depth maintenance carried out by Zelim or an endorsed maintenance organisation in accordance with the SWIFT Maintenance Manual (PN/SWI/011-00).
- D** Unscheduled maintenance shall only be undertaken following consultation with Zelim or an endorsed maintenance organisation. Any guidance provided shall be recorded in accordance with this manual.
- E** A record of all maintenance activities shall be maintained by vessel personnel and retained as part of the vessel's maintenance records. Records relating to unscheduled maintenance undertaken following guidance from Zelim or an endorsed maintenance organisation shall be retained with the associated guidance and supporting evidence.
- F** Zelim is the Design Authority for the SWIFT. The Company has developed this equipment and its associated regulatory procedures to ensure reliable operation under all climatic, weather, and operational conditions. While comments intended to improve the efficiency of maintenance procedures are always welcome, no changes to these procedures may be made without Zelim's prior approval. Unauthorised modifications may cause the equipment to malfunction and may also void the equipment's approval.
- G** This manual is the copyright of Zelim Limited. It is supplied in confidence and shall not be used for any purpose other than that for which it is provided. This manual shall not be reproduced, in whole or in part, without the prior permission of Zelim Limited.

1.2 Structure of the manual

A Chapters and page numbers

- 1 Chapters are assigned to each main topic within this manual.
- 2 Auxiliary sections, such as appendices, are also included.

B Record of revisions

- 1 All issues of this manual are recorded in the Permanent Revision List.
- 2 Any changes from the previous issue shall be shown in **red text**. The start and end of a change will be marked by red pointers > <. Text deleted from the previous issue will also be indicated by start and end red pointers.
- 3 All amendments shall be summarised in Section 1.6 – List of Changes.

1.3 Warnings, cautions and notes

<u>WARNING</u>	<u>A warning calls attention to a procedure which if incorrectly performed is liable to cause injury or death to personnel.</u>
<u>CAUTION</u>	<u>A caution calls attention to a procedure which if incorrectly performed is liable to cause damage to the equipment or its components.</u>
<u>NOTE</u>	<u>A note calls attention to methods or important information.</u>

1.4 Health and safety

- A Personnel responsible for the maintenance of the SWIFT shall ensure that adequate safety precautions are observed during all maintenance and related activities.
- B Zelim shall not, by virtue of these instructions, be deemed to have assumed any responsibilities of the Service Agent or Operator under the Health and Safety at Work etc. Act 1974 or any related legislation.
- C Hands, clothing, tools, and loose equipment shall be kept clear of moving components at all times.

1.5 Acronyms and abbreviations

AC. / ABRV.	MEANING	AC. / ABRV.	MEANING
A/R	As required	LP	Locally purchased
Approx	Approximately	mm	Millimetre
cm	Centimetre	MOB	Man overboard
EP	Extreme pressure	m/s	Metres per second
Fig	Figure	No	Number
IAW	In accordance with	Qty	Quantity
In situ	In situation	Rev	Revision
Intro	Introduction	SB	Service bulletin
IP	Ingress Protection rating	SN	Service newsletter
kg	Kilogram	TBA	To be agreed
LM	Locally manufactured		

1.6 List of changes

CHAPTER	PAGE	DESCRIPTION	REASON

2 LEADING PARTICULARS

This chapter provides general identification information and principal characteristics of the SWIFT Survivor Recovery System relevant to operator-level maintenance.

2.1 SWIFT reference views

- A Typical views of the SWIFT assembly and major components are illustrated in Figures 1 to 4. These figures show representative orientations of the unit for identification and reference purposes only.



Fig 1 SWIFT front view

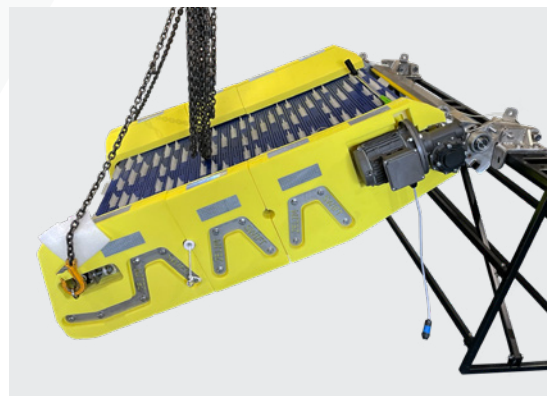


Fig 2 SWIFT side view (motor side)

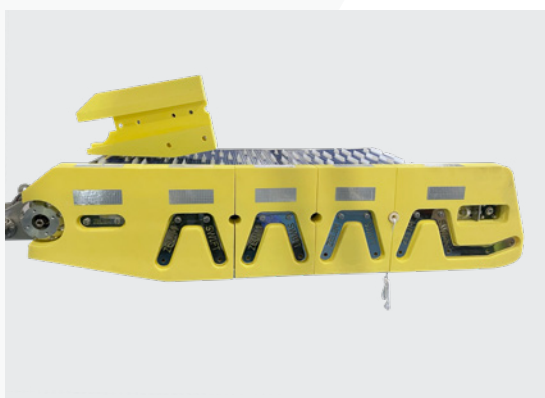


Fig 3 SWIFT side view (non-motor side)



Fig 4 SWIFT rear view

2.2 SWIFT technical particulars

Dimensions

Length	1986 mm
Width	1739 mm
Height	420 mm

Weight

SWIFT	≈ 175 kg
-------	----------

Inputs

Power supply	230 V AC, 50 Hz, 0.75 kW
--------------	--------------------------

Other

Safe working load	137 kg
Recovery angle	≤ 40°

2.3 Manual winch particulars

A SWK-LB-250-4-20M (obsolete)

Hand-operated stainless steel winch with automatic ratchet stop in both directions.

Dimensions

Length	232 mm
Width	155 mm
Height	175 mm

Weight ≈5.6 kg

Other

Rope supplied 8 mm Dyneema®¹

B SWK-LB-650-6-20M

Hand operated stainless steel winch with automatic ratchet stop in both directions.

Dimensions

Length	273 mm
Width	192 mm
Height	210 mm

Weight ≈9 kg

Other

Rope supplied 8 mm Dyneema®¹

¹ Rope length is determined during commissioning to suit the vessel specification.

3 MAINTENANCE SCHEDULE

This chapter defines the operator-level maintenance requirements for the SWIFT, including before-use inspection, post-use cleaning, monthly inspection, and unscheduled maintenance undertaken following consultation with Zelim or an endorsed maintenance organisation. All maintenance shall be performed in accordance with the instructions contained in this manual.

- A** Operator-level maintenance shall consist of before-use inspection, post-use cleaning, monthly inspection and maintenance, and unscheduled maintenance undertaken following consultation with Zelim or an endorsed maintenance organisation.
- B** Scheduled annual and 30-month depth maintenance shall be carried out by Zelim and/or an endorsed maintenance organisation in accordance with the SWIFT Maintenance Manual (PN/SWI/011-00). Operator-level maintenance does not replace these scheduled maintenance activities.
- C** If any defect is identified during operator-level maintenance which may affect the safe operation of the SWIFT, the system shall be taken out of service and reported to Zelim at swift.support@zelim.com and/or an endorsed maintenance organisation.

3.1 Maintenance matrix

The SWIFT shall be maintained in accordance with the outlined maintenance matrix (Table 1).

✓ **Table 1** Maintenance matrix

MAINTENANCE ACTIVITY	CONDUCTED BY	PAPERWORK
Before-use inspection	Operator	Not required
Post-use cleaning	Operator	Not required
Monthly maintenance	Operator	Monthly Maintenance Record (Appendix A) completed
Unscheduled maintenance	Operator under guidance / Zelim / endorsed maintenance organisation	Unscheduled Maintenance Record (Appendix B) completed

4 CLEANING

This chapter details the procedures and equipment required to clean the SWIFT and its components. All cleaning shall be performed using the specified materials and methods to prevent damage and ensure continued operational reliability.

NOTE Opening the electrical control box and any internal inspection or work shall be carried out by Zelim or an endorsed maintenance organisation only, and by a suitably qualified marine engineer.

4.1 Equipment

The SWIFT and its components shall be cleaned using the equipment specified in Table 2.

4.2 Post-use and monthly cleaning

The following cleaning process shall be used to clean the SWIFT and its components following use, or as part of monthly maintenance when the SWIFT has not been used in the previous 30 days.

✓ **Table 2** Cleaning equipment

NOMENCLATURE	SOURCE
Sponge	Locally purchased
Soft brush	Locally purchased

- 1 Rinse the SWIFT with clean water to remove salt deposits and surface contamination.
- 2 Using clean water wash down the external surfaces of the SWIFT using a sponge or soft brush to remove debris and contamination.
- 3 Rinse with clean water and allow the SWIFT to dry naturally.

CAUTION Pressure washers must not be used when cleaning the SWIFT. Damage may be caused to the foam parts, motor and the electrical system.

CAUTION Bleach must not be used when cleaning SWIFT. Damage may be caused to the foam parts and the conveyor belt.

4.3 Component-level cleaning

The following cleaning process shall be used to clean the SWIFT and its components during post-use and monthly maintenance.

4.3.1 Hinge mounting bracket

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.2 Floatation foam moulds

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.3 Conveyor belt

- 1 Hand wash using a sponge / soft brush and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.4 Tension shaft assembly

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.5 Motor and gearbox

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.6 Drive shaft assembly

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.7 Bearing mounting brackets and drive shaft bearings

- 1 Hand wash using a sponge and clean water..
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.8 Stub pivot axles

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.9 Tape switch

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.10 Chassis

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.11 Nylon fairlead

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.12 Winch

- 1 Hand wash using a sponge and clean water.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.13 Electrical box, 3-push-button control box and emergency stop button

- 1 Clean the outer casing and electrical cables using a damp, lint-free cloth.
- 2 Allow the components to dry naturally.

5 INSPECTION AND MAINTENANCE PROCEDURES

This chapter details the operator-level before-use inspection and monthly maintenance procedures, and defines the requirements for unscheduled maintenance undertaken only following consultation with Zelim or an endorsed maintenance organisation.

NOTE Opening the electrical control box (Fig 5) and any internal inspection or work shall be carried out by Zelim or an endorsed maintenance organisation only, and by a suitably qualified marine engineer.



Fig 5 Outside of electrical control box

5.1 Before-use inspection

5.1.1 Overview

- A** A before-use inspection shall be conducted prior to each operation of the SWIFT.
- B** The before-use inspection shall consist of visual and functional checks intended to confirm that the SWIFT appears serviceable, is free from obvious damage or defects, and is safe to operate.
- C** If any defect, damage, abnormal operation, or other condition is identified that may affect the safe operation of the SWIFT, the system shall be taken out of service and reported to Zelim and/or an endorsed maintenance organisation in accordance with this manual.

NOTE The before-use inspection is intended as an operator-level check only and does not replace the monthly maintenance requirements in this chapter.

5.1.2 Before-use inspection process

- 1 Visually inspect the SWIFT, including the conveyor belt, manual winch, and winch rope, for obvious damage, missing components, contamination, corrosion, oil leakage, or other abnormal condition.
- 2 Inspect the tape switch, 3-push-button control box, emergency stop button, and electrical control box for visible damage or signs of water ingress. Confirm that the external red fuse indicator light on the electrical control box is illuminated.
- 3 Operate the SWIFT using the 3-push-button control box and confirm smooth and uniform movement in both directions.
- 4 Confirm that the SWIFT responds correctly to the controls, including stopping as expected.
- 5 With the conveyor belt running, operate the red emergency stop button and confirm the conveyor belt stops immediately.
- 6 Reset the emergency stop and confirm normal operation can be restored.
- 7 With the conveyor belt running, carefully operate the tape switch and confirm the conveyor belt stops immediately.
- 8 Release the tape switch and confirm normal operation can be restored.
- 9 Check that the manual winch operates smoothly and uniformly when spooling in and out.
- 10 Report any defect, damage, or abnormal operation in accordance with this manual.

5.2 Monthly maintenance

5.2.1 Overview

- A Monthly maintenance shall be conducted in situ.
- B Monthly maintenance shall consist of routine inspection and basic maintenance tasks intended to maintain the condition and operational readiness of the SWIFT in a marine environment.
- C When conducting monthly maintenance, record all checks completed and note any observations in Appendix A – Monthly Maintenance Record. Where a defect may affect safe operation, the SWIFT shall be taken out of service and reported in accordance with this manual.

NOTE All electrical maintenance, repair, or component replacement shall be undertaken by a suitably qualified marine engineer.

5.2.2 Monthly pre-maintenance checks

- 1 Confirm the SWIFT is safe to approach and that the surrounding deck area is clear.
- 2 If the SWIFT has been used since the last monthly maintenance, ensure post-use cleaning has been completed in accordance with Chapter 4 – Cleaning.

5.2.3 Monthly maintenance process

- 1 Take clear photographs of the SWIFT in situ and the surrounding installation area and retain them as part of the vessel's maintenance records.
- 2 Ensure monthly cleaning has been carried out in accordance with Chapter 4.2 – Post-use and monthly cleaning.
- 3 Conduct an inspection of the SWIFT and accessories:
 - A Inspect the floatation foam moulds for damage, cracking, or degradation, and confirm all clamps and securing fasteners are present and secure.
 - B Inspect the detachable lifting eyes for damage and security.
 - C Inspect the conveyor belt for wear, cracks, damage, contamination, and abnormal slackness. Confirm that the belt is aligned, seated correctly on the sprockets, and runs smoothly.
 - D Inspect the hinge mounting bracket for corrosion, damage, and security of visible fasteners.
 - E Inspect the bearing mounting brackets for corrosion, damage, and security of visible fasteners.
 - F Inspect the tension shaft assembly for corrosion, damage, and security of visible fasteners.
 - G Inspect the drive shaft assembly for corrosion, damage, and security of visible fasteners.
 - H Inspect stub pivot axles for corrosion, damage, and security of visible fasteners.
 - I Inspect the motor and gearbox for external damage, corrosion, oil leakage, and security of visible fasteners.
 - J Inspect the tape switch for damage to the switch body, cable outer casing, and security in the track.
 - K Inspect nylon fairleads for excessive wear, cracking, and security of visible fasteners.
 - L Inspect the 3-push-button control box and emergency stop button for damage or signs of water ingress.
 - M Inspect the electrical control box for damage, security, and that the external red fuse indicator light is illuminated.

- N** Inspect the winch for corrosion, damage, and security of visible fasteners.
 - O** Unspool the winch rope from the manual winch and inspect for fraying, abrasion, glazing, flattening, knots, or contamination.
 - P** Inspect the winch rope clamp to check the winch rope is securely retained.
- 4** Apply lithium EP2 grease (marine grade) to the winch handle pivot, drum bearings, and any exposed gear or pawl interfaces as required.
 - 5** Wind the rope onto the drum, ensuring it is evenly distributed across the drum surface.
 - 6** Check that the winch operates smoothly and uniformly when spooling in and out.
 - 7** Remove, inspect, and lubricate mounting feet hinge pins (if fitted) with lithium EP2 grease (marine grade).
 - 8** Apply lithium EP2 grease (marine grade) to the bearing mounting brackets via the grease nipples using a grease gun.
 - 9** Record any additional observations, defects, or actions.

5.3 Unscheduled maintenance

5.3.1 Overview

- A** Unscheduled maintenance may be required following a fault, damage, abnormal operation, or component failure, or where a defect is identified at any time, including during post-use cleaning or monthly maintenance. Unscheduled maintenance undertaken by vessel personnel shall only be carried out following consultation with Zelim and/or an endorsed maintenance organisation.

NOTE Vessel personnel shall not undertake repairs, adjustments, or component replacement unless specifically instructed by Zelim and/or an endorsed maintenance organisation.

- B** Any components found to be unserviceable shall not be repaired or replaced by vessel personnel unless authorised and guided by Zelim and/or an endorsed maintenance organisation. Where the SWIFT is assessed as unsafe or unserviceable, it shall be taken out of service until further instruction is received.

NOTE All electrical maintenance, repair, or component replacement shall be undertaken by a suitably qualified marine engineer.

- C** When conducting unscheduled maintenance, record all guidance received and all maintenance completed and note any observations in Appendix B – Unscheduled Maintenance Record. Photographic evidence shall be obtained before and after any corrective action.

5.3.2 Unscheduled maintenance process

- 1 Take clear photographs of the SWIFT in situ and the surrounding installation area, and store them locally as part of the maintenance records.
- 2 Report the defect to Zelim (swift.support@zelim.com) and/or an endorsed maintenance organisation, including the photographs and a brief description of the issue observed.
- 3 Record the following information in Appendix B – B.1.1 Defect identification:
 - A Description of the defect and any abnormal operation observed.
 - B Name and role of the person reporting.
 - C Date and time the defect was identified.
- 4 Following consultation with Zelim and/or an endorsed maintenance organisation, record the following in Appendix B – B.1.2 Consultation record:
 - A Guidance provided, including any limitations or precautions specified.
 - B Name of Zelim representative and/or endorsed maintenance organisation consulted.
 - C Date and time of consultation.
- 5 Retain a copy of the email response or written instruction received as part of the maintenance records.

NOTE The copy should be printed and stored alongside the completed Appendix B record, or saved in a designated digital folder and referenced by filename and location in Appendix B – B.1.4 Comments and sign-off.

- 6 If instructed to proceed, undertake only the actions authorised by Zelim and/or the endorsed maintenance organisation.
- 7 Record a summary of the work completed in Appendix B – B.1.3 Work completed, including any parts used (if applicable) and observations made during the work.
- 8 On completion of the instructed actions:
 - A Take photographs of the affected area(s) showing the completed work.
 - B Send the photographs to the Zelim representative and/or endorsed maintenance organisation for confirmation.
 - C Store the photographs and any response received locally as part of the maintenance records.
- 9 If the defect cannot be rectified safely, or if the SWIFT cannot be confirmed as serviceable, the SWIFT shall remain out of service until further instruction is received or maintenance is completed by Zelim and/or an endorsed maintenance organisation.

6 TESTING

This chapter outlines the requirements for functional testing of the SWIFT following monthly maintenance or authorised unscheduled maintenance. All testing shall be carried out in accordance with the procedures detailed in this chapter.

6.1 Functional testing

6.1.1 Conveyor belt

A Conveyor belt testing

- 1 Operate the conveyor belt in both forward and reverse directions using the 3-push-button control box (Fig 6) and confirm smooth and uniform operation.



 **Fig 6** 3-push-button control box

- 2 Check for abnormal noise, vibration, or irregular belt tracking.

NOTE If abnormal operation is observed, stop the SWIFT immediately and refer to Section 6.2 – Abnormal findings.

- 3 Press the stop button and confirm the conveyor belt stops immediately.

6.1.2 Emergency stop button

A Emergency stop button testing

- 1 With the conveyor belt running, operate the red emergency stop button (Fig 7) and confirm the conveyor belt stops immediately.



Fig 7 Emergency stop button

- 2 Reset the emergency stop and confirm normal operation can be restored.

6.1.3 Tape switch

A Tape switch testing

- 1 With the conveyor belt running, carefully operate the tape switch and confirm the conveyor belt stops immediately.
- 2 Release the tape switch and confirm normal operation can be restored.

6.2 Abnormal findings

- A If any abnormal noise, vibration, hesitation, or unexpected behaviour is observed, stop the SWIFT immediately.
- B If the cause cannot be safely identified and rectified, the SWIFT shall be taken out of service and reported to Zelim and/or an endorsed maintenance organisation.
- C Record the test results and any observations in Appendix A – Monthly Maintenance Record or Appendix B – Unscheduled Maintenance Record, as applicable. Where defects are identified, retain photographic evidence with the relevant maintenance record.

APPENDICES

A MONTHLY MAINTENANCE RECORD

Monthly maintenance shall be carried out by vessel operators in accordance with this manual.

This record is provided for guidance only. The SWIFT Survivor Recovery System Operators Maintenance Manual (PN/SWI/003-00) shall be used when carrying out monthly maintenance.

OPERATOR		SERIAL	
-----------------	--	---------------	--

A.1 Monthly maintenance

Sections 4.2 and 5.2 shall be used when carrying out monthly maintenance activities.

A.1.1 Visual inspection

NO	ITEM	COMPLETED?	
1	Floatation foam moulds	Y	N
2	Detachable lifting eyes	Y	N
3	Conveyor belt	Y	N
4	Hinge mounting bracket	Y	N
5	Bearing mounting bracket	Y	N
6	Tension shaft assembly	Y	N
7	Drive shaft assembly	Y	N
8	Stub pivot axles	Y	N
9	Motor and gearbox	Y	N
10	Tape switch	Y	N
11	Nylon fairleads	Y	N
12	3-push-button control box	Y	N

NO	ITEM	COMPLETED?	
13	Emergency stop button	Y	N
14	Electrical control box	Y	N
15	Electrical control box external red fuse indicator	Y	N
16	Winch	Y	N
17	Winch rope	Y	N
18	Winch rope clamp	Y	N

A.1.2 Lubrication

NO	ITEM	COMPLETED?	
1	Mounting feet hinge pins	Y	N
2	Bearing mounting brackets	Y	N
3	Winch	Y	N

A.1.3 Testing

NO	ITEM	COMPLETED?	
1	Winch	Y	N
2	Conveyor belt	Y	N
3	Tape switch	Y	N
4	3-push-button control box	Y	N
5	Emergency stop button	Y	N

FURTHER COMMENTS	
-------------------------	--

OPERATOR NAME	
----------------------	--

DATE	
-------------	--

SIGNED	
---------------	--

B UNSCHEDULED MAINTENANCE RECORD

Unscheduled maintenance may be required following a fault, damage, abnormal operation, component failure, or where a defect is identified at any time. This record shall be completed to document the defect identified, guidance received from Zelim and/or an endorsed maintenance organisation, and any actions completed in accordance with the SWIFT Survivor Recovery System Operators Maintenance Manual (PN/SWI/003-00).

OPERATOR		SERIAL	
-----------------	--	---------------	--

B.1 Unscheduled maintenance

Section 5.3 shall be used when carrying out unscheduled maintenance activities.

B.1.1 Defect identification

DESCRIPTION				
REPORTED BY			POSITION	
DATE		TIME		

B.1.2 Consultation record

GUIDANCE PROVIDED	
ORGANISATION	
ADVISOR	
DATE	
TIME	

B.1.3 Work completed

SUMMARY OF WORK
PARTS USED (IF APPLICABLE)

B.1.4 Comments and sign-off

FURTHER COMMENTS	
OPERATOR NAME	SIGNED
DATE	



E swift.support@zelim.com
A Zelim Ltd
Edinburgh
EH1 2EL