


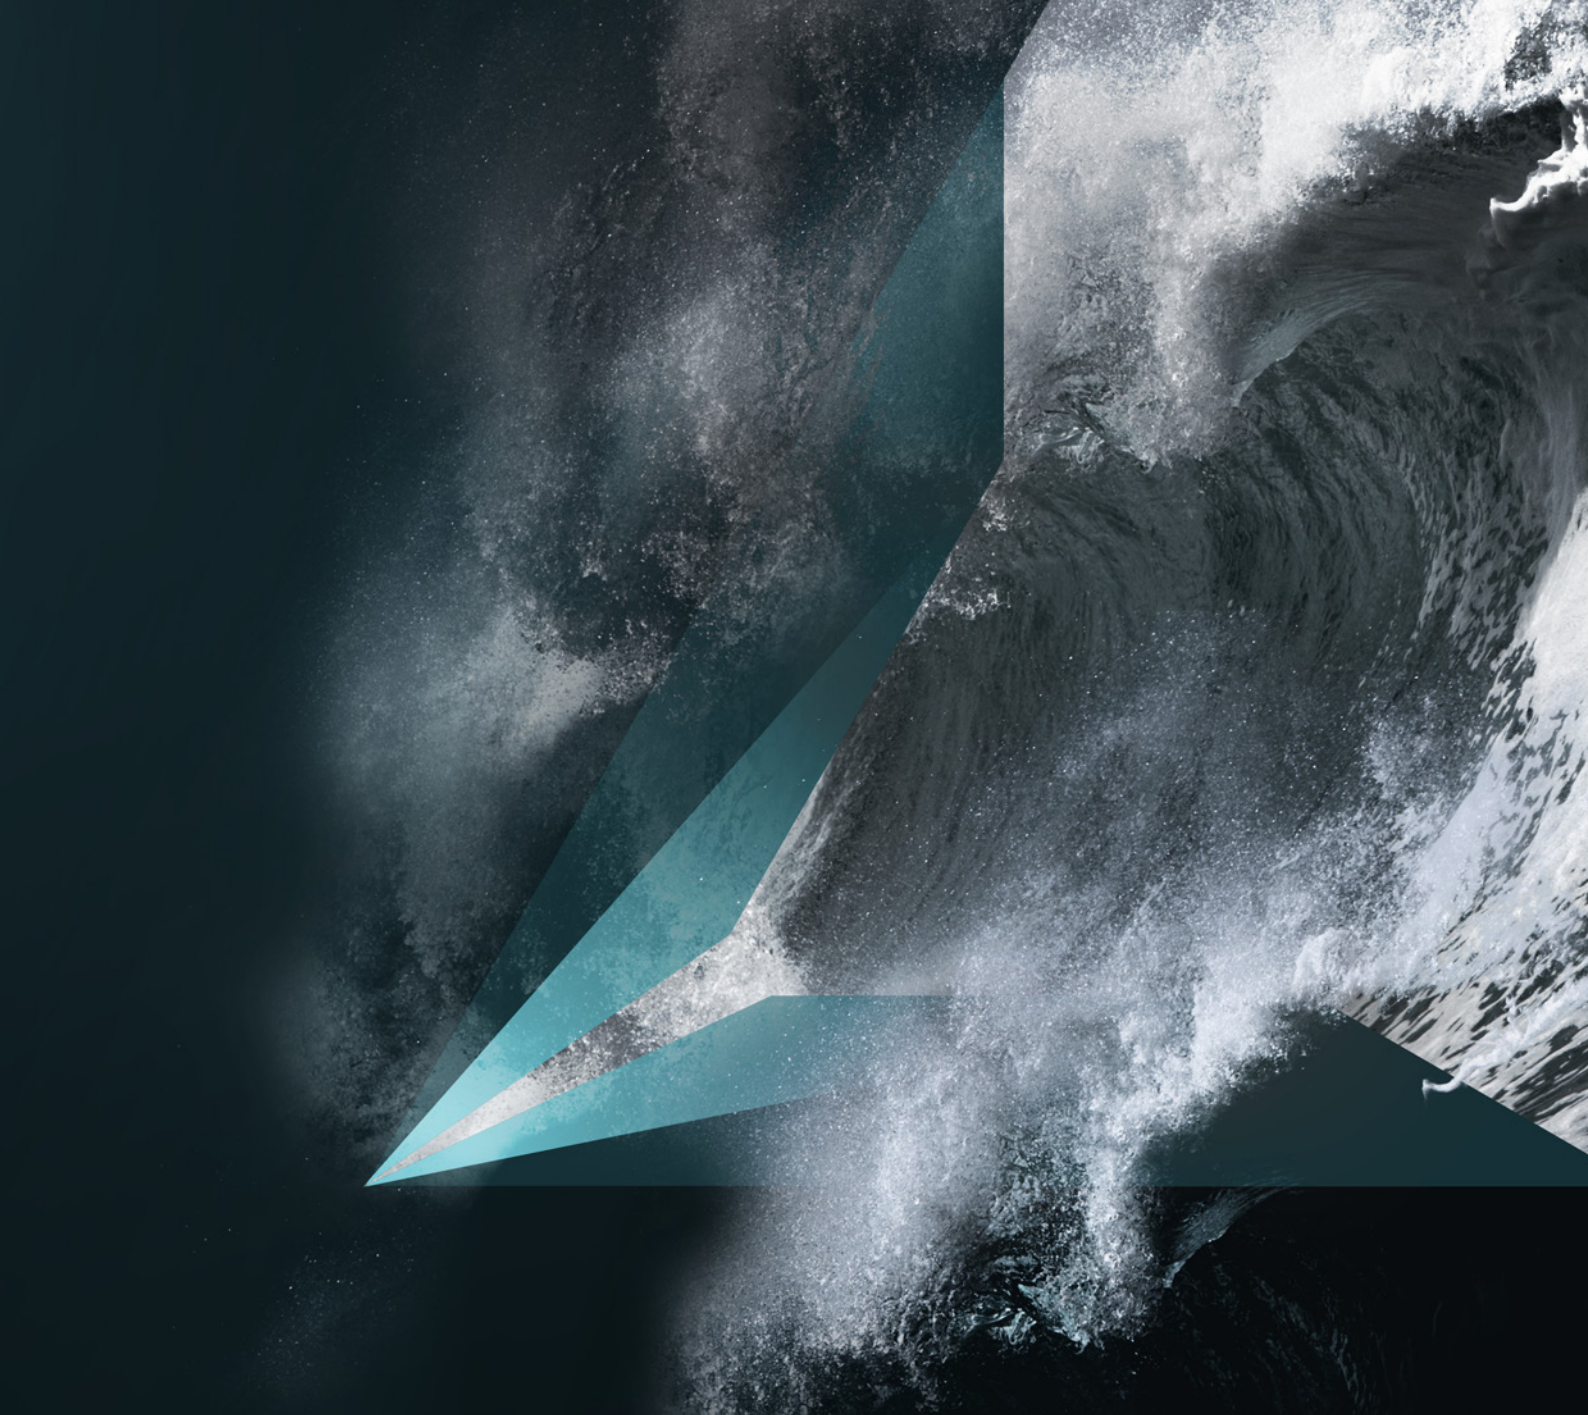

SWIFT SURVIVOR RECOVERY SYSTEM

Operators Maintenance Manual

Document number PN/SWI/003-00

Version 1.0

ZELIM

MANAGEMENT CONTROL

DATE	DOCUMENT REFERENCE	VER NO.
------	--------------------	---------

	NAME	POSITION	COMPANY	DATE	SIGNED
--	------	----------	---------	------	--------

AUTHOR

P. O'Mara

Principal Support
Engineer

Zelim



REVIEWER

D. Green

Engineering
Operations Manager

Zelim



APPROVER

S. Gregory

COO

Zelim



PERMANENT REVISION LIST

Revisions or amendments embodied in this manual, that are certified by an approved organisation, other than that applicable to this initial certification must be recorded on separate record sheets.

DATE	COMMENT	BY	VER NO.

LIST OF SERVICE BULLETINS

On receipt of a Service Bulletin (SB) that is associated with this manual, maintenance personnel may hand amend this list to record the receipt of the SB. Once the contents of the SB are incorporated into the manual it will be permanently added to this list.

SB NO.	DATE	COMMENT	INCORPORATED	
			ISSUE	DATE

LIST OF SERVICE NEWSLETTERS

On receipt of a Service Newsletter (SN) that is associated with this manual, maintenance personnel may hand amend this list to record the receipt of the SN. Once the contents of the SN are incorporated into the manual it will be permanently added to this list.

SN NO.	DATE	COMMENT	INCORPORATED	
			ISSUE	DATE

1	Introduction	7	5	Inspection and maintenance procedures	17
1.1	General	7	5.1	Monthly maintenance	17
1.2	Structure of the manual	7	5.2	Unscheduled maintenance	25
1.3	Warnings, cautions and notes	8			
1.4	Health and safety	8			
1.5	Acronyms and abbreviations	9			
1.6	List of changes	9			
2	Leading particulars	10	6	Testing	27
2.1	SWIFT reference views	10	6.1	Functional testing	27
2.2	SWIFT technical particulars	11	6.2	Abnormal findings	28
2.3	Manual winch particulars	12			
3	Maintenance schedule	13	Appendices		29
3.1	Maintenance matrix	13	A	Monthly maintenance record	30
			B	Unscheduled maintenance record	35
4	Cleaning	14			
4.1	Equipment	14			
4.2	Post-use and monthly cleaning	14			
4.3	Component level cleaning	15			

1 INTRODUCTION

This chapter defines the purpose and structure of the SWIFT Operators Maintenance Manual.

1.1 General

- A** This manual contains instructions for operator-level maintenance of the SWIFT Survivor Recovery System when installed on a marine vessel.
- B** This manual shall be used by vessel personnel responsible for carrying out routine cleaning, inspection, and basic maintenance activities intended to preserve the condition and operational readiness of the SWIFT in a marine environment.
- C** The maintenance activities described in this manual are limited to operator-level tasks. These activities do not replace scheduled annual or 30-month depth maintenance carried out by Zelim or an endorsed maintenance organisation in accordance with the SWIFT Maintenance Manual (PN/SWI/011-00).
- D** Unscheduled maintenance shall only be undertaken following consultation with Zelim or an endorsed maintenance organisation. Any guidance provided shall be recorded in accordance with this manual.
- E** A record of all maintenance activities shall be maintained by vessel personnel and retained as part of the vessel's maintenance records. Records relating to unscheduled maintenance undertaken following guidance from Zelim or an endorsed maintenance organisation shall be retained with the associated guidance and supporting evidence.
- F** Zelim is the Design Authority for the SWIFT. The Company has developed this equipment and its associated regulatory procedures to ensure reliable operation under all climatic, weather, and operational conditions. While comments intended to improve the efficiency of maintenance procedures are always welcome, no changes to these procedures may be made without Zelim's prior approval. Unauthorised modifications may cause the equipment to malfunction and may also void the equipment's approval.
- G** This manual is the copyright of Zelim Limited. It is supplied in confidence and shall not be used for any purpose other than that for which it is provided. This manual shall not be reproduced, in whole or in part, without the prior permission of Zelim Limited.

1.2 Structure of the manual

A Chapters and page numbers

- 1 Chapters are assigned to each main topic within this manual.
- 2 Auxiliary sections, such as appendices, are also included.

B Record of revisions

- 1 All issues of this manual are recorded in the Permanent Revision List.
- 2 Any changes from the previous issue shall be shown in **red text**. The start and end of a change will be marked by red pointers > <. Text deleted from the previous issue will also be indicated by start and end red pointers.
- 3 All amendments shall be summarised in Section 1.6 – List of Changes.

1.3 Warnings, cautions and notes

<u>WARNING</u>	<u>A warning calls attention to a procedure which if incorrectly performed is liable to cause injury or death to personnel.</u>
<u>CAUTION</u>	<u>A caution calls attention to a procedure which if incorrectly performed is liable to cause damage to the equipment or its components.</u>
<u>NOTE</u>	<u>A note calls attention to methods or important information.</u>

1.4 Health and safety

- A Personnel responsible for the maintenance of the SWIFT shall ensure that adequate safety precautions are observed during all maintenance and related activities.
- B Zelim shall not, by virtue of these instructions, be deemed to have assumed any responsibilities of the Service Agent or Operator under the Health and Safety at Work etc. Act 1974 or any related legislation.
- C Materials used during maintenance of this product may be hazardous. Food, beverages, cups, and other eating or drinking utensils must not be stored in areas where such materials are handled or stored. Hands must be washed thoroughly with soap and water immediately after maintenance work and before eating or drinking.
- D Prior to undertaking cleaning, inspection, lubrication, or testing activities, the SWIFT shall be switched off and the electrical supply isolated at the vessel distribution panel.
- E Hands, clothing, tools, and loose equipment shall be kept clear of moving components at all times.

1.5 Acronyms and abbreviations

AC. / ABRV.	MEANING	AC. / ABRV.	MEANING
A/R	As required	LM	Locally manufactured
Approx	Approximately	LP	Locally purchased
cm	Centimetre	mm	Millimetre
EP	Extreme pressure	MOB	Man overboard
Fig	Figure	m/s	Metres per second
IAW	In accordance with	No	Number
In situ	In situation	Qty	Quantity
Intro	Introduction	Rev	Revision
IP	Ingress Protection rating	SB	Service bulletin
kg	Kilogram	SN	Service newsletter

1.6 List of changes

CHAPTER	PAGE	DESCRIPTION	REASON

2 LEADING PARTICULARS

This chapter provides general identification information and principal characteristics of the SWIFT Survivor Recovery System relevant to operator-level maintenance.

2.1 SWIFT reference views

- A Typical views of the SWIFT assembly and major components are illustrated in Figures 1 to 4. These figures show representative orientations of the unit for identification and reference purposes only.



Fig 1 SWIFT front view



Fig 2 SWIFT side view (motor side)

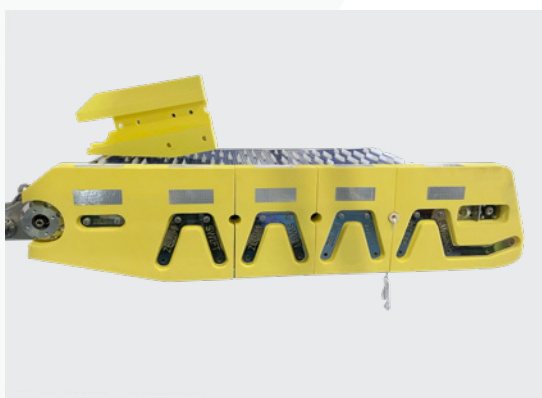


Fig 3 SWIFT side view (non-motor side)

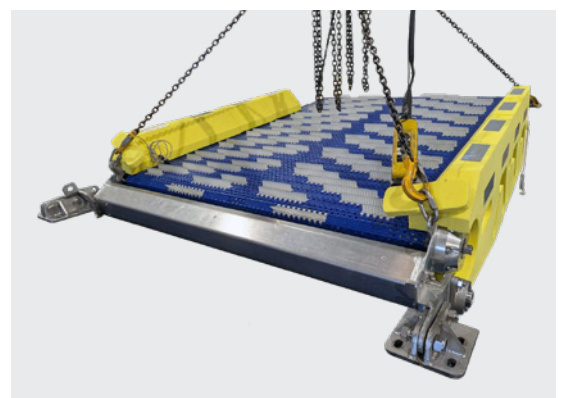


Fig 4 SWIFT rear view

2.2 SWIFT technical particulars

Dimensions

Length	1986 mm
Width	1739 mm
Height	420 mm

Weight

SWIFT	≈ 175 kg
-------	----------

Inputs

Power supply	230 V AC, 50 Hz, 0.75 kW
--------------	--------------------------

Other

Safe working load	137 kg
Recovery angle	≤ 40°

2.3 Manual winch particulars

A SWK-LB-250-4-20M

Hand-operated stainless steel winch with automatic ratchet stop in both directions.

Dimensions

Length	XXX mm
Width	175 mm
Height	191.5 mm

Weight ≈5.6 kg

Other

Rope supplied 4 mm Dyneema®¹

B SWK-LB-650-6-20M

Hand operated stainless steel winch with automatic ratchet stop in both directions.

Dimensions

Length	XXX mm
Width	175 mm
Height	XXX mm

Weight ≈9 kg

Other

Rope supplied 6 mm Dyneema®¹

¹ Rope length is determined during commissioning to suit the vessel specification.

3 MAINTENANCE SCHEDULE

This chapter defines the operator-level maintenance requirements for the SWIFT, including routine cleaning, monthly inspection, and unscheduled maintenance undertaken following consultation with Zelim or an endorsed maintenance organisation. All maintenance shall be performed in accordance with the instructions contained in this manual.

- A** Operator-level maintenance shall consist of post-use cleaning, monthly inspection and maintenance, and unscheduled maintenance undertaken following consultation with Zelim or an endorsed maintenance organisation.
- B** Scheduled annual and 30-month depth maintenance shall be carried out by Zelim and/or an endorsed maintenance organisation in accordance with the SWIFT Maintenance Manual (PN/SWI/011-00). Operator-level maintenance does not replace these scheduled maintenance activities.
- C** If any defect is identified during operator-level maintenance which may affect the safe operation of the SWIFT, the system shall be taken out of service and reported in accordance with this manual.

3.1 Maintenance matrix

The SWIFT shall be maintained in accordance with the outlined maintenance matrix (Table 1).

✓ **Table 1** Maintenance matrix

MAINTENANCE ACTIVITY	CONDUCTED BY	PAPERWORK
Before-use inspection	Operator	Not required
Post-use cleaning	Operator	Not required
Monthly maintenance	Operator	Monthly Maintenance Record (Appendix A) completed
Unscheduled maintenance	Operator under guidance / Zelim / endorsed maintenance organisation	Unscheduled Maintenance Record (Appendix B) completed

4 CLEANING

This chapter details the procedures and equipment required to clean the SWIFT and its components. All cleaning shall be performed using the specified materials and methods to prevent damage and ensure continued operational reliability.

CAUTION Isolate the SWIFT electrical supply at the vessel's distribution panel (for example, the SWIFT supply breaker or isolator) before any cleaning activity. Confirm isolation before proceeding.

NOTE The electrical control box is isolated via the upstream vessel supply. The external red fuse indicator provides visual confirmation of fuse status but shall not be used as a primary means of isolation. Under normal circumstances there is no requirement to open the control box to isolate the system. Opening the electrical control box and any internal inspection or work shall be carried out by Zelim or an endorsed maintenance organisation only, and by a suitably qualified marine engineer.

4.1 Equipment

The SWIFT and its components shall be cleaned using the equipment specified in Table 2.

✓ **Table 2** Cleaning equipment

NOMENCLATURE	SOURCE
Mild detergent suitable for marine environment	Locally purchased
Lint free cloth	Locally purchased
Sponge	Locally purchased
Soft brush	Locally purchased

4.2 Post-use and monthly cleaning

The following cleaning process shall be used to clean the SWIFT and its components following use, or as part of monthly maintenance when the SWIFT has not been used in the previous 30 days.

- 1 Rinse the SWIFT with clean water to remove salt deposits and surface contamination.
- 2 Using a mixture of clean water and mild detergent, wash down the external surfaces of the SWIFT using a sponge or soft brush to remove debris and contamination.

- 3 Rinse with clean water and allow the SWIFT to dry naturally.

CAUTION Pressure washers must not be used when cleaning the SWIFT. Damage may be caused to the foam parts, motor and the electrical system.

CAUTION Bleach must not be used when cleaning SWIFT. Damage may be caused to the foam parts and the conveyor belt.

4.3 Component-level cleaning

The following cleaning process shall be used to clean the SWIFT and its components during post-use and monthly maintenance.

4.3.1 Hinge mounting bracket

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.2 Floatation foam moulds

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.3 Conveyor belt

- 1 Hand wash using a sponge / soft brush and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.4 Tension shaft assembly

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.5 Motor and gearbox

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

CAUTION Water shall not be directed into the motor or gearbox ventilation openings.

4.3.6 Drive shaft assembly

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.7 Bearing mounting brackets and drive shaft bearings

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.8 Stub pivot axles

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.9 Tape switch

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.10 Chassis

- 1 Hand wash using a sponge / soft brush and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.11 Nylon fairlead

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

4.3.12 Winch

- 1 Hand wash using a sponge and water mixed with a mild detergent.
- 2 Rinse with clean water and allow the component to dry naturally.

NOTE Water shall not be directed into the motor or gearbox ventilation openings.

4.3.13 Electrical box, 3-push-button control box and emergency stop button

- 1 Clean the outer casing and electrical cables using a damp, lint-free cloth.
- 2 Allow the components to dry naturally.

CAUTION Water shall not be directed into electrical enclosures or cable glands.

5 INSPECTION AND MAINTENANCE PROCEDURES

This chapter details the operator-level inspection and maintenance procedures to be carried out monthly and defines the requirements for unscheduled maintenance undertaken only following consultation with Zelim or an endorsed maintenance organisation.

CAUTION Isolate the SWIFT electrical supply at the vessel's distribution panel (for example, the SWIFT supply breaker or isolator) before any maintenance activity. Confirm isolation before proceeding.

NOTE The electrical control box is isolated via the upstream vessel supply. The external red fuse indicator provides visual confirmation of fuse status but shall not be used as a primary means of isolation. Under normal circumstances there is no requirement to open the control box to isolate the system. Opening the electrical control box and any internal inspection or work shall be carried out by Zelim or an endorsed maintenance organisation only, and by a suitably qualified marine engineer.

5.1 Monthly maintenance

5.1.1 Overview

- A** Monthly maintenance shall be conducted in situ.
- B** Monthly maintenance shall consist of routine inspection and basic maintenance tasks intended to preserve the condition and operational readiness of the SWIFT in a marine environment.
- C** Any defects identified during monthly maintenance shall be recorded in Appendix A – Monthly Maintenance Record. Where a defect may affect safe operation, the SWIFT shall be taken out of service and reported in accordance with this manual.


NOTE All electrical maintenance, repair, or component replacement shall be undertaken by a suitably qualified marine engineer.

5.1.2 Monthly pre-maintenance checks

- 1** Confirm the SWIFT is safe to approach and that the surrounding deck area is clear.
- 2** Ensure the SWIFT electrical supply is isolated at the vessel's distribution panel prior to inspection, cleaning, or lubrication activities.
- 3** If the SWIFT has been used since the last monthly maintenance, ensure post-use cleaning has been completed in accordance with Chapter 4 – Cleaning.

5.1.3 Monthly maintenance process

- 1 Take clear photographs of the SWIFT in situ and the surrounding installation area and retain them as part of the vessel's maintenance records.
- 2 Conduct a visual inspection of the SWIFT and accessories, noting any corrosion build-up, debris accumulation, or marine growth.
- 3 Inspect the chassis (Fig 5) for corrosion, cracking, deformation, or coating damage.

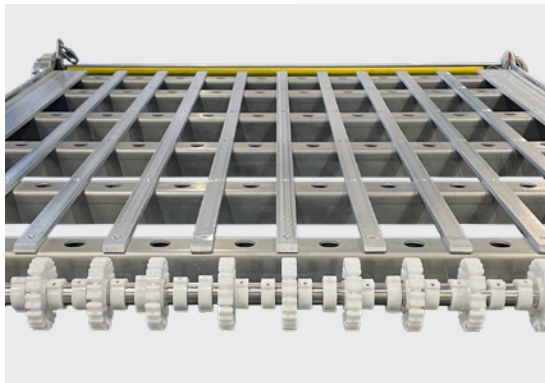


 **Fig 5** Chassis

- 4 Inspect floatation foam moulds (Fig 6) for damage, cracking, detachment, or degradation, and confirm all clamps and securing hardware are present and secure.



 **Fig 6** Black and yellow foam moulds

- 5 Inspect the conveyor belt (Fig 7) for wear, cracks, damage, contamination, and abnormal slackness (Fig 8). Confirm the belt appears aligned and seated correctly on the sprockets.

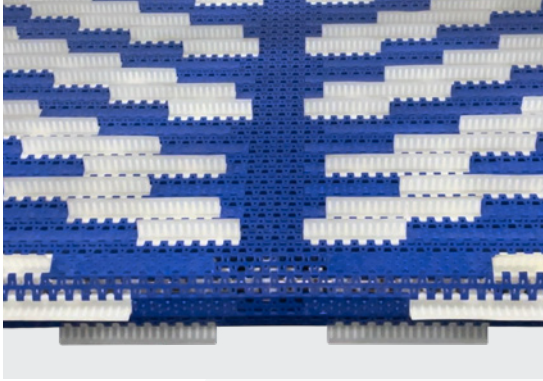

▲ Fig 7 Conveyor belt




▲ Fig 8 Close up of belt distortion

- 6 Inspect the hinge mounting bracket (Fig 9) for corrosion, damage, or loose fixings.



▲ Fig 9 Hinge mounting bracket

- 7 Inspect the tension shaft assembly (Fig 10) for corrosion, damage, and security of visible fasteners.

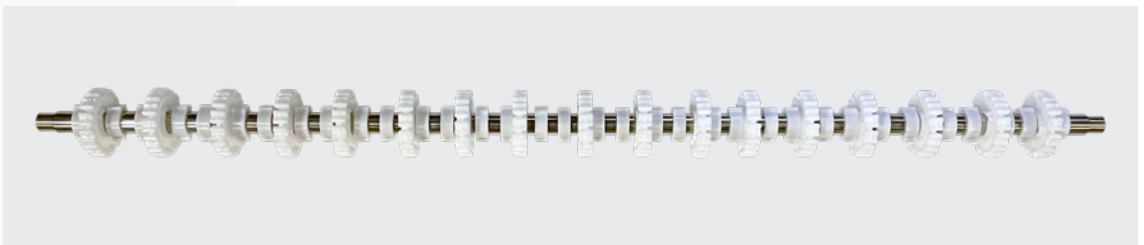

▲ Fig 10 Tension shaft assembly

- 8 Inspect the drive shaft assembly (Fig 11) for corrosion, damage, and security of visible fasteners.



 **Fig 11** Drive shaft

- 9 Inspect bearing mounting brackets (Fig 12) and drive shaft bearings for corrosion, damage, and signs of contamination.



 **Fig 12** Bearing mounting bracket

- 10 Inspect stub pivot axles (Fig 13) for corrosion, deformation, or damage.




 **Fig 13** Stub pivot axle

- 11 Inspect the tape switch (Fig 14) for secure fitting and signs of damage to the switch body or cable outer casing.




 **Fig 14** Tape switch

- 12 Inspect nylon fairleads (Fig 15) for excessive wear, cracking, deformation, and secure mounting.

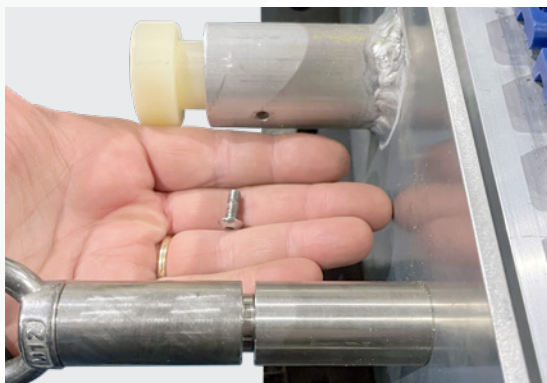

 **Fig 15** Nylon fairlead

- 13 Inspect the motor and gearbox (Fig 16) for external damage, corrosion, or oil leakage.

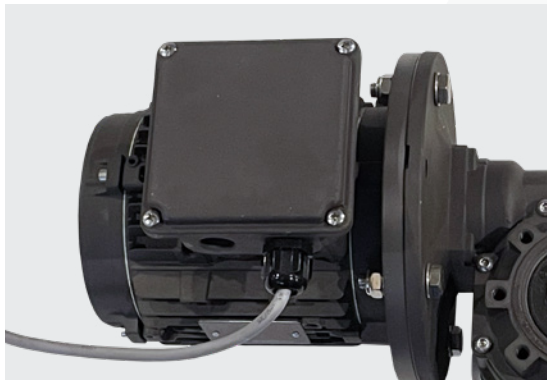

▲ **Fig 16** Motor and gearbox

- 14 Inspect the 3-push-button control box (Fig 17) and emergency stop button (Fig 18) for damage or signs of water ingress.



▲ **Fig 17** 3-push-button control box



▲ **Fig 18** Emergency stop button

- 15 Visually inspect the electrical control box enclosure for damage, corrosion, cracks, or compromised seals (Fig 19).



Fig 19 Outside of electrical control box

- 16 Confirm the enclosure is securely mounted and that all external fixings are present, intact, and secure.
- 17 Lubricate externally accessible grease nipples (Fig 20) only, where fitted, using Lithium EP2 grease (marine grade).

NOTE Lubrication shall be limited to externally accessible grease nipples only.
No dismantling of assemblies is permitted.

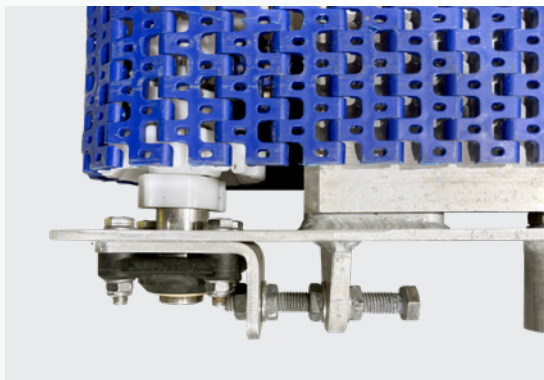


Fig 20 Lubricate grease nipples

- 18** Inspect the manual winch (Fig 21) for corrosion or damage, then inspect the winch rope (Fig 22) for fraying, abrasion, glazing, flattening, knots, or contamination.



Fig 21 SWK-LB-250-4-20M manual winch



Fig 22 Good condition Dyneema® rope

- 19** Apply light lubrication using Lithium EP2 grease (marine grade) to externally accessible winch moving components only, where required.

CAUTION The winch shall not be dismantled. Rope replacement shall not be undertaken without prior guidance from Zelim or an endorsed maintenance organisation.

- 20** Record all findings and actions in Appendix A – Monthly Maintenance Record.

5.2 Unscheduled maintenance

5.2.1 Overview

- A** Unscheduled maintenance may be required following a fault, damage, abnormal operation, or component failure, or where a defect is identified at any time, including during post-use cleaning or monthly maintenance. Unscheduled maintenance undertaken by vessel personnel shall only be carried out following consultation with Zelim and/or an endorsed maintenance organisation.

NOTE Vessel personnel shall not undertake repairs, adjustments, or component replacement unless specifically instructed by Zelim and/or an endorsed maintenance organisation.

- B** Any components found to be unserviceable shall not be repaired or replaced by vessel personnel unless authorised and guided by Zelim and/or an endorsed maintenance organisation. Where the SWIFT is assessed as unsafe or unserviceable, it shall be taken out of service until further instruction is received.

NOTE All electrical maintenance, repair, or component replacement shall be undertaken by a suitably qualified marine engineer.

- C** When conducting unscheduled maintenance, record all guidance received and all maintenance completed and note any observations in Appendix B – Unscheduled Maintenance Record. Photographic evidence shall be obtained before and after any corrective action.

5.2.2 Unscheduled maintenance process

- 1** Take clear photos of the SWIFT in situ and the surrounding installation area, and store them locally as part of the maintenance records.
- 2** Report the defect to Zelim and/or an endorsed maintenance organisation.
- 3** Record the following in Appendix B – Unscheduled Maintenance Record:
 - A** Date and time the defect was identified.
 - B** Name and role of the person reporting.
 - C** Description of the defect and any abnormal operation observed.
 - D** Name of Zelim representative and/or endorsed maintenance organisation consulted.
 - E** Date and time of consultation.
 - F** Guidance provided and any limitations or precautions specified.

- 4** If instructed to proceed, undertake only the actions authorised by Zelim and/or the endorsed maintenance organisation.
- 5** On completion of the instructed actions, take photographs of the affected area(s) and retain them with the maintenance record.
- 6** Record all actions completed, parts used (if applicable), and any observations in Appendix B – Unscheduled Maintenance Record.
- 7** If the defect cannot be rectified safely, or if the SWIFT cannot be confirmed as serviceable, the SWIFT shall remain out of service until further instruction is received or maintenance is completed by Zelim and/or an endorsed maintenance organisation.

6 TESTING

This chapter outlines the requirements for functional testing of the SWIFT following monthly maintenance or authorised unscheduled maintenance. All testing shall be carried out in accordance with the procedures detailed in this chapter.

6.1 Functional testing

6.1.1 Conveyor belt

A Conveyor belt testing

- 1 Restore the vessel's electrical supply and confirm the external red fuse indicator is illuminated to indicate fuse continuity.
- 2 Operate the conveyor belt in the forward direction using the 3-push-button control box (Fig X) and confirm smooth and uniform operation.



Fig X 3-push-button control box

- 3 Operate the conveyor belt in the reverse direction and confirm smooth and uniform operation.
- 4 Check for abnormal noise, vibration, or irregular belt tracking.

NOTE If abnormal operation is observed, stop the SWIFT immediately and refer to Section 6.2 – Abnormal findings.

- 5 Press the stop button and confirm the conveyor belt stops immediately.

6.1.2 Emergency stop button

A Emergency stop button testing

- 1 With the conveyor belt running, operate the red emergency stop button (**Fig X**) and confirm the conveyor belt stops immediately.



Fig X Emergency stop button

- 2 Reset the emergency stop and confirm normal operation can be restored.

6.1.3 Tape switch

A Tape switch testing

- 1 With the conveyor belt running, carefully operate the tape switch and confirm the conveyor belt stops immediately.
- 2 Release the tape switch and confirm normal operation can be restored.

6.2 Abnormal findings

- A If any abnormal noise, vibration, hesitation, or unexpected behaviour is observed, stop the SWIFT immediately.
- B If the cause cannot be safely identified and rectified, the SWIFT shall be taken out of service and reported to Zelim and/or an endorsed maintenance organisation.
- C Record the test results and any observations in Appendix A – Monthly Maintenance Record or Appendix B – Unscheduled Maintenance Record, as applicable. Where defects are identified, retain photographic evidence with the relevant maintenance record.

APPENDICES

A MONTHLY MAINTENANCE RECORD

Annual maintenance shall be carried out by Zelim and/or an approved maintenance organisation.

This record is provided for guidance only. The SWIFT Survivor Recovery System Maintenance Manual (PN/SWI/011-00, Version 2.0) shall be used when carrying out annual maintenance.

COMPANY		LOCATION	
MODEL		SERIAL	
		DATE	

A.1 Annual maintenance

Chapters 5 to 9 shall be used when carrying out annual maintenance activities.

NO	ITEM	OBSERVATIONS
1	Photograph SWIFT Take clear photos of the SWIFT in situ and the surrounding installation area.	
2	Check monthly inspection checklists Confirm all monthly inspection records are present, complete, and signed.	
3	Inspect SWIFT and accessories Inspect the SWIFT and accessories for corrosion, debris, or marine growth.	
4	Inspect and lubricate mounting feet hinge pins Remove, inspect, and lubricate mounting feet hinge pins with Lithium EP2 grease.	

NO	ITEM	OBSERVATIONS
5	Lubricate mounting bracket bearings Using a grease gun with Lithium EP2 grease, lubricate the mounting bracket bearings via the grease nipples.	
6	Check fastener torque Confirm all accessible structural and mechanical fasteners are torqued to the specified values.	
7	Check conveyor belt sprocket alignment Check the drive and tension shaft sprockets are aligned with the conveyor belt.	
8	Verify conveyor belt tracking/tension Verify the belt tracks centrally on the sprockets while running, with no deflection, flutter, or vibration.	
9	Check conveyor belt operation Confirm smooth conveyor belt operation with no squeaks, rubbing, or heat build-up at the shaft bearings.	
10	Check conveyor belt speed Confirm the conveyor belt speed is consistent in forward and reverse.	
11	Conduct functional test Run motor and gearbox forward/reverse for 5 minutes each way. Note uniform speed, smoothness, and any abnormal noise, vibration, or heat build-up.	
12	Check Emergency Stop button Test the Emergency Stop button to confirm it isolates power correctly.	

NO	ITEM	OBSERVATIONS
13	Check 3-push-button control box Test the 3-push-button control box (Forward, Reverse, Stop) and confirm Stop halts operation.	
14	Check tape switch operation Confirm the tape switch activates correctly to stop the SWIFT.	
15	Inspect motor and gearbox Inspect the motor and gearbox for lubrication leaks or signs of oil contamination.	
16	Check SWIFT deployment Deploy the SWIFT and observe for smooth, controlled operation.	
17	Unspool winch rope With SWIFT supported by buoyancy, fully unspool the winch rope.	
18	Check winch rope retention Ensure the winch rope is retained by both clamping screws and connected to the vessel strong point.	
19	Inspect winch rope Inspect for fraying, thinning, heat damage, dirt, or oil contamination.	
20	Inspect winch drum plating Inspect for zinc plating loss on the winch drum side cheeks where the rope contacts.	

NO	ITEM	OBSERVATIONS
21	Inspect nylon fairleads Inspect nylon fairleads for wear where the rope passes through the chassis.	
22	Grease winch Apply Lithium EP2 grease to the handle, bearings, and gears, avoiding contamination of the rope.	
23	Check winch operation Operate the winch and confirm smooth operation and positive holding.	
24	Inspect control box Isolate power and inspect control box for water ingress, corrosion, or loose connections.	
25	Check electrical system Inspect cables and terminations, then confirm correct operation after restoring power.	
26	Conduct MOB trial Conduct trial recovery of adult MOB manikin and record current draw.	

FURTHER COMMENTS	

ENGINEER NAME	
----------------------	--

ENGINEER EMAIL	
-----------------------	--

SIGNED	

B UNSCHEDULED MAINTENANCE RECORD

Unscheduled maintenance may be required following a fault, damage, abnormal operation, or component failure. This record shall be completed to document the issue identified, the corrective action taken, and any parts repaired/replaced or settings changed, providing a clear maintenance trail. The SWIFT Survivor Recovery System Maintenance Manual (PN/SWI/011-00, Version 2.0) shall be used when carrying out unscheduled maintenance.

COMPANY		LOCATION	
MODEL		SERIAL	
		DATE	

C.1 Unscheduled maintenance

Chapters 4 to 9 shall be used when carrying out unscheduled maintenance activities.

SUMMARY OF WORK	

ENGINEER NAME		SIGNED	
ENGINEER EMAIL			



E swift.support@zelim.com
A Zelim Ltd
Edinburgh
EH1 2EL